

User Manual

ADS1000 Series Digital Storage Oscilloscope

Version No.: V 1.3

ATTEN Electronics Co., Ltd

Declaration

Copyright © Atten Electronics.,Co.,Ltd. All rights reserved.

Contents in this Manual are not allowed to copy, extract and translate before being allowed by ATTEN company.

ADS1000 Series Digital Storage Oscilloscope Brief Introduction

ADS1000 Series Models:

Model:

ADS1000C+ Series: ADS1102C+, ADS1062C+, ADS1042C+, ADS1022C+

ADS1000CA Series: ADS1152CA, ADS1102CA, ADS1062CA

ADS1000CM Series: ADS1152CM, ADS1102CM, ADS1062CM, ADS1042CM

Characteristic:

- The volume of the oscilloscope is cabinet and it is portable
- 5.7" Color TFT LCD display
- Double channels, Bandwidth: 25MHZ-150MHZ
- Single real-time sampling rate are:

500MSa/s(ADS1000C+ series);

1Gsa/s (ADS1000CA series; ADS1000CMseries);

Equivalent sampling rate is 50GSa/s.

- Memory depth: 32Kpts(ADS1000C+ series)
40Kpts(ADS1000CA series)
2Mpts(ADS1000CM Series)
- Edge, Pulse, Video, Slope and Alternative trigger function.
- Unique Digital Filter function and Waveform recorder function
- Pass/Fail function.
- Auto measure thirty two parameters support all measurement function.
- Two groups reference waveforms and twenty groups capture waveforms and twenty groups setups internal save/recall function and USB flash drive save/recall function.
- Cursor measure covers Manual mode, Track mode and Auto mode.
- Channel waveform and it's FFT waveform display on split screen.
- Waveform Intensity and Grid Brightness can be adjusted.

-
- Menu display in the form of pop-up in order to convenient for users using it.
 - Rich Screen display styles: Classical, Modern, Tradition, Succinct.
 - Multiple Language User Interface.
 - Support Multilingual online help system.
 - Standard setup interface: USB Host :Support USB flash drive storage/recall function and update firmware; USB Device: Support PictBridge compatible printer and support PC remote control; RS-232;Pass/Fail output.

ADS1000 Series Digital Storage Oscilloscope Accessories:

- 1:1/10:1 probe (2 PCS)
- Power Cable that fits the standard of destination country
- Certification.
- guaranty card
- CD(including EasyScope3.0 computer software system)
- User Manual
- USB cable

General Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified.

Only qualified personnel should perform service procedures.

To Avoid Fire or Personal Injury

Use Proper Power Cord. Use only the power cord specified for this product and certified for the country of use.

Connect and Disconnect Properly. Do not connect or disconnect probes or test leads while they are connected to a voltage source.

Ground the Product. This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground. Before making connections to the input or output terminals of the product, ensure that the product is properly grounded.

Connect the Probe Properly. The probe ground lead is at ground potential. Do not connect the ground lead to an elevated voltage.

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and marking on the product. Consult the product manual for further ratings information before making connections to the product.

Do Not Operate Without Covers. Do not operate this product with covers or panels removed.

Use Proper Fuse. Use only the fuse type and rating specified for this product.

Avoid Exposed Circuitry. Do not touch exposed connections and components when power is present.

Do Not Operate With Suspected Failures. If you suspect there is damage to this product, have it inspected by qualified service personnel.

Do Not Operate in Wet/Damp Conditions.

Do Not Operate in an Explosive Atmosphere.

Keep Product Surfaces Clean and Dry.

Safety Terms and Symbols

Terms on the Product. These terms may appear on the product:

DANGER: Indicates an injury hazard immediately accessible as you read the marking.

WARNING: Indicates an injury hazard not immediately accessible as you read the marking.

CAUTION: indicates a hazard to property including the product.

Symbols on the Product. These symbols may appear on the product:



This symbol is used to denote the measurement ground connection.



This symbol is used where caution is required. Refer to the accompanying information or documents in order to protect against personal injury or damage to the instrument.



This symbol is used to denote a safety ground connection.



This symbol is used to denote the measurement ground connection.



On (Supply). This is the AC mains connect/disconnect switch at the back of the instrument.



Off (Supply). This is the AC mains connect/disconnect switch at the back of the instrument.



This symbol shows that the switch is a standby(power) switch located on the front of the oscilloscope. Pressing this button toggles the oscilloscope's state between operation and standby mode. This switch is not a disconnect device. The instrument can only be placed in a complete power off state by flipping the main power switch to the off (Zero) position or by removing the power cord .

Preface

This manual contains operating information for the ADS1000 Series Digital Storage Oscilloscopes. The manual consists of the following chapters:

- ◆ “Accidence” chapter describes the front panel; display area of the oscilloscope; Functional Check and Probe Compensation briefly.
- ◆ “Functions Instruction and Operation” chapter describes function and operation of the Oscilloscope systemically.
- ◆ “Application Examples” chapter includes examples of a wide variety of measurements to give you ideas on how to solve your measure problems.
- ◆ “Prompting messages and Troubleshooting” chapter describes prompting messages and describes some ways of troubleshooting.
- ◆ “Service and Support” chapter introduce warranty and technology of ADS series products.
- ◆ “Appendix A: Specifications” chapter introduce specifications of ADS1000 series oscilloscopes
- ◆ “AppendixB: Default Setup” chapter contains a list of the menus and controls with the default (factory) settings that are recalled when you push the DEFAULT SETUP front-panel button.
- ◆ “AppendixC: Daily Maintain and Cleaning” chapter describes how to take care of the oscilloscope.

Catalogue

ADS1000 series Storage Digital Oscilloscope introduction.....	II
General Safety Requirement.....	IV
Preface.....	VI
Chapter 1 Accidence.....	3
1.1 Accidence of the front panel and user interface.....	3
1.2 Function checking.....	6
1.3 Probe.....	10
1.3.1 Probe Safety.....	10
1.3.2 Probe Attenuation Setting.....	10
1.3.3 Probe Compensation.....	11
1.4 Self Calibration.....	12
Chapter 2 Functions Instruction and Operation.....	11
2.1 Menu and control button.....	12
2.2 Connector.....	14
2.3 Auto setup.....	15
2.4 Default setup.....	17
2.5 Universal knob.....	18
2.6 Vertical System.....	19
2.6.1 CH1 & CH2 Channel.....	19
2.6.2 The Using of the Vertical “Position” knob and “Volt/div” knob in the vertical system.....	27
2.6.3 Math Functions.....	28
2.6.4 Using Ref.....	35
2.7 Horizontal System.....	37
2.7.1 Horizontal control knob.....	38
2.7.2 Delayed.....	38
2.8 Trigger System.....	40
2.8.1 Signal Source.....	41
2.8.2 Trigger Type.....	41
2.8.3 Coupling.....	53
2.8.4 Position.....	53
2.8.5 Slope & Level.....	53
2.8.6 Trigger Holdoff.....	54
2.9 Acquiring Signals system.....	56
2.10 Display System.....	61
2.10.1 X-Y Format.....	64
2.11 Measure System.....	66
2.11.1 Scale Measurement.....	66
2.11.2 Cursor Measurement.....	66
2.11.3 Auto Measurement.....	71
2.12 Storage System.....	77
2.13 Utility System.....	80
2.13.1 System status.....	83
2.13.2 Language.....	84

2.13.3 Print	84
2.13.4 Self Calibration	87
2.13.5 Self Test	88
2.13.6 Update Firmware	90
2.13.7 Pass/Fail.....	91
2.13.8 Waveform Record	95
2.13.9 Recorder.....	98
2.14 Online Help Function.....	101
Chapter3 Application Examples	102
3.1 Taking Simple Measurements	100
3.2 Taking Cursor Measurements.....	102
3.2.1 Measuring Ring Frequency.....	102
3.2.2 Measuring Ring Amplitude	103
3.3 Catch the single signal	104
3.4 Analyze the signal detail.....	105
3.4.1 Looking at a Noisy Signal	105
3.4.2 Separating the Signal from Noise	105
3.5 Triggering on a Video Signal.....	106
3.5.1 Triggering on Video Field	106
3.5.2 Triggering on Video Lines.....	106
3.6. Application of X-Y function	107
3.7 Analyzing a Differential Communication Signal.....	109
Chapter 4 prompting messages and troubleshooting	110
4.1 Prompting messages:	110
4.2 Troubleshooting	112
Chapter 5 Service and Support.....	114
5.1 Maintain summary	114
5.2 Contract us	115
Appendix A: Specifications	116
Appendix B: Default setup.....	122
Appendix C: Daily Maintain and Cleaning.....	124
Index	125

Chapter 1 Accidence

ADS1000 Series Digital Storage Oscilloscope is minitype and portable bench type instruments, which could be used for measuring as the GND voltage.


This Chapter shows you how to operate following tasks:

- ◆ Accidence of panel and Display information
- ◆ Simple checking of functions
- ◆ Matching probes attenuation coefficient
- ◆ Probe compensation
- ◆ Self Calibration


1.1 Accidence of the front panel and user interface

It is important for you to understand the DSO's front panel before operating it. The following contents are the brief introduction for the front panel function, which is useful to be familiar with the operation of the ADS1000 series Digital Storage Oscilloscope in short time.

ADS1000 series oscilloscopes provides an easy-to-use front panel to convenience users to operate them, the panel contains knobs and buttons. There is a list of five ashen buttons as menu operational buttons on the right of display screen. You can set different options of the current menu in virtue of them. Other buttons are function buttons, you can enter different function menus or obtain given function application in virtue of them.

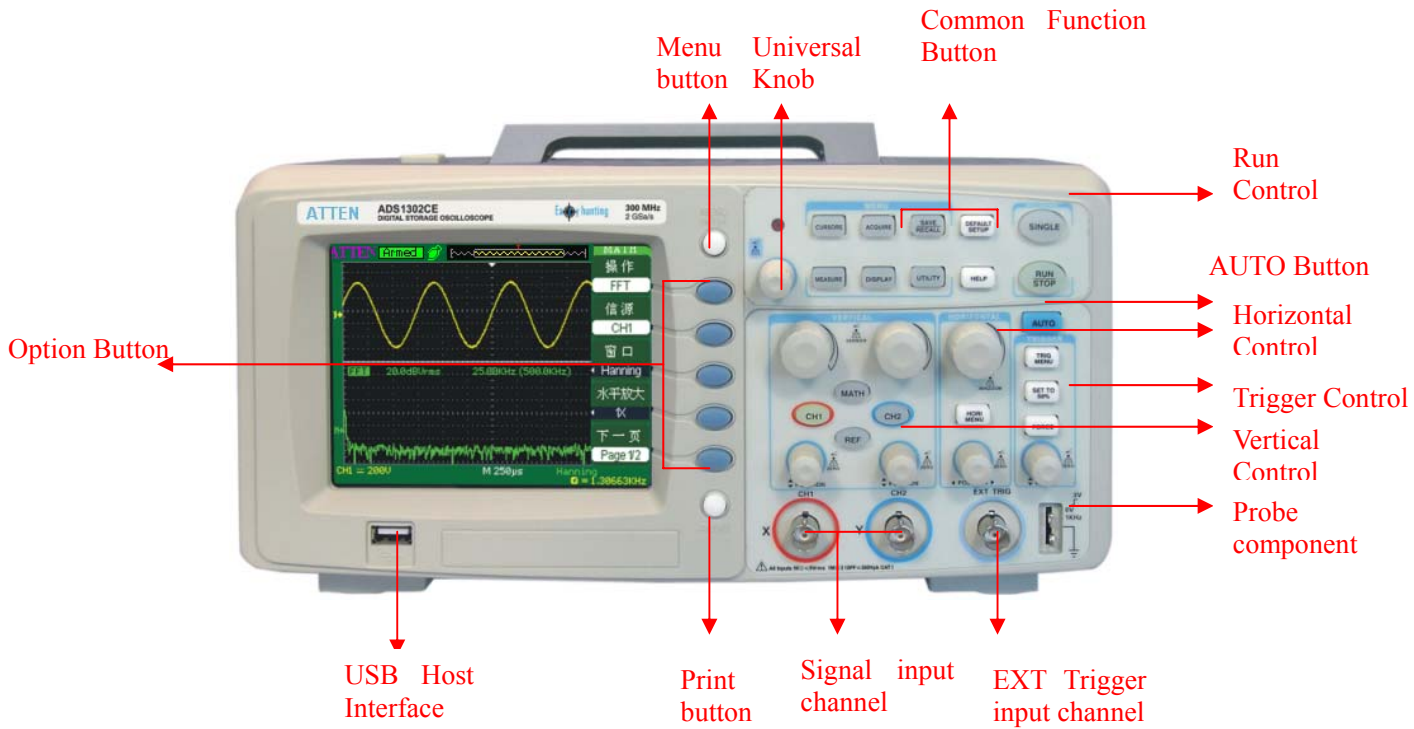

Picture 1-1 Front Panel Controls

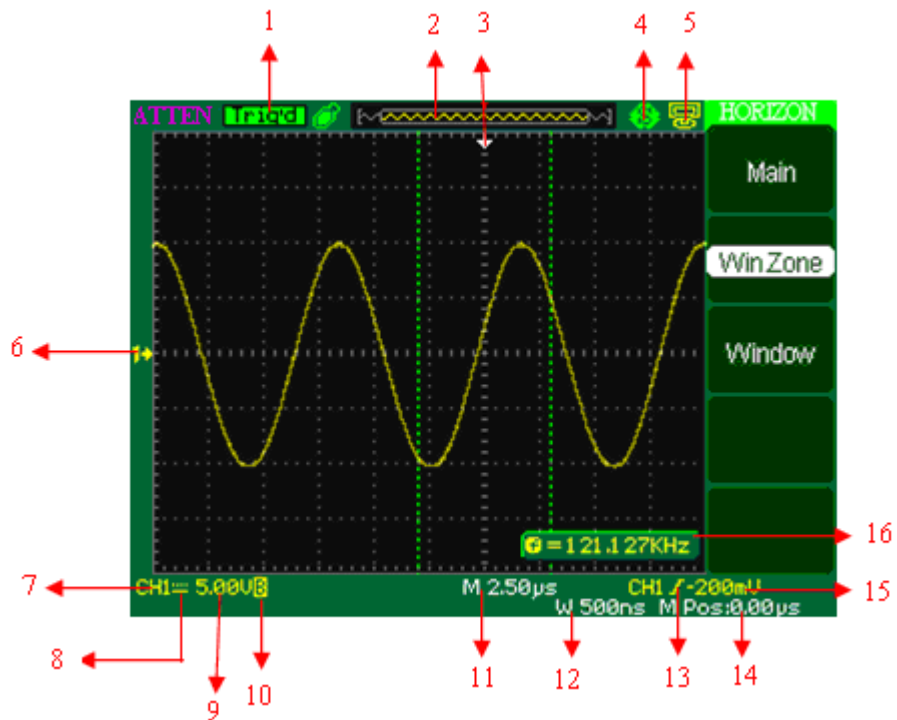

Picture 1-2 Display area

1. Trigger status

Armed: The oscilloscope is acquiring pre-trigger data. All triggers are ignored in this state.

Ready: All pre-trigger data has been acquired and the oscilloscope is ready to accept a trigger.

Trig'd: The oscilloscope has seen a trigger and is acquiring the posttrigger data.


Stop: The oscilloscope has stopped acquiring waveform data.


Auto: The oscilloscope is in auto mode and is acquiring waveforms in the absence of triggers.


Scan: The oscilloscope is acquiring and displaying waveform data continuously in scan mode.


2. display the position of the present waveform window

3. Marker shows horizontal trigger position. Turn the HORIZONTAL POSITION knob to adjust the position of the marker.

4.  "Print Key" option is set to "Print Picture".

 "Print Key" option is set to "Save Picture".

5.  "Back USB" option is set to "Computer".

 "Back USB" option is set to "Printer".

6. Show the waveform's channel position.

7. On-screen markers show the ground reference points of the displayed waveforms.

If there is no marker, the channel is not displayed.. Display signal source.

8. Signal Coupling symbol.

9. Readout shows the vertical factor of the channels.

10. "B" icon shows that bandwidth function is open.

11. Readout shows the main time base setting.

12. Readout shows window time base setting if it is in use.

13. Icon shows the trigger type for the triggering

14. Readout shows the horizontal position.

15. Readout shows the trigger voltage.


16. Readout shows present signal frequency.

1.2 Function checking

When you check whether or not the oscilloscope could work smoothly, please operate as following:


1. Power On the oscilloscope.

Press “DEFAULT SETUP” to show the result of the self check. The probe default attenuation is 1X.

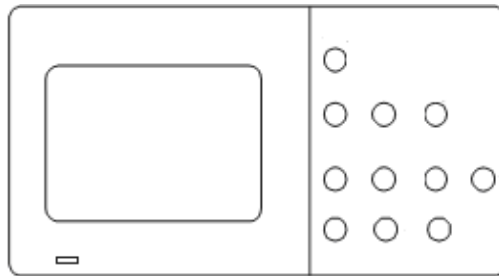


Picture 1-3

2. Set the switch to 1X on the probe and connect the probe to channel 1 on the oscilloscope. To do this, align the slot in the probe connector with the key on the CH 1 BNC, push to connect, and twist to the right to lock the probe in place. Connect the probe tip and reference lead to the PROBE COMP connectors

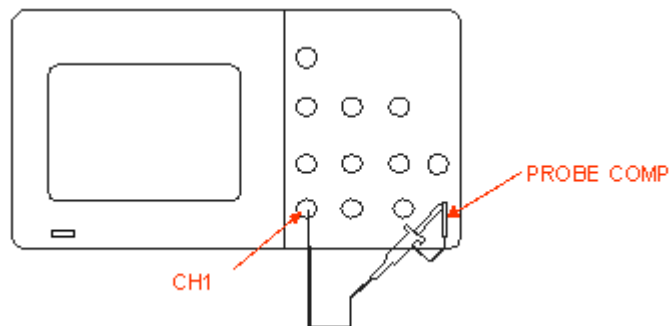

Picture 1-4

3. Press “AUTO” to show the 1KHz frequency and about 3V peak-peak square wave in couple seconds

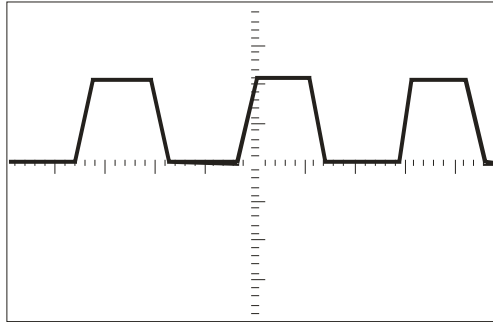


Picture 1-5

4. Press “CH1” two times to cancel the channel 1, Press“CH2” to change screen into channel 2, reset the channel 2 as step 2 and 3.

1.3 Probe

1.3.1 Probe Safety

A guard around the probe body provides a finger barrier for protection from electric shock.

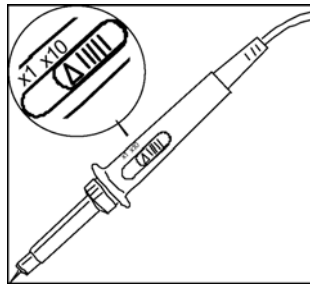

Picture 1-6

Connect the probe to the oscilloscope and connect the ground terminal to ground before you take any measurements.

- Note:**
- To avoid electric shock when using the probe, keep fingers behind the guard on the probe body.
 - To avoid electric shock while using the probe, do not touch metallic portions of the probe head while it is connected to a voltage source.
- Connect the probe to the oscilloscope and connect the ground terminal to ground before you take any measurements.

1.3.2 Probe Attenuation Setting

Probes are available with various attenuation factors which affect the vertical scale of the signal. The Probe Check function verifies that the Probe attenuation option matches the attenuation of the probe.

You can push a vertical menu button (such as the CH 1 MENU button), and select the Probe option that matches the attenuation factor of your probe.

Note. The default setting for the Probe option is 1X.


Be sure that the attenuation switch on the probe matches the Probe option in the

oscilloscope. Switch settings are 1X and 10X.

Note. When the attenuation switch is set to 1X, the probe limits the bandwidth of the oscilloscope to 10MHz(according to Probe spec). To use the full bandwidth of the oscilloscope, be sure to set the switch to 10X


1.3.3 Probe Compensation

As an alternative method to Probe Check, you can manually perform this adjustment to match your probe to the input channel.

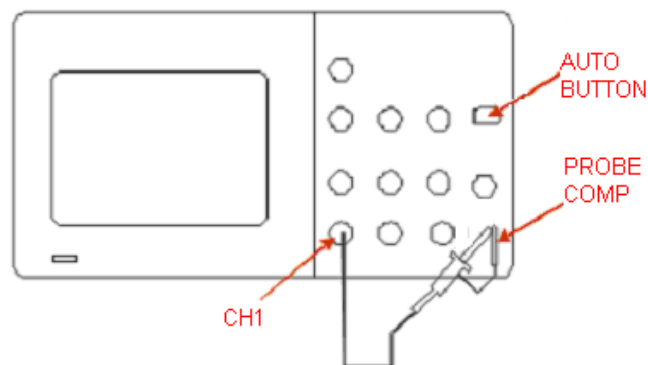

Picture1.3-2

1. Set the Probe option attenuation in the channel menu to 10X. Set the switch to 10X on the probe and connect the probe to channel 1 on the oscilloscope. If you use the probe hook-tip, ensure a proper connection by firmly inserting the tip onto the probe.
2. Attach the probe tip to the PROBE COMP~3V connector and the reference lead to the PROBE COMP Ground connector. Display the channel and then push the “AUTO” button.
3. Check the shape of the displayed waveform.

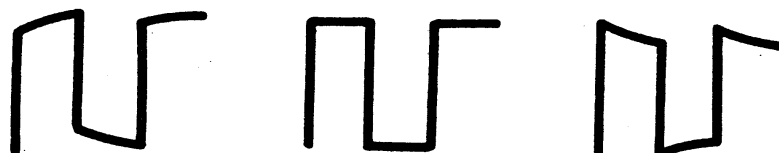

Over compensated Compensated correctly under compensated

Picture 1.3-3

4. If necessary, adjust your probe. Repeat as necessary.

1.4 Self Calibration

The self calibration routine lets you optimize the oscilloscope signal path for maximum measurement accuracy. You can run the routine at any time but should always run the routine if the ambient temperature changes by 5°C or more.

To compensate the signal path, disconnect any probes or cables from the front-panel input connectors. Then, push the UTILITY button → “Next Page 1/3” → “Do Self Cal” option and follow the directions on the screen.

Chapter 2 Functions Instruction and Operation

To use your oscilloscope effectively, you need to learn about the following oscilloscope functions:

- ◆ Menu and control button
- ◆ Connector
- ◆ Auto Setup
- ◆ Default Setup
- ◆ Universal knob
- ◆ Vertical System
- ◆ Horizontal System
- ◆ Trigger System
- ◆ Acquiring signals System
- ◆ Display System
- ◆ Measuring waveforms System
- ◆ Utility System
- ◆ Storage System
- ◆ Online Help function

2.1 Menu and control button

Showing as the following picture:



Picture 2-1

All models:

- **CH1、CH2:** Channel 1, channel 2 menu control button.
- **MATH:** MATH function control button.
- **REF:** Reference waveforms control button.
- **HORI MENU:** Horizontal control button.
- **TRIG MENU:** Trigger control button.
- **SET TO 50%:** Set the trigger level to midpoint of the signal amplitude.
- **FORCE:** Use the FORCE button to complete the current waveform acquisition whether the oscilloscope detects a trigger or not. This is useful for Single acquisitions and Normal trigger mode.
- **SAVE/RECALL:** Display the Save/Recall Menu for setups and waveforms.
- **ACQUIRE:** Display the Acquire Menu.
- **MEASURE:** Display the automated measurements menu.
- **CURSORS:** Display the Cursor Menu. Vertical Position controls adjust cursor position while displaying the Cursor Menu and the cursors are activated. Cursors remain displayed (unless the “Type” option is set to “Off”) after leaving the Cursor Menu but are not adjustable.
- **DISPLAY:** Display the Display Menu.
- **UTILITY:** Display the Utility Menu.
- **DEFAULT SETUP:** Recall the factory setup.
- **HELP:** Enter the online help system.
- **AUTO:** Automatically sets the oscilloscope controls to produce a usable display of


the input signals.

■ **RUN/STOP:** Continuously acquires waveforms or stops the acquisition.

Note: If waveform acquisition is stopped (using the RUN/STOP or SINGLE button), the SEC/DIV control expands or compresses the waveform.

■ **SINGLE:** Acquire a single waveform and then stops.

2.2 Connector

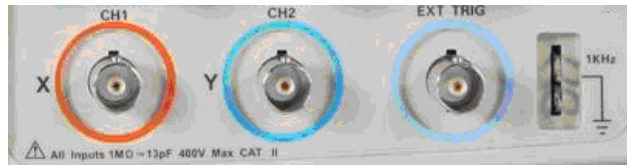

Picture 2-2

- **CH1、CH2:** Input connectors for waveform display.
- **EXT TRIG:** Input connector for an external trigger source. Use the Trigger Menu to select the “Ext” or “Ext/5” trigger source.
- **Probe Component:** Voltage probe compensation output and ground. Use to electrically match the probe to the oscilloscope input circuit.






Note: If you connect a voltage source to a ground terminal, you may damage the oscilloscope or the circuit under test. To avoid this, do not connect a voltage source to any ground terminals.

2.3 Auto setup

ADS1000 Series Digital Storage Oscilloscopes have auto setup function, which can identify the type of waveform and adjust controls to produce a usable display of the input signal.

“AUTO” is the auto Set up button.

 
Table 2-1 Auto set function Menu:

Option	Introduction
 (Multi-cycle sine)	Auto set the screen and display several cyc signal.
 (Single-cycle sine)	Set the screen and auto display single cyc signal.
 (Rising edge)	Auto set and show the rising time.
 (Falling edge)	Auto set and show the falling time.
 (Undo Setup)	Causes the oscilloscope to recall the previous setup.

Autoset determines the trigger source based on the following conditions:

- If multiple channels have signals, channel with the lowest frequency signal.
- No signals found, the lowest-numbered channel displayed when Autoset was invoked
- No signals found and no channels displayed, oscilloscope displays and uses channel 1.

Input a signal to Channel 1, press the “Auto” button (See picture 2-3):

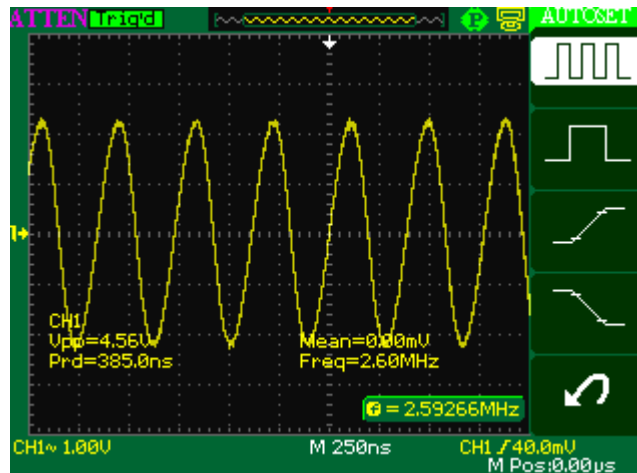

Picture 2-3

Table 2-2 Auto set the function item

Function	Setting
Acquire Mode	Adjusted to Sampling
Display Format	Y-T
Display Type	Set to Dots for a video signal, set to Vectors for an FFT spectrum; otherwise, unchanged
Vertical Coupling	Adjusted to DC or AC according to the input signal
Bandwidth Limit	Off(full)
V/div	Adjusted
VOLTS/DIV adjustability	Coarse
Signal inverted	Off
Horizontal position	Center
S/div	Adjusted
Trigger type	Edge
Trigger source	Auto detect the channel which has the input signal
Trigger slope	Rising
Trigger mode	Auto
Trigger coupling	DC
Trigger holdoff	Minimum
Trigger level	Set to 50%

2.4 Default setup

The oscilloscope is set up for normal operation when it is shipped from the factory.

This is the default setup. To recall this setup, press the DEFAULT SETUP button.

The options, buttons and controls that change settings when you press the DEFAULT SETUP button, refer to appendix C.

The DEFAULT SETUP button does not reset the following settings:

- Language option
- Saved reference waveform files
- Saved setup files
- Display contrast
- Calibration data

2.5 Universal knob




Universal knob

Picture 2-4

ADS1000 Series Digital Storage Oscilloscope has a special knob-the “Universal” knob, Using this knob can adjust the holdoff time, move cursors, set the pulse width, Set the Video Linage, adjust frequency upper limit or frequency lower limit of the digital filter , adjust x mask and y mask in pass/fail function and adjust the record frame or play back frame in waveform record menu etc. You can turn the “Universal” knob to adjust the storage position of setups, waveforms, pictures to save or recall them, and you can adjust the “Universal” knob to select menu option.

2.6 Vertical System

Showing as follow picture, the buttons and knobs are useful in the vertical system

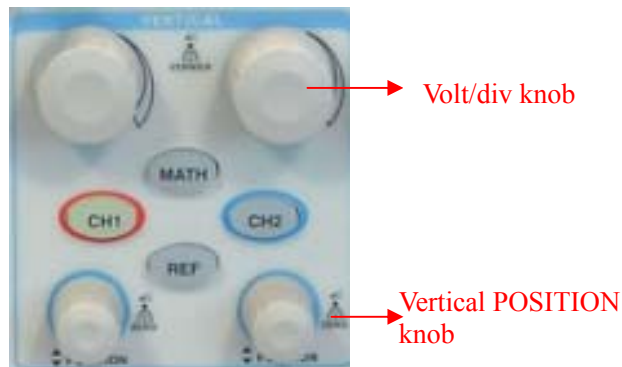

Picture 2-5

The vertical control, which each channel has, could be used for displaying waveform, rectify scale and position.

2.6.1 CH1 & CH2 Channel

 



Table 2-3 CH1 & CH2 function menu 1:

Option	Setting	Introduction
Coupling	DC	DC passes both AC and DC components of the input signal.
	AC	AC blocks the DC component of the input signal and attenuates signals below 10 Hz.
	GND	GND disconnects the input signal.
Bw limit	On	Limits the bandwidth to reduce display noise; filters the signal to reduce noise and other unwanted high frequency components.
	Off	
Volts/Div	Coarse	Selects the resolution of the Volts/Div knob Coarse defines a 1-2-5 sequence. Fine changes the resolution to small steps between the coarse settings.
	Fine	
Probe	1X	Set to match the type of probe you are using to ensure correct vertical readouts.
	10X	
	100X	
	1000X	
Next Page	Page 1/2	Press this button to enter second page menu.

Table 2-4 CH1 & CH2 function menu 2:

Option	Setting	Instruction
Invert	on off	Turn on invert function. Turn off invert function.
Digital Filter	/	Press this button to enter the “Digital Filter menu”.(See table 2-5)
Next Page	Page 2/2	Press this button to return the first page menu.

 Table 2-5 Digital Filter function menu:

Option	Setting	Introduction
Digital Filter	On Off	Turn on the digital filter. Turn off the digital filter.
Type	   	Setup as LPF(Low Pass Filter). Setup as HPF(High Pass Filter). Setup as BPF(Band Pass Filter). Setup as BRF(Band Reject Filter).
Upper_limit	/	Turn the “Universal” knob to set upper limit.
Lower_limit	/	Turn the “Universal” knob to set lower limit.
Return	/	Return the digital filter main menu.

- **“GND” Coupling:** Use GND coupling to display a zero-volt waveform. Internally, the channel input is connected to a zero-volt reference level.
- **Fine Resolution:** The vertical scale readout displays the actual Volts/Div setting while in the fine resolution setting. Changing the setting to coarse does not change the vertical scale until the VOLTS/DIV control is adjusted.
- **Wave Cancel:** Press the menu button for the channel to display its vertical menu. Push the menu button again to remove the waveform.

- Note:**
- The oscilloscope vertical response rolls off slowly above its bandwidth (60 MHz, 100 MHz) , which depending on the model, or 20 MHz when the Bandwidth Limit option is set to “On”. Therefore, the FFT spectrum can show valid frequency information higher than the oscilloscope bandwidth. However, the magnitude information near or above the bandwidth will not be accurate.
 - If the channel is set to DC coupling, you can quickly measure the DC component of the signal by simply nothing its distance from the ground symbol.
 - If the channel is set to AC coupling, the DC component of the signal is blocked allowing you to use greater sensitivity to display the AC component of the signal.


Setting up the CH1、 CH2 Channels

Each channel has its own separate Menu. The items are set up separately according to each channel.

1. Set up the channel couple

Take the CH1 for example, the tested signal is a sine wave signal with DC deflection:


- Press“CH1”→“Coupling”→“AC”, Set to AC couple mode. It blocks the DC component of the input signal.

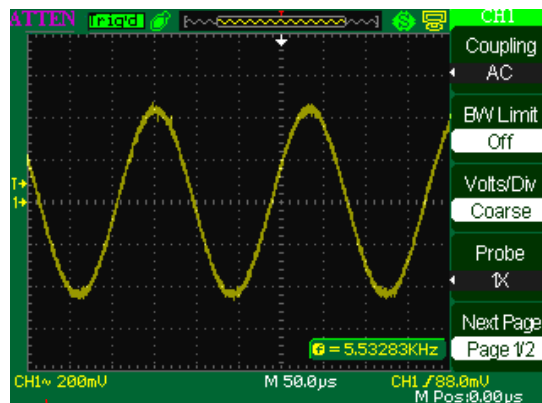

AC status

Picture 2-6


- Press“CH1”→“Coupling”→“DC”, Set to DC couple mode. Both DC and AC component could be obstructed.

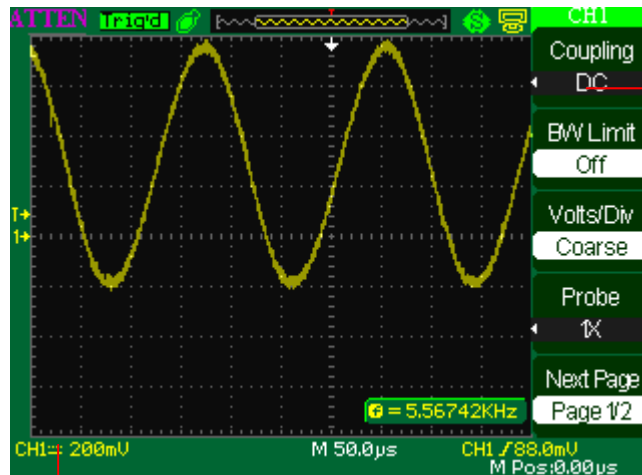

AC Status

Picture 2-7

● Press “CH1”→“Coupling”→“GND”, Set to GROUND mode. It disconnects the input signal.

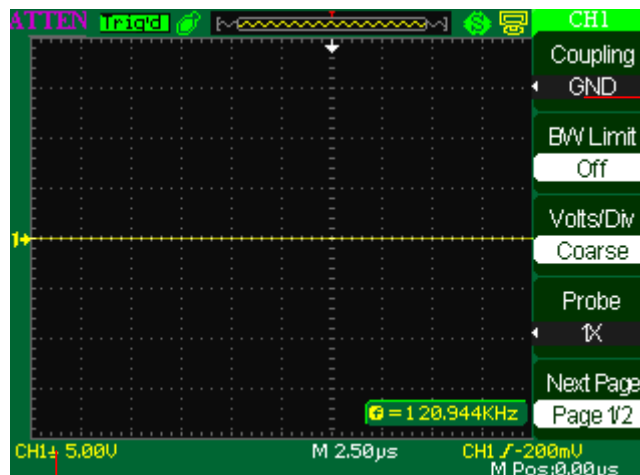


GND Status

Picture 2-8

2. Set up the channel bandwidth limit

Take the CH1 for example, the tested signal is a pulse signal with the high frequency surge:


● Press “CH1”→“BW Limit”→ “On”, Set the band width Limited to open state. The high frequency component which is higher than 20MHz obstructed.

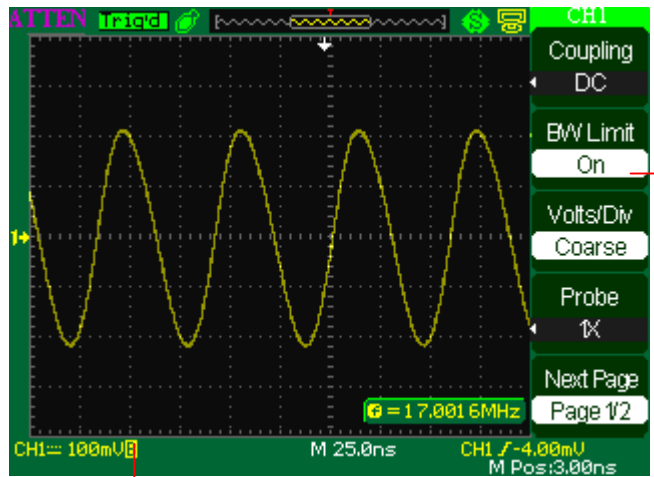

Bandwidth Limit Symbol

Picture 2-9

- Press“CH1”→“BW Limit”→ “Off”, Set bandwidth Limited to close state, the High Frequency component in the tested signal could pass.

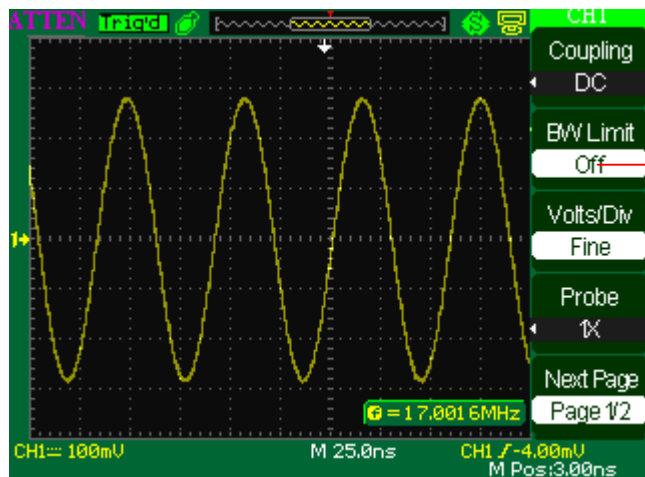


Picture 2-10

3. Volts/Div settings

Vertical scale adjust have Coarse and fine two modes, Vertical sensitivity range is 2mV/div~5V/div scale or 2mV/div~10V/div scale


Take the CH1 for example:

- Press“CH1”→“Volts/Div”→“Coarse”. It is the default setting of Volts/Div, and it makes the vertical scaling in a 1-2-5-step sequence from 2mv/div, 5mv/div, 10mv/div to 10v/div.

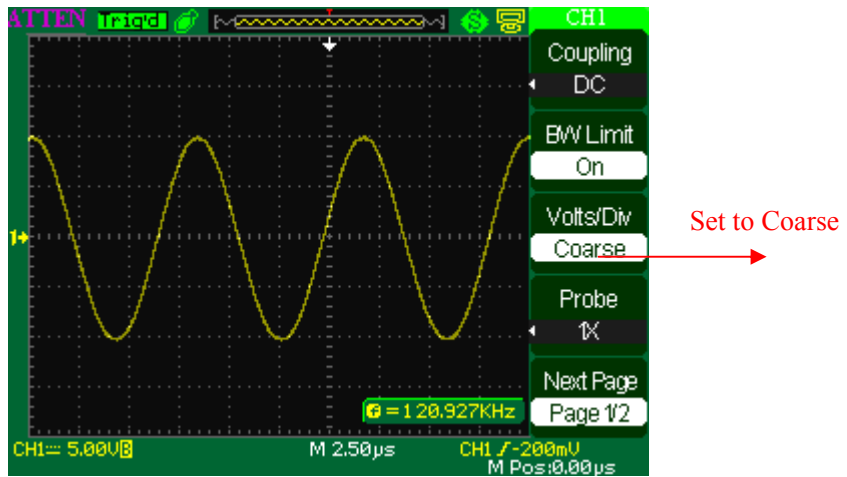

Picture 2-11

- Press CH1 → Volts/Div → Fine. This setting changes the vertical to small steps between the coarse settings. It will be helpful when you need to adjust the waveform vertical size in smooth steps.

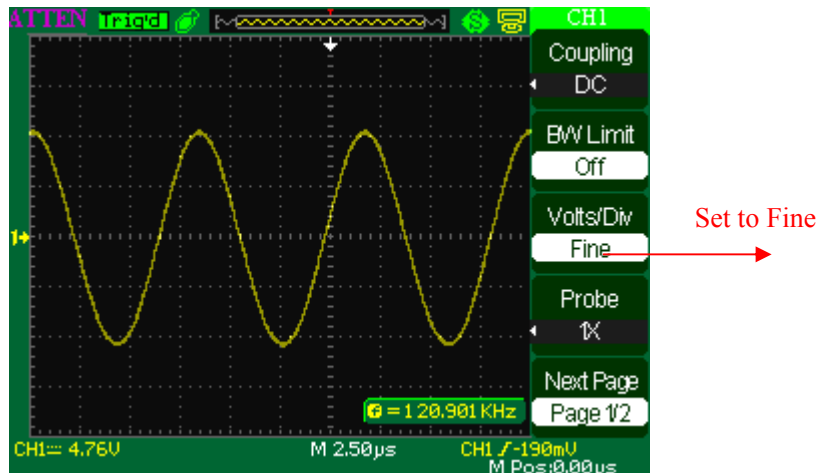


Picture 2-12

4. Probe Attenuation set

In order to assort the attenuation coefficient, you need to response in the channel operation Menu. If the attenuation coefficient is 10:1, the input coefficient should be set to 10X, so that the mistake of the Volts/div information and measure testing should be forbidden.

Take the CH1 for example, when you use the 100:1 probe:

- Press “CH1” → “Probe” → “100X

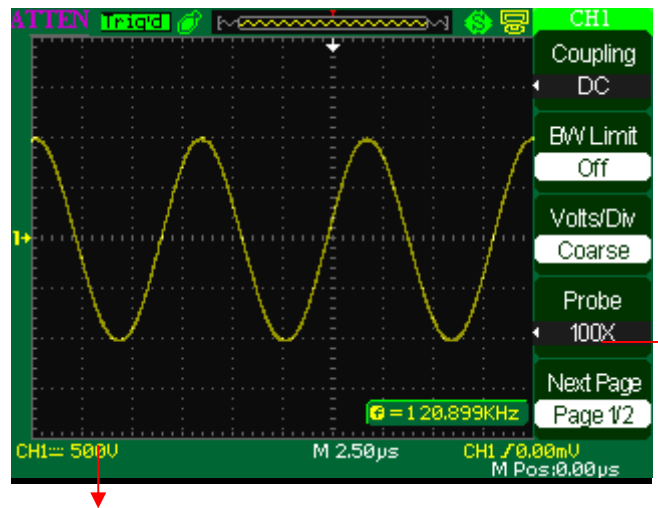


Status changes with the probe attenuation

Picture 2-13

5. To invert a waveform


Take the CH1 for example:

- Press “CH1” → “Invert” → “On”:

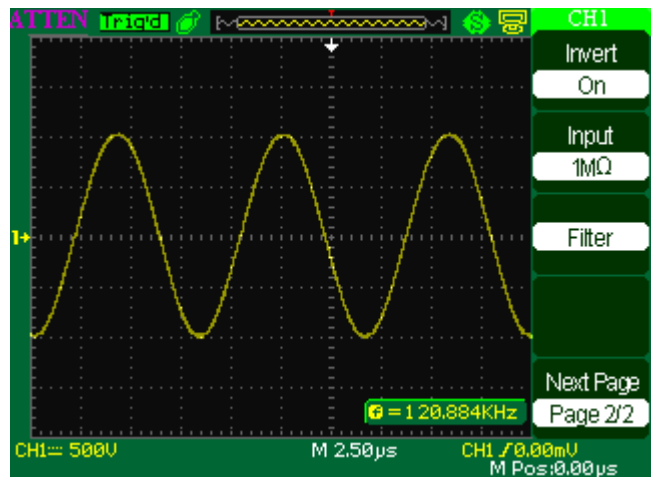

Picture 2-14

- Press “CH1” → “Invert” → “Off”:

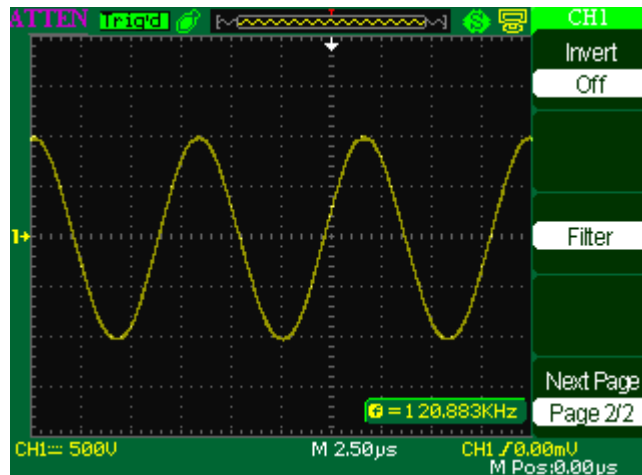


Picture 2-15

6. Digital Filter


Press “CH1”→“Next Page”→ “Filter”, display the digital filter menu. Select “Filter Type”, then select “Upper Limit” or “Lower Limit” and turn the “Universal” knob to adjust them.

- Press “CH1”→“Next Page”→ “Filter” →“Off”. Turn off the Digital Filter function.

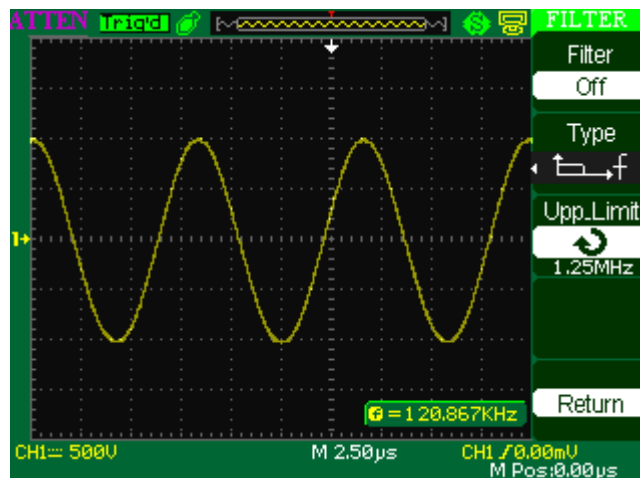

Picture 2-16

- Press “CH1”→ “Next Page”→ “Filter” → “On”. Turn on the Digital Filter function.

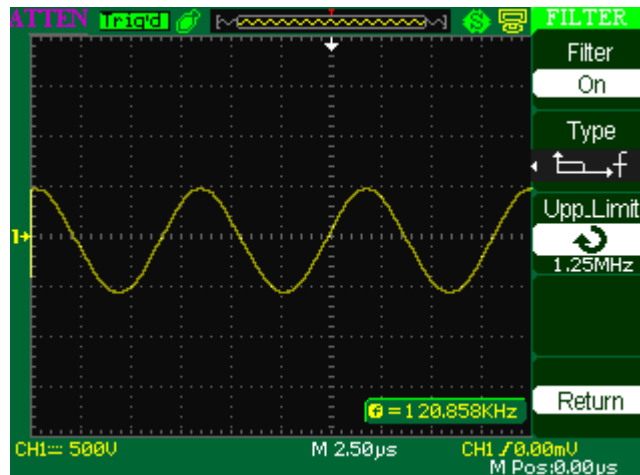

Picture 2-17

2.6.2 The Using of the Vertical “Position” knob and “Volt/div” knob in the vertical system

■ Vertical “POSITION” knob

1. Use the Vertical “POSITION” knobs to move the channel waveforms up or down on the screen. This button’s resolution is variety as per the vertical scale.
2. When you adjust the vertical position of channels waveforms, the vertical position information will display on the left bottom of screen. For example “Volts Pos=24.6mV”.
3. Press the vertical “POSITION” knob to set the vertical position to zero.

■ “Volts/div” knob

1. Use the “Volts/div” knobs to control how the oscilloscope amplifies or attenuates the source signal of channel waveforms. When you turn the “volts/div” knob, the oscilloscope increases or decreases the vertical size of the waveform on the screen with respect to the ground level;
2. When you press the “Volt/div” Knob, you can switch “Volt/div” option between “Coarse” and “Fine”. The vertical scale is made sure by the 1-2-5 step in the Coarse. Increase in the clockwise, reduce in the anticlockwise. In the fine mode, the knob changes the Volts/Div scale in small steps between the coarse settings. Increase in the clockwise, reduce in the anticlockwise.

2.6.3 Math Functions

Math shows the results after +, -, * and FFT operation of the CH1 and CH2.

Press the MATH button to display the waveform math operations. Press the MATH button again to remove the math waveform display.


Table 2-6 MATH function menu:

Function	Setting	Introduction
Operation	+, -, *, FFT	Source 1 plus Source 2.
CH1 Invert	on off	Invert the CH1 waveform. Turn off CH1 Invert function.
CH2 Invert	on off	Invert the CH2 waveform. Turn off CH2 Invert function.

Table 2-7 MATH function instruction

Operation	Setting	Introduction
+	CH1+CH2	CH1 waveform add CH2 waveform.
-	CH1-CH2	The channel 2 waveform is subtracted from the channel 1 waveform.
	CH2-CH1	The channel 1 waveform is subtracted from the channel 2 waveform.
*	CH1*CH2	Source 1 multiply source 2.
/	CH1/CH2	Source 1 divide Source 2.
	CH2/CH1	Source 2 divide Source 1.
FFT	Fast Fourier Transform.	

CH1 waveform add CH2 waveform, see picture 2-18:

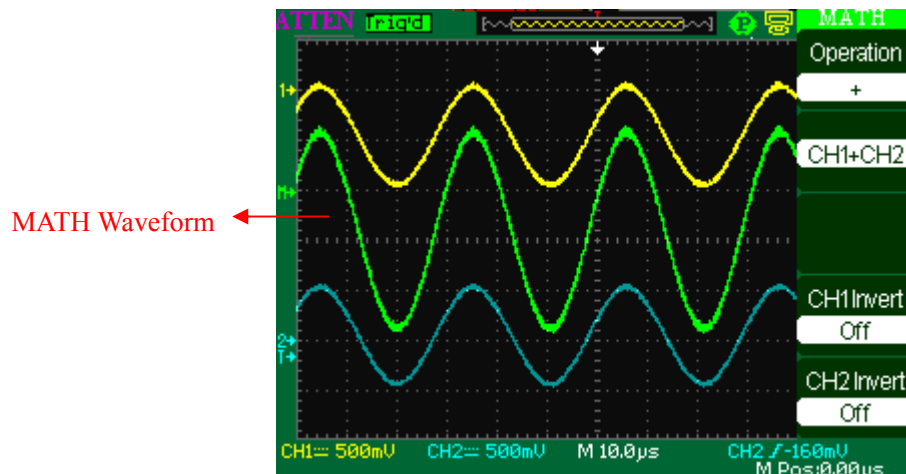

Picture 2-18

1. FFT Spectrum Analyzer

The FFT process mathematically converts a time-domain signal into its frequency components. You can use the Math FFT mode to view the following types of signals:

- Analyze the Humorous wave in the Power cable.
- Test the Humorous content and distortion in the system
- Show the Noise in the DC Power supply
- Test the filter and pulse response in the system
- Analyze vibration

Table 2-8 FFT function menu 1:

FFT Option	Setting	Introduction
Source	CH1 CH2	Select this channel as the FFT source.
Window	Hanning Hamming Rectangular Blackman	Select FFT window types.
FFT ZOOM	1X 2X 5X 10X	Changes the horizontal magnification of the FFT display.
Next Page	Page 1/2	Enter the second page of FFT menu.

Table 2-9 FFT function menu 2:

FFT Option	Setting	Introduction
Scale	Vrms	Set Vrms to be the Vertical Scale unit.
	dBVrms	Set dBVrms to be the vertical Scale unit.
Display	Split Full screen	Display FFT waveform on half screen. Display FFT waveform on full screen.
Next Page	Page 2/2	Return the first page of FFT menu.

To use the Math FFT mode, you need to perform the following tasks:

1. Set up the source (time-domain) waveform.
 - Press the AUTO button to display a YT waveform.
 - Turn the vertical “POSITION” knob to move the YT waveform to the center

vertically (zero divisions).

- Turn the horizontal “POSITION” knob to position the part of the YT waveform that you want to analyze in the center eight divisions of the screen.

The oscilloscope calculates the FFT spectrum using the center 1024 points of the time-domain waveform.


- Turn the “Volts/div” knob to ensure that the entire waveform remains on the screen.
- Turn the “S/div” knob to provide the resolution you want in the FFT spectrum.
- If possible, set the oscilloscope to display many signal cycles.

To display FFT correctly, follow these steps:


1. Push the “MATH” button.
2. Set the “Operation” option to FFT.
3. Press the “Source” button to select “CH1” or “CH2” according to input signal channel.
4. According to Nyquist law, turn the “S/div” knob to adjust the sampling rate (This parameter is displayed behind the time base parameter) is at least double than input signal frequency.

2. Displaying the FFT Spectrum

Press the MATH button to display the Math Menu. Use the options to select the Source channel, Window algorithm, and FFT Zoom factor. You can display only one FFT spectrum at a time. You can select “Full screen” or “Split” in “Display” option to display FFT waveform on full screen or display channel waveform and its FFT waveform on half screen at a time.

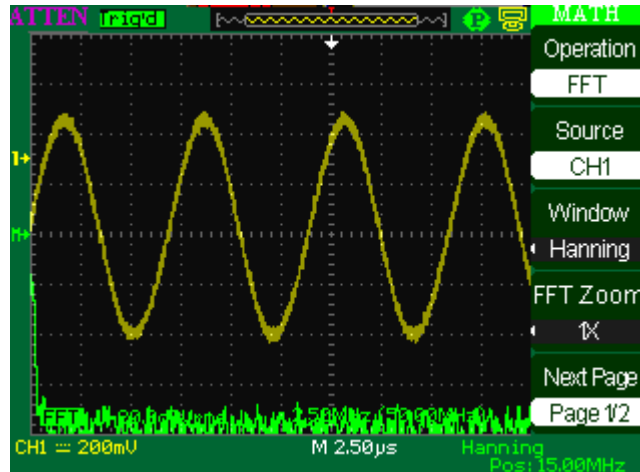

Picture 2-19

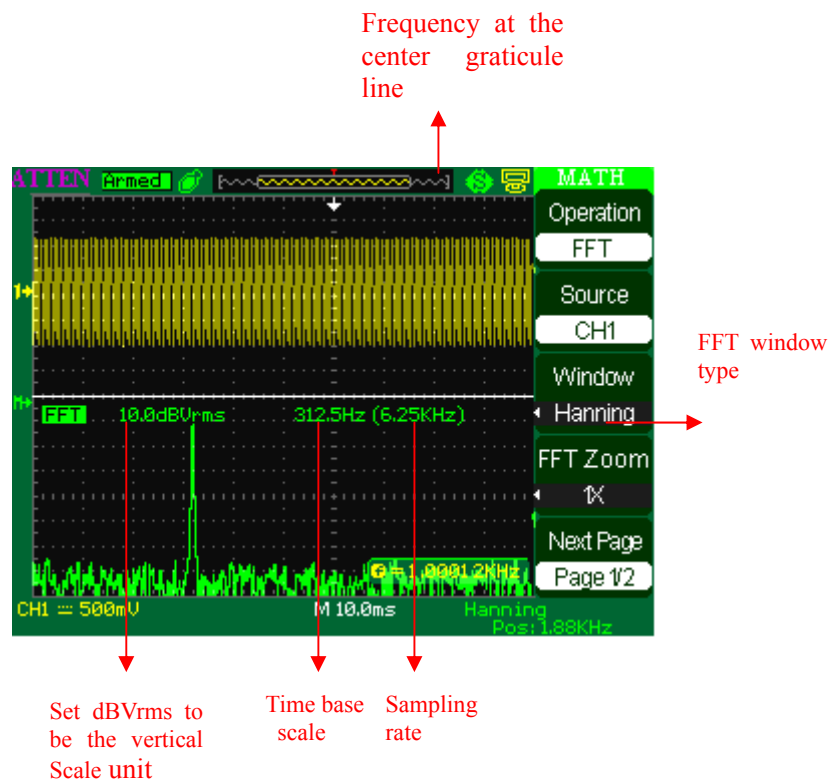

Picture 2-20

3. Select FFT window

Windows reduce spectral leakage in the FFT spectrum. The FFT assumes that the YT waveform repeats forever. With an integral number of cycles, the YT waveform starts and ends at the same amplitude and there are no discontinuities in the signal shape. A non-integral number of cycles in the YT waveform causes the signal start and end points to be at different amplitudes. The transitions between the start and end points

cause discontinuities in the signal that introduce high-frequency transients.

According to the tested options and source speciality, make sure the window you need to use.

Table 2-10 FFT window instruction

Window	Speciality	Satisfied Test content
Rectangular	Best frequency resolution, worst magnitude resolution. This is essentially the same as no window.	Symmetric transients or bursts. Equal-amplitude sine waves with fixed frequencies. Broadband random noise with a relatively slowly varying spectrum.
Hanning Hamming	Better frequency, poorer magnitude accuracy than Rectangular. Hamming has slightly better frequency resolution than Hanning.	Sine, periodic, and narrow-band random noise. Asymmetric transients or bursts.
Blackman	Best magnitude, worst frequency resolution.	Single frequency waveforms, to find higher order harmonics.

4. Magnifying and Positioning an FFT Spectrum

You can magnify and use cursors to take measurements on the FFT spectrum. The oscilloscope includes an “FFT Zoom” option to magnify horizontally, press this option button to select “1X”, “2X”, “5X” or “10X”. Moreover, you also can turn the “Universal” knob to magnify FFT waveform horizontally in a 1-2-5 step. To magnify vertically, you can turn the “Volts/div” knob.

5. Measuring an FFT Spectrum Using Cursors

You can take two measurements on FFT spectrums: magnitude (in dB) and frequency (in Hz). Magnitude is referenced to 0 dB, where 0 dB equals 1 VRMS. You can use the cursors to take measurements at any zoom factor. (Refer to cursor measure2.11.2)


Use horizontal cursors to measure amplitude and vertical cursors to measure

frequency.

If you input a sine signal to channel 1, follow these steps:

1. Measure FFT Amplitude


- 1) Input a sine signal to channel 1, and press the “AUTO” button.
- 2) Press the “MATH” button to enter the “MATH” menu.
- 3) Press the “Operation” option button to select “FFT”.
- 4) Press the “Source” option button to select “CH1”.
- 5) Press CH1 button to display CH1 menu.
- 6) Turn the “S/div” knob to adjust sampling rate (at least double bigger than frequency of input signal) .
- 7) If FFT display on full screen, press CH1 button again to remove channel waveform display.
- 8) Press the “CURSOR” button to enter “Cursor” menu.
- 9) Press the “Cusor Mode” button to select “Manual”.
- 10) Press the “Type” option button to select “Voltage”.
- 11) Press the “Source” option button to select “MATH”.
- 12) Press the “CurA” option button, turn the “Universal” knob to move Cursor A to the highest point of the FFT waveform.
- 13) Press the “CurB” option button, turn the “Universal” knob to move Cursor B to the lowest point of the FFT waveform.
- 14) The amplitude (ΔT) displays on the top right of the screen.

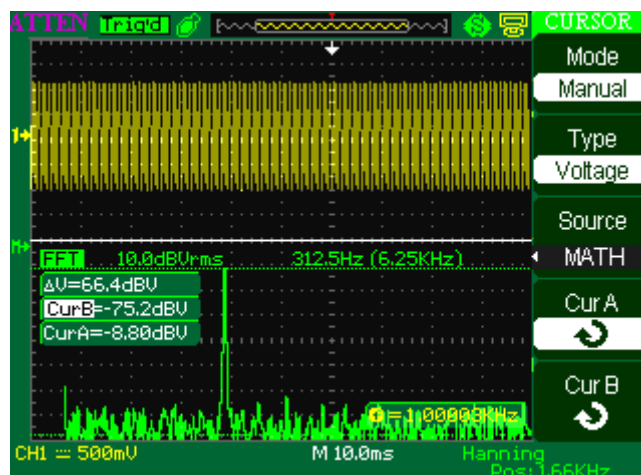

Picture 2-21

2. Measure FFT Frequency

- 1) Press the CURSOR button.
- 2) Press the “Cursor Mode” button to select “Manual”.
- 3) Press the “Type” option button to select “Time”.
- 4) Press the “Source” option button to select “MATH”.
- 5) Press the “Cur1” option button, turn the “Universal” button to move Cursor 1 to the highest position of the FFT waveform.
- 6) The value of Cur1 displaying on the top right of the screen is FFT highest Frequency. This frequency should be the same as input signal frequency.

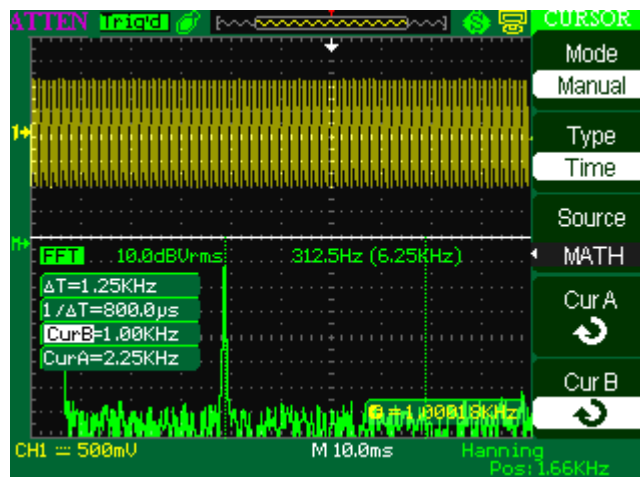

Picture 2-22

- NOTE:**
- The FFT of a waveform that has a DC component or offset can cause incorrect FFT waveform magnitude values. To minimize the DC component, choose AC Coupling on the source waveform.
 - To display FFT waveforms with a large dynamic range, use the dBVrms scale. The dBVrms scale displays component magnitudes using a log scale.
 - The Nyquist frequency is the highest frequency that any real-time digitizing oscilloscope can acquire without aliasing. This frequency is half that of the sample rate, provided it is within the analog bandwidth of the oscilloscope. Frequencies above the Nyquist frequency will be under sampled, which causes aliasing.


2.6.4 Using Ref

The reference control saves waveforms to a nonvolatile waveform memory. The reference function becomes available after a waveform has been saved.

Table 2-11 REF function menu:

Option	Setting	Introduction
Source	CH1 CH2 CH1 off CH2 off	Choose the waveform display to store.
REFA REFB		Choose the reference location to store or recall a waveform.
Save		Stores source waveform to the chosen reference location.
REFA/REFB	on off	Recall the reference waveform on the screen. Turn off the reference waveform.

Press the Ref button to display the “Reference waveform menu”.

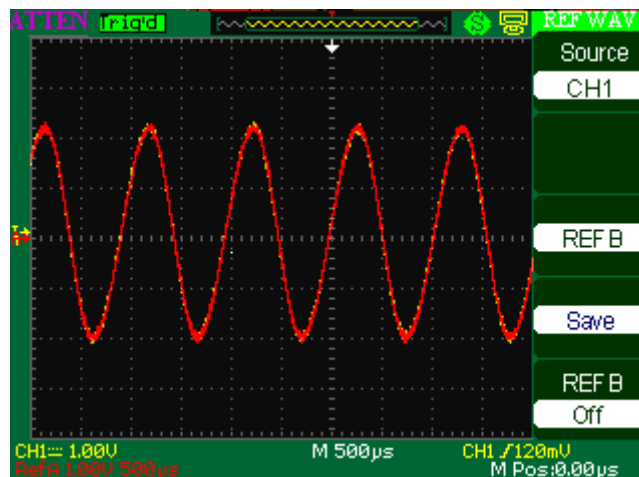

Picture 2-23

Operation step:


1. Press the “REF” menu button to display the “Reference waveform menu”.
2. Press the “Source” option button to select input signal channel.
3. Turn the vertical “POSITION” knob and “Volt/div” knob to adjust the vertical position and scale to conformable positions.
4. Press the top third option button to select “REFA” or “REFB” as storage position.
5. Press the “Save” option button.
6. Press the bottom option button to select “REFA On” or “REFB On” to recall

the reference waveform.

- Note :**
- X-Y mode waveforms are not stored as reference waveforms.
 - You cannot adjust the horizontal position and scale of the reference waveform.

2.7 Horizontal System

As follow Picture, there are one button and two knobs in the HORIZONTAL area.

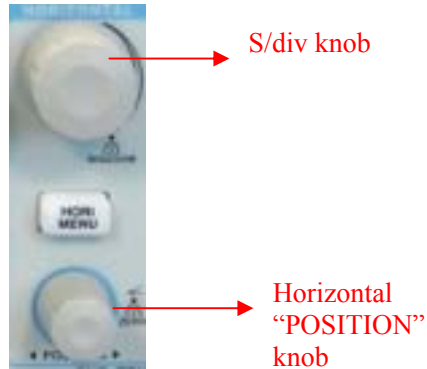

Picture 2- 25

Table 2- 13 ADS1000C+/CA/CM Series Horizontal system function menu:

Option	Setting	Description
Delayed	On	Turn on this function that main timebase waveform display on the top half screen and window timebase waveform display on the below half screen at the same time.
	Off	Turn off this function that only display main timebase waveform on the screen.
MemDepth	Normal	Set memory depth to normal.
	Long Mem	Set memory depth to long Memory depth in order to get more waveform dots.

Note: • Only ADS1000CM series support Long Memory

If ADS1000CM Set memory depth to normal mode, the memory depth is 40Kpts

If ADS1000CM Set memory depth to Long Mem mode, the memory depth is 2Mpts

MemDepth Detailed Specification:

Memory Depth	Channel Mode	Samping Rate	Short memory	Long Memory
	Single Channel	1Gsa/s	40kpts	No Support
	Single Channel	500MSa/s or lower	20kpts	2Mpts
	Double Channels	500MSa/s or lower	20kpts	1Mpts

2.7.1 Horizontal control knob

You can use the horizontal controls to change the horizontal scale and position of waveforms. The horizontal position readout shows the time represented by the center of the screen, using the time of the trigger as zero. Changing the horizontal scale causes the waveform to expand or contract around the screen center.

■ Horizontal “POSITION” knob

1. Adjust the horizontal position of all channels and math waveforms (the position of the trigger relative to the center of the screen). The resolution of this control varies with the time base setting.

2. When you press the horizontal “POSITION” Knob, you can set the horizontal position to zero.

■ “S/div” knob

1. Using to change the horizontal time scale to magnify or compress the waveform. If waveform acquisition is stopped (using the RUN/STOP or SINGLE button), turn the S/div knob to expand or compress the waveform.

2. Select the horizontal time/div (scale factor) for the main or the window time base. When Window Zone is enabled, it changes the width of the window zone by changing the window time base.

■ Display scan mode:

When the SEC/DIV control is set to 100 ms/div or slower and the trigger mode is set to Auto, the oscilloscope enters the scan acquisition mode. In this mode, the waveform display updates from left to right. There is no trigger or horizontal position control of waveforms during scan mode.

2.7.2 Delayed


Use the Window Zone option to define a segment of a waveform to see more detail. The Window time base setting cannot be set slower than the Main time base setting.

You can turn the Horizontal Position and SEC/DIV controls to enlarge or minish waveforms in the Window Zone.

If you want to see a section of the waveform in detail, follow these steps:

- (1) Press the “HORI MENU” button to enter the “Horizontal menu”.
- (2) Turn the “S/div” knob to change the main timebase scale.
- (3) Press the “Delayed” option button to select “On”.

Turn the “Horizontal Position” knob (adjust window’s position) to select the window that your need and expanded window waveform display on the below half screen at the same time

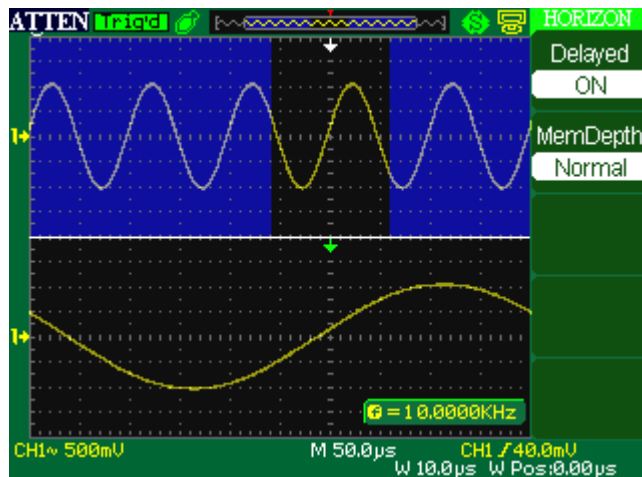

Picture 2-28

2.8 Trigger System

The trigger determines when the oscilloscope starts to acquire data and display a waveform. When a trigger is set up properly, the oscilloscope converts unstable displays or blank screens into meaningful waveforms.

Here are three buttons and one Knob in the Trigger area. Showing as Picture.2-29:



Picture 2-29

- **“TRIG MENU” Button:** Press the “TRIG MENU” Button to display the “Trigger Menu”.
- **“LEVEL” Knob:** The LEVEL knob is to set the corresponding signal voltage of trigger point in order to sample. Press the “LEVEL” knob can set trigger level to zero.
- **“SET TO 50%” Button:** Use the “SET TO 50%” button to stabilize a waveform quickly. The oscilloscope can set the Trigger Level to be about halfway between the minimum and maximum voltage levels automatically. This is useful when you connect a signal to the EXT TRIG BNC and set the trigger source to Ext or Ext/5.
- **“FORCE” Button:** Use the FORCE button to complete the current waveform acquisition whether the oscilloscope detects a trigger or not. This is useful for SINGLE acquisitions and Normal trigger mode.
- **Pretrigger/Delayed trigger:** The data before and after trigger the trigger position is typically set at the horizontal center of the screen, in the full-screen display the 6div data of pretrigger and delayed trigger can be surveyed. More data of pretrigger and 1s delayed trigger can be surveyed by adjusting the horizontal position.

The feature is very useful because you can see the events that led up the trigger point everything to the right of the trigger point is called posttrigger information the amount of delay range (pretrigger and posttrigger information) available is dependent on the sweep speed selected.

2.8.1 Signal Source

You can use the Trigger Source options to select the signal that the oscilloscope uses as a trigger. The source can be any signal connected to a channel BNC, to the EXT TRIG BNC or the AC power line (available only with Edge triggers).


2.8.2 Trigger Type

ADS1000 Series have five trigger types: Edge, Video, Pulse, Slope, Alternative.

■ Edge Trigger

Use Edge triggering to trigger on the edge of the oscilloscope input signal at the trigger threshold.


Table 2-13 Edge Trigger function Menu:

Option	Setting	Explain
Type	Edge	With Edge highlighted, the rising or falling edge of the input signal is used for the trigger.
Source	CH1 CH2	Triggers on a channel whether or not the waveform is displayed.
	EXT	Does not display the trigger signal; the Ext option uses the signal connected to the EXT TRIG front-panel BNC and allows a trigger level range of -1.2V to +1.2V.
	EXT/5	Same as Ext option, but attenuates the signal by a factor of five, and allows a trigger level range of +6V to -6V. This extends the trigger level range.
	AC Line	This selection uses a signal derived from the power line as the trigger source; trigger coupling is set to DC and the trigger level to 0 volts.
Slope		Trigger on Rising edge of the trigger signal. Trigger on Falling edge of the trigger signal. Trigger on Rising edge and Falling edge of the trigger signal.

Mode	Auto	Use this mode to let the acquisition free-run in the absence of a valid trigger; This mode allows an untriggered, scanning waveform at 100 ms/div or slower time base settings.
	Normal	Use this mode when you want to see only valid triggered waveforms; when you use this mode, the oscilloscope does not display a waveform until after the first trigger.
	Single	when you want the oscilloscope to acquire a single waveform, press the “SINGLE” button.
Set up		Enter the “Trigger Setup Menu”(See table 2-14).

Table 2-14 Trigger Setup function menu

Option	Setting	Explain
Coupling	DC	Passes all components of the signal
	AC	Blocks DC components and attenuates signals below 10 Hz.
	HF Reject	Attenuates the high-frequency components above 80 kHz.
	LF Reject	Blocks the DC component and attenuates the low-frequency components below 300 kHz.
Holdoff ↻		Using the “universal” knob to adjust holdoff time(sec), the holdoff value is displayed.
Holdoff Reset		Reset holdoff time to 100ns.
Return		Return the first page of “ Trigger main menu”.

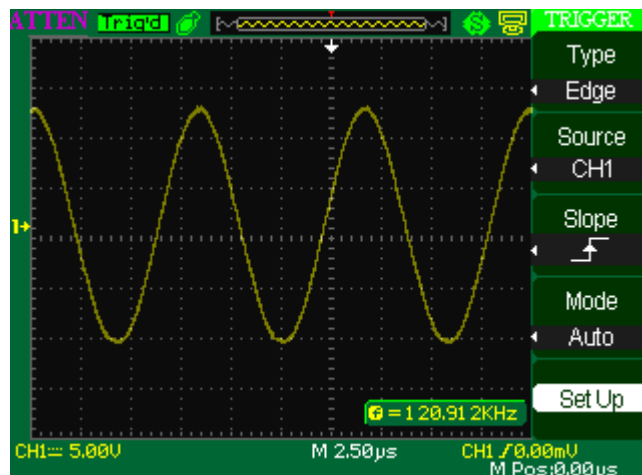

Picture 2-30

Operate Instruction:

1. Set up Type




- 1) Press the “TRIG MENU” button to display “Trigger” menu.

2) Press the “Type” option button to select “Edge”.

2. Set up Source

According to input signal, press the “Source” option button to select “CH1”, “CH2”, “EXT”, “EXT/5” or “AC Line”.

3. Set up Slope

Press the “Slope” option button to select “”, “” or “”.

4. Set up Trigger mode

Press the “Trigger mode” option button to select “Auto”, “Normal”, “Single”.

Auto: The waveform refresh at a high speed whether the trigger condition is satisfied or not.

Normal: The waveform refresh when the trigger condition is satisfied and waits for next trigger event occurring when the trigger condition is not satisfied.

Single: The oscilloscope acquire a waveform when the trigger condition is satisfied and then stops.

1. Set up Trigger coupling

 

 
 


a. Press the “Set up” button to enter the “Trigger Setup Menu”.


b. Press the “Coupling” option button to select “DC”, “AC”, “HF Reject” or “LF Reject”.

■ **Pulse Trigger:** Use Pulse Width triggering to trigger on aberrant pulses.

Table 2-15 Pulse Trigger function Menu 1:

Option	Setting	Explain
Type	Pulse	Select the pulse to trigger the pulse match the trigger condition.
Source	CH1 CH2 EXT EXT/5	Select input signal source.


When	 (Positive pulse width less than pulse width setting)  (Positive pulse width larger than pulse width setting)  (Positive pulse width equal to pulse width setting)  (Negative pulse width less than pulse width setting)  (Negative pulse width larger than pulse width setting)  (Negative pulse width equal to pulse width setting)	Select how to compare the trigger pulse relative to the value selected in the Set Pulse Width option.
Set Width	20.0ns~10.0s	Selecting this option can turn the universal to set up the pulse width.
Next Page	Page 1/2	Press this button to enter the second page.

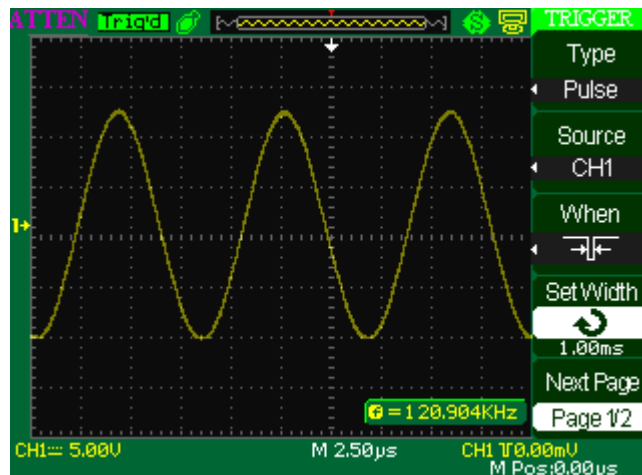

Picture 2-31

Table 2-16 Pulse Trigger function Menu 2:

Option	Setting	Explain
Type	Pulse	Select the pulse to trigger the pulse match the trigger condition.
Mode	Auto Normal single	Select the type of triggering; Normal mode is best for most Pulse Width trigger applications.
Set up		Enter the “Trigger setup menu”.
Next Page	Page 2/2	Press this button to return the first page.

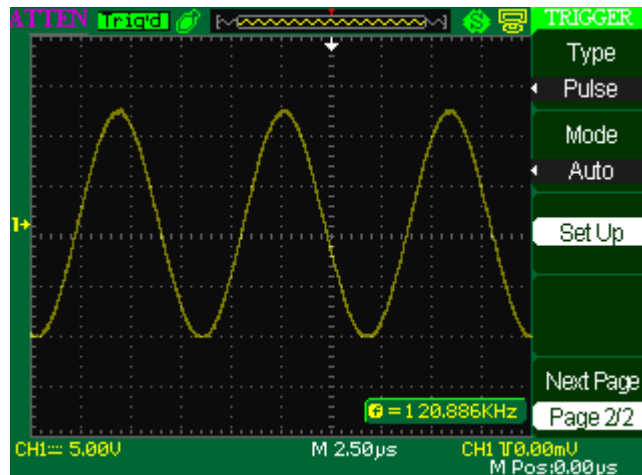







Picture 2-32

Operate Instruction:

1. Set up Type

- 1) Press the “TRIG MENU” button to display “Trigger menu”.
- 2) Press the “Type” option button to select “Pulse”.

      2. Set up condition


Press the “When” option button to select “”, “”, “”, “”, “” or “”.


3. Set up pulse width


Turn the “Universal” knob to set up width.

- **Video Trigger:** Trigger on fields or lines of standard video signals.

Table 2-17 Functional Menu of Video Trigger 1:

Option	Setting	Instruction
Type	Video	When you select the video type, put the couple set to the AC, then you could trigger the NTSC, PAL and SECAM video signal.
Source	CH1 CH2	Select the input source to be the trigger signal.
	EXT EXT/5	Ext and Ext/5 use the signal applied to the EXT TRIG connector as the source.
Polarit	 (Normal)	Normal triggers on the negative edge

 y		of the sync pulse.
	 (Inverted)	Inverted triggers on the positive edge of the sync pulse.
Sync	Line Num All lines Odd field Even Field	Select appropriate video sync.
Next Page	Page 1/2	Enter the second page of “Video trigger menu”.

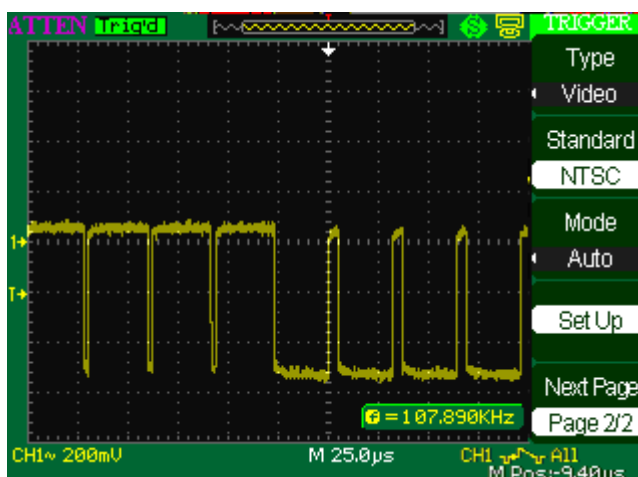


Picture 2-33

Table 2-18 Functional Menu of Video Trigger 2:

Option	Setting	Instruction
Type	Video	When you select the video type, put the couple set to the AC, then you could trigger the NTSC, PAL and SECAM video signal.
Standard	NTSC Pal/Secam	Select the video standard for sync and line number count.
Mode	Auto	Use this mode to let the acquisition free-run in the absence of a valid trigger; This mode allows an untriggered, scanning waveform at 100 ms/div or slower time base settings.
	Normal	Use this mode when you want to see only valid triggered waveforms; when you use this mode, the oscilloscope does not display a waveform until after the first trigger.
	Single	when you want the oscilloscope to acquire a single waveform, press the “SINGLE ”button.
Set up		Enter the “Trigger setup menu”.
Next Page	Page 2/2	Return the first page of “Video

Trigger menu”.

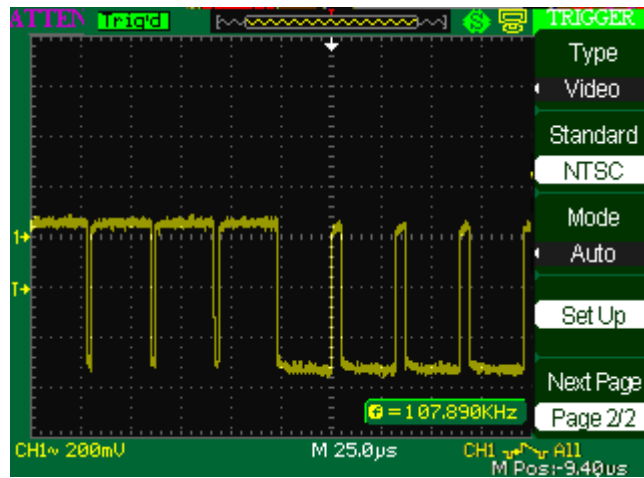

Picture 2-34

Operate Instruction:

1. Set up Type

- 1) Press the “TRIG MENU” button to display “Trigger” menu.
- 2) Press the “Type” option button to select “Video”.

2. Set up Polarity

Press the “Polarity” option button to select “” or “”.

3. Set up synchronization



- 1) Press the “Sync” option button to select “All Lines”, “Line Num”, “Odd Field”, “Even Field”.
- 2) If you select “Line Num”, you can turn the “Universal” knob to set the appointed line number.


4. Set up Standard

- 1) Press the “Next Page Page 2/2” option button.
- 2) Press the “Standard” option button to select “PAL/SECAM” or “NTSC”.

■ **Slope Trigger:** Trigger on positive slope of negative slope according to setup time of the oscilloscope.

 
Table 2-19 Slope trigger function menu 1

Option	Setting	Instruction
Type	Slope	Trigger on positive slope of negative slope according to setup time of the oscilloscope.
Source	CH1 CH2 EXT EXT/5	Select trigger source.
When		Select trigger condition.
Time	 <Set time>	Turn the “Universal” knob to set slope time. Time setup range is 20ns-10s.
Next Page	Page 1/2	Enter the second page of slope trigger.

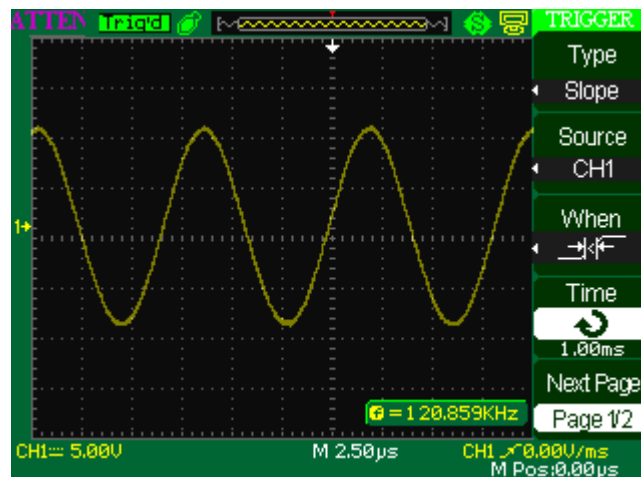


Picture 2-35

Table 2-20 Slope trigger function menu 2

Option	Setting	Instruction
Type	Slope	Trigger on positive slope of negative slope according to setup time of the oscilloscope.
Vertical		Select the trigger level that can be adjusted by “LEVEL” knob. You can adjust “LEVEL A”, “LEVEL B” or adjust them at the same time.
Mode	Auto	Use this mode to let the acquisition free-run in the absence of a valid trigger. This mode allows an

 
 

 
 

		settings.
	Normal	Use this mode when you want to see only valid triggered waveforms; when you use this mode, the oscilloscope does not display a waveform until after the first trigger.
	Single	when you want the oscilloscope to acquire a single waveform, press the “SINGLE ”button.
Set up		Enter the “Trigger setup menu”(See table 2-14).
Next Page	Page 2/2	Return the first page of slope trigger.

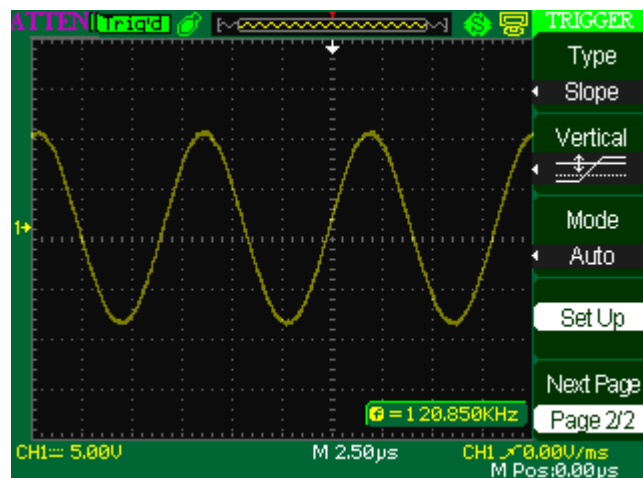

Picture 2-36

Operate Instruction:

Follow next steps if you select “Slope trigger”:

1. Input a signal to channel 1 or channel 2.
2. Press the “AUTO” button.
3. Press the “TRIG MENU” button to enter “Trigger menu”.
4. Press the “Type” option button to select “Slope”.
5. Press the “Source” option button to select “CH1” or “CH2”.
6. Press the “When” option button to select “”, “”, “”, “”, “” or “”.
7. Press the “Time” button, turn the “Universal” knob to adjust slope time.
8. Press the “Next Page Page 1/2” option button to enter the second page of “Slope trigger menu”.

9. Press the “Vertical” option button to select trigger level that can be adjusted.

10. Turn the “LEVEL” knob.

■ **Alternative trigger**


The trigger signal come from two vertical channels when you use alternative trigger.

In this mode ,you can observe two irrelative signals at the same time. You can select

different trigger types for two vertical signals, and selected types cover edge, pulse,

video and slope trigger. Trigger information of two channel signals display on the

bottom right of the screen.

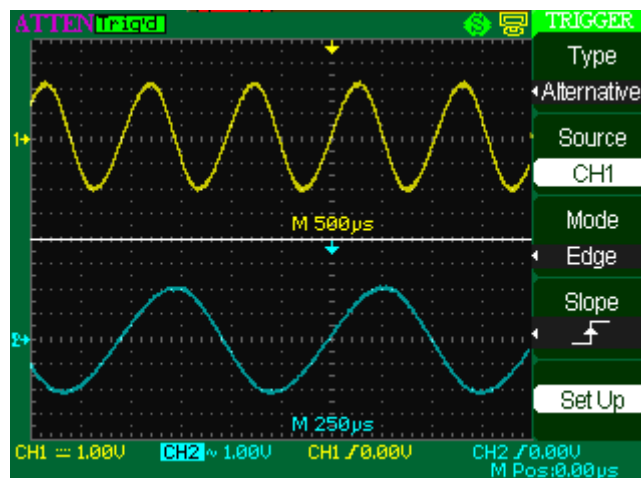

Picture 2-37

Table 2-21 Set trigger mode to edge trigger function menu 1:

Option	Setting	Instruction
Type	Alternative	The trigger signal come from two vertical channels when you use alternative trigger. In this mode ,you can observe two irrelative signals at the same time.
Source	CH1 CH2	Set trigger type information for CH1 signal Set trigger type information for CH2 signal
Mode	Edge	Set trigger type of the vertical channel signal to Edge
Slope		Triggering on rising edge. Triggering on falling edge. Triggering on rising edge and falling edge.
Set up		Enter the “Trigger setup menu”(See table 2-14).

Table 2-22 Set trigger mode to pulse trigger function menu 1:

Option	Setting	Instruction
--------	---------	-------------

 
Type	Alternative	The trigger signal come from two vertical channels when you use alternative trigger. In this mode, you can observe two irrelative signals at the same time.
Source	CH1 CH2	Set trigger type information for CH1 signal Set trigger type information for CH2 signal
Mode	Pulse	Set trigger type of the vertical channel signal to Pulse trigger.
When		Select how to compare the trigger pulse relative to the value selected in the Set Pulse Width option.
Next Page	Page 1/2	Enter the second page of Alternative trigger menu.

Table 2-23 Set trigger mode to pulse trigger function menu 2:

Option	Setting	Explain
Set Width	20.0ns ~ 10.0s	Selecting this option can turn the universal to set up the pulse width.
Set up		Enter the “Trigger Setup Menu”(see table 2-14).
Next Page	Page 2/2	Press this button to return the first page.

Table 2-24 Set trigger mode to video trigger function menu1:



Option	Setting	Instruction
Type	Alternative	The trigger signal come from two vertical channels when you use alternative trigger. In this mode ,you can observe two irrelative signals at the same time.
Source	CH1 CH2	Set trigger type information for CH1 signal Set trigger type information for CH2 signal
Mode	Video	Set trigger type of the vertical channel signal to Video trigger.
Polarity	 (Normal)  (Inverted)	Normal triggers on the negative edge of the sync pulse. Inverted triggers on the positive edge of the sync pulse.
Next Page	Page 1/2	Enter the second page of Alternative trigger menu.

Table 2-25 Set trigger mode to video trigger function menu 2:

Option	Setting	Instruction
--------	---------	-------------

Sync	Line Num All lines Odd field Even Field	Select appropriate video sync.
Standard	NTSC Pal/Secam	Select the video standard for sync and line number count.
Next Page	Page 1/2	Enter the second page of Alternative trigger menu.

Table 2-26 Set trigger mode to slope trigger function menu 1

 

 
Option	Setting	Instruction
Type	Alternative	The trigger signal come from two vertical channels when you use alternative trigger. In this mode ,you can observe two irrelative signals at the same time.
Source	CH1 CH2	Set trigger type information for CH1 signal Set trigger type information for CH2 signal
Mode	Slope	Set trigger type of the vertical channel signal to slope trigger.
When		Select slope trigger condition.
Next Page	Page 1/2	Enter the second page of the alternative trigger.

Table 2-27 Set trigger mode to slope trigger function menu 2

Option	Setting	Instruction
Time	 <Set time>	Turn the “Universal” knob to set the slope time. Time setup range is 20ns-10s.
Vertical		Select the trigger level that can be adjusted by “LEVEL” knob. You can adjust “LEVEL A”, “LEVEL B” or adjust them at the same time.
Set up		Enter the “Trigger setup menu”(see table 2-14).
Next Page	Page 2/2	Return the first page of “Alternative trigger menu”.

Operate Instruction:

Observe two irrelative channel signals, follow these steps:

1. Input two irrelative signals to channel 1 and channel 2.

-
2. Press the AUTO button.
 3. Press the TRIG MENU button to enter “trigger menu”.
 4. Press the “Type” option button to select “Alternative”.
 5. Press the “Source” option button to select “CH1”.
 6. Press the “S/div” knob to optimize waveform display.
 7. Press “Mode” option button to select “Edge”, “Pulse”, “Slope” or “Video”.
 8. Set the trigger according to trigger edge.
 9. Press the “Source” option button to select “CH2”.
 10. Turn the “S/div” knob to optimize waveform display.
 11. Repeat steps 7 and 8.

2.8.3 Coupling

Use the “Coupling” to make sure the signal that passes the trigger circuit. It is useful for us to gather a steady wave form.

If you use the trigger coupling, you should press the “TRIGGE” button and then select “edge” or “Pulse” trigger. Then select the “coupling” option.


2.8.4 Position

The horizontal position control establishes the time between the trigger position and the screen center. You can adjust the horizontal “POSITION” knob control to view waveform data before the trigger, after the trigger, or some of each. When you change the horizontal position of a waveform, you are changing the time between the trigger and the center of the display actually. (This appears to move the waveform to the right or left on the display.)

2.8.5 Slope & Level

The Slope and Level controls help to define the trigger. The Slope option (Edge trigger type only) determines whether the oscilloscope finds the trigger point on the rising or the falling edge of a signal.

The TRIGGER LEVEL knob controls where on the edge the trigger point occurs.

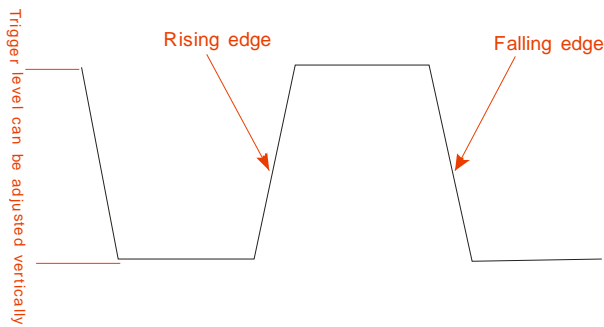


Picture 2-38

- Note:**
- Press the SINGLE button when you want the oscilloscope to acquire a single waveform.
 - Trigger coupling affects only the signal passed to the trigger system. It does not affect the bandwidth or coupling of the signal displayed on the screen.
 - Normal Polarity Sync triggers always occur on negative-going horizontal sync pulses. If the video waveform has positive-going horizontal sync pulses, use the Inverted Polarity selection.

2.8.6 Trigger Holdoff

You can use the Trigger Holdoff function to produce a stable display of complex waveforms. Holdoff is time between when the oscilloscope detects one trigger and when it is ready to detect another. The oscilloscope will not trigger during the holdoff time. For a pulse train, you can adjust the holdoff time so the oscilloscope triggers only on the first pulse in the train.

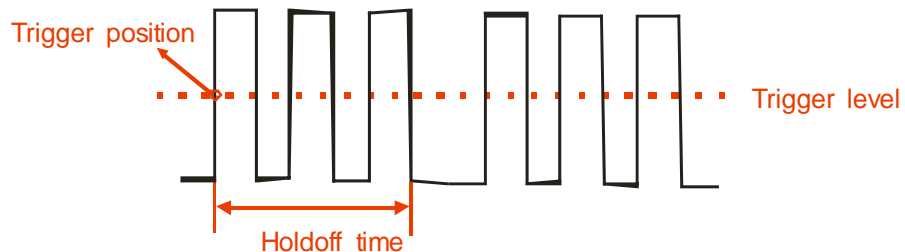

Picture 2-39

If you want to change holdoff time, please follow next operations:


1. Press the “TRIG MENU” button to show the “TRIG Menu”.

-
2. Press the “Type” option button to select trigger type.
 3. Press the “Set up” option button to enter the “Trigger setup menu”.
 4. Press the “Holdoff” option button, turn the “Universal” knob to change the holdoff time until the waveform trigger steadily.

Note: • Use trigger holdoff to help stabilize the display of aperiodic waveforms.

2.9 Acquiring Signals system

Showing as the follow picture, the “ACQUIRE” button for Acquiring Signals system is at the menu.

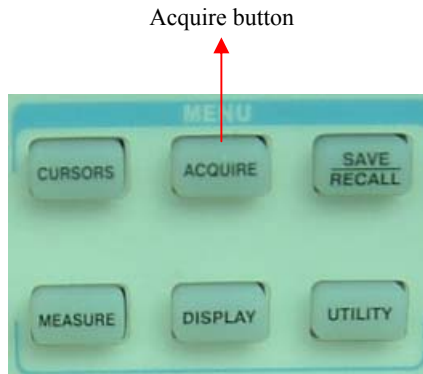

Picture 2-40

Table 2-28 The Function manual of Acquiring Signals:


Option	Setting	Introduction
Acquisition	Sampling	Use for sampling and accurately display most of the waveform.
	Peak Check	Detect the noise and decrease the possibility of aliasing.
	Average	Use to reduce random or uncorrelated noise in the signal display.
	Averages (4, 16, 32, 64, 128, 256)	Select number of averages.
Mode	Equ time Real time	Set the Sampling mode to Equ time. Set the Sampling mode to Real time.
Sa Rate		Display system sampling rate.

When you acquire a signal, the oscilloscope converts it into a digital form and displays a waveform. The acquisition mode defines how the signal is digitized and the time base setting affects the time span and level of detail in the acquisition.

■ **Sampling:** In this acquisition mode, the oscilloscope samples the signal in evenly spaced intervals to construct the waveform. This mode accurately represents signals most of the time.

Advantage: You can use this mode to reduce random noise.

Disadvantage: This mode does not acquire rapid variations in the signal that may occur between samples. This can result in aliasing may cause narrow pulses to be missed. In these cases, you should use the Peak Detect mode to acquire data.

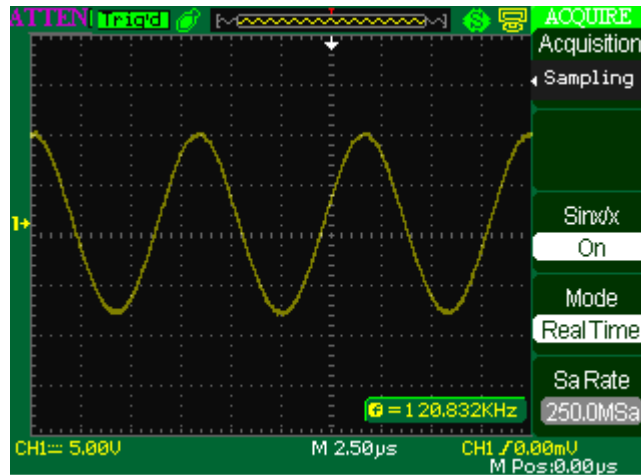


Picture 2-41 Sampling modes

■ **Peak Detect:** Peak Detect mode capture the maximum and minimum values of a signal Finds highest and lowest record points over many acquisitions.

Advantage: In this way, the oscilloscope can acquire and display narrow pulses, which may have otherwise been missed in Sample mode.


Disadvantage: Noise will appear to be higher in this mode.

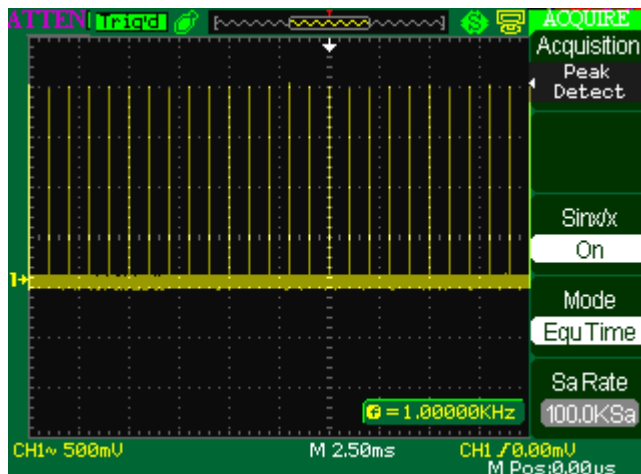

Picture 2-42 Peak Detect mode

■ **Average:** The oscilloscope acquires several waveforms, averages them, and displays the resulting waveform.

Advantage: You can use this mode to reduce random noise.

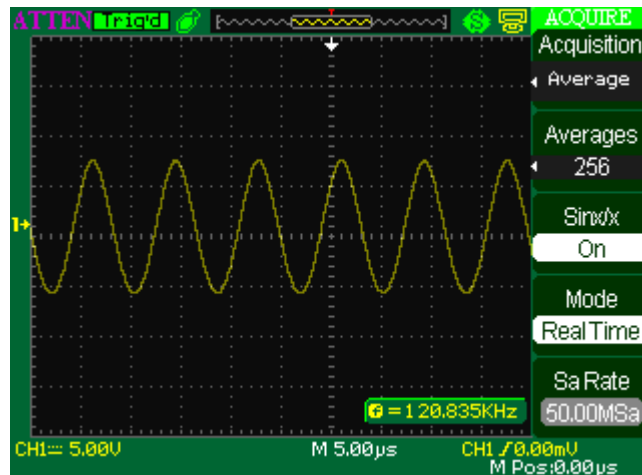

Picture 2-43 Average mode

■ **Equivalent Time Sampling:**

The equivalent time sampling mode can achieve up to 20 ps of horizontal resolution (equivalent to 50GSa/s). This mode is good for observing repetitive waveforms.

■ **Real Time Sampling:** ADS1000 has the highest Real-time sampling rate up to 1GSa/s.

■ **“RUN/STOP” Button:** Press the RUN/STOP button when you want the oscilloscope to acquire waveforms continuously. Press the button again to stop the acquisition.

■ **“SINGLE” Button:** Press the SINGLE button to acquire a single waveform. Each time you push the SINGLE button, the oscilloscope begins to acquire another waveform. After the oscilloscope detects a trigger it completes the acquisition and stops.

When you push the RUN/STOP or SINGLE buttons to start an acquisition, the oscilloscope goes through the following steps:


- 1) . Acquire enough data to fill the portion of the waveform record to the left of the trigger point. This is also called the pretrigger.
- 2) . Continue to acquire data while waiting for the trigger condition to occur.
- 3) . Detect the trigger condition.
- 4) . Continue to acquire data until the waveform record is full.
- 5) . Display the newly-acquired waveform.

■ **Base time:** The oscilloscope digitizes waveforms by acquiring the value of an input signal at discrete points. The time base allows you to control how often the values are digitized.

To adjust the time base to a horizontal scale that suits your purpose, use the S/div knob.

■ **Time Domain Aliasing:**

Aliasing occurs when the oscilloscope does not sample the signal fast enough to construct an accurate waveform record. When this happens, the oscilloscope displays a waveform with a frequency lower than the actual input waveform, or triggers and displays an unstable waveform.

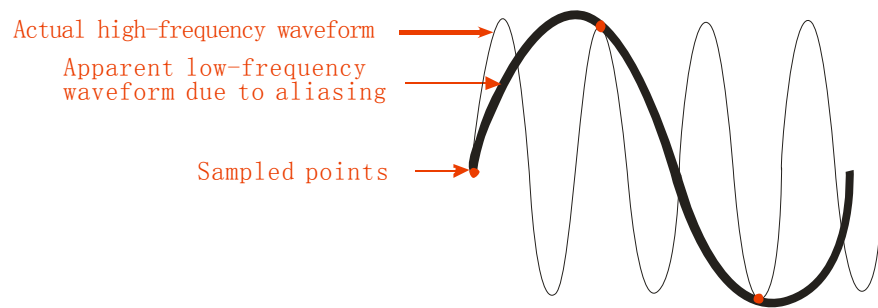

Picture 2-44

Operate Introduction:

1. Set up Sampling Format

You can press the “Acquisition” option button or turn the “Universal” knob to select “Sampling” mode, “Peak Detect” mode or “Average” mode..


2. Set up Averages

When you select “Average” format, you can press the “Averages” option button to select “4”, “16”, “32”, “64”, “128” or “256”.

3. Set up function interpolation


Press the “Sinx/x” option button to select “On” or “Off”, show as following pictures.

“On” is sin interpolation

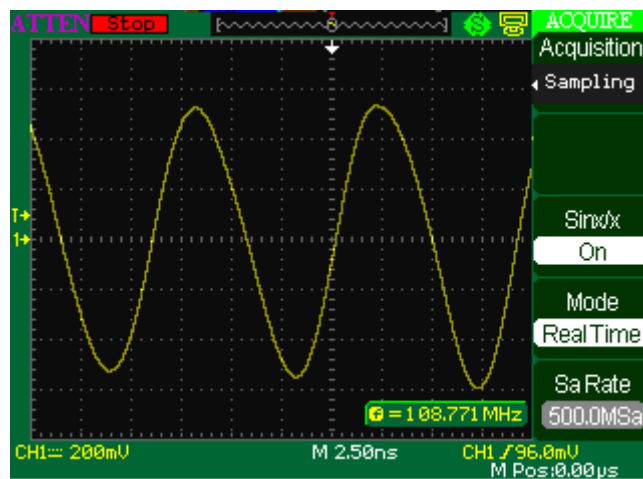

Picture 2-44-1

“Off” is linear interpolation.

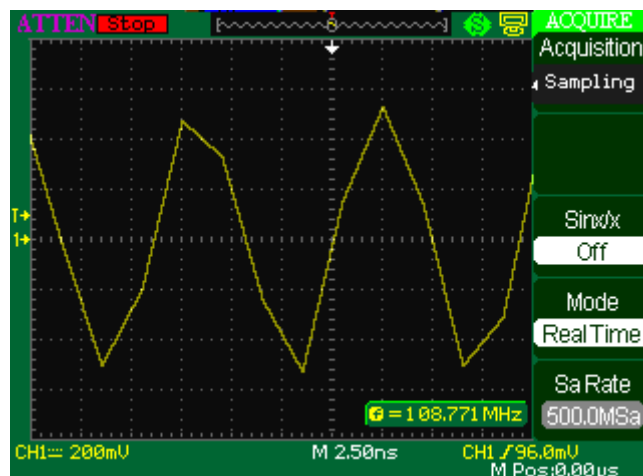

Picture 2-44-2

4. Set up Sampling mode


Press the “Mode” option button to select “Real Time” or “Equ Time”.

5. Set up Sampling rate

In “Real time” mode, turn the “S/div” knob to display the real time sampling rate at corresponding time base scale; In “Equ time” mode, turn the “S/div” knob to display the equ time sampling rate at corresponding time base scale”.

2.10 Display System


The display function could be expressed by the “DISPLAY” Button.

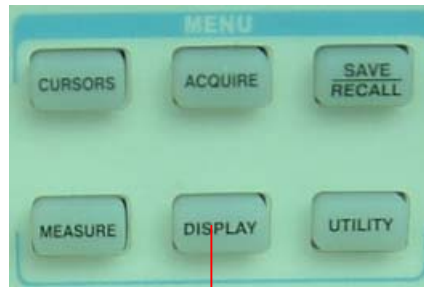

Display System
Picture 2-45


Table 2-29 Display system function menu 1:


Option	Setting	Introduction
Type	Vectors Dots	Vectors fills the space between adjacent sample points in the display. Dots: display sample points Directly.
Persist	Off 1 sec 2 sec 5 sec Infinite	Sets the length of time each displayed sample point remains displayed.
Intensity	↻ <Intensity>	Set waveforms' intensity.
Brightness	↻ <Intensity>	Set grid brightness.
Next Page	Page 1/3	Press this button to enter second page.

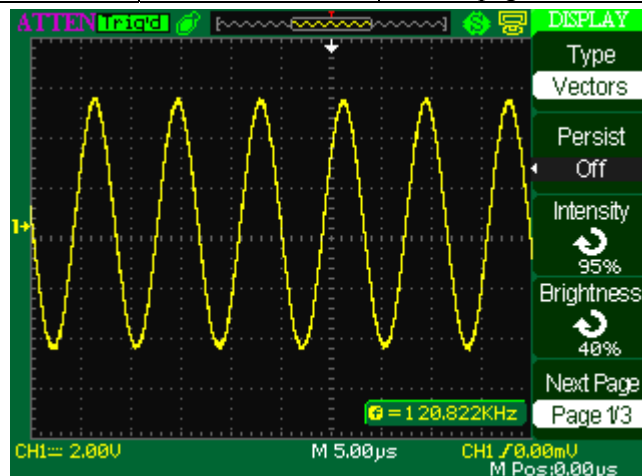

Picture 2-46

 Table 2-30 Display system function menu 2:


Option	Setting	Introduction
Format	YT XY	YT format displays the vertical voltage in relation to time (horizontal scale). XY format displays a dot each time a sample is acquired on channel 1 and channel 2.
Screen	Normal Inverted	set to normal mode. set to invert color display mode.
Grid		Display grids and axes on the screen. Turn off the grids. Turn off the grids and axes.
Menu Display	2sec 5sec 10sec 20sec Infinite	Set menu display time on screen.
Next Page	Page 2/3	Press this button to enter the second page of "Display menu".

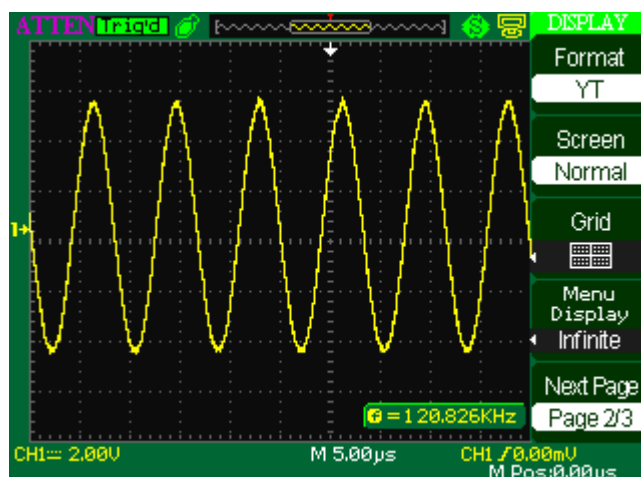

Picture 2-47

Table 2-31 Display system function menu3:

Option	Setting	Introduction
Skin	Classical Modern Tradition Succinct	Set up screen style.
Next Page	Page 3/3	Press this button to return the first page.

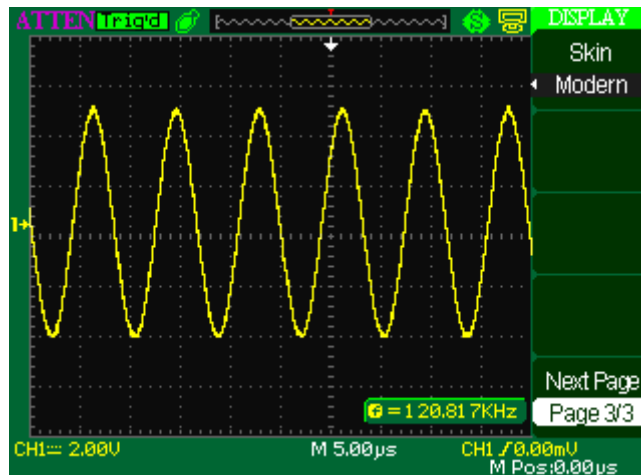

Picture 2-48


Operate Introduction:

1. Set up waveform display type

- 1) Press the “DISPLAY” button to enter the “Display” menu.
- 2) Press the “Type” option button to select “Vectors” or “Dots”.

2. Set up Persist

Press the “Persist” option button to select “Off”, “1 Sec”, “2 Sec”, “5Sec” or “Infinite”. You can use this option to observe some especial waveforms.

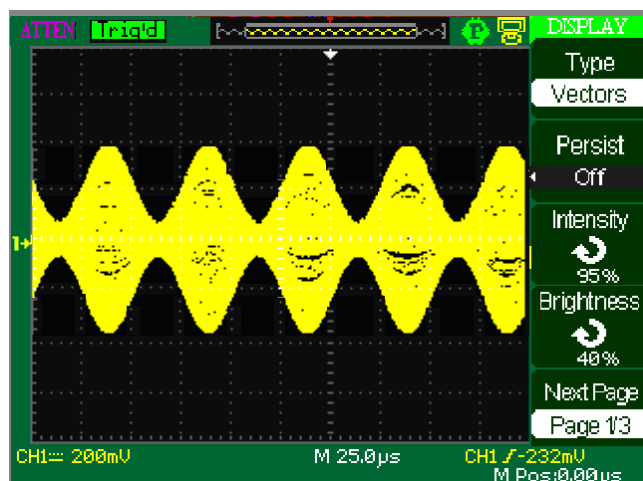

Picture 2-49

3. Set up Intensity

- 1) Press the “Intensity” option button and turn the “Universal” knob to adjust waveforms’ intensity.

4. Set up Brightness

- 1) Press the “Brightness” option button and turn the “Universal” knob to

adjust grid brightness.




4. Set up display format

- 1) Press the “Next Page” option button to enter second display menu.
- 2) Press the “Format” option button to select “YT” or “XY”.

5. Set up Screen

Press the “Screen” option button to select “Normal” or “Inverted” to set the screen display color.

6. Set up Grid

Press the “Grid” option button to select “”, “” or “” to set the screen whether display grid or not.

7. Set up Menu Display

Press the “Menu Display” option button to select “2 sec”, “5sec”, “10sec”, “20sec” or “Infinite” to set menu display time on screen.

8. Set Skin

Press the “skin” option button or turn the “Universal” knob to select “Classical”, “Modern”, “Traditional” or “Succinct”.

2.10.1 X-Y Format

Use the XY format to analyze phase differences, such as those represented by Lissajous patterns. The format plots the voltage on channel 1 against the voltage on channel 2, where channel 1 is the horizontal axis and channel 2 is the vertical axis. The oscilloscope uses the untriggered Sample acquisition mode and displays data as dots.

XY mode has a breakthrough that trad oscilloscopes restrict sampling rate at 1MSa/s;ADS1000CM series max support 5KSa/s~200MSa/s (1-2.5-5 sequence) adjusted

Note: The oscilloscope can capture a waveform in normal YT mode at any sampling rate. You can view the same waveform in XY mode. To do so, stop the acquisition and change the display format to XY.

Operation steps :

- Channel 1“Volt/div”and vertical “POSITION” set up the horizontal scale and position.
- Channel 2“Volt/div”and vertical “POSITION” set up the horizontal scale and position.
- Turn the “S/div” knob to adjust the sampling rate (Range: 5Ksa/s~200MSa/s) .

The following functions are forbidden at XY display form:

- Benchmark wave form and wave mathematic
- Cursor
- Auto (resets display format to YT)
- Trigger Control
- Horizontal Position Knob
- Vector Display Type
- Scan Display

Note: When the display Type is set to Vectors, the oscilloscope connects the sample points by using digital interpolation. Interpolation mode contain linearity interpolation and $\sin(x)/x$ interpolation. $\sin(x)/x$ interpolation is suitable for real time mode. It is effective at 250ns/div or at faster time base in real time mode.

2.11 Measure System

The Oscilloscope displays the voltage in relation to time and test the wave form displayed. There are scale, Cursor and auto measure modes.

2.11.1 Scale Measurement


This method allows you to make a quick, visual estimate. For example, you might look at a waveform amplitude and determine that it is a little more than 100 mV. You can take simple measurements by counting the major and minor graticule divisions involved and multiplying by the scale factor. For example, if you counted five major vertical graticule divisions between the minimum and maximum values of a waveform and knew you had a scale factor of 100mV/div, then you could easily calculate your peak-to-peak voltage as follows:

$$5 \text{ divisions} \times 100 \text{ mV/division} = 500 \text{ mV.}$$

2.11.2 Cursor Measurement

Picture 2-50 displays the cursor button on the front-panel for this menu.

Cursors Button

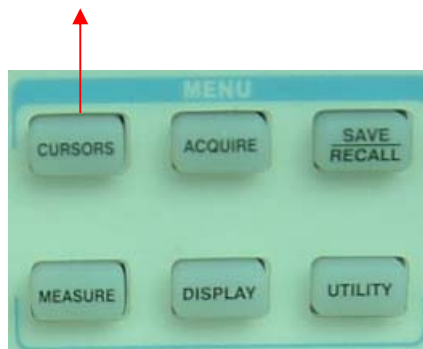



Picture 2-50

Press the “CURORS” button to display the “Cursor” Menu.

The cursor measurement has three modes: Manual, Track and Auto Measure.

Manual Mode

Table 2-32 Manual cursor function menu:

Option	Setting	Instruction
Cursor Mode	Manual	In this menu, set the manual cursor measure.
Type	Voltage Time	Use cursor to measure voltage parameters. Use cursor to measure time parameters.
Source	CH1 CH2 MATH REFA REFB	Select input signal channel.
Cur A 		Select this option, turn the “Universal” knob to adjust cursor A.
Cur B 		Select this option, turn the “Universal” knob to adjust cursor B.

In this mode, the screen displays two horizontal parallel cursors or vertical parallel cursors to measure voltage or time. You can move the cursor by turning the “Universal” knob. Before using cursors, you should make sure that you have set the signal source as the channel for measuring.

■ **Voltage Cursor:** Voltage cursors appear as horizontal lines on the display and measure the vertical parameters.

■ **Time Cursor:** Time cursors appear as vertical lines on the display and measure the horizontal parameters.

■ **Cursor Moving:** Use the “universal” knob to move cursor 1 and cursor 2. They could be moved when the corresponding cursor option are selected, and cursor value will display on the bottom left and top right of the screen when you move the cursor.

To do manual cursor measurements, follow these steps:

1. Press CURSOR button to enter the cursor function menu.
2. Press the “Cursor Mode” option button to select “Manual”.
3. Press the “Type” option button to select “Voltage” or “Time”.
4. Press the “Source” option button to select “CH1”, “CH2”, “MATH”, “REFA” or “REFB” according to input signal channel.
5. Select “Cur A”, turn the “Universal” knob to adjust Cursor A.
6. Select “Cur B”, turn the “Universal” knob to adjust cursor B.
7. The measurement values are displayed on the top right corner:

If the measurement type is set to “ Voltage”, the values are:

The value of Cur A: CurA

The value of Cur B: Cur B

The voltage increment between Cursor A and Cursor B: ΔT


If the measurement type is set to “ Time”, the values are:

The value of Cur A: CurA

The value of Cur B: Cur B

The time increment between Cursor A and Cursor B: ΔT

The reciprocal of time increment between Cursor A and Cursor B: $1/\Delta T$

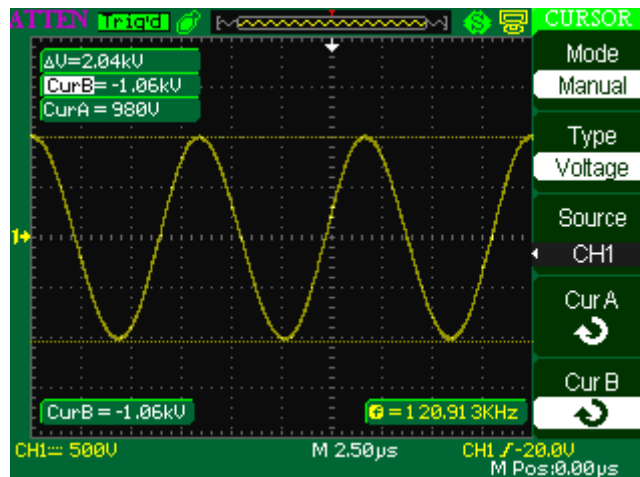

Picture 2-51

Track mode

Table 2-33 Track mode function menu:

Option	Setting	Instruction
Cursor Mode	Track	In this mode , set track cursor measure.
Cursor A	CH1 CH2 NONE	Set the input signal channel that the Cursor A will measure.
Cur B	CH1 CH2 NONE	Set the input signal channel that the Cursor B will measure.
Cur A ↻		Slect this option, turn the “Universal” knob to adjust horizontal coordinate of Cursor A.
Cur B ↻		Slect this option, turn the “Universal” knob to adjust horizontal coordinate of Cursor B.

In this mode, the screen displays two cross cursors. The cross cursor sets the position on the waveform automatically. You could adjust cursor’s horizontal position on the waveform by turning the “ Universal ” knob. The oscilloscope displays the values on

the top right of the screen.

To do track cursor measurement, follow these steps:

1. Press CURSOR button to enter the cursor measure function menu.
2. Press the “Cursor Mode” option button to select “Track”.
3. Press the “Cursor A” option button to select the input signal channel.
4. Press the “Cursor B” option button to select the input signal channel.
5. Select “Cur A”, turn the “Universal” knob to move Cursor A horizontally.
6. Select “Cur B”, turn the “Universal” knob to move Cursor B horizontally.
7. The measurement values are displayed on the top right corner:

A→T: The horizontal position of Cursor A (Time cursor centered around the midpoint of screen).

A→V: The Vertical position of Cursor A (Voltage cursor centered around channel ground level).


B→T: The horizontal position of Cursor B (Time cursor centered around the midpoint of screen).

B→V: The Vertical position of Cursor B (Voltage cursor centered around channel ground level).

ΔT : Horizontal space between Cursor A and Cursor B (Time value between two cursors).

$1/\Delta T$: The reciprocal of horizontal space between cursor A and cursor B.

ΔV : Vertical space between Cursor A and Cursor B (Voltage value between two cursors).

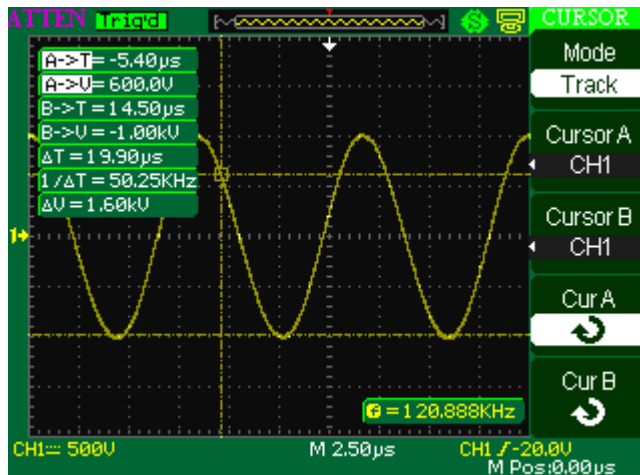

Picture 2-52

Auto mode


Table 2-34 Auto mode function menu:

Option	Setting	Instruction
Cursor Mode	Auto	Set to auto cursor measure mode.

This mode will take effect with automatic measurements. The instruments will display cursors while measuring parameters automatically. These cursors demonstrate the physical meanings of these measurements.

To do auto cursor measurements, follow these steps:


1. Press the CURSOR button to enter “Cursor measure menu”.
2. Press the “Cursor Mode” option button to select “Auto”.
3. Press the “MEASURE” button to enter “Auto cursor measure mode menu” to select the parameter that you want to measure.

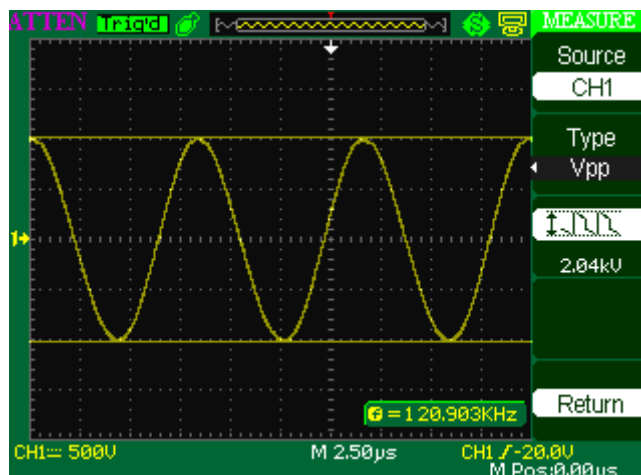

Picture 2-53

2.11.3 Auto Measurement

“MEASURE” is Automatic measure function button.

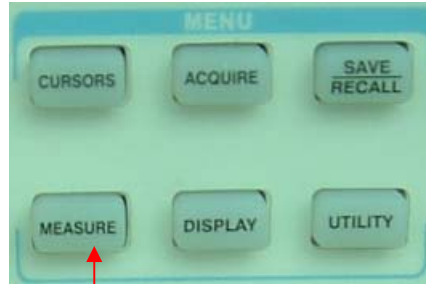

**Auto Measurement
button**

Picture 2-54


When you take automatic measurements, the oscilloscope does all the calculating for you. Because the measurements use the waveform record points, they are more accurate than the graticule or cursor measurements.

Press the ‘MEASURE’ for the Automatic Test.

There are three auto measurement types: Voltage Measure, Time Measure and Delay Measure. There are thirty two measure parameters in all.

Table 2-35 Auto measure function menu 1:

Option	Instruction
Voltage	Press this button to enter the Voltage measure menu.
Time	Press this button to enter the Time measure menu.
Delay	Press this button to enter the Delay measure menu.
All Mea	Press this button to enter the All Measurement menu.
Return	Press this option button to return the home page of the auto measure menu.

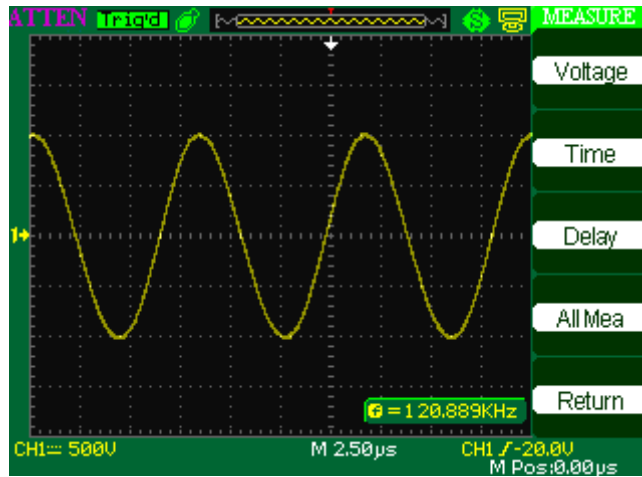

Picture 2-55

Table 2-36 Auto measure function 2-Voltage measure menu:

Option	Setting	Instruction
Source	CH1、CH2、MATH REFA、REFB	Select input signal source for Voltage measure.
Type	Vmax, Vmin, Vpp, Vamp, Vtop, Vbase, Cycle Mean, Mean, Cycle Vrms, Vrms, ROVShoot, FOVShoot, RPREShoot, FPREShoot	Press the “Type” button or turn the “Universal” knob to select Voltage measure parameter.
		Display the corresponding icon and measure value of your selected Voltage measure parameter.
Return		Return to the first page of auto measurement menu.

Table 2-37 Auto measure function3-Time measure menu:

Option	Setting	Instruction
Source	CH1、CH2、MATH、 REFA、REFB	Select input signal source for Time measure.
Type	Rise Time、Fall Time、Freq、 Period、BWidth、+Width、 -Width、+Duty、-Duty	Press the “Type” button or turn the “Universal” knob to select Time measure parameter.
		Display the corresponding icon and measure value of your selected time measure parameter.
Return		Return to the first page of auto measurement menu.

Table 2-38 Auto measure function4-Delay measure menu:


 
 
 
 
 
 
 
 
 




 
 
 
 
 
 
 
 
 
 



 


 
Option	Setting	Instruction
Source	CH1、CH2、MATH、REFA、REFB	Select input signal source for Delay measure.
Type	Phase、FRR、FRF、FFR、FFF、LRR、LRF、LFR、LFF	Press the “Type” button or turn the “Universal” knob to select Delay measure parameter.
		Display the corresponding icon and measure value of your selected Delay measure parameter.
Return		Return to the first page of auto measurement menu.

Table 2-39 All Measurement function menu:

Option	Setting	Instruction
Source	CH1 CH2	Select input signal channel.
Voltage	On Off	Turn on the all measurement function to measure voltage parameters. Turn of the all measurement function to measure voltage parameters.
Time	On Off	Turn on the all measurement function to measure Time parameters. Turn of the all measurement function to measure Time parameters.
Delay	On Off	Turn on the all measurement function to measure Delay parameters. Turn of the all measurement function to measure Delay parameters.
Return		Return to the “All Measure main menu”.

Table 2-40 Introduction of the Measure Type:

Measure Type	Introduction
 Vmax	The most positive peak voltage measured over the entire waveform.
 Vmin	The most negative peak voltage measured over the entire waveform.
 Vpp	Measures the absolute difference between the maximum and minimum peaks of the entire waveform.
 Vtop	Measures the highest voltage over the entire waveform.
 Vbase	Measures the lowest voltage over the entire waveform.
 Vamp	Voltage between Vhigh and Vlow of a waveform.
 Vavg	The arithmetic mean over the first cycle in the waveform.
 Mean	The arithmetic mean over the entire waveform.
 Vrms	The true Root Mean Square voltage over the first cycle in the waveform.
 Vrms	The true Root Mean Square voltage over the entire waveform.

 ROVShoot	Defined as $(V_{max}-V_{hig})/V_{amp}$ after the waveform rising.
 FOVShoot	Defined as $(V_{min}-V_{low})/V_{amp}$ after the waveform falling.
 RPREshoot	Defined as $(V_{min}-V_{low})/V_{amp}$ before the waveform rising.
 FPREshoot	Defined as $(V_{max}-V_{hig})/V_{amp}$ before the waveform falling.
 Rise Time	Rise Time Measures the time between 10% and 90% of the first rising edge of the waveform.
 Fall Time	Fall Time Measures the time between 90% and 10% of the first falling edge of the waveform.
 Bwid	The duration of a burst. Measured over the entire waveform.
 + Wid	+ Width Measures the time between the first rising edge and the next falling edge at the waveform 50% level.
 - Wid	-Width Measures the time between the first falling edge and the next rising edge at the waveform 50% level.
 + Duty	Measures the first cycle waveform. Positive Duty Cycle is the ratio between positive pulse width and period.
 - Duty	Measures the first cycle waveform. Negative Duty Cycle is the ratio between negative pulse width and period.
 Phase	The amount one waveform leads or lags another in time. Expressed in degrees, where 360 degrees comprise one waveform cycle.
 FRR	The time between the first rising edge of source 1 and the first rising edge of source 2.
 FRF	The time between the first rising edge of source 1 and the first falling edge of source 2.
 FFR	The time between the first falling edge of source 1 and the first rising edge of source 2.
 FFF	The time between the first falling edge of source 1 and the first falling edge of source 2.
 LRR	The time between the first rising edge of source 1 and the last rising edge of source 2.
 LRF	The time between the first rising edge of source 1 and the last falling edge of source 2.
 LFR	The time between the first falling edge of source 1 and the last rising edge of source 2.
 LFF	The time between the first falling edge of source 1 and the last falling edge of source 2.

If you want to measure voltage parameters, please follow next steps:


- 1) . Press the “MEASURE” button to enter the “Auto measurement” menu.
- 2) . Press the top first option button to enter the “second measurement

menu”.

3) . Select measure type. If you press the “Voltage” option button, “Voltage measurement” menu will display on the screen.

4) . Press the “Source” option button to select “CH1” or “CH2” according to input signal channel.

5) . Press the “Type” option button to select the parameter type that you want to measure. The corresponding icon and value will display below the measure parameter.

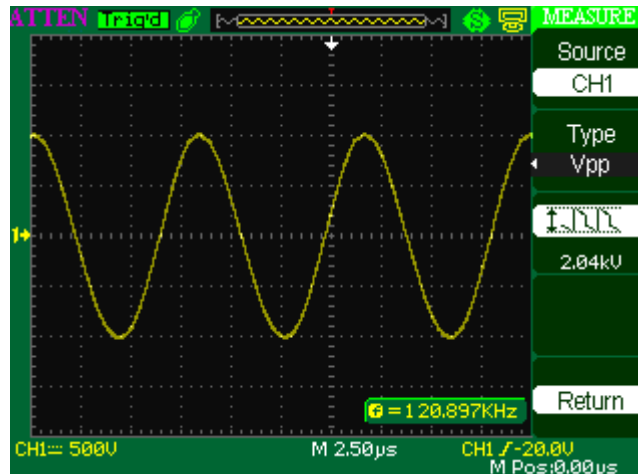

Picture 2-56

6) . Press the “Return” option button to return the home page of “Auto Measurement” menu. The selected parameter and the corresponding value will display on the top first position of the home page.

You can display the other parameters and its’ value on the corresponding position using the same way, and the screen can display five parameters at one time.

If you want to measure time parameters using all measure function, please follow next steps:


1) . Press the “MEASURE” button to enter the “Auto Measure menu”.

2) . Press the top option button to enter the second page of “Auto Measure menu”.

3) . Press “All Mea” option button to enter the “All Measure menu”.

4) . Press “Source” option button to select input signal channel.


5) . Press the “Time” option button to select “On”. Now all of time parameters value will display on the screen at the same time. (See Picture 2-57)

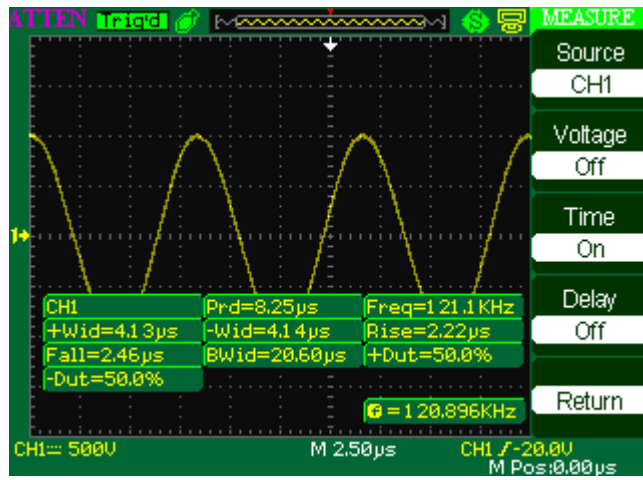

Picture 2-57

2.12 Storage System

Showing as follow picture, The SAVE/RECALL is the Storage System Functional Button.

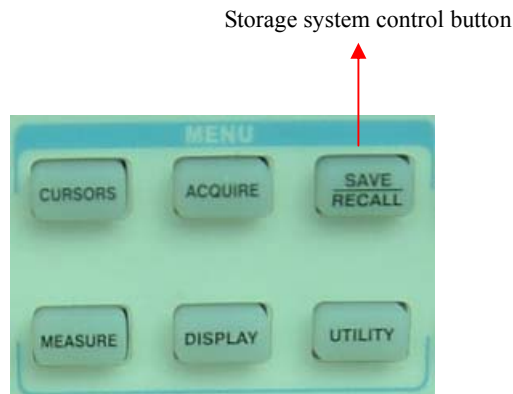


Picture 2-58

ADS1000 series can save 2 groups reference waveforms, 20 groups setups and 20 groups waveforms to the oscilloscope's internal memorizer. There is a USB Host interface in the front panel of the ADS1000 series oscilloscope and you can save setup data, waveform data, waveform interface image , CSV file to a USB flash drive furthest at a time. Setup data and waveform data can be recalled to the current oscilloscope or the other same model oscilloscopes. Picture data and CSV file can't be recalled to the oscilloscope, but it can be opened on the correlative computer software.


SAVE/RECALL SETUP

Save/recall interface


Show as following pictures

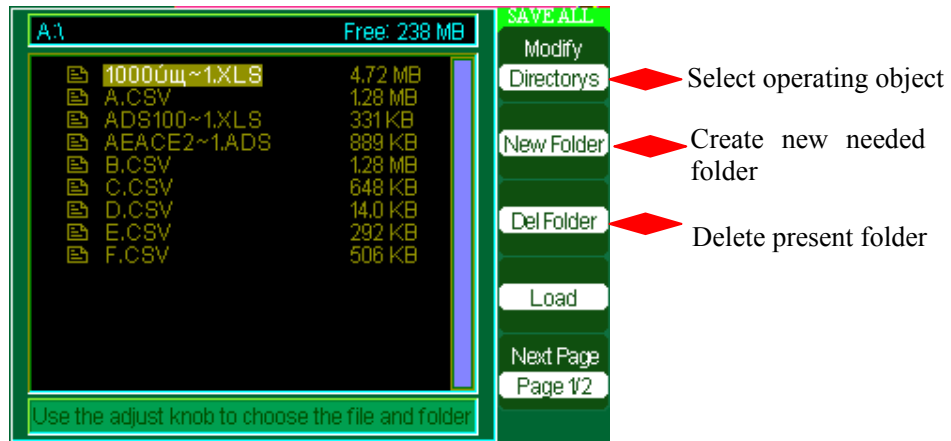

Picture 2-61

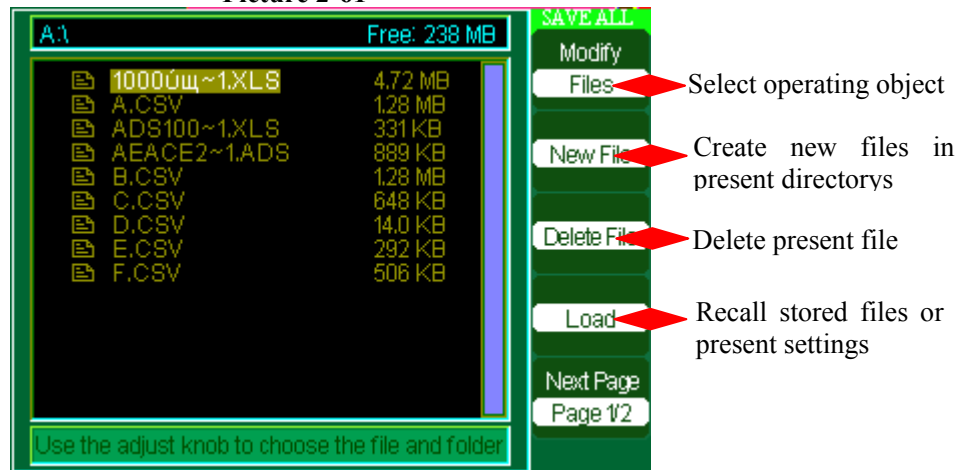

Picture 2-62

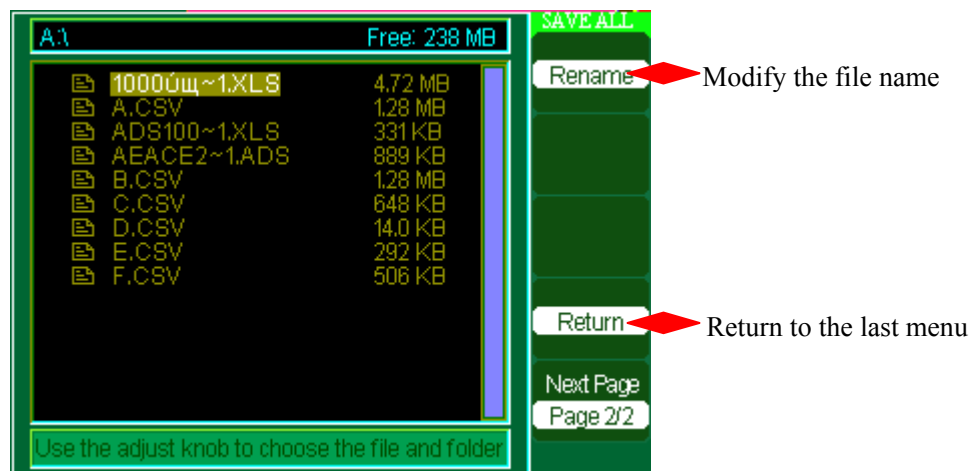

Picture 2-63

In this module, Setting stores to File, Waveform stores to File, storing pictures

and CSV stores to USB flash drive all have this function. Users can modify the name of the file or the directories, then store the files.


■ **Save Setups to Device:** The complete setup is stored in nonvolatile memory.

When you recall the setup, the oscilloscope will be in the mode from which the setup was saved.

The oscilloscope saves the current setup if you wait three seconds after the last change before you power off the oscilloscope. The oscilloscope recalls this setup the next time you apply power.

Table 2-41 Save setup to device function menu:

Option	Setting	Introduction
Type	Setups	Menu for the Storage/Recall setting in the oscilloscope
Save to	Device	Save setup to the oscilloscope's internal memorizer.
Setup	No.1 to No.20	Press the "Setup" option button or turn the "universal" knob to select storage position.
Save		Accomplish the storage
Recall		Recall the storage in the "Setup" operation

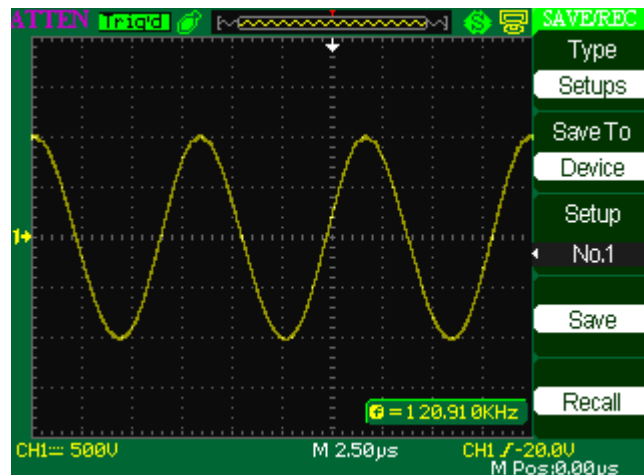

Picture 2-64

Save setups to the oscilloscope's internal memorizer or recall saved setups from it .Follow these steps:

For example: Save setup that the oscilloscope displays waveform as the form of "Dots" to the oscilloscope's internal memorizer.

1) . Press the "SAVE/RECALL" button to enter the "SAVE/RECALL" menu.

- 2) . Press the “Type” option button to select “setups”.
- 3) . Press the “Save to” option button to select “Device”.
- 4) . Press the “Setup” option button to select “No.1”.
- 5) . Press the “DISPLAY” button to enter the “Display” menu.
- 6) . Press the “Type” option button to select “Dots”.
- 7) Press the “SAVE/RECALL” button to enter the “SAVE/RECALL” menu.
- 8) Press the “Save” option button.

If the display type has been changed, you want to recall this setup.


Follow these steps:

- 1) Press the “SAVE/RECALL” button to enter the “SAVE/RECALL” display menu.
- 2) Press the “Type” option button to select “Setups”.
- 3) Press the “Save to” option button to select “Device”.
- 4) Press the “Setup” option button or turn the “Universal” knob to select “No.1”.
- 5) Press the “Recall” option button.

■ **Save Setup to USB flash drive**

Table 2-42 Save setup to USB flash drive function menu:

Option	Setting	Introduction
Type	Setups	Menu for the Storage/Recall settings.
Save to	File	Save setup data to USB flash drive.
Save		Go to the Save/Recall interface

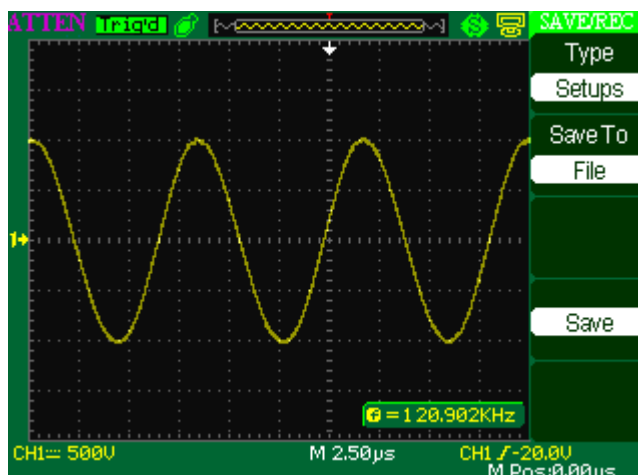

Picture 2-65

Save setup to USB flash drive, follow these steps:

For example: Save setup that the oscilloscope displays waveform as the form of “Dots” to the oscilloscope’s internal memorizer.

- 1) Press the “SAVE/RECALL” button to select “Setups”.
- 2) Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- 3) Press the “Save to” option button to select “file”.
- 4) Press the “Save” option button then you’ll go into the Save/Recall interface.
- 5) Press the “New folder” button to creat a new folder
- 6) Press the “Del folder” option button to delete a folder
- 7) Press the “Modify” option button to modify a folder.
- 8) Press the “New file” option button to creat a new file
- 9) Press the “Del file” option button to delete a file
- 10) Press “the next page ” option button and press the “Rename” option button to modify the name of the file or the folder.
- 11) Press the “Confirm”option button and you save the set to the USB drive.

Recall setup data from USB flash drive, follow these steps:


- 1) Press the “SAVE/RECALL” button.
- 2) Press the “Type” button to select “Setups”.
- 3) Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- 4) Press the “Save to” option button to select “File”.
- 5) Press the “Save” option button then you’ll go into the Save/Recall interface .
- 6) Choose the file you want then press the “Load” option button (about five seconds, there is a prompting message that “Read data success”), now setup data have been recalled from USB flash drive.

■ RECALL FACTORY

You can use this option to recall the factory setup.

Table 2-43 Factory function menu:

Option	Setting	Instruction
Type	Factory	To view the Factory setup.
	Load	Recall the Factory setup.

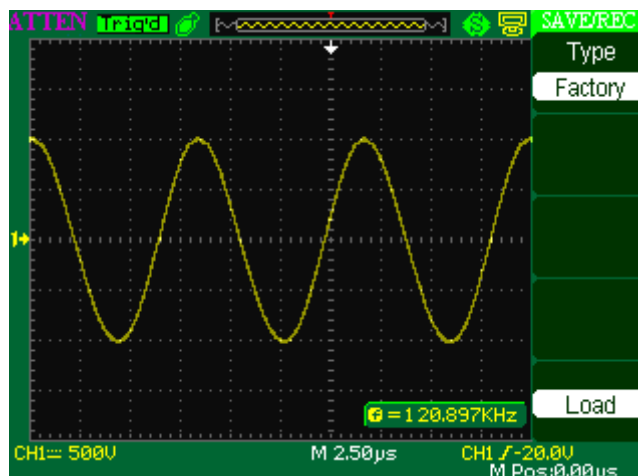


Picture 2-66

SAVE/RECALL WAVEFORM

- **SAVE/RECALL CAPTURED WAVEFORM:** The oscilloscope must display any waveform that you want to save. The oscilloscopes can store twenty captured waveforms in nonvolatile memory.
- **Save waveforms to Device**

Table 2-44 Save waveform to device function menu:

Option	Setup	Introduction
Type	waveforms	Menu for the Storage/Recall waveforms in the oscilloscope.
Save to	Device	Save waveforms to the oscilloscope's internal memorizer.
waveform	No.1 to No.20	Press the "waveform" option button or turn the "Universal" knob to select storage position.
Save		Accomplish the storage.
Recall		Recall the storage in the "waveform" operation

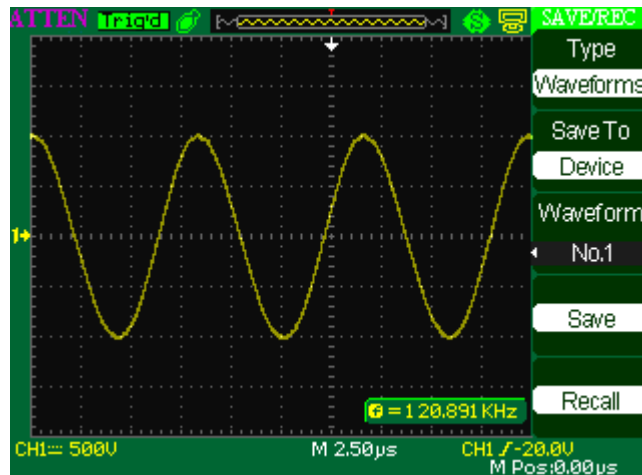

Picture 2-67

Save waveforms to the oscilloscope’s internal memorizer, follow these steps:

- 1) . Input a sine signal to channel 1 and press the “Auto” button.
- 2) . Press the “SAVE/RECALL” button to enter “SAVE/RECALL” display menu.
- 3) . Press the “Type” option button to select “waveforms”.
- 4) . Press the “Save to” option button to select “Device”.
- 5) . Press the “waveform” option button or turn the “Universal” knob to select “No.1”.
- 6) . Turn the “Volts/div” knob or “S/div” knob to adjust the waveform that you want to need.
- 7) . Press the “Save” option button.


Recall the saved waveform from the oscilloscope’s internal memorizer, follow these steps:

- 1) . Press the “SAVE/RECALL” button to enter “SAVE/RECALL” display menu.
- 2) . Press the “Type” option button to select “waveforms”.
- 3) . Press the “Save to” option button to select “Device”.
- 4) . Press the “waveform” option button or turn the “Universal” knob to select “No.1”.
- 5) . Press the “Recall” option button.

■ Save waveforms to USB flash drive

Table 2-45 Save waveforms to USB flash drive function menu:

Option	Setup	Introduction
Type	Waveforms	Menu for the Storage/Recall waveforms.
Save to	File	Save waveforms to USB flash drive.
Save		Accomplish the storage.

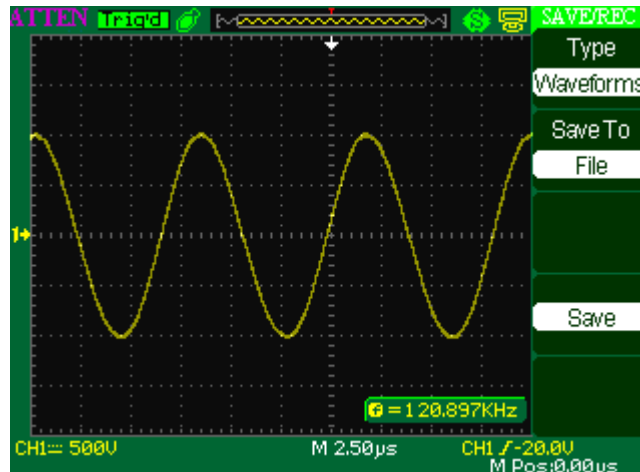

Picture 2-68

Save waveforms to USB flash drive, follow these steps:

- 1) Input a sine signal to channel 1, press the “AUTO” button.
- 2) Press the “SAVE/RECALL” button to enter the “SAVE/RECALL” display menu.
- 3) Press the “Type” option button to select “Waveforms”.
- 4) Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- 5) Press the “Save to” option button to select “File”.
- 6) Press the “Save” option button then you’ll go into the Save/Recall interface.
- 7) Create a file then press the “Confirm” button (about ten seconds, there is a prompting message that “Save data success” displaying on the screen), now waveform data have been saved to USB flash drive.

Recall saved waveform data form USB flash drive, follow these steps:

- 1) . Press the “SAVE/RECALL” button.
- 2) . Press the “Type” button to select “Waveforms”.
- 3) . Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive (about ten seconds).
- 4) . Press the “Save to” option button to select “File”.
- 5) . Press the “Save” option button then go into the Save/Recall interface.


6). Choose the file you want then press the “Load” option button (about five seconds, there is a prompting message that “Recall data success” displaying on the screen), now waveform data have been recalled from USB flash drive.

■ **Save Picture**

Waveform interface image can be saved to USB flash drive, but they can’t be recalled. You can open them on correlative computer software.

Table 2-46 Picture storage function menu:

Option	Setting	Introduction
Type	Pictures	Menu for the Storage/Recall waveform interface image.
Print Key	Print Picture	When the oscilloscope connect to the printer and “Back USB” option is set to “Printer”, select “Print Picture” and press the “PRINT” button to print the screen image.
	Save Picture	When the USB flash drive insert to the USB Host interface(now the USB flash drive open status icon displays on the top of the screen), select “Save picture” and press the “Save” knob to go into the Save/Recall interface.
Save		Go to the Save/Recall interface.

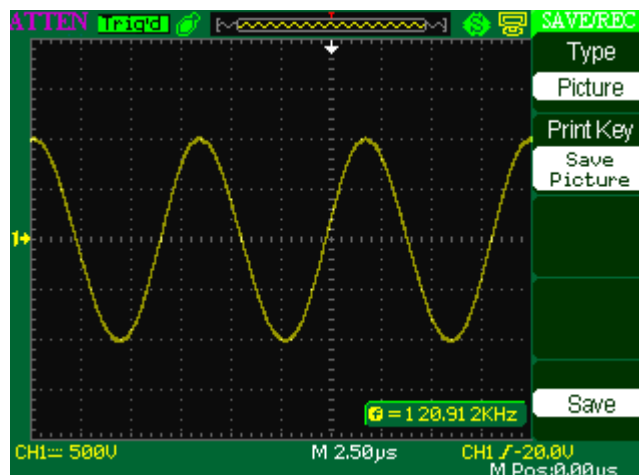

Picture 2-69

Save waveform interface image to USB flash drive, follow these steps:

- 1). Select the screen image that you want .
- 2) Press the “SAVE/RECALL” button to enter “SAVE/RECALL” menu.
- 3). Press the “Type” option button to select “Pictures”.
- 4). Insert USB flash drive to USB host port of the oscilloscope and wait that the

oscilloscope has initialized USB flash drive (about ten seconds).

- 5). Press the “Print Key” option button to select “Save Picture”.
- 6). Press the “Save” option button then go into the Save/Recall interface”.
- 7). Press the “Save” button then you’ll go into the Save/Recall interface
- 8). Create the picture name then press the “Confirm” button(about five seconds, there is a prompting message that “Save data success” displaying on the screen), now picture data have been saved to USB flash drive.

■ **SAVE/RECALL REFERENCE WAVEFORM:**

The oscilloscopes can store two reference waveforms in nonvolatile memory.


The oscilloscope can display reference waveforms at a time.

Reference waveforms are not adjustable, but the oscilloscope does display the horizontal and vertical scales at the bottom of the screen.(Refer to 2.6.4)

Save/Recall CSV

Table 2-47 CSV storage function menu:

Option	Setting	Introduction
Type	CSV	Menu for the Storage CSV file to USB flash drive.
Data Depth	Displayed Maximum	Set to store displayed waveform data to CSV file. Set to store maximum waveform data to CSV file.
Para Save	On Off	Set whether store parameters to CSV file or not.
Save		Go to the Save/Recall interface.

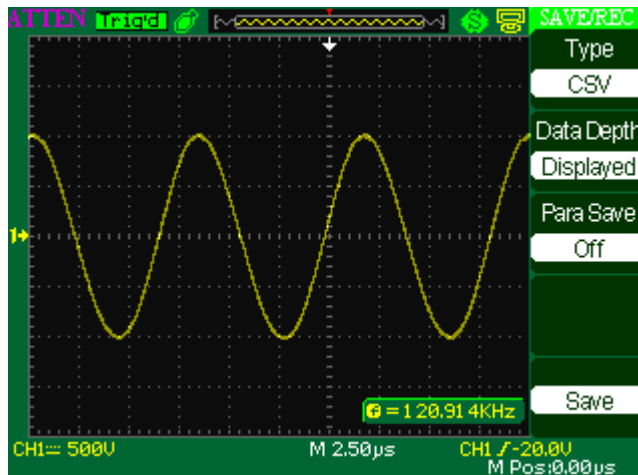


Picture 2-70

Save CSV file to USB flash drive, follow these steps:

- 1). Press the “SAVE/RECALL” button to enter “SAVE/RECALL” menu.
- 2). Press the “Type” option button to select “CSV”.
- 3). Insert USB flash drive to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash drive(about ten seconds).
- 4). Press the “Data Depth” option button to select “Displayed” or “Maximum”.
- 5). Press the “Para Save” option button to select “On” or “Off”.
- 6). Press the “Save” option button then you’ll go into the Save/Recall interface
- 7). Create a file name then press the “Confirm” button (About five seconds, there is a prompting message that “Save data success” displaying on the screen), now CSV file has been saved to USB flash drive.

2.13 Utility System



“UTILITY”: The Utility System Button.

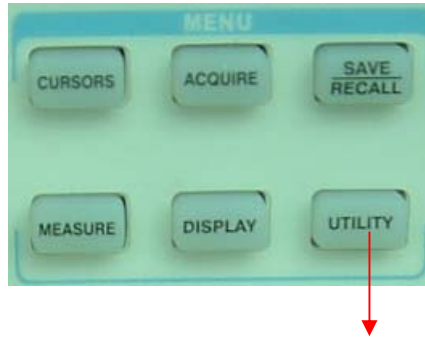


Utility Setup button

Picture 2-66

 Table 2-48 Utility System function menu 1:


Option	Setting	Introduction
System Status		Displays summaries of the oscilloscope settings.
Sound	 	Open the key-press voice. Close the key-press voice.
Counter	On Off	Turn on Frequency Counter Turn off Frequency Counter.
Language	Simplified Chinese Traditional Chinese English Arabic French German Russian Spanish Portuguese Japanese Korean	Select interface language.
Next Page	Page 1/3	Press this button to enter second page.

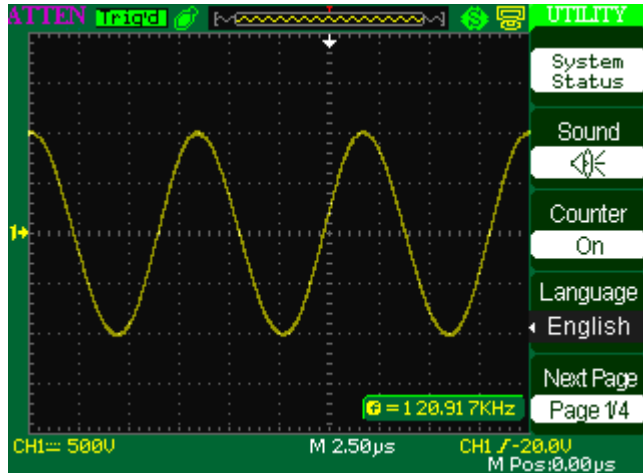

Picture 2-67

Table 2-49 Utility System function menu 2:

Option	Setting	Introduction
DO self cal		Auto self emendation.
Do Self Test	Screen Test Keyboard Test LED Test	Run the screen detect program Run the keyboard detect program Run the dot lighten detect program.
Print Setup		Enter the print setup menu to set print options.
Back USB	Printer	The oscilloscope connects to the printer using USB cable. When you execute print function, please select "Printer". Now the print icon displays on the top of the screen.
	Computer	The oscilloscope connects to the computer using USB cable. When you execute EasyScope software, please select "Computer". Now the computer icon displays on the screen.
Next Page	Page 2/3	Press this button to enter third page.

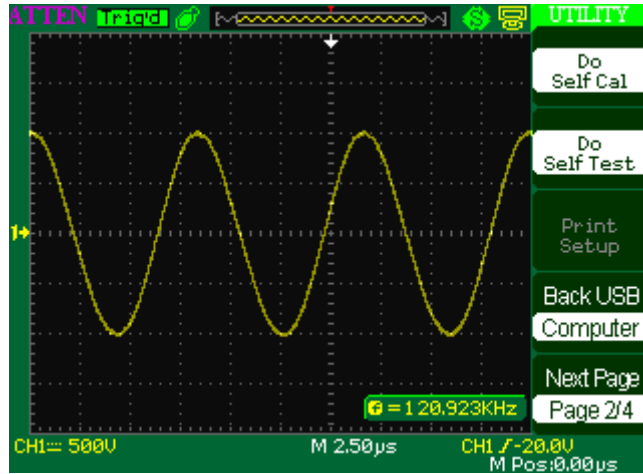


Picture 2-68

Table 2-50 Functional Menu of the Utility System 3:

Option	Setting	Introduction
Update firmware		You can update the oscilloscope use USB flash Driver(About need two minutes).
Pass/Fail		Pres this button to enter the “Pass/Fail menu”.
Record		Press this button to enter the waveform record menu.
IO Setting		Press this button to enter the “IO Setting menu”(See table 2-52).
Next Page	Page 3/3	Press this button to enter first page.

Table 2-51 IO Setting function menu:


Option	Setting	Introduction
Baud	300 2400 4800 9600 19200 38400	Set up band rate.

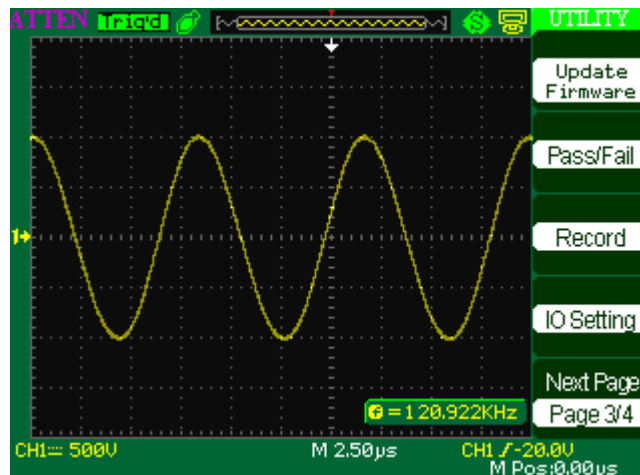

Picture 2-69

Table 2-50 Functional Menu of the Utility System 4:


Option	Setting	Introduction
Quick-Cal	On Off	Do Quick-Cal operation End up Quick-Cal operation
Screen-saver	1min 2min 5min 10min 15min 30min 1hour 2hour 5hour Off	Set the time of Screen-saver

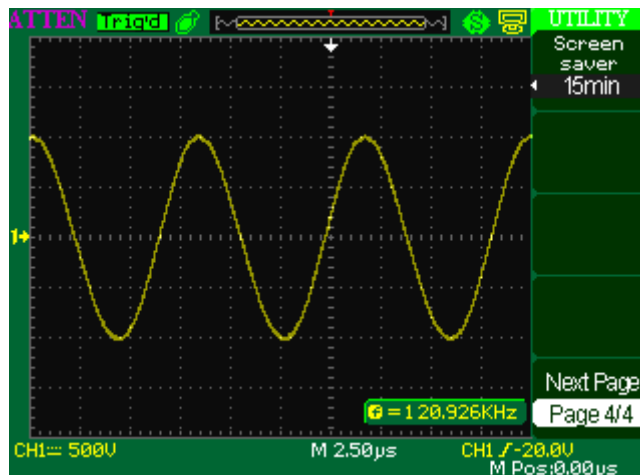

Picture 2-69-1

2.13.1 System status

Selecting “System Status” from the Utility Menu to display a series of information about this oscilloscope

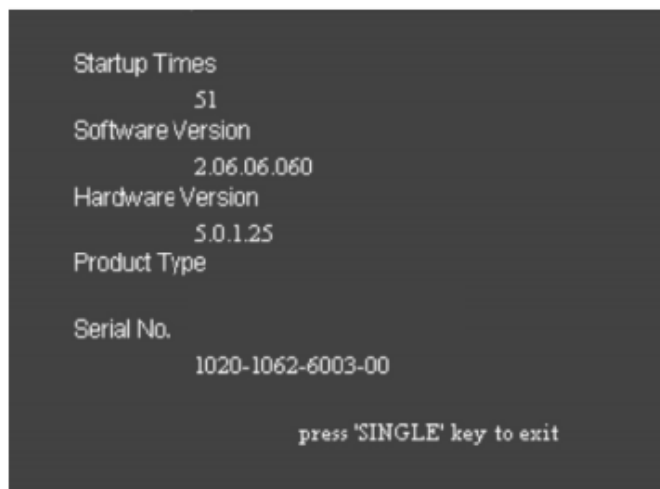

Picture 2-70


Table 2-52 System status instruction:

Option	Introduction
Startup Times	List the open times.
Software version	list the software version.
Hardware Version	List the hardware version.
Product type	List the product type.
Serial No.	List the product serial number.

2.13.2 Language

ADS1000 series oscilloscopes have seven languages' user menu to be selected.

Press the “Utility” button → “language” to select language.

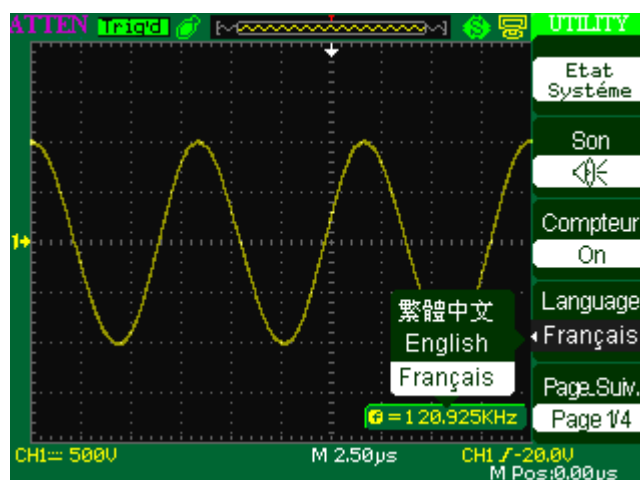


Picture 2-71

2.13.3 Print

ADS1000 Series support PictBridge compatible printers. You can connect the back USB port of the oscilloscope to the USB port of the PictBridge compatible printer using the USB cable.

Table 2-53 Print setup option function menu 1:

Option	Setting	Introduction
Ink Saver	On Off	Prints the screen image on a white background when you select “on”. Print the color screen image when you select “off”.
Layout	Portrait Landscape	Printer output orientation.
Paper Size	Default, L, 2L, Hagaki Postcard, Card Size, 10 x 15 cm, 4" x 6", 8" x 10", Letter, 11" x 17", A0, A1, A2, A3, A4, A5, A6, A7, A8, A9, B0, B1, B2, B3, B4, B5, B6, B7, B8, B9, 89 mm, Roll (L), 127 mm Roll (2L), 100 mm Roll (4"), 210 mm Roll(A4)	Displays Settings available on your PictBridge compatible printer.
Print Key	Print Key Print Picture	Select “Print Picture” option when the oscilloscope connects to the printer, press the “S/div” knob to print the picture. Select “Save Picture” option when you insert the USB flash, press the “S/div” knob to save the picture.
Next Page	Page 1/2	Press this option button to enter next page menu.

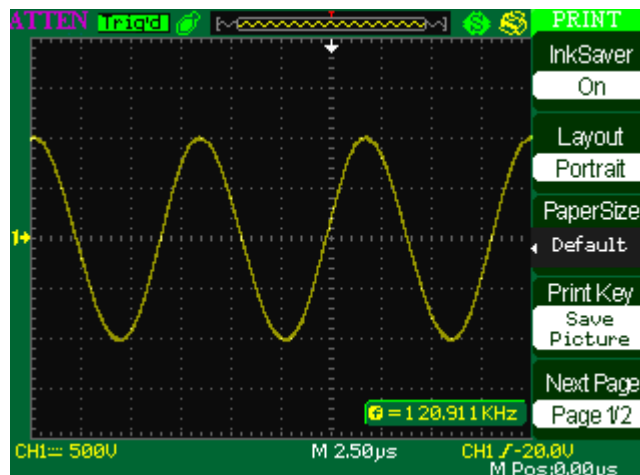

Picture 2-72

Table 2-54 Print setup option function menu 2:


Option	Setting	Introduction
--------	---------	--------------

Image Size	Default, 2.5x3.25 in, L (3.5x5 in), 4x6 in, 2L (5x7 in), 8x10 in, 4L (7 x 10 in), E, Card, Hagaki card, 6 x 8 cm, 7x10 cm, 9x13 cm, 10x15 cm, 13x18 cm, 15x21 cm, 18x24 cm, A4, Letter	Displays Settings available on your PictBridge compatible printer.
Paper Type	Default, plain, Photo, Fast Photo	
Print Quality	Default, Normal, Draft, Fine	
ID Print	Default, On, Off	
Next Page	Page 2/2	Press this button to enter first page of print setup menu.

Note: 1. The Printer may override your selection for best fit.

2. If your selection is not supported by the printer, the oscilloscope uses the Default setting.

3. The oscilloscope was designed to print to any PictBridge compatible printer. Refer to product documentation for your printer to determine if the printer is PictBridge compatible.

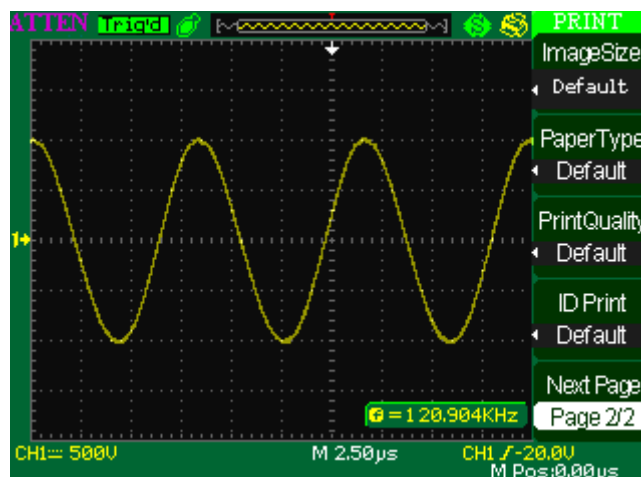

Picture 2-73

To print screen picture, follow these steps:

1. Connect the oscilloscope to a PictBridge compatible printer.

- 1) Insert one end of a USB cable into the USB Device port on the oscilloscope.
- 2) Insert the other end of the cable into the PictBridge port on a PictBridge compatible printer.

2. Print a Screen image

- 1) Power on the oscilloscope and the printer (The printer recognizes the oscilloscope only when the printer is powered on).
 - 2) Press the UTILITY button to display “UTILITY” menu.
 - 3) Press the “Next Page” option button.
 - 4) Press the “Print Setup” option button to display “Print setup” menu.
 - 5) Set up the print setup option according to your need. The oscilloscope queries the printer, and only displays options and values that the printer supports.
- If you are not sure which setting to choose, select “Default” for each option.
- 6) Press the “Print Key” option button to select “Print Picture”.
 - 7) Press the “PRINT” button to print screen image.

The oscilloscope takes a few seconds to capture the screen image. The settings of your printer and print speed determine how long it takes to print the data. Additional time may be required according to the format selected.


Note:

1. Before connecting the oscilloscope to the printer, you must be sure that “Back USB” option having been setted to “Printer”.
2. If you want to use oscilloscope connecting to your Computer, you must be sure that “Back USB” option having been setted to “Computer”
3. You can use the oscilloscope while the printer prints.
4. If printing fails, check that the USB cable is connected to the PictBridge port on the printer. If the connection have no problem, but the printe failed again, you can turn on and off the printer or oscilloscope again, before you turn on and off the printer or oscilloscope again , you must first disconnect the connection between USB cable and USB Host port of the Printer or USB Deviece port of the oscilloscope, then try again.

2.13.4 Self Calibration

When you operate the self Calibration, you should cut all the probes and lead. Then press the “Utility” button to choose the “Do self cal” to show the self Calibration Menu, and execute self calibration program according to the

prompting on the screen.

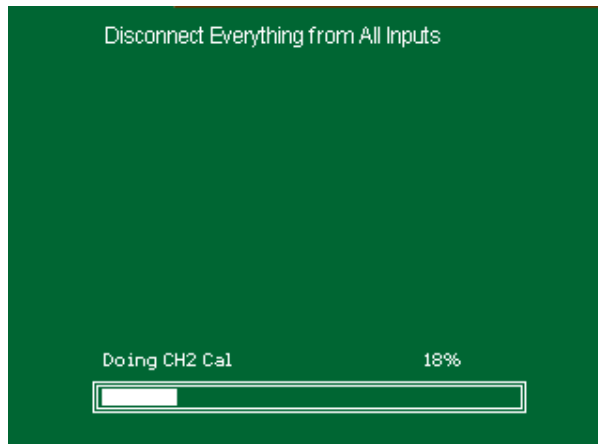

Picture 2-74

2.13.5 Self Test

Press "UTILITY" → "Do Self Test"


Table2-55

Option	Introduction
Screen Test	Run Screen Test Program.
Keyboard Test	Run Keyboard Test Program.
LED Test	Run LED Test Program.

Operation Steps:

1. Screen Test:

Select "Screen Test" to enter the screen test interface. The clew words "Press 'SINGLE' Key to continue, Press 'RUN/STOP' Key to exit" is displayed, you could press the "Single" for test.

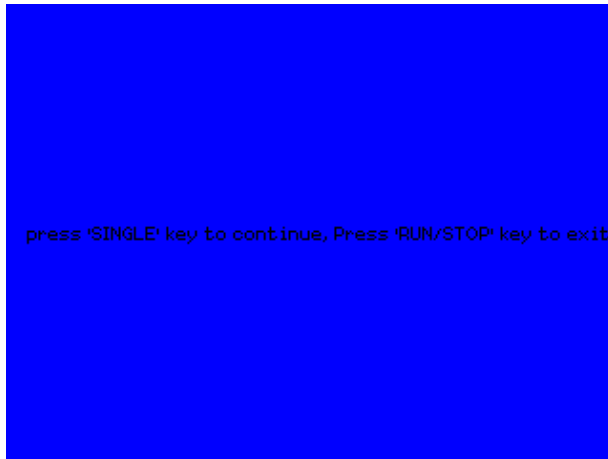


Picture 2-75

2. Keyboard Test

Select “keyboard Test” to enter the key test interface, the on-screen lathy rectangle shapes represent the front panel keys. The shapes with two arrows beside them represent the front panel knobs. The squares represent the knob presses for scale knobs. Test all keys and knobs and you should also verify that all the backlit buttons illuminate correctly.

Note:


- When you operate, the screen would display the white (Color LCD) and black (single LCD) repose.
- The tested button or knobs corresponding area would display the green (Color LCD) or white (single LCD).
- At the bottom of the screen display “Press ‘ RUN/STOP’ Key Three Times to exit” information prompt to show that press “RUN/STOP” three times for quite the test .

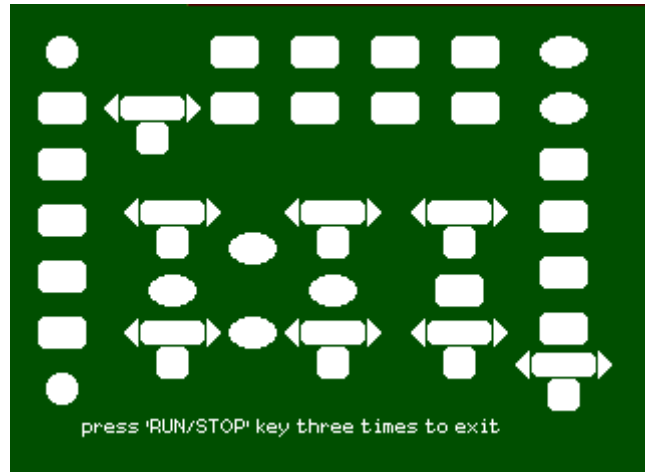

Picture 2-76

3. LED test

- Select “LED Test” to enter the lighten interface, the on-screen lathy rectangle shapes represent the front panel keys; the lathy rectangle shapes represent the front panel knobs. The squares represent the knob presses for scale knobs. The clew words “Press ‘SINGLE’ Key to continue , Press ‘RUN/STOP’ Key to exit” is displayed, you could press the “Single” continuously for test, when buttons are lighted ,the corresponding area on the screen would display green(Color LCD) or white(Single LCD).

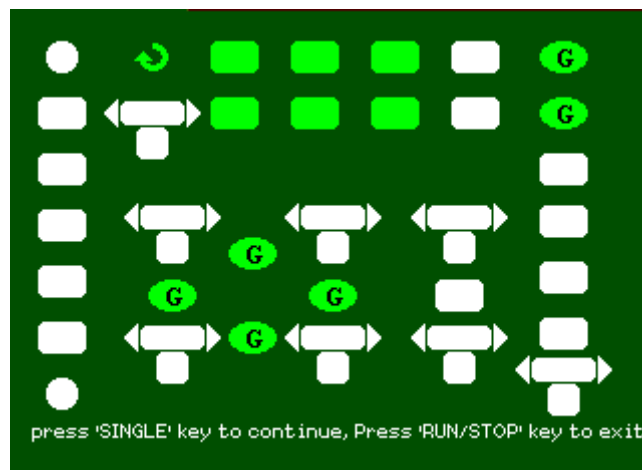

Picture 2-77

2.13.6 Update Firmware

The software of ADS1000 series oscilloscope can be updated directly via USB Flash drive, this process about need two minutes. Follow next steps:

1. Invert USB Flash Drive with firmware procedure to USB Host interface on the front panel of the oscilloscope.
2. Press the “UTILITY” button to enter the “Utility menu”.
3. Press “Next Page” option button to enter the third page of “Utility menu”.
4. Press the “Update Firmware” option button.
5. Press the “SINGLE” button to start updating the software according to prompt on the screen.

Turn off the oscilloscope and turn on it again, the software has been updated. The oscilloscope needs to execute “Do Self Cal” after update.


Note: Don’t turn off the oscilloscope in the course of updating.

2.13.7 Pass/Fail

The Pass/Fail function can monitor changes of signals and output pass or fail signals by judging the input signal is within the predefined mask or not.

Table 2-56 Pass/Fail function menu 1:


Option	Setting	Instruction
Enable	On	Turn on Pass/Fail function.
	Off	Turn off Pass/Fail function.
Source	CH1	Select Pass/Fail test on CH1.
	CH2	Select Pass/Fail test on CH2.
Operate	▶	Press to run the Pass/Fail test.
	■	Press to stop the Pass/Fail test.
Msg Display	On	Turn on times information display of the waveform pass/fail.
	Off	Turn off times information display of the waveform pass/fail.
Next Page	Page 1/2	Press this button to enter second page of Pass/Fail menu.

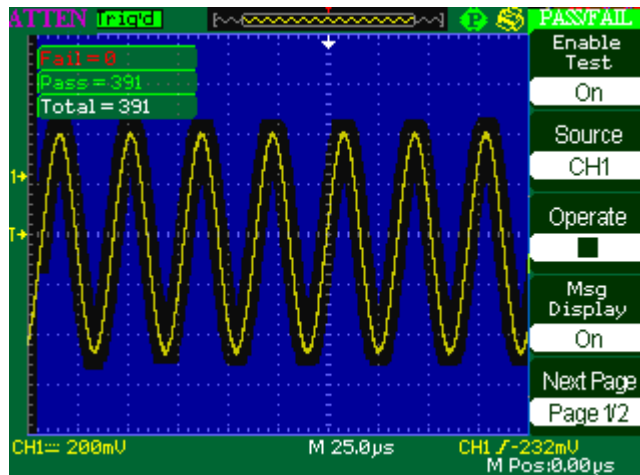

Picture 2-78

Table 2-57 Pass/Fail function menu 2:

Option	Setting	Instruction
Output	Pass Fail	Output when pass condition detected. Output when fail condition detected.
Stop On Output	On Off	Stop test when output occur. Continue test when output occur.
Mask Setting		Press this button to enter the “Mask Setting menu”.
Return		Return to the Pass/Fail main menu.
Next Page	Page 2/2	Return the first page of the Pass/Fail menu.

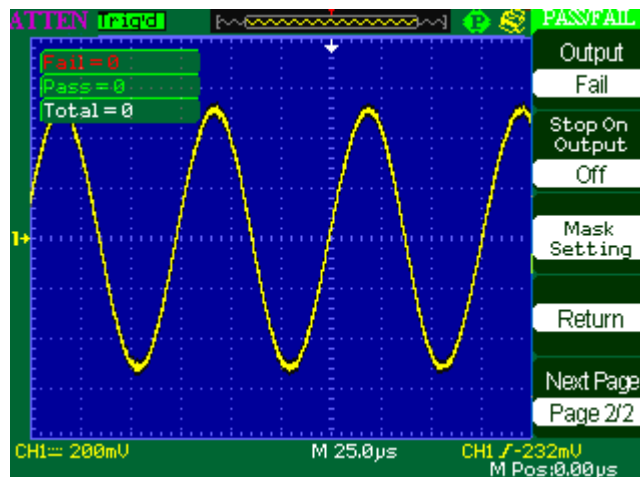


Picture 2-79

Table 2-58 Mask Setting function menu 1:

Option	Setting	Instruction
X Mask ↻ xdiv		Turn the “Universal” knob to set the range of horizontal clearance to the waveform. <0.04div-4.00div>
Y Mask ↻		Turn the “Universal” knob to set the range of vertical clearance to the waveform.


ydiv		<0.04div-4.00div>
Create Mask		Create a test mask according to the above clearance.
Location	Internal External	Select position to store created mask.
Next Page	Page 1/2	Press this button to enter the second page of “Mask Setting menu”.

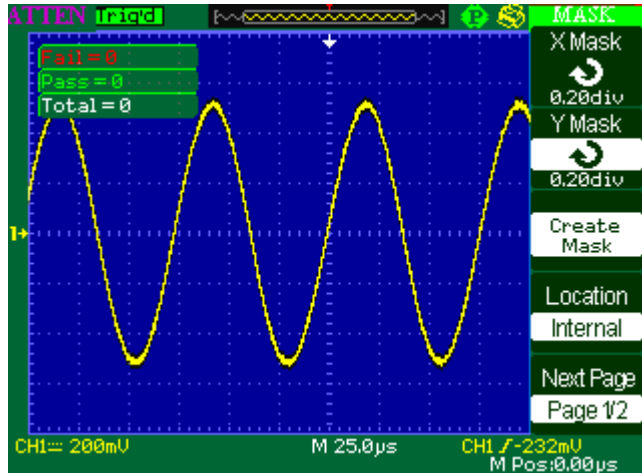

Picture 2-80

Table 2-59 Mask Setting function menu 2:


Option	Setting	Instruction
Save		Store created mask setting.
Load		Recall stored mask setting.
Return		Return to the main menu of mask setting.
Last Page	Page 2/2	Return to the first page of the “Mask Setting menu”.

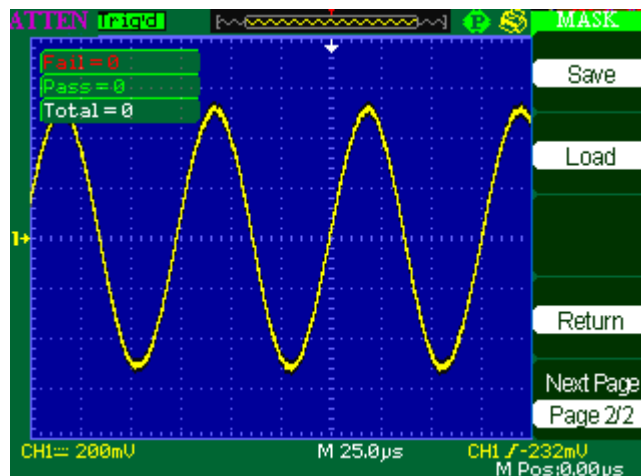

Picture 2-81

RUN Pass/Fail test, please follow next page:

- 1) Press UTILITY button to enter the “Utility menu”.
- 2) Press the “Next Page Page1/3” option button.
- 3) Press the “Next Page Page2/3” option button to enter the third page of “Utility menu”
- 4) Press the “Pass/Fail” option button to enter the “Pass/Fail” function menu.
- 5) Press the “Enable Test” option button to select “Open”.
- 6) Press the “Source” option button to select input signal channel.
- 7) Press the “Next Page Page1/2” option button to enter the second page of the “Pass/Fail menu”.
- 8) Press the “Mask Setting” option button to enter the first page of “Mask menu”.
- 9) Press the “X Mask” button, turn the “Universal” knob to adjust the horizontal clearance.
- 10) Press the “Y Mask” button, turn the “Universal” knob to adjust the vertical clearance.
- 11) Press the “Create Mask” button to create mask and you also can enter the next page of “Mask menu” to recall the stored mask.
- 12) Enter the second page of “Pass/Fail function menu”, press the “Output” option button to set the output option.
- 13) Enter the first page of “Pass/Fail function menu”, press the “Operate” option button to select “▶” to run the pass/fail test.

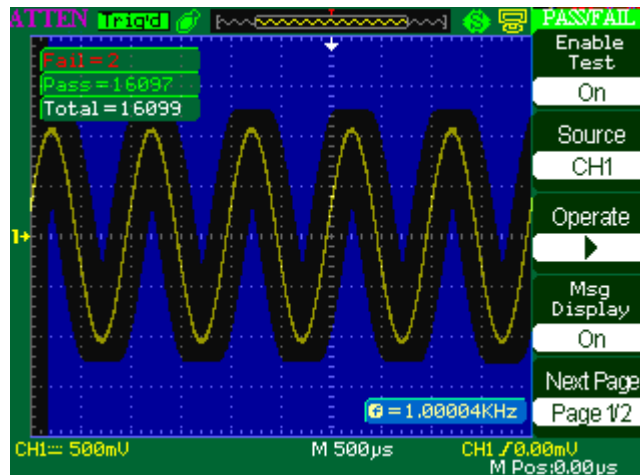





Picture 2-82


2.13.8 Waveform Record

Waveform recorder can record input waveform from CH1 and CH2, with a maximum record length of 2500 frames. This record behavior can also be activated by the pass/fail test output, which makes this function especially useful to capture abnormal signals in long term without keeping an eye watching it.

Waveform recorder: Record the waveforms with specified interval.

Table 2-60 Waveform recorder function menu:

Option	Setting	Instruction
Mode	Record	Set Record function menu.
	Play Back	Set Play Back function menu.
	Storage	Set Storage function menu.
	Off	Turn off waveform recorder menu.
Source	CH1 CH2 P/F-OUT	Select record source channel.
Interval		Set time interval between record frames.
End Frame		Set max number of record frames.
Operate	 (Record)	Press to start recording.
	 (Stop)	Press to stop recording.

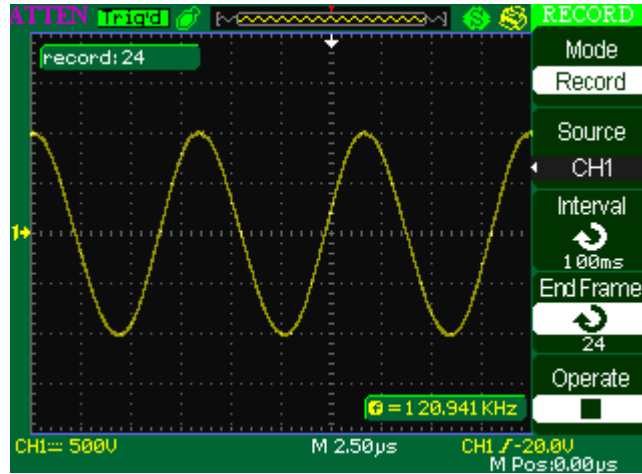

Picture 2-89


To record waveforms, follow these steps:

1. Press the UTILITY button to enter “Utility menu”.
2. Press the “Next Page” option button to enter the third page of “Utility menu”.
3. Press the “Record” button to enter “Waveform Record Menu”.
4. Press the “Mode” option button to select “Record”.
5. Press the “Source” option button to select the input signal channel.
6. Select “Interval” option, turn the “Universal” knob to adjust time interval between record frames.
7. Select “End Frame”, select the “Universal” knob to adjust the max record frame.
8. Press “●” in “Operate” option to record waveform.

Play Back: Play back current record waveforms or saved record waveforms.

Table 2-61 Waveform play back function menu 1:


Option	Setting	Instruction
Mode	Play Back	Set the Play Back function menu.
Operate	▶ (Run) ■ (Stop)	Press to start playback playing. Press to stop playing.
Play Mode	↻ ▶▶■	Set circular play mode. Set single time play mode.
Interval	↻	Set time interval between frames.
Next Page	Page 1/2	Enter the second page of Play Back menu.

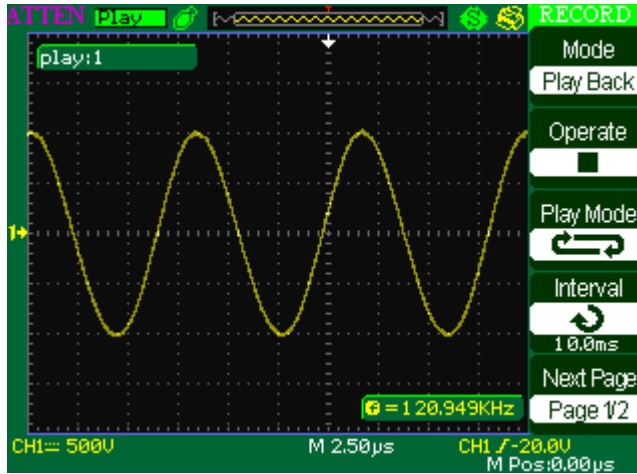

Picture 2-90

Table 2-62 Waveform play back function menu 2:

Option	Setting	Instruction
Start Frame		Set start frame.
Curr_Frame		Select current frame to be played.
End Frame		Set End frame.
Return		Press to return the waveform recorder main menu.
Next Page	Page 2/2	Return to the first page of Play Back function menu.

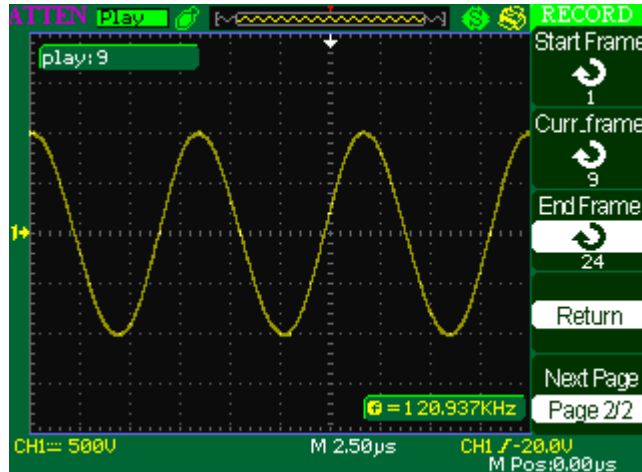

Picture 2-91

To play back current record waveforms, follow these steps:

1. Press UTILITY button to enter “Utility menu”.
2. Press the “Mode” option button to select “Play Back”.
3. Press the “Play Mode” option button to select “” or “”.
4. Press the “Interval” option button to select time interval between play back frames.
5. Press the “Next Page 1/2” to enter the second page of “Play Back function menu”.

6. Select the “Start Frame” option, turn the “Universal” knob to adjust the start frame of play back waveform.
7. Select the “End Frame” option, turn the “Universal” knob to adjust the end frame of play back waveform.
8. Press the “Next Page 2/2” option button to return the first page of “Play Back menu”.
9. Press the “▶” option button in “Operate” option to play back waveforms.

2.13.9 Recorder

The waveform recorder is a kind of seamless and no-gap real time recording of waveform, means oscilloscope can save and replay waveform every time it captured. It is similar to waveform recording instrument, and the biggest recording size of its internal memory is 6M

Table 2-65 waveform recording function menu:

option	description
Record	record the waveform persistently
Replay	Replay recorded waveform, refer to table 2-66
Option	Set the recorder properly, refer to table 2-67
Return	Quit the recording function

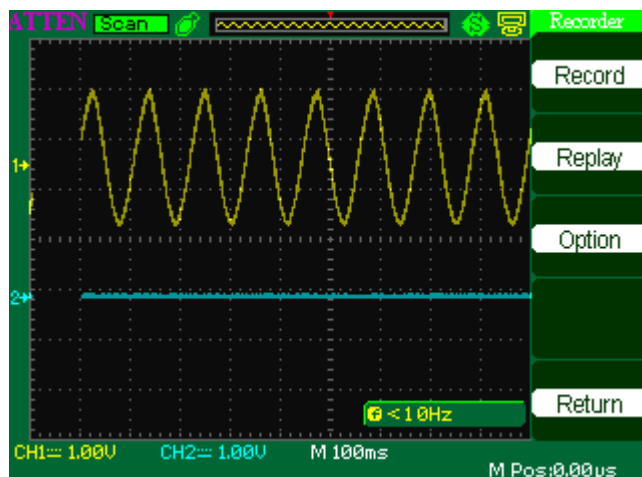


Table 2-66 waveform recall function menu

Option	Description
Stop	Quit the auto-recalled waveform, then the waveform in EMS memory can be observed through altering the time base, the waveform in EMS memory can be moved left and right

Previous	Recall the waveform again
Next	Fast forward play the recalled waveform again
Return	Quit the recalling interface


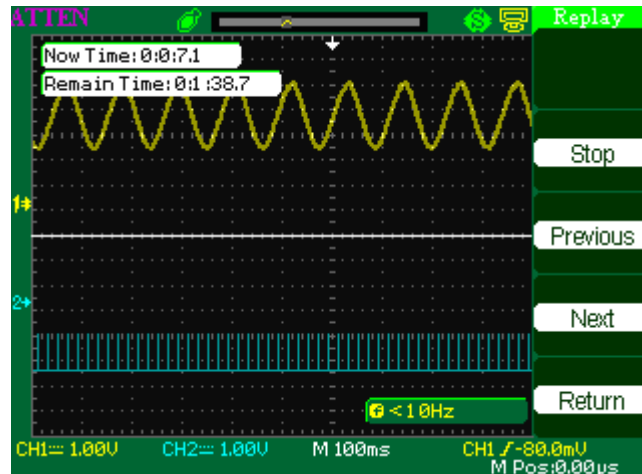


Table 2-63: recorder's setting menu

Option	Setting	Description
Viewer	Full Screen	Waveform of Full screen recording and channel recalling
	Split	Waveform of recording on split screen and channel recalling, CH1 is displayed in upper half-screen, CH2 is displayed in lower half-screen.
Record Mode	Roll	Recorder saves the channel waveform persistently, the latter waveform will cover the former.
	Single Swee	recorder will stop waveform saving when its memory is up to 6M.
Replay Mode	One by One	when recalling, the screen waveform refresh from left to right
	Roll	When recalling, screen waveform will refresh completely according to the

		capturing time of each frame
Return		quit the recording setting interface

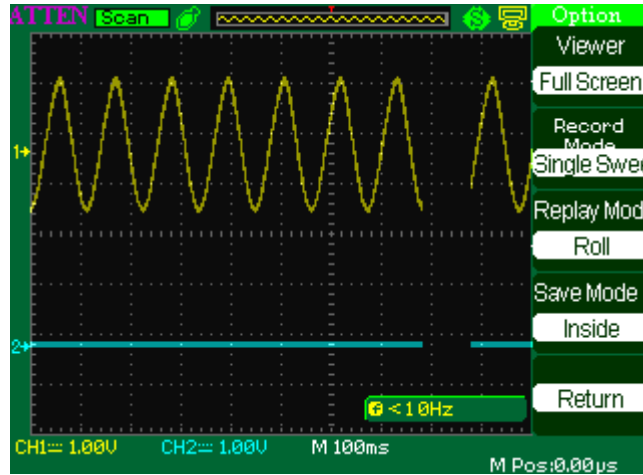

Recorder Operation step:

1. Press the UTILITY button to enter “Utility menu”.
2. Press the “Next Page” option button to enter the four page of “Utility menu.
3. Press the “Recorder” button to enter the Recorder manual.
4. Press the “Option” button to select the parameter which you want by yourself
5. Press the “Recorder” button to enter the Record menu and then Press the “Start” button to start record waveform
6. After finished record waveform, then Press the “Replay” button to view the recorded waveform.


Note: • Recorder function with on ADS1000CA/CM Series oscilloscope

2.14 Online Help Function

ADS1000 serial oscilloscope has an online help function that supply multi-language help information, and you can recall them to help you operate the oscilloscope when you need.

Press the “HELP” button to enter the help status, then press every button to recall the corresponding help information. Note: If you want to see help information of SINGLE button and RUN/STOP button, you need to see them when you first enter the help status because you press the SINGLE button can enter next page of help information and Press the RUN/STOP button can return to the first page of help information when other button’s help information exceed one page.

Submenus of every main menu all have themselves’ help information. Note: If you need to see help information of next page submenus, you need to first press the “HELP” button to exit the help status and switch to next page menu then press the “HELP” knob to enter the help status again and press the submenu option buttons to see themselves’ help information.

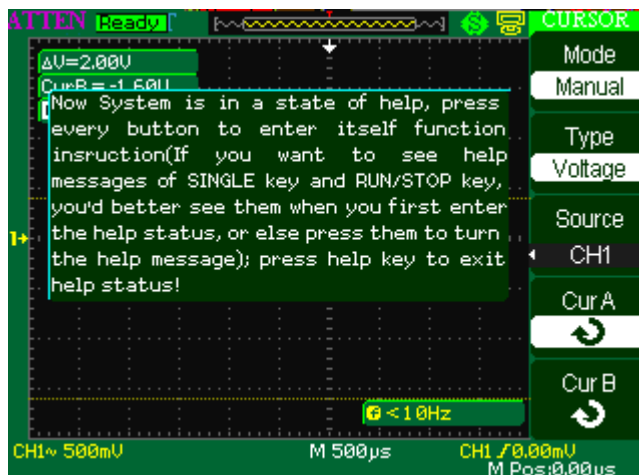

Picture 2-86

Chapter3 Application Examples

This section presents a series of application examples. These simple examples highlight the features of the oscilloscope and give you ideas for using it to solve your own test problems.

- ◆ Taking simple measurements
- ◆ Taking cursor measurements
- ◆ Capturing a single-shot signal
- ◆ Analyzing signal detail
- ◆ Triggering on a video signal
- ◆ Application of X-Y function
- ◆ Analyzing a differential communication signal using math functions

3.1 Taking Simple Measurements

Observe a unknown signal in a circuit, display the signal quickly and measure the frequency and peak-to-peak amplitude.

1. Using Auto set

To quickly display a signal, follow these steps:

1. Press the CH1 button, set the Probe option attenuation to 10X and set the switch to 10X on the probe.
2. Connect the channel 1 probe to the signal.
3. Press the AUTO button.

The oscilloscope sets vertical, horizontal, and trigger controls automatically. If you want to optimize the display of the waveform, you can manually adjust these controls.

NOTE. The oscilloscope displays relevant automatic measurements in the waveform area of the screen based on the signal type detected.

2. Taking Automatic Measurements

The oscilloscope can take automatic measurements of most displayed signals. To measure signal frequency and peak-to-peak amplitude, follow these steps:

(1) Measure signal frequency

- Input the signal to channel 1.
- Press the “AUTO” button.
- Press the “MEASURE” button to see “auto Measure Menu”.
- Press the top option button.
- Press the “Time” option button to enter the “Time Measure menu”.
- Press the “Source” option button to select input signal channel.
- Press the “Type” option button to select “Freq”.

The corresponding icon and measure value will display on the third option area.

(2) Measure signal peak-to-peak amplitude

- Press the “MEASURE” button to display “auto measure menu”.
- Press the top second option button.
- Press the “Voltage” option button to enter the “Voltage measure menu”.
- Press the “Source” option button to select input signal channel.
- Press the “Type” option button to select “Vpp”.

The corresponding icon and measure value will display on the third option area.

3.2 Taking Cursor Measurements


You can use the cursors to quickly take time and voltage measurements on a waveform.

3.2.1 Measuring Ring Frequency

To measure the ring frequency at the rising edge of a signal, follow these steps:

- 1). Press the “CURSORS” button to see the “Cursor Menu”.
- 2). Press the “Mode” button to select “Manual”.
- 3). Press the “Type” option button and select “Time”.
- 4). Press the “Source” option button and select “CH1”.
- 5). Press the “CurA” button and turn the universal knob to place the cursor A on the first peak of the ring.
- 6). Press the “Cur B” button and turn the universal knob to place the cursor B on the second peak of the ring.

You can see the delta time and frequency (the measured ring frequency) on the top right of the screen.

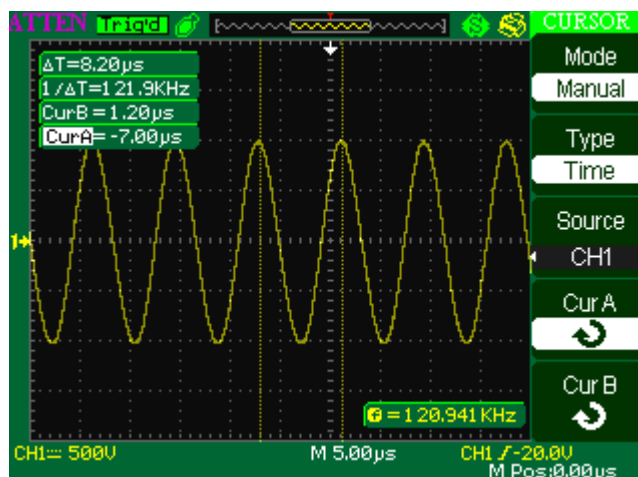

Picture 3-1


3.2.2 Measuring Ring Amplitude

To measure the amplitude, follow these steps:

- 1). Press the “CURSORS” button to see the Cursor Menu.
- 2). Press the “Mode” button to select “Manual”.
- 3). Press the “Type” option button and select “Voltage”.
- 4). Press the “Source” option button and select “CH1”.
- 5). Press the “CurA” option button and turn the universal knob to place the cursor A on the highest peak of the ring.
- 6). Press the “CurB” option button and turn the universal knob to place the cursor B on the lowest peak of the ring.

You can see the following measurements on the top right of the screen:

- The delta voltage (peak-to-peak voltage of the ringing)
- The voltage at Cursor A.
- The voltage at Cursor B.

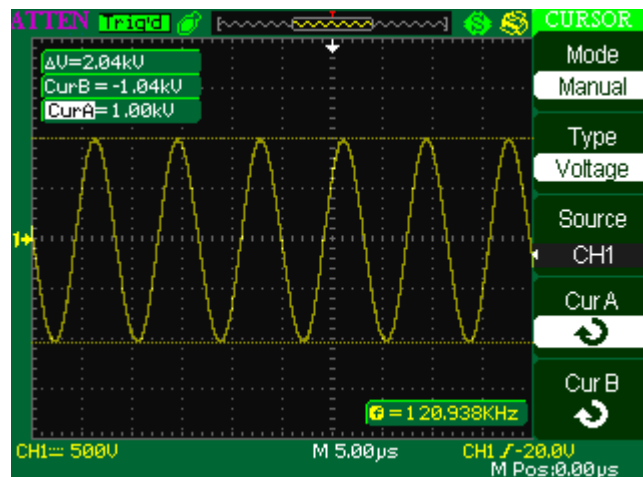

Picture 3-2

3.3 Catch the single signal

To capture a single event, you need to gather some pre-test knowledge of the signal in order to correctly set up the trigger level and slope .if you are not sure the instance of the signal, you can observe it through auto or normal trigger mode to ensure the trigger level and slope.

The following steps show you how to use the oscilloscope to capture a single event.

1. Set the Probe option attenuation to 10X and set the switch to 10X on the probe.
2. Trigger set up:
 - (1) Press “TRIG MENU” button to show the “Trigger Menu”
 - (2) Under this menu, set the trigger type to “edge”, Edge type is “Rising”, source is “CH1”, trigger mode is “Single”, coupling is “DC”
 - (3) Adjust the horizontal time base and vertical scale to the satisfied range
 - (4) Turn the “LEVEL” knob to adjust the trigger level
 - (5) Press the “RUN/STOP” button to start capturing

When the trigger conditions satisfied, data appears on the display representing; the data points that the oscilloscope obtained with one acquisition and press the RUN/STOP button again rearms the trigger circuit and erases the display.

3.4 Analyze the signal detail

You have a noisy signal displayed on the oscilloscope and you need to know more about it. You suspect that the signal contains much more detail than you can now see in the display.

3.4.1 Looking at a Noisy Signal

The signal appears noisy and you suspect that noise is causing problems in your circuit. To better analyze the noise, follow these steps:

- 1) Press the “ACQUIRE” button to see the acquire menu.
- 2) Press the “Acquisition” option button or turn the “Universal” knob to select “Peak Detect”.
- 3) If necessary, press the “DISPLAY” button to see “Display menu”. Turn the “Universal” knob to adjust waveform intensity and grid brightness to see the noise more easily.
- 4) . Peak detect emphasizes noise spikes and glitches in your signal, specially when the time base is set to a slow setting.

3.4.2 Separating the Signal from Noise

To reduce random noise in the oscilloscope display, follow these steps:

- 1) Press the “ACQUIRE” button to display the acquire menu.
- 2) Press the “Acquisition” option button or turn the “Universal” knob to select “Average”.
- 3) Press the “Averages” option button to see the effects of varying the number of running averages on the waveform display.

Averaging reduces random noise and makes it easier to see detail in a signal.

3.5 Triggering on a Video Signal

Observe the video circuit in a piece of medical equipment and Use the video trigger to obtain a stable display.

3.5.1 Triggering on Video Field

To trigger on the video fields, follow these steps:

- 1) Press the “TRIGMENU” button to see “trig menu”
- 2) .Press the top option button and select “Video”.
- 3) .Press the “source” option button and select “CH1”.
- 4) . Press the “Sync” option button and select “Odd Field” or “Even Field”.
- 5) . Press the “Standard” option button and select “NTSC”.
- 6) . Turn the horizontal “S/Div” knob to see a complete field across the screen.
- 7) . Turn the vertical “Volts/Div” knob to ensure that the entire video signal is visible on the screen.

3.5.2 Triggering on Video Lines

To trigger on the video lines, follow these steps:

- 1) .Press the “TRIGMENU” button to see the trig menu
- 2) .Press the top “option” button and select “Video”.
- 3) . Press the “Sync” option button and select “Line Num” and turn the universal knob to set a specific line number.
- 4) .Press the “Standard” option button and select “NTSC”.
- 5) . Turn the “S/Div” knob to see a complete video line across the screen.
- 6) . Turn the “Volts/Div” knob to ensure that the entire video signal is visible on the screen.

3.6. Application of X-Y function

Viewing Impedance Changes in a Network


Connect the oscilloscope to monitor the input and output of the circuit

To view the input and output of the circuit in an XY display, follow these steps:

- 1) Press the “CH 1” MENU button and set the Probe option attenuation to 10X.
- 2) Press the “CH 2” MENU button and set the Probe option attenuation to 10X.
- 3). Set the switches to 10X on the probes.
- 4). Connect the channel 1 probe to the input of the network, and connect the channel 2 probe to the output.
- 5). Press the “AUTO” button.
- 6). Turn the “Volts/div” knobs to display approximately the same amplitude signals on each channel.
- 7). Press the DISPLAY button.
- 8). Press the Format option button and select “XY”.

The oscilloscope displays a Lissajous pattern representing the input and output characteristics of the circuit.

- 9). Turn the VOLTS/DIV and VERTICAL POSITION knobs to optimize the display.
- 10). Press the “Persist” option button and select “Infinite”.
- 11). Press the “Intensity” or “Brightness ” option buttons and turn the “Universal” knob to adjust the contrast of the screen.
- 12). Apply the Ellipse method to observe the phase difference between the two channels

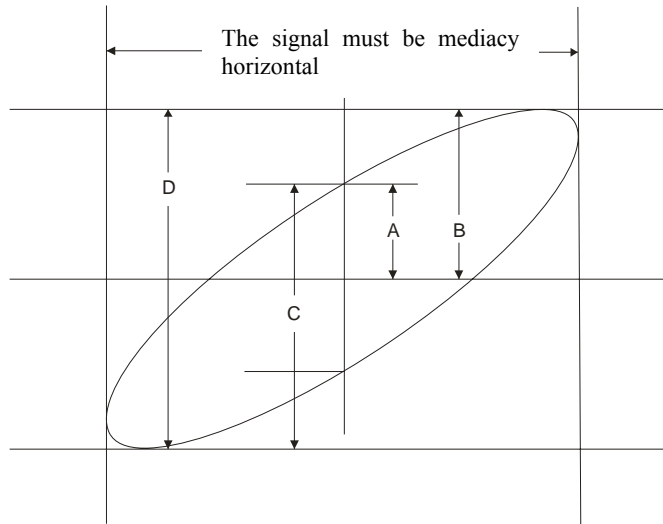

Picture 3-3

$\sin\theta = A/B$ or C/D where $\theta =$ phase shift (in degrees) between the two signals From the formula above, you could get:

$$\theta = \pm \arcsine (A/B) \text{ or } \pm \arcsine (C/D)$$

If the main axis of the ellipse is at I and III quadrant, θ must be in the range of $(0 \sim \pi/2)$ or $(3\pi/2 \sim 2\pi)$. if the main axis is at II and IV quadrant, θ must be in the range of $(\pi/2 \sim \pi)$ or $(\pi \sim 3\pi/2)$.

3.7 Analyzing a Differential Communication Signal

You are having intermittent problems with a serial data communication link, and you suspect poor signal quality. Set up the oscilloscope to show you a snapshot of the serial data stream so you can verify the signal levels and transition times.

Because this is a differential signal, you use the math function of the oscilloscope to view a better representation of the waveform.

To activate the differential signals connected to channel 1 and channel 2, follow these steps:

- 1). Press the CH 1 button and set the Probe option attenuation to 10X.
- 2). Press the CH 2 button and set the Probe option attenuation to 10X.
- 3). Set the switches to 10X on the probes.
- 4). Press the AUTO button.
- 5). Press the “MATH” button to see the Math Menu.
- 6). Press the “Operation” option button and select “—”.
- 7). Press the “CH1 — CH2” option button to display a new waveform that is the difference between the displayed waveforms.
- 8). You can adjust the vertical scale and position of the Math waveform. To do so, follow these steps:
 - a. Remove the channel 1 and channel 2 waveforms from the display.
 - b. Turn the CH 1 and CH 2 VOLTS/DIV and VERTICAL POSITION knobs to adjust the vertical scale and position.

Chapter 4 prompting messages and troubleshooting

4.1 Prompting messages:

- **Trig level at limit:** Mention you that the trigger Level is at a limit when you turn the Trig level knob.
- **Horizon position at limit:** Mention you that the horizontal position is at a limit when you turn the horizon position knob.
- **Volts/Div at limit:** Mention you that the vertical voltage have already touched the Min 2MV/div or Max 10V/div.
- **Volts position at limit:** The system would display this information when the vertical position is at a limit.
- **Sec/Div at limit:** Prompts that the Volts/Div is at full range while turning the vertical scale knob.
- **Holdoff time at limit!:** Turn the “Universal” knob when holdoff time have been to max or min value, now the system will clew this information.
- **Functions isn’t useable:** Under several special modes, the some functions could not be running.
- **No signal!:** The system would clew this information when the signal could not match the auto set condition. (Using in the auto set)
- **Adjust at limit:** You could adjust the pulse width by the universal knob till the pulse width has reached min20.0ns or max 10.0s.
- **Location Empty:** If you have no stored waveforms or setups on some location, the screen will display this information when you pressing the “Recall” button on this location.
- **USB Flash Drive Plug In! :** This information will appear when you invert the

USB Flash Drive to the USB Host port.

- **USB Flash Drive Pull Out!** : This information will appear when you pull out the USB Flash Drive.
- **Store Data Success!**: Save setup data, waveform data or picture data to the internal of the oscilloscope or USB flash successful.
- **Ready Data Success!**: Read setup data or waveform data from the internal of the oscilloscope or USB flash successful.
- **Please set Back USB to printer!**: Press the “S/div” knob will appear this information on the screen when the “Print Key” option is set to “Print Picture” and the “Back USB” option is set to “Computer”.
- **USB Flash Drive isn’t connected!**: When the “Save To” option is set to “File” or the “Print Key” option is set to “Save Picture” in “Save/Recall” menu , Press the “Save” option button or the “S/div” knob before inverting the USB Flash Drive to the USB Host port will appear this information on the screen.
- **Record Wave Success!**: This message will appear when you finish recording waveforms.

4.2 Troubleshooting

1. After the oscilloscope is powered on, the screen remains dark , please do as following steps:

- (1) Check the power cable's connection.
- (2) Ensure the power switch is turned on.
- (3) After the inspections above, restart the oscilloscope.
- (4) If the oscilloscope is still not used after the checking, please connect with ATTEN company.

2. If there is no signal wave in the screen after gathering the signal, please do as following steps:

- (1) Check the probe connecting with the signal cable or not
- (2) Check the signal cable connecting with the BNC connector or not.
- (3) Check the probe whether connect with the goods tested or not.
- (4) Check the tested goods produce the signal or not.
- (5) Gather the signal again.

3. The value of the tested voltage is 10 times higher/lower than the real one , please do as following steps::

Check the attenuation quotiety whether match the probe attenuation proportion or not.

4. Display the wave, but not steady , please do as following steps::

- (1) Check the signal source on the trigger interface whether or not match the signal channel.
- (2) Check the trigger mode: normal signal should use the "edge" trigger mode. The video signal should use the "Video" Trigger mode. The signal would display steady, only using the matching trigger mode.
- (3) Attempt to change the " coupling" into "HF Reject" or "LF Reject" display, so that the High/low frequency noise disturb the trigger should be filtrated

5. Press "RUN/STOP" button, but no display.

Check the trigger mode on the trigger interface whether or not in the “normal” or “single”, and check the trigger level is whether or not over the wave range. If yes, please put the trigger level to the middle position or set the trigger mode to the “Auto” position. In another hand, you could choose the “Auto” button to set up automatically.

6. After the Acquisition is set to Averages or Display Persistence time is set too long, the waveform refreshes slowly.

It is normal in these settings

7. The signal is displayed as ladder like waveform

(1) This phenomena is normal. The time base maybe is too slow .you should turn the horizontal SCALE knob to increase horizontal resolution to improve the display.

(2) Maybe the display Type is set to “Vectors”, You could set it to Dots mode to improve the display.

Chapter 5 Service and Support

5.1 Maintain summary

ATTEN warrants that the products that it manufactures and sells will be free from defects in materials and workmanship for a period of three (3) years from the date of shipment from an authorized ATTEN distributor. If a product or CRT proves defective within the respective period, ATTEN will provide repair or replacement as described in the complete warranty statement.

To arrange for service or obtain a copy of the complete warranty statement, please contact your nearest ATTEN sales and service office.

Except as provided in this summary or the applicable warranty Statement, ATTEN makes no warranty of any kind, express or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose. In no Event shall ATTEN be liable for indirect, special or Consequential damages

5.2 Contract us

MTR Add: Building A29, Tanglang Industrial zone, Xili, Nanshan, Shenzhen,
518055, P.R.China

Tel: 86-755-8602 1395 61618289

Fax: 86-755-6161 8298

E-mail: atten@atten.com.cn

<http://www.atten.com.cn>

Appendix A: Specifications

All specification apply to 10X probe and All ADS1000 Digital Storage Oscilloscopes.

To verify that the oscilloscope meets specifications, the oscilloscope must first meet the following conditions:

- The oscilloscope must have been operating continuously for twenty minutes within the specified operating temperature.
- You must perform the Do Self Cal operation, accessible through the Utility menu, if the operating temperature changes by more than 5° C.
- The oscilloscope must be within the factory calibration interval

All specifications are guaranteed unless noted “typical.”

Specifications

Inputs	
Input Coupling	AC, DC, GND
Input Impedance	1MΩ+/-2% 17F ± 3pF
Maximum input voltage	400V (DC+AC PK-PK, 1MΩ input impedance), CAT I, CAT II
Probe Attenuator	1X, 10X
Probe Attenuator Factors Set	1X, 10X, 100X, 1000X

Signal Catching System					
Sample Types	Real time, Equivalent time				
	ADS1000C+: Single Channel: 32Kpts; Double Channels:16Kpts				
	ADS1000CA: Single Channel: 40Kpts; Double Channels:20Kpts				
		Channel Mode	Sampling Rate	Short Memory	Long Memory
		Single Channel	1Gsa/s	40kpts	No Support
	ADS1000CM	Single Channel	500MSa/s or lower	20kpts	2Mpts ^[1]
		Double Channels	500MSa/s or lower	20kpts	1Mpts
Peak Measure	When you see the signal at the slow speed (from 10μs/div start) , you can capture high-frequency burr which are narrow to 10ns.				
Sample Mode	Sample, Peak Measure, Average				
Averages	4, 16, 32, 64, 128, 256				

Vertical System	
Vertical Sensitivity	2mV/div - 10V/div(1-2-5 order)
Channel voltage offset range	2mV-200mV: $\pm 1.6V$ 206mV-10V: $\pm 40V$
Vertical Resolution	8 bit
Channels	2
Analog Bandwidth	150 MHz(ADS1152CA/CM) 100MHz(ADS1102C+/CA/CM) 60MHz(ADS1062C+/CA/CM) 40MHz(ADS1042C+/CM) 25MHz(ADS1022C+)
Lower frequency limit (AC -3dB)	$\leq 10\text{Hz}$ (at input BNC)
DC Measurement Accuracy: All Gain settings $\leq 100\text{mv/div}$	$\pm [3\%X (\text{reading} + \text{offset}) + 1\% \text{ of } \text{offset} + 0.2\text{div} + 2\text{mv}]$
DC Measurement Accuracy: All Gain settings $> 100\text{mv/div}$	$\pm [3\%X (\text{reading} + \text{offset}) + 1\% \text{ of } \text{offset} + 0.2\text{div} + 100\text{mv}]$
DC Gain Accuracy	$\leq \pm 3.0\%$: 5mv/div to 10V/div in Fixed Gain Ranges $\leq \pm 4.0\%$: typical for 2mv/div and Variable Gain Ranges
Rise time	$< 2.4\text{ns}$ (ADS1152CA/CM) $< 3.5\text{ns}$ (ADS1102C+/CA/CM) $< 5.8\text{ns}$ (ADS1062C+/CA/CM) $< 8.8\text{ns}$ (ADS1042C+/CM) $< 14\text{ns}$ (ADS1022C+)
Vertical input coupling	AC, DC, GND
Math operation	+, -, *, /, FFT
FFT	Window mode: Hanning, Hamming, Blackman, Rectangular Sampling points: 1024
Bandwidth limited	20MHz (-3dB)(ADS1022C+ have no this function)

Horizontal System	
Real Time Sampling Rate	ADS1000C+ : Single Channel 500MSa/s ADS1000CA/CM : Single Channel 1GSa/s
Equivalent Sampling Rate	50GSa/s (ADS1022C+ equivalent Sampling 10GSa/S;

		ADS1042C+/CM equivalent Sampling 25GSa/S)
Measure Modes	Display	MAIN, WINDOW, WINDOW ZOOM, ROLL, X-Y
Horizontal nicety error		±0.01%
Horizontal Range	Scan	2.5nS/DIV - 50S/DIV(ADS1152CA/CM) 2.5nS/DIV - 50S/DIV(ADS1102C+/CA/CM) 5nS/DIV - 50S/DIV(ADS1062C+/CA/CM) 10nS/DIV - 50S/DIV(ADS1042C+/CM) 25nS/DIV - 50S/DIV(ADS1022C+) Roll: 100mS/DIV ~50S/DIV (1-2-5 sequence)
Delay range		Pretrigger: 12 DIV, Delay trigger: 130 DIV

Trigger System	
Trigger Types	Edge, Pulse Width, Video,Slope, Alternative
Trigger Modes	Auto, normal, Single
Trigger Coupling	AC, DC, LF rej, HF rej
Trigger Level Range	CH1,CH2: ±6divisions from center of screen EXT: ±1.2V EXT/5: ±6V
Trigger Displacement	Pretrigger : 6DIV, Delay Trigger: 6DIV
Holdoff range	100ns – 1.5s
Edge Trigger	Edge type: Rising, Falling, Rising and Falling
Pulse Width Trigger	Trigger Modes: (>, <, =)positive Pulse Width, (>, <, =)Negative Pulse Width Pulse Width Range: 20ns – 10s
Video Trigger	Support signal Formats: PAL/SECAM, NTSC Trigger condition : odd field, even field, all lines, line Num
Slope Trigger	(>,<, =) Positive slope, (>,<, =) Negative slope Time: 20ns-10s
Alternative Trigger	CH1 trigger type: Edge, Pulse, Video, Slope CH2 trigger type: Edge, Pulse, Video, Slope
X-Y Mode	
X-pole Input / Y-Pole Input	Channel 1 (CH1) / Channel 2 (CH2)
Phase Error	±3 degrees
Sample Frequency	XY mode has a breakthrough that trad oscilloscopes restrict sampling rate at 1MSa/s and support 5KSa/s~200MSa/s (1-2-5 sequence)

Measure System	
Auto Measure (32 Types)	Vpp, Vmax, Vmin, Vamp, Vtop, Vbase, Vavg, Mean,Crms, Vrms, ROVShoot, FOVShoot, RPRESshoot, FPRESshoot, Rise time, Fall time, Freq, Period,+ Wid, – Wid, +Dut, –Dut, BWid, Phase, FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF
Cursor Measure	Manual mode, Track mode and Auto mode

Control Panel Function	
Auto Set	Auto adjusting the Vertical, Horizontal system and Trigger Position
Save/Recall	Support 2 Group referenced Waveforms,20 Group setups,20 Group captured Waveforms internal Storage/Recall function and USB flash driver storage function.

Hard Ware Frequency Counter	
Reading resolution	6 Bytes
Range	DC Couple, 10Hz to MAX Bandwidth
Signal Types	Satisfying all Trigger signals(Except Pulse width trigger and Video Trigger)

NOTE: [1]-----ADS1000C+/CA not support Long Memory

Generic Specification


Display System	
Display Mode	Color TFT 5.7in.(145mm)diagonal Liquid Crystal Display
Resolution	320 horizontal by 234 vertical pixels
Display Color	64K color
Display Contrast (Typical state)	150:1
Backlight Intensity (Typical state)	300nit
Wave display range	8 x 12 div
Wave Display Mode	Point, Vector
Persist	Off, 1 sec, 2 sec, 5 sec, Infinite
Menu Display	2 sec, 5 sec, 10 sec, 20 sec, Infinite
Skin	Classical, Modern, Tradition, Succinct
waveform interpolation	Sin(x)/x、 Linear
Color model	Normal , Invert
Language	Simplified Chinese, Traditional Chinese,English, Arabic, French, German, Russian,Spanish,Portuguese Japanese,Korean

Environmenta	
Temperature	Operating: 10°C to +40°C Nonoperating: -20°C to +60°C
Humidity	Operating: 95%RH, 40°C, 24 hours Nonoperating: 90%RH, 65°C, 24 hours
Height	Operating: 3000m Nonoperating: 15,266m
pollution	It Usually only have dry insulative pollution It must be prospective that it is instant electric because of icing once in a way.

Power Supply	
Input Voltage	100-240 VAC, CAT II, Auto selection
Frequency Scope	45Hz to 440Hz
Power	50VA Max

Mechanical		
Dimension	length	305mm
	Width	133mm
	Height	154mm
Weight	2.3 kg	

Appendix B: Default setup

Menu or system	options , knobs or buttons	Default setup	
CH1 CH2	Coupling	DC	
	Bw limit	Off	
	Volts/div	Coarse	
	Probe	1X	
	Invert	Off	
	Volts/div	1.00V	
MATH	Operation	CH1-CH2	
	CH1 invert	Off	
	CH2 invert	Off	
	FFT operation: Source Window FFT Zoom Scale		CH1
			Hanning
			1X
		dBVrms	
HORIZONTAL	Window	Main	
	Position	0.00 μ s	
	Sec/div	500 μ s	
	Window Zone	50.0 μ s	
	Trigger knob	level	
CURSOR	Type	Off	
	Source	CH1	
	Horizontal (voltage)	+/-3.2divs	
	Vertical (time)	+/-5divs	
MEASURE	Source	CH1	
	Type	average	
ACQUIRE	three mode options)	Sampling	
	Averages	16	
DISPLAY	Type	Vectors	
	Persist	off	
	Gird		
	Menu Display	2 sec	
REF	Type	waveform	
	Source	CH1	
	REFA	off	
TRIGGER (edge)	Type	edge	

	Source	CH1
	Slope	Rising
	Mode	Auto
	Coupling	DC
	LEVEL	0.00V
TRIGGER (pulse)	Type	pulse
	Source	CH1
	When	=
	Set Pulse Width	1.00ms
	Mode	Auto
	Coupling	DC
TRIGGER (Video)	Type	Video
	Source	CH1
	Polarity	Normal
	Sync	All Lines
	Standard	NTSC
TRIGGER (Slope)	Type	Slope
	Source	CH1
	Mode	Auto
TRIGGER (Alternative)	Type	Alternative
	Source	CH1

Appendix C: Daily Maintain and Cleaning

Daily Maintain

DO not store or leave the instrument in where the LCD display will be exposed to direct sunlight for long periods of time.

CAUTION: To avoid damage to the instrument or probes, do not expose them to sprays, liquids, or solvents

Cleaning

If this instrument requires cleaning, disconnect it from all power sources and clean it with a mild detergent and water. Make sure the instrument is completely dry before reconnecting it to a power source.

To clean the exterior surface, perform the following steps:

- 1). Remove loose dust on the outside of the instrument and probes with a lint-free cloth. Use care to avoid scratching the clear plastic display filter.
- 2). Use a soft cloth dampened with water to clean the instrument. Use an aqueous solution of 75% isopropyl alcohol for more efficient cleaning.

Note:

To avoid damage to the surface of the instrument or probes, do not use any abrasive or chemical cleaning agents.

Index

- Width	68	Invert	20
+ Width	68	Language	80
AC Line.....	43	LEVEL	41
Accessories	122	MEASURE.....	64
Acquiring Signals system.....	50	Model.....	43
Aliasing.....	53	Normal.....	43
Application of X-Y function	107	Peak Detect.....	51
Auto	43	Persist	54
AUTO	15	Polarity	47
auto setup	15	Position.....	49
Average	51	Probe.....	7, 19
Base time.....	53	Probe Attenuation Setting.....	9
Coarse	19	Probe Compensation.....	8
Connector.....	14	Probe component.....	14
Contract us	115	Probe Safety.....	7
Coupling.....	19, 48	Real Time Sampling	52
Cursor Measurement.....	59	Ref	35
Cursor Moving.....	60	Rise.....	67
Cymometer.....	80	RUN/STOP.....	12, 52
default setup	17	Sampling.....	51
DEFAULT SETUP	12	SAVE/RECALL	71
Display sweep mode	39	SAVE/RECALL WAVEFORM	75, 79
DO self cal	81	Scale Measurement.....	59
Do Self Test.....	81	Screen	55
Equivalent Time Sampling:	52	Self Calibration.....	10
EXT.....	42	Self Test	87
EXT TRIG.....	14	SET TO 50%	41
EXT/5.....	42	Signal Source.....	42
Fall	67	Single.....	43
FFT.....	29	SINGLE.....	12, 52
Fine Resolution:	20	Sound.....	80
FORCE.....	41	Storage System	71
Grid	55	Sync	47
HORI MENU	37	Time Cursor.....	60
Horizontal System.....	37	TRIG MENU	41

Troubleshooting	112	Voltage Cursor	60
Universal knob	18	Vpp	67
UTILITY	80	Wave Cancel	20
Utility System	80	Window	38
Vertical System	19	Window Zone	39
Vmax	67	X-Y Format	57
Vmin	67	YT	55
Volt/div	28		