

Please change the configuration file "config.txt"

Open the config.txt file in the root of the SD card on the computer, add the following to the end of the file, save and exit.

hdmi\_force\_edid\_audio=1

max\_usb\_current=1

hdmi\_force\_hotplug=1

config\_hdmi\_boost=7

hdmi\_group=2

hdmi\_mode=87

hdmi\_drive=2

display\_rotate=0

hdmi\_timings=1024 1 200 18 200 600 1 50 3 50 0 0 0 60 0 51200000 3