



SARA-R5 series

Positioning implementation

Application note



Abstract

This document describes the implementation of the GNSS interface and aiding clients in SARA-R5 series modules. Techniques for hybrid positioning and timing indication are also described.

Document information

Title	SARA-R5 series	
Subtitle	Positioning implementation	
Document type	Application note	
Document number	UBX-20012413	
Revision and date	R01	02-Oct-2020
Disclosure restriction	C1-Public	

This document applies to the following products:

Product name
SARA-R5 series

u-blox or third parties may hold intellectual property rights in the products, names, logos and designs included in this document. Copying, reproduction, modification or disclosure to third parties of this document or any part thereof is only permitted with the express written permission of u-blox.

The information contained herein is provided "as is" and u-blox assumes no liability for its use. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time without notice. For the most recent documents, visit www.u-blox.com.

Copyright © u-blox AG.

Contents

Document information	2
Contents	3
1 Introduction	5
1.1 Scope	5
1.2 AT commands.....	5
1.3 GNSS aiding features compatibility matrix.....	5
2 Hardware architecture	6
2.1 Overview.....	6
2.2 Modules with integrated GNSS chipset.....	7
2.2.1 SARA-R510M8S modules	7
2.3 Modules without integrated GNSS chipset.....	10
2.3.1 SARA-R500S and SARA-R510S modules.....	10
2.4 GNSS antenna RF interface.....	15
2.4.1 Requirements and general guidelines	15
2.4.2 Guidelines for applications with a passive antenna	16
2.4.3 Guidelines for applications with an active antenna.....	18
2.4.4 Cellular and GNSS RF coexistence.....	20
3 Aiding features	24
3.1 Overview.....	24
3.2 Using GNSS without aiding support	25
3.3 Using GNSS with local aiding support	26
3.4 AssistNow aiding service.....	28
3.4.1 Using GNSS with AssistNow Offline support	28
3.4.2 Using GNSS with AssistNow Online support.....	31
3.5 Using GNSS with AssistNow Autonomous Support.....	33
3.6 Using GNSS with combined aiding modes.....	35
3.7 Aiding result codes	36
4 GNSS system configuration	37
4.1 Modules with integrated GNSS chipset.....	37
4.1.1 General considerations	37
4.1.2 Power saving modes	37
4.2 GNSS data communication and handling.....	39
4.2.1 Auxiliary UART interface	40
4.2.2 Multiplexer I/O	40
4.2.3 File System (FS) output	40
4.2.4 Over The Air (OTA) output	40
5 Hybrid positioning and CellLocate®	41
5.1 Introduction.....	41
5.2 Positioning sensors	41
5.3 Basic functionality	43

5.4	GNSS sensor setup.....	45
5.5	Cellular sensor setup.....	46
5.5.1	Cellular location sensor +ULOCCELL	46
5.5.2	Localization information request +ULOCIND	46
5.6	AT command examples	46
5.7	How to implement a data collection unit	47
5.7.1	Initialization.....	47
5.7.2	Loop.....	47
6	Time information from cellular modules.....	48
6.1	Sources of timing information	48
6.2	Interface of timing information to the application	48
6.3	Usage models.....	49
6.3.1	LTE for measuring timing intervals in a sensor	49
6.3.2	LTE bridging GNSS as a temporary fallback.....	50
6.3.3	Relative timing between modules	51
6.3.4	Modules distributed over a wide area	52
6.3.5	Local anchor with GNSS giving accurate time	53
6.4	Application interface	54
6.4.1	Time information +UTIME	54
6.4.2	Time information request +UTIMEIND	54
6.4.3	UTIME configuration +UTIMECFG	55
6.5	Expected performance.....	55
6.6	AT commands examples	56
6.6.1	Activation of UTIME - PPS mode	56
6.6.2	Activation of UTIME - One shot mode.....	56
6.6.3	Activation of UTIME - Timestamping of external interrupts mode	57
6.6.4	Synchronize two modules using LTE frame.....	57
Appendix	58
A	Compatibility matrix.....	58
A.1	“GNSS data ready” compatibility matrix.....	58
A.2	AssistNow Autonomous compatibility matrix.....	58
B	Cellular module and GNSS receiver compatibility matrix.....	59
C	Best practices for CellLocate® (+ULOC).....	59
D	Best practices for a data collection unit.....	60
E	Best practices for time information (+UTIME)	60
F	CellLocate® customer proxy server	61
G	Glossary	62
Related documents	63
Revision history	63
Contact	64

1 Introduction

1.1 Scope

This document describes how to use the GNSS interface and control functionalities and aiding clients in u-blox cellular modules.

The following sections describe:

- Hardware and software architecture implemented in the cellular module for connecting u-blox positioning chips and modules to u-blox cellular modules
- Implementation of aiding clients. Aiding clients are software tools in the cellular modules, providing improvement of GNSS performance
- Hybrid positioning and CellLocate® features. These features provide location information when the GNSS signal is weak or absent
- Timing features. The cellular modules provide time information obtained from the internal/external GNSS receiver or derived from the synchronization between the cellular module and the base station (BS).

1.2 AT commands

Table 1 lists the AT commands described in this document:

AT command	Description
+UGPS	GNSS power management configuration
+UGIND	Assisted GNSS unsolicited indication
+UGPRF	GNSS Profile configuration
+UGSRV	Aiding server configuration
+UGAOS	GNSS aiding request command
+ULOC	Ask for localization information
+ULOCGNSS	Configure GNSS sensor
+ULOCCELL	Configure cellular location sensor (CellLocate®)
+ULOCIND	Localization information request status unsolicited indication (CellLocate®)
+UTIME	Ask for time information from cellular modem (CellTime)
+UTIMEIND	Time information request status unsolicited indication (CellTime)
+UTIMECFG	Sets the UTIME configuration parameters
+UGPIOC	GPIOs configuration, including GPIOs with GNSS and Timing functionality

Table 1: GNSS AT commands

For a complete description of AT commands syntax, see u-blox SARA-R5 AT commands manual [2].

1.3 GNSS aiding features compatibility matrix

u-blox cellular modules feature u-blox A-GNSS services (AssistNow Online, AssistNow Offline) for faster and more accurate GNSS performance.

Support of the different types of embedded GNSS aiding features can vary depending on the u-blox cellular module series and version. See Table 2 for a complete overview of the aiding modes supported by u-blox cellular modules.

u-blox cellular module	Local aiding	AssistNow Online	AssistNow Offline	AssistNow Autonomous
SARA-R5 series	YES	YES	YES	YES

Table 2: GNSS aiding feature compatibility matrix

2 Hardware architecture

2.1 Overview

Combining u-blox cellular and GNSS technologies gives designers full access to the GNSS system directly via the cellular system, so that a second communication interface connected to the GNSS system is unnecessary.

The SARA-R5 series includes the SARA-R510M8S modules that integrate the u-blox M8 GNSS system (see section 2.2), and the SARA-R500S and SARA-R510S modules that can be combined with an external u-blox M8 GNSS system (see section 2.3).

SARA-R5 series modules are designed to be controlled and operated by AT commands sent over the UART interfaces. Table 1 lists AT commands related with positioning and timing functionalities for the SARA-R5 series modules. Depending on the selected configuration for the UART interfaces, the AT interface can be available over the first primary UART interface and/or over the second auxiliary UART interface, to control and operate both the cellular and the GNSS systems from an external host processor. For more details, see the u-blox SARA-R5 AT commands manual [2], +USIO and +CMUX AT commands.

Figure 1 illustrates some possible examples of connections of an external application host processor with the u-blox cellular system, which is then connected with the u-blox GNSS system.

GNSS control messages are relayed from the cellular system to the GNSS system via the I2C interface. The external application host processor can send UBX protocol messages to the GNSS system over the AT interface, embedded in the +UGUBX AT command, or over the GNSS tunneling virtual channel, which can be made available on the first primary UART physical interface in multiplexer mode or over the second auxiliary UART physical interface (see the +CMUX, +USIO and +UGPRF AT commands in SARA-R5 AT commands manual [2]). The external host processor can get GNSS data, as NMEA and proprietary UBX protocol messages, over the GNSS tunneling virtual channel. Other options for GNSS data handling are available as illustrated in section 4.

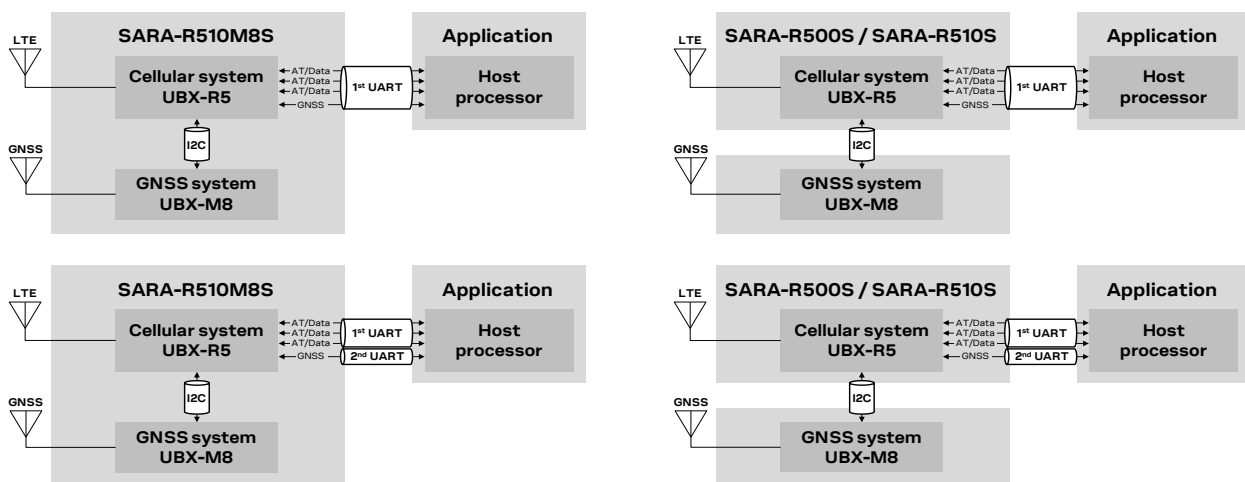


Figure 1: Block diagrams illustrating examples of some possible connection with an external host processor

In addition to the main communication interfaces illustrated in Figure 1, further lines are available for the GNSS system control and operation, and for timing functionalities.

The hardware architecture and all the electrical interfaces for positioning and timing operations are illustrated in details in the sections 2.2 and 2.3.

Guidelines for GNSS RF design, and in particular guidelines for cellular and GNSS RF coexistence, are illustrated in details in the section 2.4.

2.2 Modules with integrated GNSS chipset

2.2.1 SARA-R510M8S modules

2.2.1.1 Overview

The communication with an external u-blox GNSS system is not supported by SARA-R510M8S modules with integrated GNSS system based on the u-blox UBX-M8030 chipset.

Figure 2 illustrates the main internal architecture elements of the GNSS system integrated in the SARA-R510M8S modules, based on the u-blox UBX-M8030 chipset with ROM SPG 3.01 version, including also a dedicated Surface Acoustic Wave (SAW) filter and a Low Noise Amplifier (LNA) to improve GNSS performance and jamming immunity against possible strong out-of-band jammers close to the GNSS antenna, such as the cellular antenna.

The cellular system, based on the u-blox UBX-R5 chipset, is internally connected with the GNSS system by means of the 1.8 V I2C-bus compatible DDC interface, acting as communication interface between the two systems, while the external application host processor can communicate with the cellular and the GNSS systems over the available UART interfaces as also illustrated in Figure 1.

Since the cellular and the GNSS systems do not share the same RF path, the SARA-R510M8S modules guarantee cellular and GNSS concurrent operations. No time-sharing is required for GNSS and cellular operations: the GNSS system operates independently, and it is possible to obtain the GNSS position while cellular transmission / reception operations are in progress.

Additionally, the GNSS system can be accessed through the cellular chipset also while the LTE modem is in the power saving configuration enabled by the +UPSV AT command, in the eDRX mode enabled by the +CEDRXS AT command, in the airplane mode enabled by the +CFUN AT command, or in the Power Saving Mode (PSM) mode enabled by the +CPSMS AT command (for further details on these AT commands, see the SARA-R5 series AT commands manual [1]).

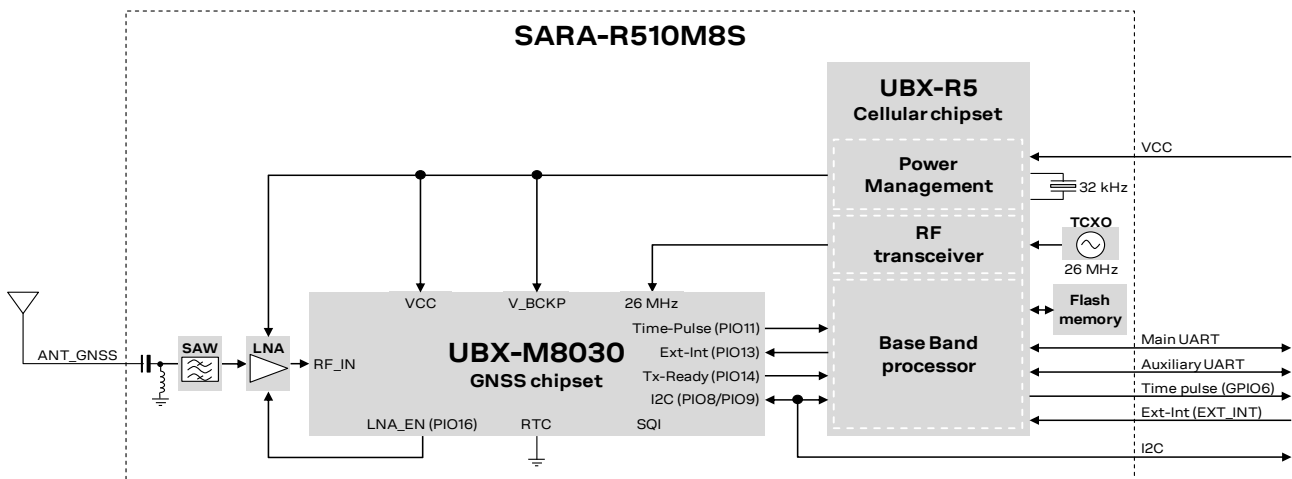


Figure 2: SARA-R510M8S modules GNSS section block diagram

The SARA-R510M8S modules, as LTE + GNSS combo, represent a cost-effective and size-optimized solution, as compared with a standalone GNSS system + standalone LTE system. Beside integrating the u-blox UBX-M8030 chipset, dedicated SAW filter, LNA and related matching components passive parts, the SARA-R510M8S modules include also the Power Management, the reference clock (TCXO), and the Flash memory that are part of the cellular system but they are used for the GNSS system too, allowing reduced parts count and compact PCB area.

The internal GNSS subsystem is by default not powered at the boot of the SARA-R510M8S module.

Once the <mode> parameter of the +UGPS AT command is set to 1 by the external application host processor, the power management integrated in the cellular chipset starts providing the 1.8 V supply voltages for the GNSS system, switching on the GNSS system, the RF transceiver integrated in the cellular chipset makes available to the GNSS system the 26 MHz reference clock as generated by the related TCXO, the Base-Band processor integrated in the cellular chipset makes available to the GNSS system all the relevant GNSS data as up-to-date time reference, the position, almanac and ephemeris data, which are saved in the related Flash memory that is part of the cellular system.

Once the GNSS system is operative, the u-blox UBX-M8030 GNSS chipset is responsible for enabling the internal LNA as required, acquiring, decoding and processing concurrent GNSS satellite signals, and sending the related GNSS data to the cellular system processor.

It has to be noted that, due to the internal hardware architecture of the SARA-R510M8S module illustrated in [Figure 2](#), only a subset of UBX protocol messages supported by the u-blox UBX-M8030 GNSS chipset are suitable for the implemented hardware architecture.

For example, considering that there is no Flash memory directly connected to the SQL interface of the u-blox UBX-M8030 GNSS chipset, the UBX-CFG-RINV messages for Remote Inventory, the UBX-LOG messages for Data Logging, and the UBX-UPD messages for Firmware Update are not suitable for the implemented hardware architecture.

As additional example, considering that there is no RTC circuit implemented directly connected to the u-blox UBX-M8030 chipset, a special procedure is required to activate the GNSS cycling tracking power save mode (for more details, see section [4.1.2.2](#)).

See section [4](#) for further details about the possible configurations for the internal GNSS system, and see the u-blox M8 receiver description including protocol specification [\[7\]](#).

As previously mentioned, the GNSS system can be accessed through the cellular chipset also while the LTE modem is in the power saving configuration, eDRX, airplane, or PSM mode. In these cases, the current consumption of the whole module will be mainly due to specific operating mode of the GNSS system (as acquisition, continuous tracking or cyclic tracking mode), and it will be partially due to the sub-section of the cellular system making available the 26 MHz clock for the GNSS system.

Indicative **VCC** current consumption data for the SARA-R510M8S module with GNSS system in specific operating modes are available in the u-blox SARA-R5 series data sheet [\[1\]](#).

As long as the GNSS system is in operation, the module does not enter the ultra-low power deep sleep mode, even if the LTE modem is in PSM mode.

Once the <mode> parameter of the +UGPS AT command is set to 0 by the external application host processor, the internal GNSS system is being switched off as controlled by the cellular system, and all the relevant GNSS data as position, almanac and ephemeris, are being saved in the Flash memory that is part of the cellular system. Then, the module can enter the ultra-low power deep sleep mode when the LTE modem is in PSM mode. In this condition, or when the module is switched off, only the RTC block of the cellular system is operational, keeping the reference time updated with negligible current consumption while feeding power through the **VCC** input of the SARA-R510M8S module.

Upon module wake-up from the ultra-low power deep sleep mode, or upon module switch-on, once the <mode> parameter of the +UGPS AT command is set again to 1 by the external application processor, all the relevant GNSS data are fetched again by the cellular UBX-R5 chipset and they are provided to the GNSS system with up-to-date time reference.

Therefore, feeding power through the **VCC** input of the SARA-R510M8S module when the internal GNSS subsystem is switched off, or when the whole module is in the ultra-low power deep sleep mode or switched off, can be seen as equivalent to supplying a voltage on the V_BCKP pin of a stand-alone GNSS receiver, considering that all the relevant GNSS data are stored in the Flash memory of the

module instead of be saved in the back-up RAM of the GNSS receiver, and the time reference clock is maintained by the cellular subsystem.

It is recommended to provide accessible test point directly connected to the AUX UART pins, at least on the **DCD** data output pin of the AUX UART interface, to get data form the GNSS system with the AUX UART interface configured in GNSS tunneling mode, for GNSS diagnostic purpose.

2.2.1.2 GNSS Tx data ready

Figure 2 illustrates also an internal connection implemented for current consumption optimization: the PIO14 of the u-blox UBX-M8 GNSS chipset is internally connected to the u-blox UBX-R5 cellular chipset to provide the additional internal “GNSS Tx data ready” functionality. This feature can be enabled by using the +UGPRF AT command to activate the functionality on the internal cellular subsystem side, and by using the +UGUBX AT command to activate the functionality on the internal GNSS subsystem side (see section 4.1.2.1 for an AT commands procedure example).

This feature allows an optimization of the power consumption of the module: once the power saving configuration is enabled by the +UPSV AT command, the cellular system enters low power idle mode whenever possible, and the GNSS system can wake up the cellular system only when is ready to send GNSS data over the I2C interface.

2.2.1.3 Timing functionalities

The following Figure 3, as well as the previous Figure 2, illustrates internal and external connections implemented for timings functionalities: the PIO13 (EXTINT) pin and the PIO11 (TIMEPULSE) pin of the u-blox UBX-M8 GNSS chipset are internally connected to the u-blox UBX-R5 cellular chipset to provide GNSS timing functionalities, while the **GPIO6** pin, the **EXT_INT** pin and UART interfaces pin of the SARA-R510M8S module represent the external connections available for timings functionalities, as summarized in Table 3.

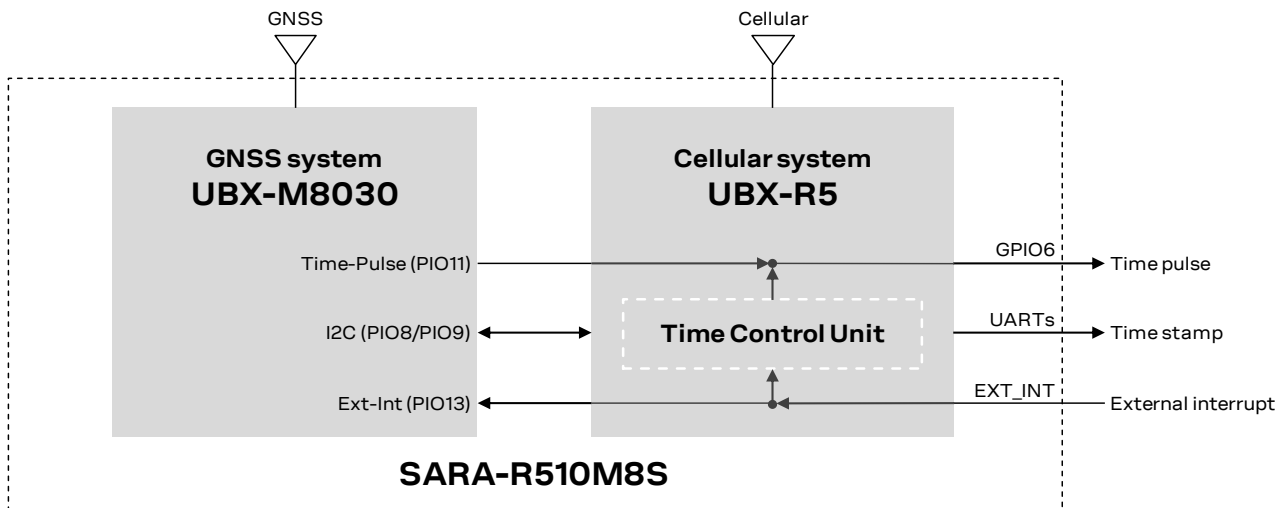


Figure 3: SARA-R510M8S modules timing functionalities block diagram

Function	Description	Default GPIO	Configurable GPIOs
Time pulse output	Output providing accurate time reference, as a time pulse sequence with 1 PPS or as a single time pulse, based on the GNSS system or on the LTE system	-	GPIO6
Timestamp of external interrupt	Input triggering via interrupt the generation of an URC time stamp over AT serial interface, using the time reference from the GNSS system or the LTE system	-	EXT_INT

Table 3: Pins of SARA-R510M8S modules supporting timing functionalities

The Time Control Unit (TCU) integrated into the u-blox UBX-R5 cellular chipset is responsible for updating and distributing timing information within the module and to the AT interface. Moreover the TCU keeps track and coordinates all the module's time sources, consisting of the GNSS system or in the LTE modem autonomous time propagation.

Timing information can be retrieved from the module by means of the +UTIME AT command (for further details, see section 6 and the SARA-R5 series AT commands manual [1]), in the form of:

- a time pulse
- unsolicited result codes (URC) sent over AT interface, with the corresponding time information
- an estimation of the time accuracy

The **GPIO6** pin of the SARA-R510M8S module can be configured to provide the “Time pulse output” functionality, consisting of a time reference made available for the external application in the form of continuous PPS (pulse-per-second) output sequence, or single output pulse with time stamp sent as unsolicited result code (URC) over UART AT interface containing the date and time when the pulse occurred and an estimation of the time accuracy. The time information source may come from the GNSS system (using the internal connection illustrated in Figure 3), or from the LTE modem system. For further details, see section 6, and see the SARA-R5 series AT commands manual [1], +UGPIOC <gpio_mode>=22, and +UTIME AT commands.

The **EXT_INT** pin of the SARA-R510M8S module can be configured to provide the “Time stamp of external interrupt” functionality, consisting of timing information made available for the external application in the form of an unsolicited result code (URC) sent over AT interface once triggered by a rising edge applied to the **EXT_INT** input pin. When an interrupt is received by the module at the **EXT_INT** input pin, it is timestamped by the Time Control Unit (TCU) using the most accurate time source available, from the GNSS system (using the internal connection illustrated in Figure 3), or from the LTE system. For further details, see section 6, and the SARA-R5 series AT commands manual [1], +UGPIOC <gpio_mode>=23, and +UTIME AT commands.

2.3 Modules without integrated GNSS chipset

2.3.1 SARA-R500S and SARA-R510S modules

2.3.1.1 Overview

The SARA-R500S and SARA-R510S modules do not integrate the GNSS system, but the modules can be combined with an external u-blox M8 GNSS system as illustrated in Figure 4.

The cellular system, consisting of a SARA-R500S and/or a SARA-R510S module, is connected with the external u-blox M8 GNSS system by means of the 1.8 V I2C interface, acting as communication interface between the two systems, while the external application host processor can communicate with the cellular and the GNSS systems over the available UART interfaces of the SARA-R500S and/or SARA-R510S module as also illustrated in Figure 1.

Combining SARA-R500S and/or SARA-R510S modules with an external u-blox M8 GNSS system, no time-sharing is required for the GNSS and the cellular operations: it is possible to obtain the GNSS position while cellular transmission / reception operations are in progress.

Additionally, the GNSS system can be accessed through the cellular chipset also while the LTE modem is in the power saving configuration enabled by the +UPSV AT command, in the eDRX mode enabled by the +CEDRXS AT command, in the airplane mode enabled by the +CFUN AT command, or in the PSM mode enabled by the +CPSMS AT command (for further details on these AT commands, see the SARA-R5 series AT commands manual [1]).

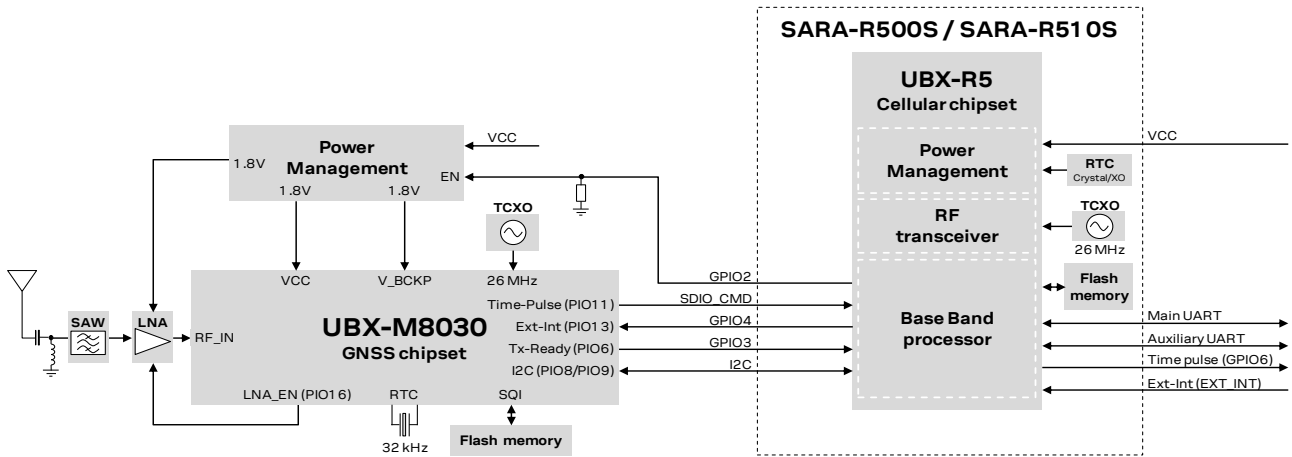


Figure 4: Interfacing SARA-R500S / SARA-R510S modules with external u-blox 1.8 V GNSS system

Figure 4 illustrates a possible example of external GNSS system based on the u-blox M8030 GNSS chipset, including optional parts, as additional LNA and SAW filter along the GNSS RF path, an additional SCL Flash memory, an additional RTC crystal, which may be included in the design depending on application use-case requirements. For further description and design-in guidelines regarding the external u-blox M8 GNSS system, see the hardware integration manual of the selected u-blox M8 GNSS receiver.

The **SDA** and **SCL** pins of the SARA-R500S / SARA-R510S cellular module must be connected to the related pins of the u-blox 1.8 V GNSS receiver as illustrated in the Figure 4 circuit example to properly combine the cellular and GNSS systems, to take advantage of the GNSS aiding features embedded in the cellular modules. Additional external pull-up resistors are not needed on the **SDA** and **SCL** lines, because SARA-R5 modules and u-blox 1.8 V GNSS receivers have internal pull-up resistors.

In case an external u-blox 3 V GNSS receiver is selected, considering the I2C interface pins of the SARA-R5 modules are not tolerant up to 3 V, the connection of the **SDA** and **SCL** pins of the cellular module to the related I2C pins of the u-blox 3 V GNSS receiver must be implemented as illustrated in Figure 5, using a suitable I2C-bus bidirectional voltage translator, as for example the TI TCA9406, which provides also the partial power down feature so that the GNSS 3.0 V supply can be ramped up before the **V_INT** 1.8 V cellular supply. Additional external pull-up resistors are not needed on the **SDA** and **SCL** lines of the I2C bus, because SARA-R5 modules and u-blox 3 V GNSS receivers have internal pull-up resistors, and pull-up resistors are also integrated in the TCA9406 voltage translator.

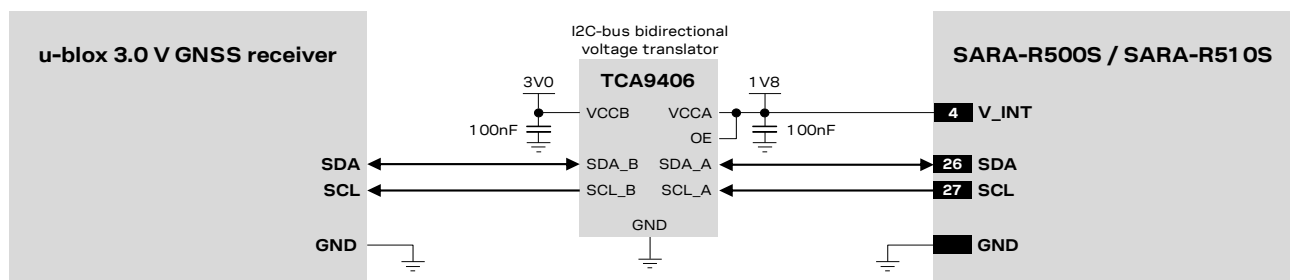


Figure 5: I2C interface circuit example connecting SARA-R500S / SARA-R510S modules to a u-blox 3.0 V GNSS receiver

For additional guidelines regarding the design of applications with u-blox GNSS receivers, see the hardware integration manual of the selected u-blox GNSS receiver.

2.3.1.2 External GNSS supply enable

Figure 4 illustrates an external connection implemented to optimize the power consumption of the external u-blox GNSS system: the **GPIO2** pin of the cellular module is connected to the active-high enable (EN) input pin of the voltage regulator that provides the voltage power supply to the external u-blox GNSS system, implementing the “External GNSS supply enable” functionality. This feature can be enabled by means of the +UGPIOC AT command, and it consists of controlling the power supply of the external u-blox GNSS system connected to the cellular module according to the status of the <mode> parameter of the +UGPS AT command. Once the “External GNSS supply enable” functionality is enabled by the +UGPIOC AT command, the **GPIO2** pin of the cellular module is set as:

- Output / High, to power on the external u-blox GNSS system, if the <mode> parameter of +UGPS AT command is set to 1
- Output / Low, to power off the external u-blox GNSS system, if the <mode> parameter of +UGPS AT command is set to 0

Therefore, with the “External GNSS supply enable” function, when GNSS functionality is not required, the external u-blox GNSS system can be completely powered off by AT command sent to the cellular module from the application host processor, allowing an optimization in the power consumption of the external u-blox GNSS system.

An additional external pull-down resistor can be provided along the **GPIO2** line as illustrated in the Figure 4, to avoid a switch on of the external u-blox GNSS system when the cellular module is switched off or in deep sleep mode.

Table 4 summarizes the pins available on the SARA-R500S / SARA-R510S modules for the “External GNSS supply enable” functionality.

Function	Description	Default GPIO	Configurable GPIOs
External GNSS supply enable	Output to enable/disable the supply of an external u-blox GNSS receiver connected to the cellular module by the I2C interface	-	GPIO2

Table 4: Pins of SARA-R500S / SARA-R510S modules for external GNSS supply enable functionality

2.3.1.3 External GNSS Tx data ready

Figure 4 illustrates also an external connection implemented to optimize the power consumption of the cellular module: the PIO6 / TXD pin of the external u-blox M8 GNSS system (operating at 1.8 V voltage level) is connected to the **GPIO3** pin of the cellular module implementing the “External GNSS Tx data ready” functionality. This feature can be enabled by using the +UGPIOC and +UGPRF AT commands to activate the functionality on the **GPIO3** of the cellular module, and by using the +UGUBX AT command to activate the functionality on the PIO16 pin of the external u-blox M8 GNSS system (see section A.1 for an AT commands procedure example, and see the SARA-R5 series AT commands manual [1] for further details).

Once the low power configuration is enabled by the +UPSV AT command, the cellular module enters low power idle mode whenever possible, and the GNSS system can wake up the cellular system only when is ready to send GNSS data over the I2C interface, by using the “External GNSS Tx data ready” functionality, allowing an optimization in the power consumption of the cellular module.

In case an external u-blox 3 V GNSS receiver is selected, considering the I2C interface pins of the SARA-R5 modules are not tolerant up to 3 V, the connection of the GPIO pins of the cellular module to the related pin of the u-blox 3 V GNSS receiver must be implemented as illustrated in Figure 6, using a suitable unidirectional voltage translator, as for example the TI SN74LVC1T45, which provides also the partial power down feature so that the external GNSS 3.0 V supply can be ramped up before the **V_INT** 1.8 V cellular supply.

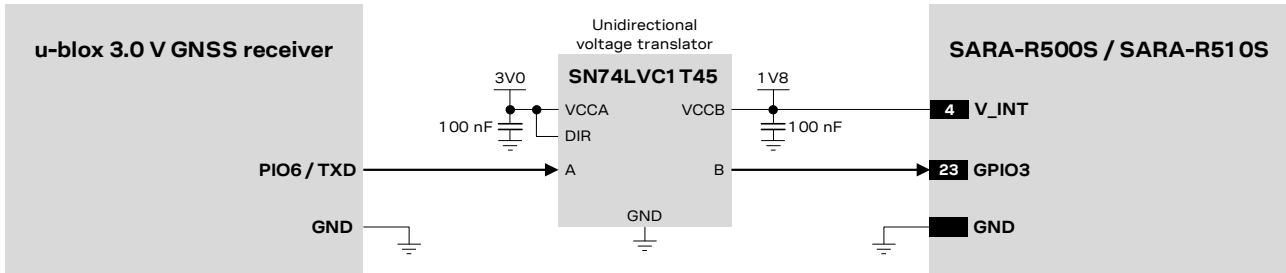


Figure 6: GNSS Tx data ready circuit example connecting SARA-R500S / SARA-R510S to a u-blox 3.0 V GNSS receiver

Table 5 summarizes the pins available on the SARA-R500S / SARA-R510S modules for the “External GNSS Tx data ready” functionality.

Function	Description	Default GPIO	Configurable GPIOs
External GNSS data ready	Input to sense when an external u-blox GNSS receiver connected to the module is ready for sending data over the DDC (I2C) interface	-	GPIO3

Table 5: Pins of SARA-R500S / SARA-R510S modules for external GNSS Tx data ready functionality

2.3.1.4 Timing functionalities

The following Figure 7, as well as the previous Figure 4, illustrates internal and external connections implemented for timings functionalities: the PIO13 (EXTINT) pin and the PIO11 (TIMEPULSE) pin of the external u-blox GNSS system based on the u-blox UBX-M8030 chipset are respectively connected to the GPIO4 pin and SDIO_CMD pin of the u-blox SARA-R500S / SARA-R510S cellular module to provide GNSS timing functionalities, while the GPIO6 pin, the EXT_INT pin and the UARTs AT interface pins of the u-blox SARA-R500S / SARA-R510S cellular module represent the connections available to the external application for timings functionalities.

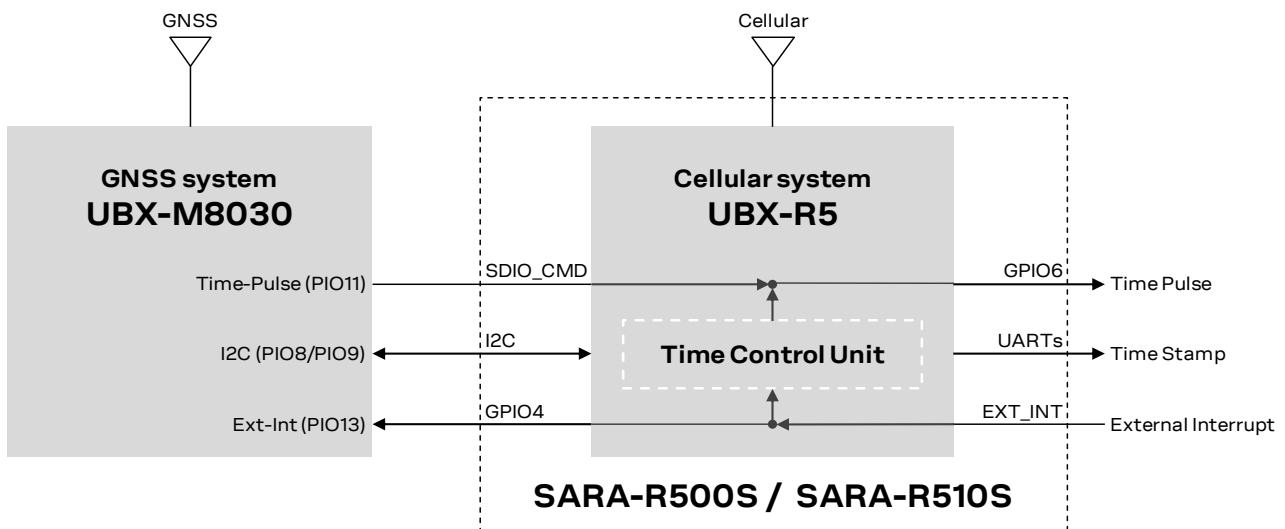


Figure 7: SARA-R500S and SARA-R510S modules timing functionalities block diagram

The Time Control Unit (TCU) integrated into the u-blox UBX-R5 cellular chipset is responsible for updating and distributing timing information within the module and to the AT interface. Moreover the TCU keeps track and coordinates all the module’s time sources, consisting of the GNSS system or in the LTE modem autonomous time propagation.

Timing information can be retrieved from the module by means of the +UTIME AT command (see section 6 and the SARA-R5 series AT commands manual [1] for further details), in the form of:

- a time pulse
- unsolicited result codes (URC) sent over AT interface, with the corresponding time information
- an estimation of the time accuracy

The **GPIO6** pin of the SARA-R500S and SARA-R510S modules can be configured to provide the “Time pulse output” functionality, consisting of a time reference made available for the external application in the form of continuous PPS (pulse-per-second) output sequence, or single output pulse with time stamp sent as unsolicited result code (URC) over UART AT interface containing the date and time when the pulse occurred and an estimation of the time accuracy. The time information source may come from the GNSS system (using the connection from the TIMEPULSE pin of the external GNSS system to the **SDIO_CMD** pin of the cellular module illustrated in Figure 7), or from the LTE modem system. For further details, see section 6, and see the SARA-R5 series AT commands manual [1], +UGPIOC <gpio_mode>=22, and +UTIME AT commands.

The **EXT_INT** pin of the SARA-R500S and SARA-R510S modules can be configured to provide the “Time stamp of external interrupt” functionality, consisting of timing information made available for the external application in the form of an unsolicited result code (URC) sent over AT interface once triggered by a rising edge applied to the **EXT_INT** input pin. When an interrupt is received by the module at the **EXT_INT** input pin, it is timestamped by the Time Control Unit (TCU) using the most accurate time source available, from the GNSS system (using the connection from the **GPIO4** pin of the cellular module to the EXTINT pin of the external GNSS system illustrated in Figure 7), or from the LTE system. For further details, see section 6, and the SARA-R5 series AT commands manual [1], +UGPIOC <gpio_mode>=23, and +UTIME AT commands.

In order to get the timing information from the external GNSS system based on the u-blox M8030 chipset, in addition to the I2C serial interface connection between the cellular and the GNSS systems, as illustrated in Figure 7:


- the **SDIO_CMD** pin of the cellular module has to be connected to the TIMEPULSE pin of the external GNSS system and it has to be properly configured to the “External GNSS time pulse input” mode by means of the +UGPIOC AT command (<gpio_mode>=28) to receive the time pulse reference from the external GNSS system
- the **GPIO4** pin of the cellular module has to be connected to the EXTINT pin of the external GNSS system and it has to be properly configured to the “External GNSS time stamp of external interrupt” mode by means of the +UGPIOC AT command (<gpio_mode>=29) to trigger via interrupt the generation of an URC timestamp from the external GNSS system

Table 6 summarizes the pins available on the SARA-R500S and SARA-R510S modules for timing functionalities.

Function	Description	Default GPIO	Configurable GPIOs
External GNSS time stamp of external interrupt	Output to get an URC time stamp from an external u-blox GNSS system, triggered via interrupt	-	GPIO4
Time pulse output	Output providing accurate time reference, as a time pulse sequence with 1 PPS or as a single time pulse, based on the GNSS system or on the LTE system	-	GPIO6
Timestamp of external interrupt	Input triggering via interrupt the generation of an URC time stamp over AT serial interface, using the time reference from the GNSS system or the LTE system	-	EXT_INT
External GNSS time pulse input	Input to receive an accurate time reference, as a time pulse sequence with 1 PPS or as a single time pulse, from an external u-blox GNSS system	-	SDIO_CMD

Table 6: Pins of SARA-R500S and SARA-R510S modules supporting timing functionalities

2.4 GNSS antenna RF interface

 The GNSS antenna RF interface (**ANT_GNSS**) is not supported by SARA-R500S and SARA-R510S modules, as these modules do not integrate a GNSS system, but they can be combined with u-blox GNSS systems. For specific guidelines regarding the antenna RF design for u-blox GNSS receivers, see the specific hardware integration manual of the selected u-blox GNSS receiver. Guidelines for RF coexistence between the cellular and GNSS systems included in section 2.4.4 are applicable to combining SARA-R500S and SARA-R510S modules with u-blox GNSS systems.

2.4.1 Requirements and general guidelines

The SARA-R510M8S modules provide an RF interface for connecting the external GNSS antenna. The **ANT_GNSS** pin represents the RF input reception of GNSS RF signals.

The **ANT_GNSS** pin has a nominal characteristic impedance of 50 Ω and must be connected to the Rx GNSS antenna through a 50 Ω transmission line to allow proper RF reception. As shown in Figure 2, the GNSS RF interface is designed with an internal DC block, and is suitable for both active and/or passive GNSS antennas due to the built-in SAW filter followed by an additional LNA in front of the integrated high performing u-blox M8 concurrent position engine.

Table 7 summarizes the requirements for the GNSS antenna RF interface.

Item	Requirements	Remarks
Impedance	50 Ω nominal characteristic impedance	The impedance of the antenna RF connection must match the 50 Ω impedance of the ANT_GNSS port.
Frequency range	BeiDou 1561 MHz GPS / SBAS / QZSS / Galileo 1575 MHz GLONASS 1602 MHz	The required frequency range of the antenna connected to ANT_GNSS port depends on the selected GNSS constellations.
Return loss	$S_{11} < -10$ dB (VSWR < 2:1) recommended $S_{11} < -6$ dB (VSWR < 3:1) acceptable	The return loss or the S_{11} , as the VSWR, refers to the amount of reflected power, measuring how well the antenna RF connection matches the 50 Ω characteristic impedance of the ANT_GNSS port. The impedance of the antenna termination must match as much as possible the 50 Ω nominal impedance of the ANT_GNSS port over the operating frequency range, reducing as much as possible the amount of reflected power.
Gain (passive antenna)	> 4 dBic	The antenna gain defines how efficient the antenna is at receiving the signal. It is important providing good antenna visibility to the sky, using antennas with good radiation pattern in the sky direction, according to related antenna placement.
Gain (active antenna)	17 dB minimum, 30 dB maximum	The antenna gain defines how efficient the antenna is at receiving the signal. It is directly related to the overall C/No.
Noise figure (active antenna)	< 2 dB	Since GNSS signals are very weak, any amount of noise degrades all the sensitivity figures of the receiver: active antennas with LNA with low noise figure are recommended.
Axial ratio	< 3 dB recommended	GNSS signals are circularly-polarized. The purity of the antenna circular polarization is stated in terms of axial ratio (AR), defined as the ratio of the vertical electric field to the horizontal electric field on polarization ellipse at zenith.

Table 7: Summary of GNSS antenna RF interface requirements

The antenna and its placement are critical system factors for accurate GNSS reception. Use of a ground plane will minimize the effects of ground reflections and enhance the antenna efficiency. A good allowance for ground plane size is typically in the area of 50 x 50 to 70 x 70mm². The smaller the electrical size of the plane, the narrower the reachable bandwidth and the lower the radiation efficiency. Exercise care with rover vehicles that emit RF energy from motors etc. as interference may extend into the GNSS band and couple into the GNSS antenna suppressing the wanted signal. For more details about GNSS antennas, see also GNSS antennas application note [8].

Since SARA-R510M8S modules already include an internal SAW filter followed by an additional LNA before the u-blox M8 GNSS chipset (as illustrated in Figure 2), they are optimized to work with passive or active antennas without requiring additional external circuitry.

See the SARA-R5 series system integration manual [2] for other general guidelines for antenna interface design, including proper connection of the RF pad of the module with the application board, RF transmission line design, RF termination design.

2.4.2 Guidelines for applications with a passive antenna

If a GNSS passive antenna with high gain and good sky view is used, together with a short (less than 10 cm, the shorter the better) 50 Ω line between antenna and receiver, and no jamming sources affect the GNSS passive antenna, the circuit illustrated in Figure 8 can be used. This provides the minimum BoM cost and minimum board space.

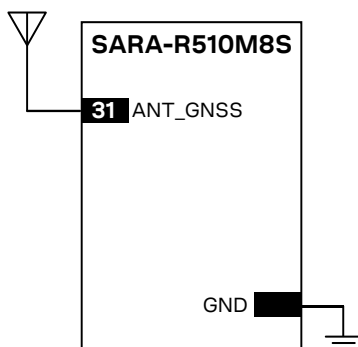



Figure 8: Minimum circuit with GNSS passive antenna

If the connection between the module and antenna incurs additional losses (e.g. antenna placed far away from the module, small ground plane for a patch antenna) or improved jamming immunity is needed due to strong out-of-band jammers close to the GNSS antenna (e.g. the cellular antenna is close to the GNSS antenna), consider adding an external SAW filter (see Table 8 for possible suitable examples) close to the GNSS passive antenna, followed by an external LNA (see Table 9 for possible suitable examples), as illustrated in Figure 9. Note that SARA-R510M8S modules already include an internal SAW filter followed by an LNA before the u-blox M8 GNSS chipset (as illustrated in Figure 2), so that additional external SAW and LNA are not required for most of the applications (see section 2.4.4 for further details and design-in guidelines regarding cellular / GNSS RF coexistence).

 An external LNA with related external SAW filter are only required if the GNSS antenna is far away (more than 10 cm) from the GNSS RF input of the module. In that case, the SAW and the LNA must be placed close to the passive antenna.

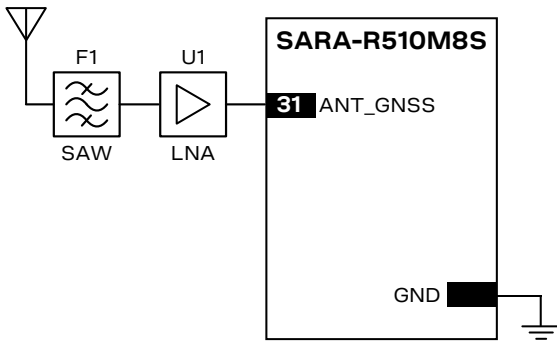


Figure 9: Typical circuit for best performance and improved jamming immunity with GNSS passive antenna

The external LNA can be selected to deliver the performance needed by the application in terms of:

- Noise figure (sensitivity)
- Selectivity and linearity (robustness against jamming)
- Robustness against RF power

Depending on the characteristics of the supply source (DC/DC regulator, linear LDO regulator or other) used to supply the external LNA, make sure some good filtering is in place for the external LNA supply because of the noise on the external LNA supply line can affect the performance of the LNA itself: consider adding a proper series ferrite bead (see [Table 10](#) for possible suitable examples) and a proper decoupling capacitor to ground with self-resonant frequency in the GNSS frequency range (as for example the 27 pF 0402 capacitor Murata GCM1555C1H270JA16) at the input of the external LNA supply line.

It should be noted anyway that the insertion loss of the filter directly affects the system noise figure and hence the system performance. The selected SAW filter has to provide very low loss (no more than 1.5 dB) in the GNSS pass-band, beside providing very large attenuation (more than 40 to 60 dB) in the out-of-band jammers' cellular frequency bands (see [Table 8](#) for possible suitable examples).

SARA-R510M8S already provides an integrated SAW filter and LNA (as illustrated in [Figure 2](#)). The addition of such external components should be carefully evaluated, especially in case the application power consumption should be minimized, since the LNA alone requires an additional supply current of typically 5 to 20 mA.

Moreover, the first LNA of the input chain will dominate the receiver noise performance, therefore its noise figure should be less than 2 dB. If the antenna is close to the receiver, then a good passive antenna (see [Table 11](#)) can be directly connected to the receiver with a short (a few cm) 50 Ω line. From a noise point of view, this design choice offers comparable performance as an active antenna with a long (~3 to 5 m) cable attached to the application board by means of an SMA connector without the increased power consumption and BOM cost. If the goal is to protect the GNSS receiver in a noisy environment then an additional external SAW filter may be required. If a degradation in the C/No of 2 to 3 dB (depending on the choice of the filter) is not acceptable for the application, then, to compensate for the filter losses and restore an adequate C/No level, an external LNA with good gain and low NF (see [Table 9](#)) is to be considered.

[Table 8](#) lists examples of SAW filters suitable for the GNSS RF input of SARA-R510M8S modules.

Manufacturer	Part number	Description
Murata	SAFFB1G56AC0F0A	GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou RF band-pass SAW filter with high attenuation in Cellular frequency ranges
Murata	SAFFB1G56AC0F7F	GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou RF band-pass SAW filter with high attenuation in Cellular frequency ranges

Table 8: Examples of GNSS band-pass SAW filters

Table 9 lists examples of LNA suitable for the GNSS RF input of SARA-R510M8S modules.

Manufacturer	Part number	Comments
Maxim	MAX2659ELT+	Low noise figure, up to 10 dBm RF input power
JRC New Japan Radio	NJG1143UA2	Low noise figure, up to 15 dBm RF input power
NXP	BGU8006	Low noise figure, very small package size (WL-CSP)
Infineon	BGA524N6	Low noise figure, small package size

Table 9: Examples of GNSS Low Noise Amplifiers

Table 10 lists examples of ferrite beads suitable for the supply line of an external GNSS LNA.

Manufacturer	Part number	Comments
Murata	BLM15HD102SN1	High impedance at 1.575 GHz
Murata	BLM15HD182SN1	High impedance at 1.575 GHz
TDK	MMZ1005F121E	High impedance at 1.575 GHz
TDK	MMZ1005A121E	High impedance at 1.575 GHz

Table 10: Examples of ferrite beads for the supply line of external GNSS Low Noise Amplifiers

Table 11 lists examples of passive antennas to be used with SARA-R510M8S modules.

Manufacturer	Part number	Product name	Description
Tallysman	TW3400P		Passive antenna GPS / SBAS / QZSS / GLONASS
Tallysman	TW3710P		Passive antenna GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou
Taoglas	CGGBP.35.3.A.02		Ceramic patch antenna GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou
Taoglas	CGGBP.18.4.A.02		Embedded patch antenna GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou
Inpaq	PA1590MF6G		Patch antenna GPS / SBAS / QZSS / GLONASS
Yageo	ANT2525B00BT1516S		Ceramic patch antenna GPS / SBAS / QZSS / GLONASS
Antenova	SR4G008	Sinica	Ultra-low profile patch antenna GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou

Table 11: Examples of GNSS passive antennas

2.4.3 Guidelines for applications with an active antenna

Active antennas offer higher gain and better overall performance compared with passive antennas (without additional external SAW filter and LNA). However, the integrated low-noise amplifier contributes an additional current of typically 5 to 20 mA to the system's power consumption budget.

Active antennas for GNSS applications are usually powered through a DC bias on the RF cable. A simple bias-T, as shown in Figure 10, can be used to add this DC current to the RF signal line. The inductance L is responsible for isolating the RF path from the DC path. It should be selected to offer high impedance (greater than 500 Ω) at L-band frequencies. A series current limiting resistor is required to prevent short circuits destroying the bias-t inductor.

To avoid damaging the bias-T series inductor in the case of a short circuit at the antenna connector, it is recommended to implement a proper over-current protection circuit. An example, based around

a series resistor, is provided in [Figure 10](#). Component values are calculated according to the characteristics of the active antenna and the related supply circuit in use: the value of R_{bias} is calculated such that the maximum current capacity of the inductor L is never exceeded. Moreover R_{bias} and C form a low pass filter to remove high frequency noise from the DC supply. Assuming $VCC_ANT=3.3\text{ V}$, [Table 12](#) reports suggested components for the circuit in [Figure 10](#).

The recommended bias-t inductor (Murata LQW15ANR12J00) has a maximum current capacity of 110 mA. Hence the current is limited to 100 mA by way of a 33 ohm bias resistor. This resistor power rating must be chosen to ensure reliability in the chosen circuit design.

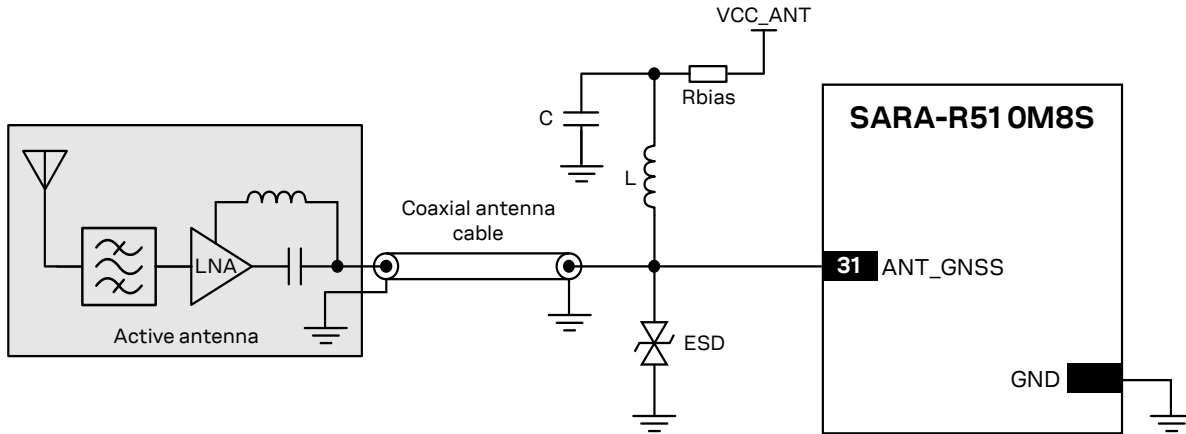


Figure 10: Typical circuit with active antenna connected to GNSS RF interface of SARA-R510M8S, using external supply

Reference	Description	Part number - Manufacturer
L	120 nH wire-wound RF Inductor 0402 5% 110 mA	LQW15ANR12J00 - Murata
C	100 nF capacitor ceramic X7R 0402 10% 16 V	GCM155R71C104KA55 - Murata
Rbias	33 ohm resistor 0.5W	Various manufacturers

Table 12: Example component values for active antenna biasing

- Refer to the antenna data sheet and/or manufacturer for proper values of the supply voltage VCC_ANT , inductance L and capacitance C .
- ESD sensitivity rating of the **ANT_GNSS** RF input pin is 1 kV (HBM according to JESD22-A114). Higher protection level can be required if the line is externally accessible on the application board. Higher protection level can be achieved by mounting an ultra-low capacitance (i.e. less than 1 pF) ESD protection (see [Table 13](#)) close to the accessible point.

[Table 13](#) lists examples of ESD protection suitable for the GNSS RF input of SARA-R510M8S.

Manufacturer	Part number	Description
ON Semiconductor	ESD9R3.3ST5G	ESD protection diode with ultra-low capacitance (0.5 pF)
Infineon	ESD5V3U1U-02LS	ESD protection diode with ultra-low capacitance (0.4 pF)
Littelfuse	PESD0402-140	ESD protection diode with ultra-low capacitance (0.25 pF)

Table 13: Examples of ultra-low capacitance ESD protections

[Table 14](#) lists examples of active antennas to be used with SARA-R510M8S modules.

Manufacturer	Part number	Product name	Description
Tallysman	TW3400		Active antenna, 2.5 - 16 V GPS / SBAS / QZSS / GLONASS

Manufacturer	Part number	Product name	Description
Tallysman	TW3710		Active antenna, 2.5 – 16 V GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou
Taoglas	AA.162.301111	Ulysses	Ultra-Low profile miniature antenna, 1.8 – 5.5V GPS / SBAS / QZSS / GLONASS / Galileo
Taoglas	MA310.A.LB.001		Magnet mount antenna, 1.8 – 5.5 V GPS / SBAS / QZSS / GLONASS
Inpaq	B3G02G-S3-01-A		SMA plug active antenna, 3.3 V typical GPS / SBAS / GLONASS
Inpaq	GPSH237N-N3-37-A		Patch circular antenna, 3.0 V typical GPS / SBAS / QZSS
Abracon LLC	APAMP-110		Module RF antenna 5dBic SMA adhesive, 2.5 – 3.5 V GPS / SBAS / QZSS
TE Connectivity	2195768-1		Active antenna, 3.0 V typical GPS / SBAS / QZSS

Table 14: Examples of GNSS active antennas

2.4.4 Cellular and GNSS RF coexistence

Desensitization or receiver blocking is a form of electromagnetic interference where a radio receiver is unable to detect a weak signal that it might otherwise be able to receive when there is no interference (see [Figure 11](#)). Good blocking performance is particularly important in the scenarios where a number of radios of various forms are used in close proximity to each other.

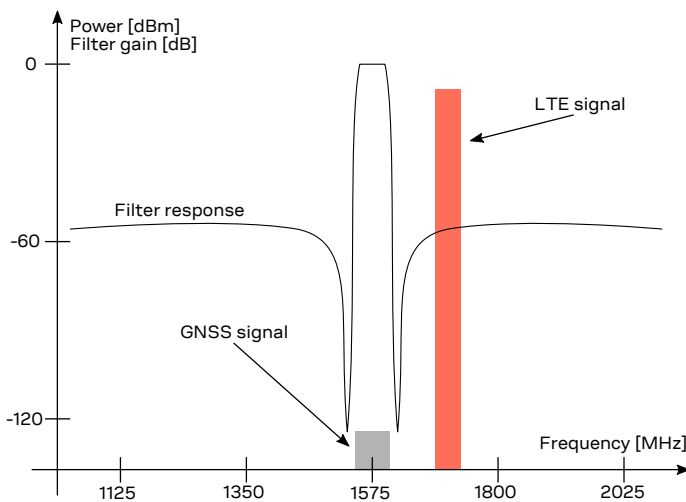


Figure 11: Interference due to transmission in LTE B3, B4 and B66 low channels (1710 MHz) adjacent to GNSS frequency range (1561 to 1605 MHz). Harmonics due to transmission in LTE B13 high channels (787 MHz) may fall into the GNSS bands

Jamming signals may come from in-band and out-of-band frequency sources. In-band jamming is caused by signals with frequencies falling within the GNSS frequency range, while out-of-band jamming is caused by very strong signals with frequencies adjacent to the GNSS frequency range so that part of the strong signal power may leak at the input of the GNSS receiver and/or block GNSS reception.

If not properly taken into consideration, in-band and out-of-band jamming signals may cause a reduction in the carrier-to-noise power density ratio (C/No) of the GNSS satellites.

In-band interference signals are typically caused by harmonics from displays, switching converters, micro-controllers and bus systems. Moreover, considering for example the LTE Band 13 high channel transmission frequency (787 MHz) and the GPS operating band (1575.42 MHz ± 1.023 MHz), the second harmonic of the cellular signal is exactly within the GPS operating band. Therefore, depending on the board layout and the transmit power, the highest channel of LTE Band 13 is the channel that has the greatest impact on the C/No reduction.

Countermeasures against in-band interference include:

- maintaining a good grounding concept in the design
- ensuring proper shielding of the different RF paths
- ensuring proper impedance matching of RF traces
- placing the GNSS antenna away from noise sources
- add a notch filter along the GNSS RF path, in front of SAW filter, at the frequency of the jammer (for example, as depicted in [Figure 12](#), a simple notch filter can be realized by the series connection of a discrete capacitor and inductor)

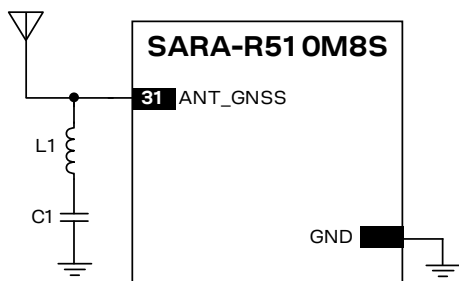


Figure 12: Simple notch filter for improved out-of-band jamming immunity against a single jamming frequency

With reference to [Figure 12](#), a simple notch filter can be realized by the series connection of an inductor and capacitor. Capacitor C1 and inductor L1 values are calculated according to the formula:

$$f = \frac{1}{2\pi\sqrt{C \cdot L}}$$

For example, a notch filter at ~787 MHz improves the GNSS immunity to LTE band 13 high channel. The resulting component values (rounded to the nearest EIA component values) are: C1 = 3.3 pF, L1 = 12 nH. C1 and L1 should have tolerance less than or equal to 2 % to ensure adequate notch frequency accuracy.

On the other hand, out-of-band interference is caused by signal frequencies that are different from the GNSS, the main sources being cellular, Wi-Fi, bluetooth transmitters, etc. For example, the lowest channels in LTE band 3, 4 and 66 can compromise the good reception of the GLONASS satellites. Again, the effect can be explained by comparing the LTE frequencies (low channels transmission frequency is 1710 MHz) with the GLONASS operating band (1602 MHz ± 8 MHz). In this case the LTE signal is outside the useful GNSS band, but, provided that the power received by the GNSS subsystem at 1710 MHz is high enough, blocking and leakage effects may appear reducing once again the C/No.

Countermeasures against out-of-band interference include:

- maintaining a good grounding concept in the design
- keeping the GNSS and cellular antennas more than the quarter-wavelength (of the minimum Tx frequency) away from each other. If for layout or size reasons the aforementioned requirement cannot be met, then the antennas should be placed orthogonally to each other and/or on different sides of the PCB.
- selecting a cellular antenna providing the worst possible return loss / VSWR / efficiency figure in the GNSS frequency band: the lower is the cellular antenna efficiency between 1575 MHz and 1610 MHz, the higher is the isolation between the cellular and the GNSS systems
- ensuring at least 15 – 20 dB isolation between antennas in the GNSS band by implementing the most suitable placement for the antennas, considering in particular the related radiation diagrams of the antennas: better isolation results from antenna patterns with radiation lobes in different directions considering the GNSS frequency band.
- adding a GNSS pass-band SAW filter along the GNSS RF line, providing very large attenuation in the cellular frequency bands (see [Table 15](#) for possible suitable examples). It has to be noted that, as shown in [Figure 2](#), a SAW filter and an LNA are already integrated in the GNSS RF path of the SARA-R510M8S: the addition of an external filter along the GNSS RF line has to be considered only if the conditions above cannot be met.

[Table 15](#) lists examples of SAW filters suitable for the GNSS RF input of SARA-R510M8S modules.

Manufacturer	Part number	Description
Murata	SAFFB1G56AC0FOA	GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou RF band-pass SAW filter with high attenuation in Cellular frequency ranges
Murata	SAFFB1G56AC0F7F	GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou RF band-pass SAW filter with high attenuation in Cellular frequency ranges

Table 15: Examples of GNSS band-pass SAW filters

In case all the aforementioned countermeasures cannot be implemented, adding a GNSS stop-band SAW filter along the cellular RF line may be considered. The filter shall provide very low attenuation in the cellular frequency bands (see [Table 16](#) for possible suitable examples). It has to be noted that the addition of an external filter along the cellular RF line has to be carefully evaluated, considering that the additional insertion loss of such filter may affect the cellular TRP and/or TIS RF figures.

[Table 16](#) lists examples of GNSS band-stop SAW filters that may be considered for the cellular RF input/output in case enough isolation between the cellular and the GNSS RF systems cannot be provided by proper selection and placement of the antennas beside other proper RF design solutions.

Manufacturer	Part number	Description
Qualcomm	B8636	GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou RF band-stop SAW filter with low attenuation in Cellular frequency ranges
Qualcomm	B8666	GPS / SBAS / QZSS / GLONASS / Galileo / BeiDou RF band-stop SAW filter with low attenuation in Cellular frequency ranges

Table 16: Examples of GNSS band-stop SAW filters

As far as Tx power is concerned, SARA-R5 series modules maximum output power during LTE transmission is 23 dBm. High-power transmission occurs very infrequently: typical output power values are in the range of -3 to 0 dBm (see figure 1 in the GSMA official document TS.09 [4]). Therefore, depending on the application, careful PCB layout and antenna placement should be sufficient to ensure accurate GNSS reception.

For an example of vehicle tracking application in a small form factor featuring cellular and short-range connectivity alongside a multi-constellation GNSS receiver, with successful RF coexistence between the systems, refer to the u-blox B36 vehicle tracking blueprint [6]. The distance between the cellular and GNSS antennas for the u-blox B36 blueprint is annotated in Figure 13.

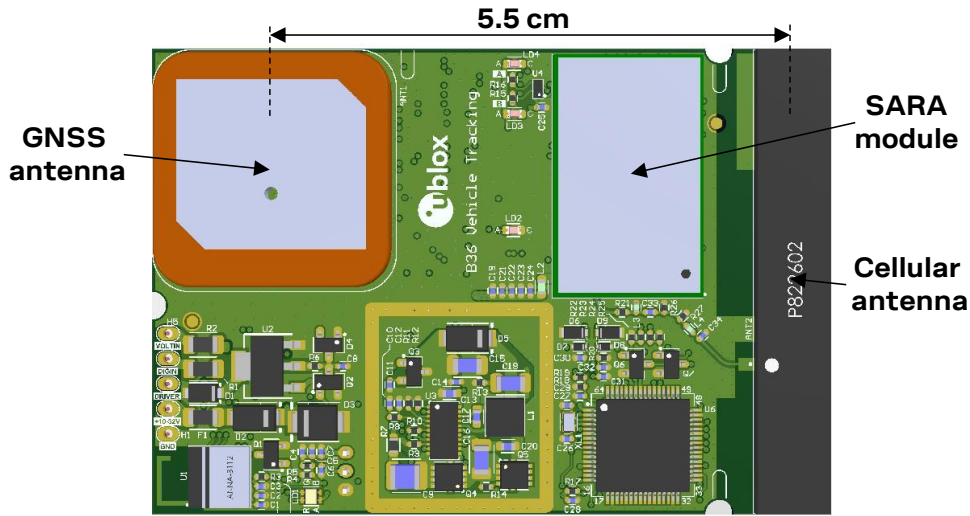


Figure 13: PCB top rendering for the u-blox B36 blueprint with annotated distance between cellular and GNSS antennas

3 Aiding features

3.1 Overview

GNSS receivers alone cannot always provide instant position information because it is necessary to receive signals from at least four satellites to derive their precise orbital position data, called ephemeris. Under adverse signal conditions, data download from the satellites to the receiver can take minutes, hours or even fail altogether. Assisted GNSS (A-GNSS) boosts acquisition performance by providing data such as ephemeris, almanac, accurate time and satellite status to the GNSS receiver via mobile networks or previously stored information. Aiding data enables the receiver to compute a position within seconds, even under poor signal conditions. For timings scenarios, see the u-blox receiver description document related to the u-blox GNSS receiver [7].

The basic AT command used to activate and deactivate the GNSS receiver from the cellular module is +UGPS. The first parameter allows switching on (<mode>= 1) or switching off (<mode>= 0).

At the GNSS receiver power-on through the +UGPS AT command the aiding mode and the GNSS system must be properly configured through the second and third parameter respectively of the same command. The GNSS aiding is a set of specific features developed by u-blox to enhance positioning performance, decreasing the TTFF and increasing the accuracy. For more details see the u-blox receiver description document corresponding to the related u-blox GNSS receiver [7].

u-blox cellular modules support 4 different types of GNSS aiding:

- Local aiding
- AssistNow Offline
- AssistNow Online
- AssistNow Autonomous

The second parameter of +UGPS AT command allows configuration of one or more assistance modes (e.g. "4" for AssistNow Online), or "0" if no aiding mode is required.


Once the GNSS receiver is powered on by the +UGPS AT command, aiding mode and GNSS system may be changed on a runtime basis by issuing a new +UGPS AT command with different aiding and/or GNSS system parameters. If a +UGPS AT command is issued to an already powered on GNSS device with the same aiding mode and same GNSS system as the previously selected, an error result code is returned.


For more details, see the u-blox SARA-R5 series AT commands manual [2], +UGPS AT command.

Each aiding mode is briefly described in the following sections. For additional information, see the u-blox receiver description document related to the u-blox GNSS receiver [7]. Some common points:

- No aiding mode is enabled by default: when switching on the GNSS receiver, it is necessary to specify the desired aiding mode(s)
- The GNSS systems mode parameter is optional. If the connected GNSS receiver is a multi-GNSS receiver, then it is used to activate the required GNSS system, otherwise it is ignored. If the GNSS system mode is omitted for a multi-GNSS receiver, the default configuration GPS+SBAS system is activated. If a required GNSS system cannot be activated (because it is not supported) the GNSS system configuration saved in the receiver will be activated. For further details on the default GNSS system configuration for a multi-GNSS receiver, see the u-blox GNSS receiver description.
- The GNSS aiding modes can be combined to further increase performance, additional details are provided in the section 3.6
- Some assistance modes require a packet data connection to exchange information with u-blox servers

- When the GNSS receiver is switched on through the cellular module, the "OK" final result code is returned on the serial port once the communication is established. If the GNSS does not respond within 5 s, an error result code is issued: in this case check the I2C interface and the power supply pin connection
- Once the communication between cellular module and GNSS receiver is established on the I2C interface, the cellular module tries to perform the requested GNSS system activation (for a multi-GNSS receiver) and aiding type. In case of aiding failure (e.g. no network coverage, no data connectivity, expired ephemeris file etc.) the GNSS receiver operates without aiding

 The +UUGIND URC provides the aiding notification in the form +UUGIND: <aiding_mode>,<result>. The allowed aiding results are available in section 3.7. The feature is disabled by default and is enabled via the dedicated command AT+UGIND=1 (for more details, see the u-blox SARA-R5 series AT commands manual [2]).

 For a multi-GNSS receiver the +UUGIND URC provides notification for the activated GNSS systems in the form +UUGIND: 0,<GNSS_system>. The feature is disabled by default.

The application should enable GNSS-related URCs. Once the application has activated GNSS-related URCs and started the GNSS with the required GNSS system and aiding mode, URCs should be monitored to verify successful completion. An example of AT command sequence is shown below:

Command	Response	Description
AT+UGRMC=1	OK	Activate storing of the last value of \$RMC NMEA string.
AT+UGIND=1	OK	Activate the GNSS unsolicited indication. (optional)
AT+UGPS=1,1,67	OK	Power on the GNSS with GPS+SBAS+GLONASS systems and local aiding.
	+UUGIND: 0,67	URC reporting GNSS system activated.
	+UUGIND: 1,0	URC reporting GNSS mode "Local Aiding" ("1") and "No error" ("0").
AT+UGRMC?	+UGRMC: 1,\$GNRMC,,V,,,,,,,,,N *53 OK	Read the last stored value of the NMEA \$RMC string.
AT+UGPS=0	OK	Power off the GNSS.
	+UUGIND: 1,0	URC reporting GNSS mode "Local Aiding" ("1") and "No error" ("0").

Table 17: GNSS aiding modes AT command sequence

3.2 Using GNSS without aiding support

Typically the cellular module activates the GNSS receiver without any aiding mode. This is equivalent to switching on the positioning chip/module as a stand-alone receiver, sending commands and receiving data using the AT commands port of the cellular module. The GNSS system parameter can be optionally issued to select a specific GNSS system, otherwise GPS+SBAS system is by default selected. Table 18 shows a command sequence.

The final result code to the AT+UGPS=1,0 command is "OK" if the GNSS receiver responds within 5 s, otherwise an error result code is issued. If the GNSS URC notification is enabled (via the dedicated +UGIND AT command) then the GNSS systems activated are reported by the +UUGIND: 0,<GNSS_system> URC.

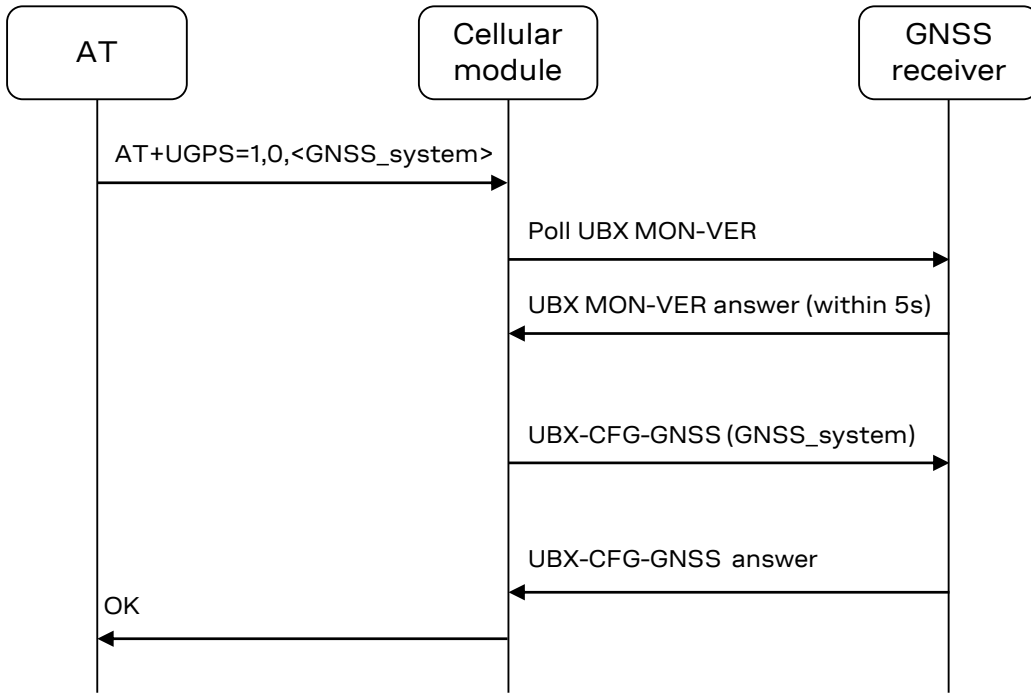


Figure 14: Interaction between the cellular module and GNSS receiver without aiding support

Command	Response	Description
AT+UGRMC=1	OK	Enable storing of the last value NMEA \$RMC string.
AT+UGIND=1	OK	Activate the GNSS unsolicited indication. (optional)
AT+UGPS=1,0,64	OK	Start up the GNSS with GLONASS only system.
AT+UGPS?	+UGPS: 1,0,64 OK	Read GNSS status. GNSS is powered on with GLONASS system and no active aiding.
	+UUGIND: 0,64	URC reporting GNSS system activated.
		Allow the GNSS enough time to perform a fix.
AT+UGRMC?	+UGRMC: \$GLRMC,151519.00,A,454 2.84409,N,01344.46705,E,0.082, ,280514,,A*60 OK	Read the last stored value of the NMEA \$RMC string.
AT+UGPS=0	OK	Stop the GNSS.

Table 18: AT command example without aiding support

3.3 Using GNSS with local aiding support

When the local aiding is enabled, the cellular module automatically saves GNSS-related data (position, time, ephemerides, almanac, health and ionosphere parameters) and information about the cell on which the cellular module is camped or registered, before the GNSS shut down. No data connection over the cellular network is required for local aiding. The local aiding is activated setting the second parameter of +UGPS to 1 (AT+UGPS=1,1,...). For more details, see the u-blox SARA-R5 series AT commands manual [2].

The aiding data is saved in RAM at GNSS power off, and it is copied to the cellular file system during cellular module power off. At each GNSS receiver startup, the location data is uploaded from the cellular module to the GNSS receiver.

Assistance data stored in the cellular module’s file system is not visible or accessible to the user.

On SARA-R5 series the common file system space is used.

The local aiding algorithm uses the last known position and adjusts its accuracy according to the elapsed time. However, if the Cell ID has not changed, the last known position is used with an accuracy figure of a maximum cell coverage radius (depending on the selected RAT).

If no information regarding the previous position is available, a central position of the network is used (e.g. Rome for Italian networks) with the accuracy figure reflecting the uncertainty (e.g. 700 km in the case of Italy).

The aiding data can be manually saved at any time from the GNSS to the cellular module by sending the command AT+UGAOS=0. This operation is automatically performed when local aiding is enabled and the GNSS is switched off with AT+UGPS=0.

If the local aiding is enabled and the stored aiding data is obsolete (more than 2 hours), the GNSS receiver ignores it. Just before the GNSS is switched off, the local aiding data is saved, overwriting the old data. This operation requires a few seconds.

If the GNSS has been switched on without local aiding enabled, when the GNSS is active and a fix has been calculated, the application can trigger aiding data saving by sending AT+UGAOS=0. Similarly, the usage of local aiding can also be forced after GNSS startup by sending AT+UGAOS=1. If GNSS-related URC responses are activated (by sending AT+UGIND=1), the command AT+UGAOS=1 triggers a response type +UUGIND: 1,x, confirming that assistance data have been passed to the GNSS receiver.

The GNSS-related aiding data are saved on cellular file system in the form of UBX-MGA-INI (initial assistance data) and UBX-MGA-DBD messages (navigation database).

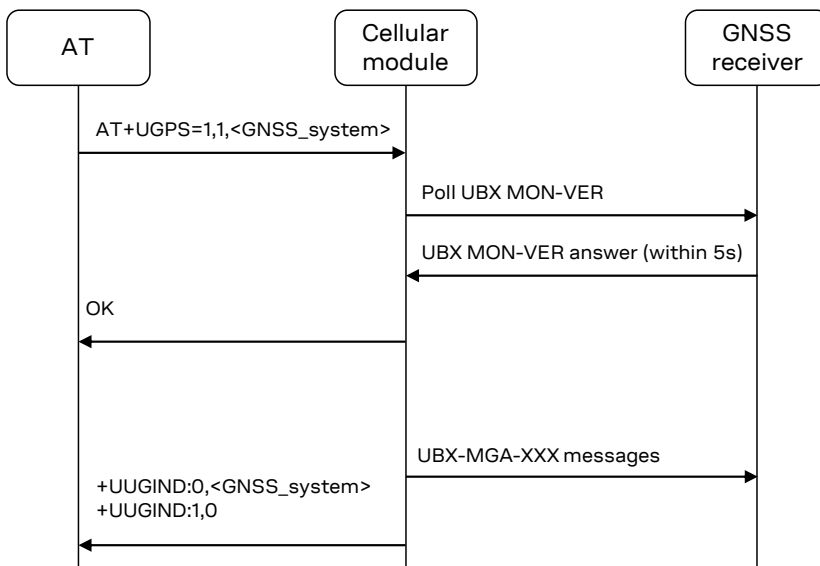


Figure 15: Interaction between the cellular module and GNSS receiver with local aiding support

If an error occurs, the +UUGIND URC will notify it; for more details, on aiding error see the section 3.7.

Command	Response	Description
AT+COPS?	+COPS: 0,0,"vodafone IT" OK	Check if the module is registered (GNSS local aiding will use cellular network information to reduce TTFF).
AT+UGRMC=1	OK	Activate storing of the last value of \$RMC NMEA string.
AT+UGIND=1	OK	Activate the GNSS unsolicited indication. (optional)
AT+UGPS=1,1,67	OK	Start up GNSS with GPS+SBAS+GLONASS systems and local aiding (it will download assistance data to

Command	Response	Description
		GNSS if available in FS, otherwise it will use country code information for a rough localization).
	+UUGIND: 0,67	URC reporting GNSS system activated.
	+UUGIND: 1,0	URC reporting GNSS mode "Local Aiding" ("1") and "No error" ("0").
AT+UGRMC?	+UGRMC: 1,\$GNRMC,083310.00,A,4542.84584,N,01344.46445,E,0.008,,290514,,,D*66 OK	Wait at least 15 minutes for ephemerides download.
AT+UGPS=0	OK	Stop the GNSS.
	+UUGIND: 1,0	URC reporting GNSS mode "Local Aiding" ("1") and "No error" ("0").

Table 19: Local Aiding AT command sequence

3.4 AssistNow aiding service

The AssistNow feature provides aiding data downloads for the connected GNSS receiver from a specific u-blox server. The cellular module contacts the server using an existing packet data connection.

AssistNow Offline downloads the aiding data from a u-blox HTTP server and saves it in the cellular file system, so that it can be transferred to the GNSS receiver at the next GNSS device power-on.

AssistNow Online downloads real-time aiding data from a u-blox HTTP server and then directly transfers the data to the powered on GNSS device.

AssistNow service provides aiding data for multi-GNSS receivers and uses a centralized server, which the cellular module contacts:


- Multi-GNSS Assistance (MGA) server access: it uses a unique HTTP server for gathering both Offline and/or Online assistance data. For MGA server access, configuration options from +UGSRV AT command are used. Configuration options in +UGSRV AT command includes an authentication token as a means of authorizing access to the u-blox server and for gathering anonymous statistics. For further details on how to obtain a valid token, see www.u-blox.com/services-form.html. Configuration options in +UGSRV include a primary and secondary server name. The primary server name is the name of the preferred server to be contacted. If the connection with the primary server fails, the secondary server name will be used instead. The MGA service provides the access to AssistNow service for u-blox GNSS receivers. Configuration options in +UGSRV are saved to non-volatile memory (NVM) of the module, so they are reloaded after a cellular power cycle.

The GNSS implementation in cellular module firmware includes the MGA AssistNow server access via the authentication token defined in +UGSRV configuration options. The GNSS aiding data is downloaded from the MGA server.

The assistance data are downloaded from MGA server; if the authentication token is not defined, an error +UUGIND: <aid>,16 URC code is returned if AssistNow Offline/Online aiding is requested with the +UGPS command.

3.4.1 Using GNSS with AssistNow Offline support

GNSS AssistNow Offline stores the GNSS almanac for the configured GNSS system within the cellular module's file system (FS). If there is no almanac file saved in the FS, then the cellular module will try to download it from the dedicated server using an existing packet data connection.

 If the assistance data needs to be downloaded, the application must activate a data connection (e.g. using +UPSDA AT command) to allow the cellular module to establish a connection to the server.

The configuration of AssistNow Offline can be performed through the +UGSRV AT command.

After the file is downloaded from the server, it is renamed with the date and time plus “.mga” extension and passed to the GNSS receiver.


AssistNow Offline configuration options are taken from +UGSRV AT command. Offline aiding data is requested by means of a HTTP request containing also the authentication token to be verified by the server. If the connected GNSS receiver is a single-GNSS, then the <days> option determines the validity period of the Differential Almanac Correction data; if the connected GNSS receiver is a multi-GNSS, then <period>, <resolution> and <GNSS_types> options determine the aiding data to be downloaded.


For more details on +UGSRV AT command, see the u-blox SARA-R5 series AT commands manual [2]. The approximate size of an AssistNow Offline aiding file for a multi-GNSS receiver is typically around 200 kB.

The external application processor controlling the module should verify the validity period (the detailed procedure is described below) and download new AssistNow Offline data when needed. This can be achieved by sending AT+UGAOS=2 or simply deleting the .mga file before starting the GNSS receiver by means of the +UDELFILE AT command.

It is also possible to manually store the AssistNow Offline data file on the FS with the +UDWNFILE AT command. For more details on AT commands description, see the u-blox SARA-R5 series AT commands manual [2].

The application processor can also decide to download new AssistNow Offline data to increase performance, e.g. substitute a 14-day validity file with a new one with 1-day validity after 5 days.

 Time and the date within the cellular module can be set using the following AT commands: +CCLK, +CTZU and +UGMTR. See u-blox SARA-R5 series AT commands manual [2] for the commands descriptions.

 To automatically download a new file from the server, the following conditions need to be satisfied:



- Active packet data connection
- GNSS receiver on
- AssistNow Offline aiding enabled
- The AssistNow Offline aiding file is expired or nearing expiration (less than 10% of validity time left)

The external application processor should perform the command sequence as follows:

1. Decide a validity period of n days and store the current date somewhere (it is also possible to use the renamed file in the FS to derive the assistance file validity).
2. Use the +UGSRV AT command to select the period and resolution of aiding data to download
3. Start the GNSS in AssistNow Offline mode (e.g. AT+UGPS=1,2,... for more details, see the u-blox SARA-R5 series AT commands manual [2]).
4. Before each subsequent GNSS startup in AssistNow Offline mode check if the assistance data file is still valid ($\text{current_date} - \text{download_date} < \text{validity period}$).
5. If the file is no longer valid, delete it from the FS using the +UDELFILE AT command.
6. Start the GNSS in AssistNow Offline mode (AT+UGPS=1,2....).

Command	Response	Description
AT+UGSRV?	+UGSRV: "cell-live1.services.u-blox.com", "cell-live2.services.u-blox.com", "12345678901234567890AB", 14, 4, 1, 65, 0, 15 OK	Check the AssistNow configuration for MGA access (needed only if there is no almanac file in the FS). The validity of the assistance data is given by <period> option. A valid authentication token must be supplied to correctly access the MGA server.
AT+UGRMC=1	OK	Activate storing of the last value of \$RMC NMEA string.
AT+UGIND=1	OK	Activate the GNSS unsolicited indication. (optional)
AT+UPSD=0,1,"web.omnitel.it"	OK	Set up the connection profile with the APN specified by the network operator.
AT+UPSDA=0,3	OK	Activate the GPRS connection (needed only if there is no valid almanac file in the FS).
AT+UGPS=1,2,67	OK	Start the GNSS with GPS+SBAS+GLONASS systems and AssistNow Offline aiding. If there is no valid almanac file on the FS, it will be downloaded from the specified server).
	+UUGIND: 0,67	URC reporting GNSS system activated.
	+UUGIND: 2,0	URC reporting GNSS mode "AssistNow Offline" ("2") and "No error" ("0").
		Allow the GNSS enough time to perform a fix.
AT+UGRMC?	+UGRMC: \$GLRMC,151519.00,A,4542.84409,N,01344.46705,E,0.082,,280514,,,A*60 OK	Read the last stored value of the NMEA \$RMC string.
AT+UGPS=0	OK	Stop the GNSS.

Table 20: AssistNow Offline AT command sequence

-  The AT+UGAOS=2 command triggers the Offline aiding data file download when the GNSS receiver is switched on, but the new file will be used only when the GNSS receiver is restarted with AT+UGPS=1,2,....
-  The longer the validity of the aiding file chosen, the larger the aiding file is. Furthermore, the size of the aiding file increases if aiding data are requested for multiple GNSS systems. If the FS is used for other applications, it is necessary to verify that there is enough space to store the assistance data. If space saving is an issue, it is recommended to use the aiding data with the shortest validity.

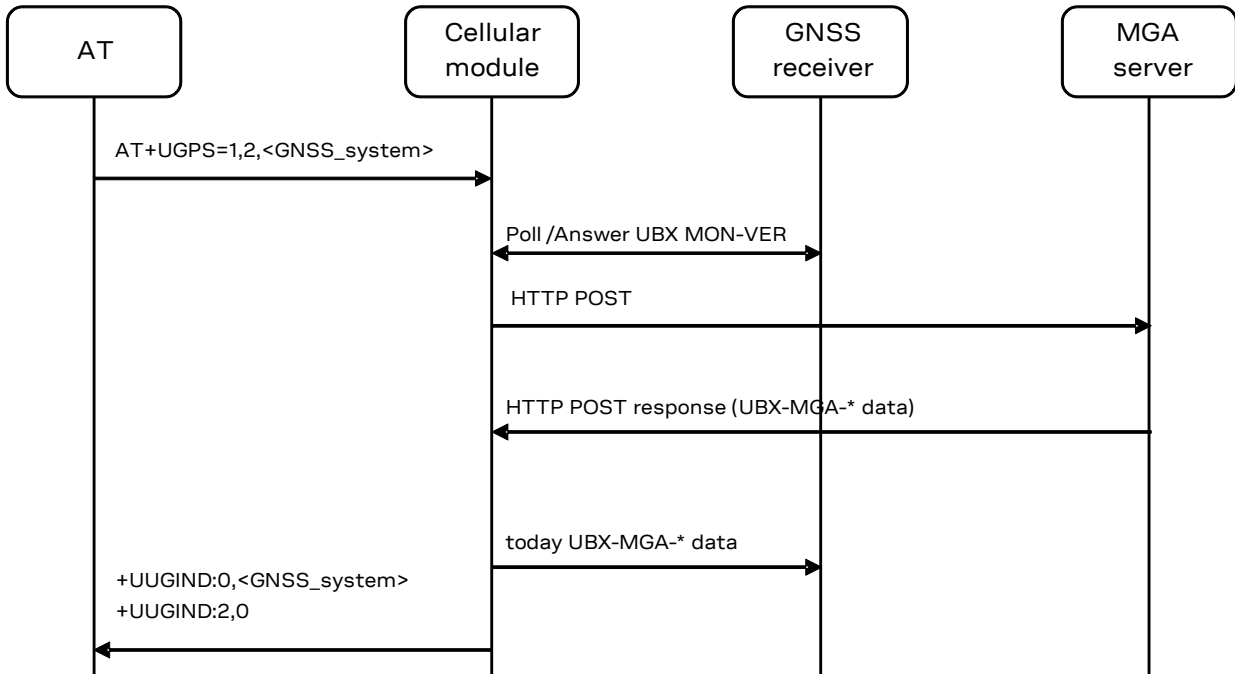


Figure 16: Interaction between the cellular module and GNSS receiver with AssistNow Offline support

The cellular module does not perform checks on the almanac file: it just notifies the GNSS that an mga file is available on the cellular module file system. If the file is corrupted or out of date, the GNSS determines if it will not use it, and in this case, no error notification is provided.

3.4.2 Using GNSS with AssistNow Online support

AssistNow Online is the assistance mode ensuring the fastest TTFF. Assistance data is downloaded from the cellular module and then passed to the GNSS receiver.

An active packet data connection is required to exchange data between the cellular module and u-blox dedicated server.

At GNSS startup, a data connection is created either to the u-blox AssistNow Online server or to a configurable proxy server: for MGA server assistance, a HTTP session is created when the cell information is available. The cellular module will pass the active cell information to the server and the server will return the aiding data only for those satellites visible by the GNSS receiver at a given time.

The addresses cell-live1.services.u-blox.com and cell-live2.services.u-blox.com are respectively the primary and secondary servers for the preferred MGA online server, which also supports CellLocate® requests.

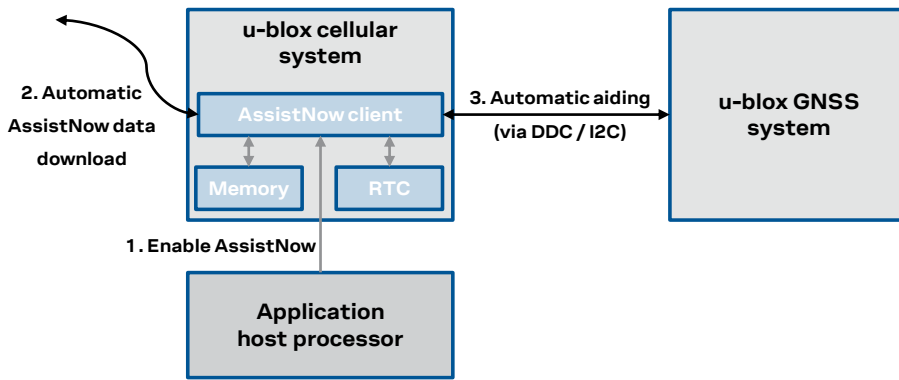


Figure 17: AssistNow Online flow

If no data connection is available, then the GNSS receiver will start without aiding and the URC will provide an error result code.

If there is no response from AssistNow Online, the cellular module will make three repeated attempts (at intervals of 10 s, 30 s and 60 s respectively).

The authentication for the u-blox MGA server cell-live1.services.u-blox.com or cell-live2.services.u-blox.com is performed by the verification of the authentication token when sending the HTTP request.

After a successful access and download of assistance data, when a fix is available the cellular module provides the position information to the server for quality monitoring purposes.

If the server contacted is cell-live1.services.u-blox.com, the position information is submitted by means of a HTTP POST.

The data payload sent from the module to the server during the AssistNow Online procedure is about 200 bytes. Amount of aiding data downloaded from the server is variable.

Command	Response	Description
AT+UGSRV?	+UGSRV: "cell-live1.services.u-blox.com", "cell-live2.service.s.u-blox.com", "12345678901234567890AB", 14, 4, 1, 65, 0, 15 OK	Check the AssistNow configuration for MGA access. A valid authentication token must be supplied to correctly access the MGA server.
AT+UGRMC=1	OK	Activate storing of the last value of \$RMC NMEA string.
AT+UGIND=1	OK	Activate the GNSS unsolicited indication. (optional)
AT+UPSDA=0, 3	OK	Activate the GPRS connection.
AT+UGPS=1, 4, 67	OK	Start up the GNSS with GPS+SBAS+GLONASS systems and AssistNow Online aiding (it will send network cell information to the server and receives aiding data for the GNSS).
	+UUGIND: 0, 67	URC reporting GNSS system activated.
	+UUGIND: 4, 0	URC reporting GNSS mode "AssistNow Online" ("4") and "No error" ("0").
		Allow the GNSS enough time to perform a fix.
AT+UGRMC?	+UGRMC: \$GLRMC, 151519.00, A, 454 2.84409, N, 01344.46705, E, 0.082, , 280514, , , A*60 OK	Read the last stored value of the NMEA \$RMC string.
AT+UGPS=0	OK	Stop the GNSS.

Table 21: AssistNow Online AT command sequence

The AT+UGIND=1 command enables the URCs. A URC is sent when the AssistNow Online procedure is complete, so the indication will be returned after successful delivery of the assistance data from the server, even if the receiver cannot get a GNSS fix. If an error is encountered during the AssistNow procedure, the corresponding URC will report it. For more details on the +UGIND AT command description, see the u-blox SARA-R5 series AT commands manual [2].

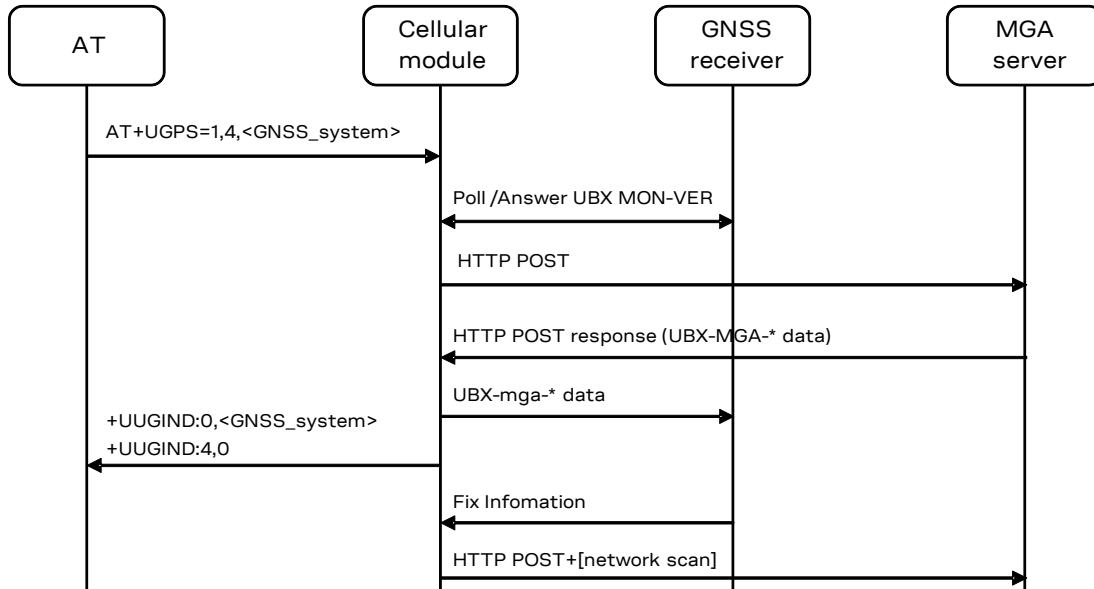


Figure 18: Interaction between the cellular module and GNSS receiver with AssistNow Online support

3.5 Using GNSS with AssistNow Autonomous Support

- For more details about the availability of AssistNow Autonomous on u-blox GNSS receiver, see section A.2.
- For more details about the availability of AssistNow Autonomous on u-blox cellular modules, see section 1.3.

The AssistNow Autonomous feature provides functionality similar to AssistNow without the need for a host and a connection. Based on the known ephemeris, the GNSS receiver can autonomously generate an accurate satellite orbit representation that is usable for navigation much longer than the underlying broadcast ephemeris was intended for.

The AssistNow Autonomous data is automatically and autonomously generated from downloaded (or assisted) broadcast ephemerides. Data for the full GPS constellation (32 satellites) is stored on the host file system.

AssistNow Autonomous feature may be not implemented for a specific GNSS system in a multi-GNSS receiver. If AssistNow activation fails for any reason, an error code is returned.

While AssistNow Offline data is available, the AssistNow Autonomous subsystem will not produce any data and orbits because it would be redundant information.

As with local aiding, data related to AssistNow Autonomous are saved within the cellular module FS but the file is not accessible or visible to the user.

For multi-GNSS receiver Autonomous, data is stored in the navigation database file, so the activation of AssistNow Autonomous automatically activates local aiding also.

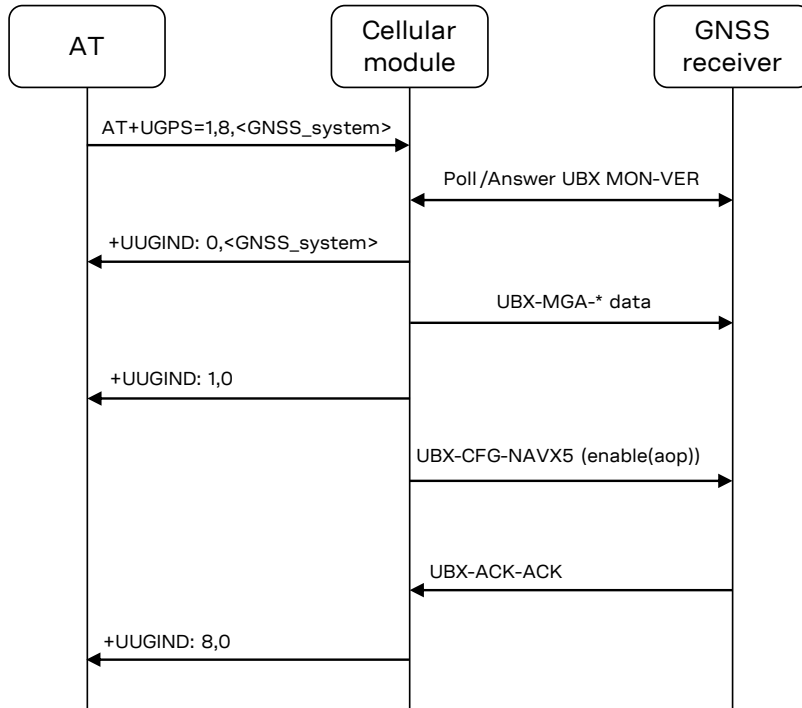


Figure 19: Typical interaction between the cellular module and multi-GNSS receiver with AssistNow Autonomous support
 The +UUGIND URC is reported for each error/result.

Command	Response	Description
AT+UGRMC=1	OK	Activate storing of the last value of \$RMC NMEA string.
AT+UGIND=1	OK	Activate the GNSS unsolicited indication. (optional)
AT+UGPS=1, 8, 67	OK	Startup GNSS receiver with GPS+SBAS+GLONASS systems and Autonomous aiding (it downloads data to GNSS receiver if available in the FS; otherwise it enables the AssistNow Autonomous in the GNSS receiver).
	+UUGIND: 0, 67	URC reporting GNSS system activated.
	+UUGIND: 8, 0	URC reporting GNSS mode "AssistNow Autonomous" ("8") and "No error" ("0"). AssistNow Autonomous has been activated.
		Allow the GNSS enough time to perform a fix.
AT+UGRMC?	+UGRMC: 1, \$GNRMC, 135612.00, A, 4 542.84609, N, 01344.46417, E, 0.00 4, , 290514, , , A*65 OK	Read the last stored value of the NMEA \$RMC string.
AT+UGPS=0		Stop the GNSS. Module automatically creates a file hidden to the user.
	+UUGIND: 8, 0	URC reporting GNSS mode "AssistNow Autonomous" ("8") and "No error" ("0"). AssistNow Autonomous has been deactivated
	+UUGIND: 1, 0	URC reporting GNSS mode "Local Aiding" ("1") and "No error" ("0").
	OK	Answer to the AT+UGPS=0 command.

Table 22: AssistNow Autonomous AT command sequence

3.6 Using GNSS with combined aiding modes

The GNSS aiding modes previously described can be enabled at the same time when the GNSS receiver is switched on. To enable more than one assistance mode, simply switch on the GNSS with the command `AT+UGPS=1,x,y` passing as second parameter the algebraic sum of the codes of each assistance mode desired. For example, to activate local aiding (normally activated with `AT+UGPS=1,1`) and AssistNow Autonomous (`AT+UGPS=1,8`), simply send `AT+UGPS=1,9`.

If the `+UUGIND` URCs are enabled, there will be an unsolicited text response for each mode activated.

Command	Response	Description
<code>AT+UGRMC=1</code>	OK	Activate storing of the last value of \$RMC NMEA string.
<code>AT+UGIND=1</code>	OK	Activate the GNSS unsolicited indication. (optional)
<code>AT+UGPS=1,9,67</code>	OK	Activate GNSS with GPS+SBAS+GLONASS systems and AssistNow Autonomous (<code>AT+UGPS=1,8</code>) and Local aiding (<code>AT+UGPS=1,1</code>).
	<code>+UUGIND: 0,67</code>	URC reporting GNSS system activated.
	<code>+UUGIND: 1,0</code>	URC reporting GNSS mode "Local Aiding" ("1") and "No error" ("0"). Data have been passed to the GNSS.
	<code>+UUGIND: 8,0</code>	URC reporting GNSS mode "AssistNow Autonomous" ("8") and "No error" ("0"). AssistNow Autonomous has been activated.
		Allow the GNSS enough time to perform a fix.
<code>AT+UGRMC?</code>	<code>+UGRMC: 1,\$GNRMC,135612.00,A,4542.84609,N,01344.46417,E,0.004,,290514,,,A*65</code> OK	Read the last stored value of the NMEA \$RMC string.
<code>AT+UGPS=0</code>		Stop the GNSS. The module automatically creates files hidden to the user.
	<code>+UUGIND: 1,0</code>	Local aiding data saved on the FS.
	<code>+UUGIND: 8,0</code>	AssistNow Autonomous deactivated.
	OK	Answer to the <code>AT+UGPS=0</code> command.

Table 23: Combined aiding modes AT command sequence

3.7 Aiding result codes

The +UUGIND URC provides the aiding result; [Table 24](#) lists the allowed aiding results:

Aiding result	Description
0	No error, this message is sent when the aiding procedure is complete. With AssistNow Online the procedure is complete when the position information is sent back to the server. Local aiding and AssistNow Autonomous also perform aiding action during power off sequence, therefore they also provide URC in this phase
2	The HTTP GET request for AssistNow Offline file has failed
5	It was not possible to send AssistNow Online information to the server
6	There was an error while receiving for AssistNow Online data from the server
7	It was not possible to connect to the AssistNow Online server or to resolve its DNS
8	Error writing data in the file system
9	Generic error
10	No answer from GNSS after a data request (for local aiding and AssistNow Autonomous)
11	Data collection already in progress (for local aiding)
12	GNSS activation of AssistNow Autonomous failed
14	Feature not supported by GNSS receiver (for AssistNow Autonomous)
15	Feature partially supported (for AssistNow Autonomous)
16	Authentication token missing (required for MGA assistance server connection)

Table 24: GNSS aiding feature compatibility matrix

4 GNSS system configuration

4.1 Modules with integrated GNSS chipset

4.1.1 General considerations


u-blox GNSS receivers come with a highly flexible communication interface supporting both NMEA and proprietary UBX protocols even on a single port. In the SARA-R510M8S modules the integrated u-blox UBX-M8030 GNSS chipset and the u-blox UBX-R5 cellular chipset are internally connected by means of I2C-bus compatible DDC interface, and GNSS data can be redirected externally via +UGUBX AT command and/or GNSS tunneling feature.

Because of the hardware architecture of SARA-R510M8S (for more details, see [Figure 2](#) and the section [2.2](#)), only a subset of the feature set for M8030 GNSS chipset can be selected, and the related UBX messages controlling the features that are not supported with the specific implemented hardware architecture, if retrieved, may cause error responses or unpredictable behavior.

In particular, the following limitations for SARA-R510M8S internal GNSS system (and relative UBX messages) should be considered:

- The u-blox UBX-M8030 GNSS chipset is ROM only based and is not connected to an SQI flash memory, so following features shall not be used:
 - Remote Inventory (UBX-CFG-RINV)
 - Data Logging (UBX-LOG Class messages)
 - Firmware Update (UBX-UPD Class messages)
- The u-blox UBX-M8030 GNSS chipset is ROM-only based and has no backup supply, so the following features shall not be used:
 - Permanent Configuration storage (UBX-CFG-CFG/save)
- The u-blox UBX-M8030 GNSS chipset is not using its own RTC peripheral, so a special procedure is required to activate the GNSS Cycling Tracking Power Save mode (see section [4.1.2.2](#) for details)

For more information about UBX protocol messages, see the u-blox M8 receiver description including protocol specification [\[7\]](#).

 It is recommended to not send UBX messages to reset the GNSS receiver while it is in use, this will cause a misalignment between the cellular system configuration and the one of the GNSS system.

4.1.2 Power saving modes

SARA-R5 cellular modules come in different variants and optimized to deliver the lowest achievable power consumption making it ideal for metering, smart city, connected health, security and surveillance, remote monitoring and other battery –powered applications.

SARA-R510M8S, with its integrated UBX-M8030 chip design, targets mobile applications in automotive, fleet management, tracking and telematics sectors.

u-blox GNSS receivers support different power modes. These modes represent strategies of how to control the receiver to achieve either the best possible performance or good performance with reduced power consumption.

SARA-R510M8S can be configured with a combined set of cellular power saving configuration via power management AT commands (+UPSV, +CPSMS) and UBX-M8030 reduced power consumption via positioning AT commands (+UGPRF, +UGUBX) to obtain the best solution for the customer application. For more information on AT commands supported by SARA-R5 cellular modules, see the SARA-R5 series AT commands manual [\[1\]](#).

Because of the hardware architecture of SARA-R510M8S only a subset of UBX-8030 reduced power configuration can be selected. The suggested configurations are discussed in the following sections.

4.1.2.1 UART power saving and GNSS Tx Data Ready with no aiding

Following commands can be issued to enable UART power saving and GNSS reduced I2C activity:

Command	Response	Description
AT+UPSV=1,100	OK	Enables UART power saving with 100 GSM frames (~ 461 ms) guard period.
AT+CEDRXS=1,4,"0101","0011"	OK	Configures the UEs extended discontinuous reception (eDRX).
AT+UGPRF=16	OK	Configure UBX-R5 and UBX-M8030 to enable TX data ready feature.
AT+UGRMC=1	OK	Activate storing of the last value of \$RMC NMEA string.
AT+UGIND=1	OK	Activate the GNSS unsolicited indication. (optional)
AT+UGPS=1,0,3	OK	Power on GNSS, no assisted GNSS requested.
	+UUGIND: 0,3	URC reporting GNSS system activated.
AT+UGUBX="B56206080600E803050001000549"	OK	Set navigation rate to 5 s (instead of default 1 s).

4.1.2.2 UART Power Saving, GNSS Tx data ready and GNSS cycling tracking mode with AssistNow online aiding

Following commands can be issued to combine UART power saving and GNSS cycling tracking mode after AssistNow Online request:

Command	Response	Description
AT+UPSV=1,100	OK	Enables UART power saving with 100 GSM frames (~ 461 ms) guard period.
AT+CEDRXS=1,4,"0101","0011"	OK	Configures the UEs extended discontinuous reception (eDRX).
AT+UPSD=0,1,"<yourAPN>"	OK	Setup the APN.
AT+UGSRV="cell-live1.service.s.u-blox.com","cell-live2.services.u-blox.com","<yourAuthToken>"	OK	Configure AssistNow servers and authorization token for access.
AT+UPSDA=0,3	OK	Activate the PDP context.
AT+UGPRF=16	OK	Configure UBX-R5 and UBX-M8030 to enable TX data ready feature.
AT+UGRMC=1	OK	Activate storing of the last value of \$RMC NMEA string.
AT+UGIND=1	OK	Activate the GNSS unsolicited indication. (optional)
AT+UGPS=1,4,1	OK	Power on GNSS, AssistNow online requested.
	+UUGIND: 0,1	URC reporting GNSS system activated.
	+UUGIND: 4,0	URC reporting GNSS mode "AssistNow Online" ("4") and "No error" ("0").
AT+UGUBX="B56206080600E803050001000549"	OK	Set navigation rate to 5 s (instead of default 1 s).

Command	Response	Description
AT+UGUBX="B56206481000000000 000000000020041E0000000000A0 C0"	OK	Configure UBX-M8030 cyclic tracking mode (Update period = 1 s, Low power mode = Power save mode)
AT+UGUBX="B562063B2C00010600 000E104301E80300001027000000 000000000000002C0100004FC103 0086020000FE00000006440010063 10"	OK	
AT+UGUBX="B56206110200080122 92"	OK	

4.2 GNSS data communication and handling

The +UGPRF AT command configures the communication and the tunneling mode between the GNSS receiver and the cellular module. Apart from enabling “GNSS Tx data ready” function, GNSS data can be redirected from the I2C interface, connecting the GNSS system with the cellular system, in the following modes, which can be combined:

- to an auxiliary UART interface
- to a multiplexer virtual channel
- to a file in file system
- over the air (OTA)

The configuration can be only done when the GNSS receiver is off. For more details, see the u-blox SARA-R5 series AT commands manual [2], +UGPRF AT command.

Command	Response	Description
AT+UGPRF=4	OK	Enable GNSS I/O configuration on the FS.
AT+UPSDA=0, 3	OK	Activate the GPRS connection using the +UPSDA AT command.
AT+UGPS=1, 0, 3	OK	Start up the GNSS receiver with GPS+SBAS system and without aiding.
AT+UGAOS=4	OK	Force AssistNow Online and wait some minutes.
AT+UGPS=0	OK	Stop the GNSS receiver.
AT+ULSTFILE=	+ULSTFILE: "GPS_20040101_001" OK	Check if trace file has been generated.

Table 25: AT command sequence example for GNSS data redirection on File System



Command	Response	Description
AT+USIO=4	OK	Enable AUX UART interface for GNSS tunneling. The serial interfaces' configuration switch is not performed run-time. The settings are saved in NVM; the new configuration will be effective at the subsequent module reboot.
AT+UGPRF=1	OK	Start the GNSS communication on the AUX UART interface.
AT+CFUN=16	OK	Perform a module reboot.
AT+UGPS=1, 0, 3	OK	Start up the GNSS receiver with GPS+SBAS system and without aiding, the GNSS output is visible on GNSS tunneling channel.
AT+UGAOS=0	OK	Force local aiding data download.
AT+UGPS=0	OK	Stop the GNSS receiver.

Table 26: AT command sequence example for GNSS data redirection on AUX UART

The multiplexer and the AUX UART are input/output channels, while the FS and network are only output channels.



4.2.1 Auxiliary UART interface

The AUX UART interface can be used for GNSS tunneling; this means that it is possible to directly communicate with the GNSS using the UBX protocol.

-  The tunneling through AUX UART interface is mutually exclusive with the multiplexer channel.
-  It is recommended not to send UBX messages to reset the GNSS while it is in use. This will cause a misalignment between the configurations of the cellular module and the GNSS receiver. Furthermore it is recommended to not configure the GNSS power saving with the TX data ready active, because the GNSS receiver could send wrong reading requests to the cellular module.

4.2.2 Multiplexer I/O

The cellular module FW supports the 3GPP TS 27.010 multiplexer protocol (for more details, see the 3GPP TS 27.010 specifications [10]) to emulate several virtual connection channels on a single physical interface to concurrently access the module (e.g. it is possible to read a phonebook contact while receiving GNSS data).

-  For more details on multiplexer implementation on cellular module, see the u-blox multiplexer implementation application note [9].
-  The 6th virtual channel has been dedicated to GNSS tunnel data to the host.

4.2.3 File System (FS) output

A single log file saved on the file system is limited to 500 kB, while the total FS usage for log files is limited to 750 kB. When the FS nears its maximum capacity, the file is closed and no other log file is created and no indication is sent. However the string "--file truncated—" is appended to the end of the log file. If the positioning chip/module is restarted, a new file will be created if the total FS usage is not exceeded.

GNSS log files are visible within the user space and their name has the following format: `GPS_YYYYMMDDHHMM.YYYYMMDDHHMM` is the date and time obtained from the system. A generated log file overwrites any existing file with the same filename. This may happen if the system time has been changed or the GNSS log is started twice in the same minute.

GNSS data is stored as it is received, no data compression is performed.

4.2.4 Over The Air (OTA) output

The GNSS output can be redirected to a server via a data connection, this communication is unidirectional, so it is not possible to send UBX commands to the positioning chip/module receiver. The TCP protocol is used to transport data.

5 Hybrid positioning and CellLocate®

5.1 Introduction

Although GNSS is a widespread technology, the reliance on the visibility of extremely weak GNSS satellite signals means positioning is not always possible, particularly in shielded environments such as indoors and enclosed park houses, or when a GNSS jamming signal is present. This situation can be improved by augmenting GNSS receiver data with mobile network cell information to provide a level of redundancy that can benefit numerous applications.

Hybrid location provides a set of features, allowing the user to query the device position using a single AT command (+ULOC) which triggers the position calculation based on the GNSS receiver and/or the position estimated from the visible cells (CellLocate®). The MGA server accessed for the position estimation is configured by +UGSRV AT command for multi-GNSS receiver.

Hybrid positioning is designed to provide a position estimate.

Hybrid positioning may be configured to provide position estimates, on request, using the best of all the available information. Example applications might be:

1. Logistics operations, in which managers wish to determine where assets are, even though they may temporarily be inside in a depot. In this application, hybrid positioning is activated on request, and if the device does happen to be inside a building, then the accuracy provided by CellLocate® when indoors is sufficient to establish at which depot the device is located.
2. Alert applications, where the users want to report their location, even if they go indoors. Best performance is achieved in such applications by periodic hybrid position requests by the user's device to maintain a current estimate of the environment, and so give an excellent ability to respond with an accurate location in the event of an alert.
3. Localized operations, where the position awareness is desired over a small locality or site, such as a hospital or village. In this type of operation, the locality to be covered can be surveyed prior to usage, by walking around the region doing periodic hybrid position requests, and thereby gathering detailed information on the cellular environment by CellLocate® for use in the application.

5.2 Positioning sensors

The following positioning sensors are supported:

- **GNSS receiver sensor:** the positioning chip or module is connected to the cellular module as described in previous sections and is configured by +ULOCGNSS AT command (the configuration includes the set of GNSS aiding modes and, if the connected receiver is multi-GNSS, the GNSS systems allowed to optimize the GNSS position calculation process).
- **Cellular sensor:** CellLocate® provides an estimated location based on visible network cell information reported by the cellular module and is configured by +ULOCCELL AT command. When CellLocate® is activated, a data connection to the CellLocate® server is established and the network cell information is passed to the server which provides an estimation of the device position based on the cell information. When using CellLocate®, the position accuracy is not predictable and is determined by the availability in the database of previous observations within the same area. CellLocate® does not require itself a GNSS receiver to be present or active, however the performance of the hybrid positioning is much better if GNSS is present so new records can be submitted to the database.
- **Autonomous sensor (AS):** the last known position (if available), with an accuracy that is degraded according to the elapsed time since then.

Once the sensors are configured and a position request is triggered, the sensors are fully controlled by the cellular module. The cellular module automatically switches the sensors on, optimizes the power consumption, drives the position estimate methods and aiding/GNSS modes, and outputs the estimated position together with its uncertainty.

Figure 20 and Figure 21 show the sequence of the exchanged messages between involved elements when Hybrid positioning or stand-alone CellLocate® methods are used.

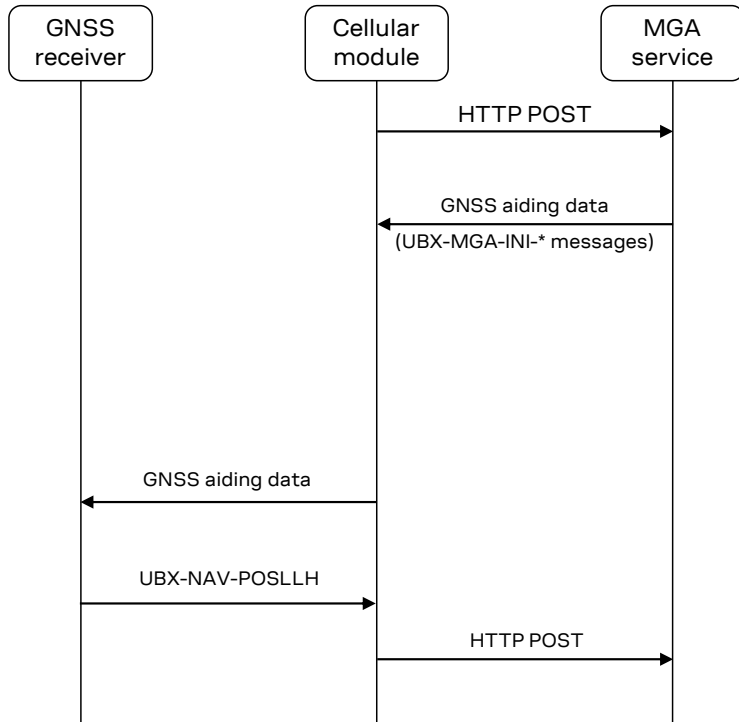


Figure 20: Hybrid positioning message sequence

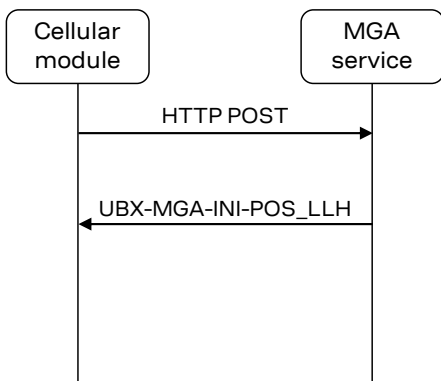



Figure 21: Stand-alone CellLocate® message sequence

Stand-alone CellLocate® does not require a GNSS receiver and therefore is suitable for applications which do not require high positioning accuracy but where current consumption, compactness and cost reduction must be reduced to a bare minimum. Being cellular localization based on the cell(s) seen by the cellular module, the position estimation cannot be derived if the reported cell information is not available in the database.


 If the CellLocate® server, for whatever reason, cannot be reached during the +ULOC AT command execution, then the position will be calculated only using the GNSS sensor. The detailed response allows identification of the sensor that produced the position estimate.

The solution returned by CellLocate® is very much dependent on how well the database is populated in the specific area of interest. If only sparse observations are present, the accuracy of the solution and the estimated uncertainty will be quite large. Using +ULOC AT command in hybrid mode automatically submit new records to the database (even without GNSS aiding configured). In this way a device, with a GNSS receiver and a cellular module, will experience an improvement in the CellLocate® performance as time goes by since it contributes to the coverage of the area of interest.

The arrangement of mobile network cells does not remain static (e.g. new cells are continuously added or existing cells are reconfigured by the network operators). For this reason, when a hybrid positioning method has been triggered and the GNSS receiver calculates the position, a database self-learning mechanism has been implemented so that these positions are sent to the server to update the database and maintain its accuracy.

5.3 Basic functionality

The two hybrid positioning sensors (GNSS and CellLocate®) are configured using AT commands (sensor configurations are explained later). When the +ULOC AT command triggers the sensor, the cellular module drives the position calculation process and provides the position estimate based on the sensor combination that best fulfills the user requirements previously configured.

 Hybrid positioning and communication with the GNSS receiver through the cellular system (see section 4.2) features are mutually exclusive and the activation of hybrid positioning requires the previous deactivation of communication with the GNSS receiver via +UGPS AT command.

The hybrid positioning function performed by the +ULOC AT command is controlled to meet the requirements of the particular application by the key parameters:

- the desired target accuracy
- the timeout during which a position must be returned

When the timeout has expired or the required position accuracy is satisfied, a URC provides the position together with its uncertainty.

Figure 22 shows the general flow of the hybrid positioning function producing a position estimate.

To avoid unnecessary activation of the sensors, an initial check is carried out, and when hybrid positioning is used and before starting up the allowed sensors (GNSS and/or cellular), the cellular module immediately calculates a position estimate. This takes into account:

- the solution from the autonomous sensor: the last known position (if available), with an accuracy that is degraded according to the elapsed time since then: it is assumed a speed equal to 120 km/h to degrade the position respect to time
- information provided by the serving cell, such as the country code

If the uncertainty of this estimate is already better than the target accuracy, then this position is output without starting up the allowed sensors.

If the uncertainty is poorer than the target one (or if no last known position is available), the cellular module powers up the allowed sensors and drives the position calculation process to output the position based on the sensors' combination, which better fulfills the +ULOC configuration.

As explained in the following sections, sensors (GNSS/CellLocate®/AS) are started up and operated as permitted by and in accordance with the predefined sensor configurations. The configuration settings may, for example, enable or disable the use of the CellLocate® service. For the complete list of configuration supported by +ULOC AT command, see the u-blox AT command manual [2].

The GNSS receiver uses the sensors to repeatedly attempt to produce and refine a position fix, and may also use assistance information and position estimate from the CellLocate® service.

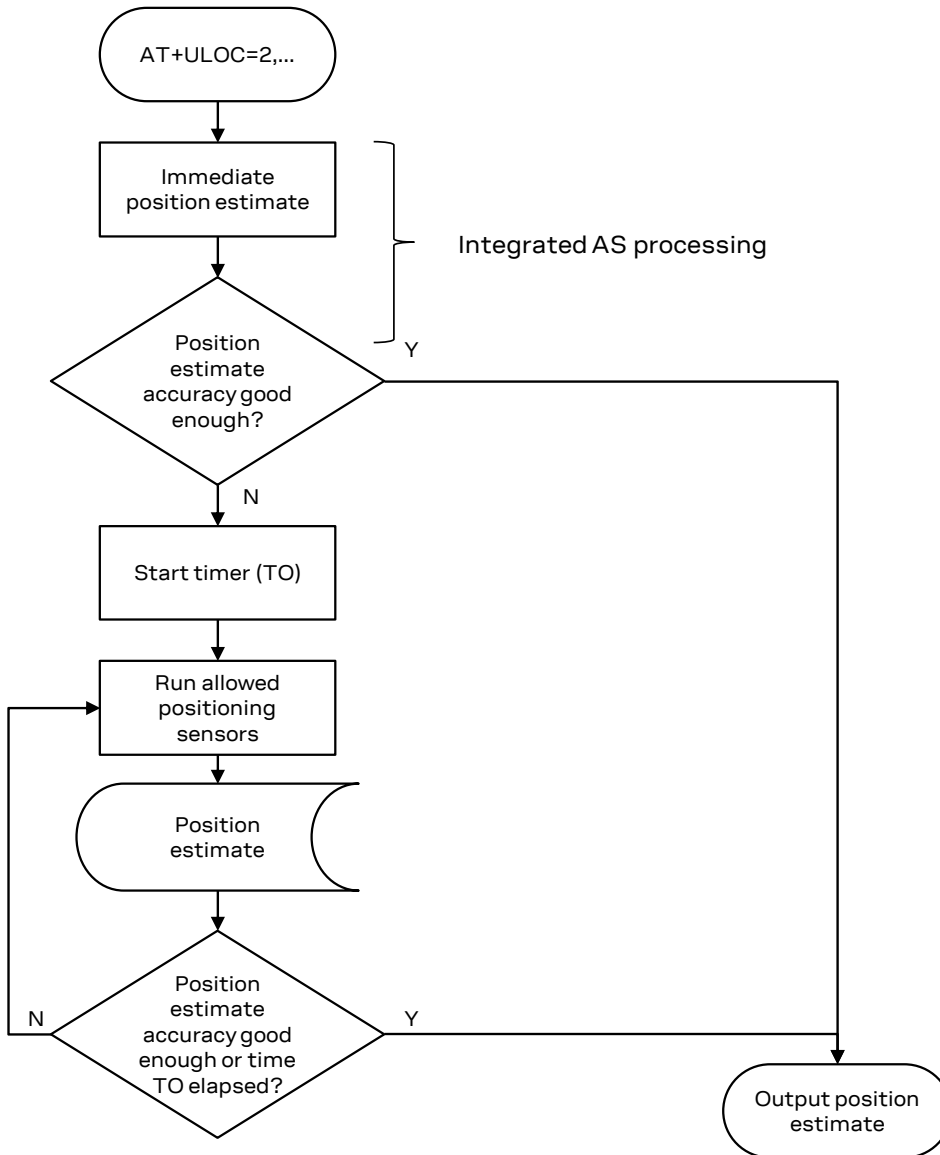



Figure 22: Hybrid positioning flow diagram


In due course, the hybrid positioning feature either:


- produces a position fix with an uncertainty figure that is at least as good as that requested
- experiences a timeout – in which case it reports the current best available estimate, together with its uncertainty

The behavior of the hybrid positioning feature is determined by the configuration of the sensors and of the setting of the accuracy and timeout parameters. For example:

- To get the best possible position fix, set the desired accuracy very small, e.g. 1 m, and the timeout period duration long. The hybrid positioning feature then runs to the end of the timeout period, and produces the final, best, output position fix
- To get a position estimate with the minimum energy consumption for maximum battery life, set a large desired accuracy figure for the hybrid positioning, e.g. 1 km, (see [Figure 22](#), most likely the AS sensor position degraded or the GNSS one will be quickly returned if the time spent is below 30 s)

 u-blox is extremely mindful of user privacy. When a position is sent to the CellLocate[®] server, u-blox is unable to track the SIM used or identify the specific device.

 For the syntax description of +ULOC, +ULOCCELL, +ULOCGNSS and +ULOCIND AT commands, see the SARA-R5 AT commands manual [\[2\]](#).

 The detailed response provides useful information about the sensor used to estimate the position. When the sensor reported is “0” this means that the device has been able to calculate the position to sufficient accuracy immediately by means of the integrated AS sensor, and has output this immediate position estimate.

5.4 GNSS sensor setup

The +ULOCGNSS AT command sets up the GNSS sensor for hybrid positioning and timing. It is possible to configure which aiding types and GNSS systems (see [section 3](#)) are available to the GNSS sensor. The additional parameters, listed below, are available for modifying the GNSS receiver behavior. These are strictly related to the GNSS receiver. The parameters are sent at GNSS power on and are not saved within the receiver. The default values are the same as those on the positioning chip/module. For values and additional details about their effect, see the u-blox receiver description related to the u-blox GNSS receiver [\[7\]](#):


- UBX-CFG-PM2 message configures the power save mode of the GNSS by setting the optimization target flag in power consumption or in default mode
- UBX-CFG-NAV5 message configures the minimum number of satellites for navigation, minimum satellite signal level for navigation and if the initial fix must be 3D
- UBX-CFG-NAV5 configures the static hold mode: allows the navigation algorithms to decrease the noise in the position output when the velocity is below a pre-defined "Static Hold Threshold". This reduces the position wander caused by environmental issues such as multi-path and improves position accuracy especially in stationary applications. By default, static hold mode is disabled
- UBX-CFG-SBAS enable/disable: Satellite Based Augmentation Systems (SBAS) is an augmentation technology for GNSS, which calculates GNSS integrity and correction data with Ranging and Integrity Monitoring Stations (RIMS) on the ground and uses geostationary satellites (GEOs) to broadcast GNSS integrity and correction data to GNSS users. The correction data is transmitted on the GNSS L1 frequency (1575.42 MHz), and therefore no additional receiver is required to make use of the correction and integrity data
- UBX-CFG-ITFM configures Jamming/Interference monitor: enables/disables the indicator, sets the antenna type, broadband jamming detection threshold and continuous wave jamming detection threshold
- UBX-CFG-GNSS configures the GNSS system channel sharing configuration and activation for a multi-GNSS receiver. For details about valid configurations, see the u-blox receiver description related to the u-blox GNSS receiver [\[7\]](#)

5.5 Cellular sensor setup

5.5.1 Cellular location sensor +ULOCCELL

The +ULOCCELL AT command pre-configures the device to determine which cell information must be reported to the CellLocate® server for the position estimation as follows:

- “normal scan”: the cellular module only reports the parameters of the neighboring visible cells designated by the network operator, which are normally collected by the module during its “network” activity. This configuration is suitable for a quick, rough update of location
- “deep scan”: the cellular module scans and reports all visible cells. This gives not only the parameters of the visible cells of the serving network operator, but also the cells of all other available network operators, thus improving location accuracy. Although this takes a bit longer time (approx 30 s to 2 minutes is needed to perform a deep scan), and requires more communication traffic, as more data is sent to the server (9 bytes for each cell), the coverage, reliability and accuracy are all substantially better if hybrid positioning is pre-configured to operate in the “deep scan” mode of operation

 Deep scan configuration is strongly recommended to achieve the best performance for Hybrid positioning and CellLocate®.

5.5.2 Localization information request +ULOCIND

The +ULOCIND AT command enables sending of URCS in the case of +ULOC operations. The URC returns the result of the steps of an +ULOC operation.

5.6 AT command examples

Command	Response	Description
AT+UGSRV="cell-live1.services.u-blox.com","cell-live2.services.u-blox.com","abcdefg890abcdefg890ab",14,4,1,65,0,15	OK	MGA access configuration. A valid authentication token must be supplied to correctly access the MGA server. GNSS sensor is configured with GPS+GLONASS system for AssistNow Offline aiding (65).
AT+UPSDA=0,3	OK	Activate the data connection.
AT+ULOCCELL=1	OK	Configure for deep network scan.
AT+ULOCNSS=15,,4	OK	Enable all GNSS aiding modes and set the minimum number of satellites for navigation to 4.
AT+ULOCIND=1	OK	Enables the localization information request status.
AT+ULOC=2,3,1,120,1	OK	Start hybrid positioning enabling both GNSS and cellular sensor with a timeout of 2 minutes and a desired accuracy of 1 m. The answer mode is detailed.
	+UULOCIND: 0,0	Network scan started.
	+UULOCIND: 1,0	Network scan finished.
	+UULOCIND: 2,0	Requesting CellLocate® service (accuracy was not reached when network scan ended, so the server is queried).
	+UULOCIND: 3,0	Receiving CellLocate® data.
	+UULOCIND: 4,0	A valid GNSS position was available, so this is sent to the server.
	+UULOC: 08/07/2015,12:47:41.000,45.7139302,13.7405056,265,5,0,0,5,1,8,2,11	Output when the desired accuracy is reached or timeout is expired (as in this case).

Command	Response	Description
AT+ULOC=2,3,1,120,100	OK	Start hybrid positioning enabling both GNSS and cellular sensor. The answer mode is detailed.
	+UULOCIND: 0,0	
	+UULOC: 08/07/2015,12:49:12.000,45.7137454,13.7404879,246,36,0,0,29,1,5,2,5	Accuracy is reached (uncertainty is 36 m) before the end of network scan, therefore the CellLocate® server is not queried.
	+UULOCIND: 1,0	Network scan finished.
	+UULOCIND: 4,0	A valid GNSS position was available, so this position + cells footprint is sent to server.

5.7 How to implement a data collection unit

The CellLocate® performance is influenced by the number of positions and related network cells reported to the server. If an area is well mapped then the position reported by the cellular sensor is more precise.

To fill the server database with the cell information of a given area, a cellular module can be used to continuously perform the hybrid positioning requests. An example of an AT sequence to implement a data collection unit is described below and it is divided into the initialization phase (section 5.7.1) and the main loop (section 5.7.2).

5.7.1 Initialization

Command	Response	Description
AT+UGSRV="cell-live1.services.u-blox.com","cell-live2.services.u-blox.com","abcdefg890abcdefg890ab",14,4,1,65,0,15	OK	Optional step only needed if the default server has been modified.
AT+ULOCCELL=1,1,"Track_ID"	OK	Deep network scan configuration: the track id is optional and it is only needed to verify that the module is contributing to the server. "Track_ID" is an example.
AT+UPSD=0,1,"YOUR_APN"	OK	Data connection configuration to communicate with the server. "YOUR APN" is an example.
AT+UPSDA=0,3	OK	Activate the data connection.

5.7.2 Loop

This is the main loop to feed the server database; repeat the sequence (the suggested interval between two subsequent iterations varies depending on the dynamic conditions: 2 minutes for static or low-dynamic, 1 minute for highway speed).

Command	Response	Description
AT+UPSND=0,8	+UPSND: 0,8,X OK	If the data connection is down (X="0") start it using the command AT+UPSDA=0,3.
AT+ULOC=2,3,1,120,100	OK	Start hybrid positioning enabling both GNSS and cellular sensor.
	+UULOC: 23/05/2011,12:23:48.000,45.714115,13.740867,292,333,0,000,19,1,7,3,5	When a result is available wait before starting a new iteration, in this way the calculated position and the harvested cells are sent to the server.

6 Time information from cellular modules

The ability to produce a clock output and timing information is available in the u-blox cellular modules.

Timing information is important for M2M devices, for

- Interpreting sensor information
 - detecting differences and changes
 - interpreting sequences of events
 - identifying "which alarm happened first?"
- Synchronizing distributed applications
 - triggering actions in remote places to take place at particular times
 - to coordinate actions by multiple devices
 - for cross-device functions and applications
- For security
 - detection of attacks, for example by monitoring for disturbance of the local clock

For further details on timing technologies for wireless applications, see the u-blox Accurate Timing for the IoT whitepaper [11].

6.1 Sources of timing information

The module may derive time information from the synchronization with the base station and, if fitted, obtain them from a GNSS receiver.

Source	Availability	Precision	Accuracy
GNSS	Might be limited by weak signals (indoors) or interference (jamming)	Excellent	Excellent
LTE base station	Widely available	Excellent short term stability, usually good long term stability	Absolute timing may be undefined depending on network deployment. Drift specification is relaxed. Timing observed by modem depends on propagation distance.

Table 27: The characteristics of timing sources available to a modem

A combination of the use of the signals is desirable to meet different usage models (see section 6.3). Using a combination brings advantages of

- maintaining the ability of providing a timing output
- improving precision and accuracy

Internally, the module may use timing from one source, to calibrate or to assist in the generation of timing from another source.

6.2 Interface of timing information to the application

The inputs and outputs for the timing function are

- Outputs
 - a sequence at 1 pulse-per-second (PPS)
 - single trigger output, with a message labelling the time of the output signal
- Inputs
 - single interrupt input, with a message returned reporting the time of the input signal

The timing source and the expected uncertainty are output, to enable appropriate interpretation and use by an application.

6.3 Usage models

A set of usage models are considered here to illustrate the range of applications and configurations for the module hybrid timing feature

1. A single device, for internal timekeeping
2. A device with GNSS timekeeping, with a fallback to an LTE time base in the case of temporary loss of GNSS
3. Relative timing between a number of local devices
4. Relative timing between devices distributed over a wide area
5. Timing provision for a device deep indoors, with calibration by means of a reference anchor receiving GNSS
6. Fine time assistance by means of a reference anchor to improve the GNSS capability of a module

These are described in the following sections. All use cases for timing which are at present considered are for devices which are static, stationary.

6.3.1 LTE for measuring timing intervals in a sensor

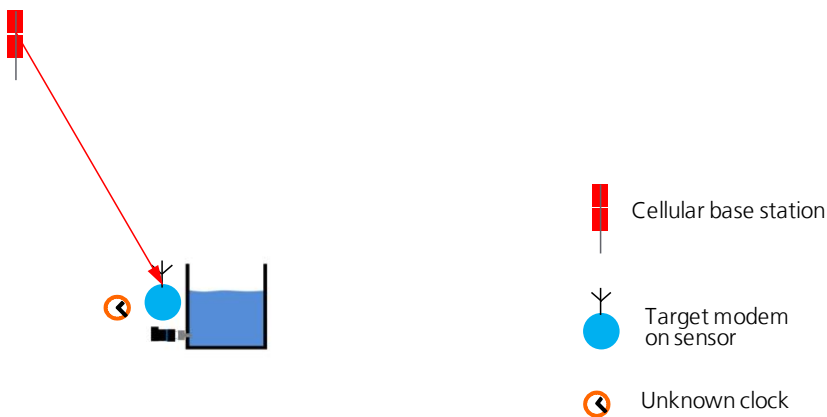


Figure 23: Using LTE to measure timing intervals

In the example of [Figure 23](#), the signal from the LTE base station is monitored and provides an accurate clock tick to measure time intervals precisely.

In operation

- elapsed time between events in the module can be accurately measured with reference to the LTE base station frame time
- to achieve long battery lifetime the device can go into a sleep mode, and then when awaking resynchronize to the LTE base station to re-establish the change in time precisely



Note that:

- the timekeeping is that of the base station
- if the device moves, then the perceived time will change, as the propagation time from the base station changes
- time measured on the device relates only to the events at that device, and cannot be compared to events on other devices

6.3.2 LTE bridging GNSS as a temporary fallback

A particularly useful example of using the LTE as a timing reference, is when it can provide a fallback to measure time intervals within the device, when GNSS operation is temporarily limited. This will be illustrated considering the example of the synchronization of small cells.

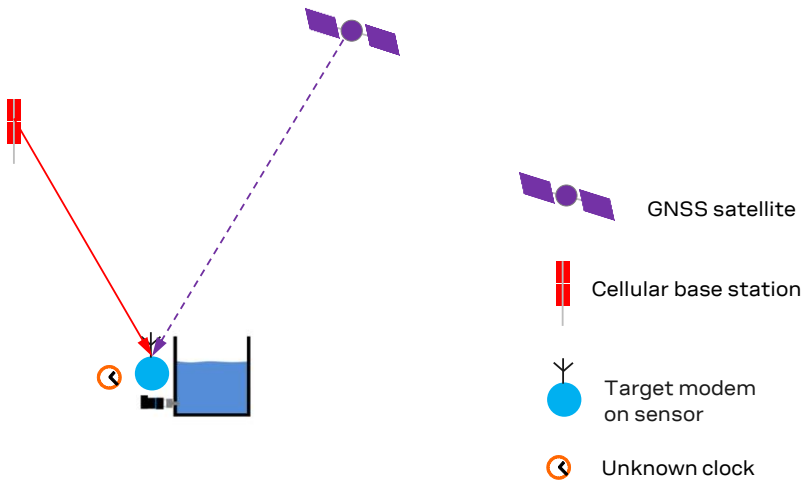


Figure 24: Using LTE as a fall back, if GNSS becomes unavailable

In the example of [Figure 24](#) the sensor is provided with a timing reference either from the GNSS receiver or, as a fallback, from LTE receiver.

The product may use the fallback if GNSS:

- suffers a system failure
- becomes unavailable because of difficult propagation (such as sunspot activity, or weaker indoor conditions)
- is accidentally or deliberately jammed

In operation:

- Initially the product obtains absolute time from GNSS.
- This absolute time is then used to calibrate the signal received from the LTE base station, so that its absolute time is known
- The timing of the signal received from the LTE base station then continues to be tracked
- The timing reference obtained from LTE base station is used as a fall back option if the GNSS timing reference becomes unavailable



Note that for this use case:

- The same device is doing all the measurements, so the location of the base station does not matter, and does not need to be known
- It is assumed that the device is static
- In the absence of GNSS the device remains locked to the timekeeping of the LTE base station. Therefore the timekeeping will be determined by that of the LTE base station

6.3.3 Relative timing between modules

In the example of [Figure 25](#) a number of sensors are clustered together, with view of the same base station. The application wishes to establish the relative timing between events in a number of modules.

In this example it is assumed that the modules are in the same vicinity, and that

- The delay as a result of the signal propagation is negligible, as far as the application is concerned
- Modules are connected to the same LTE base station
- The relative timing between modules can be precisely estimated, using the base station as a common reference

In operation

- The signal from the LTE base station is used to establish a local clock
- The timestamps by the different modules are compared to establish the relative timing of events at different modules

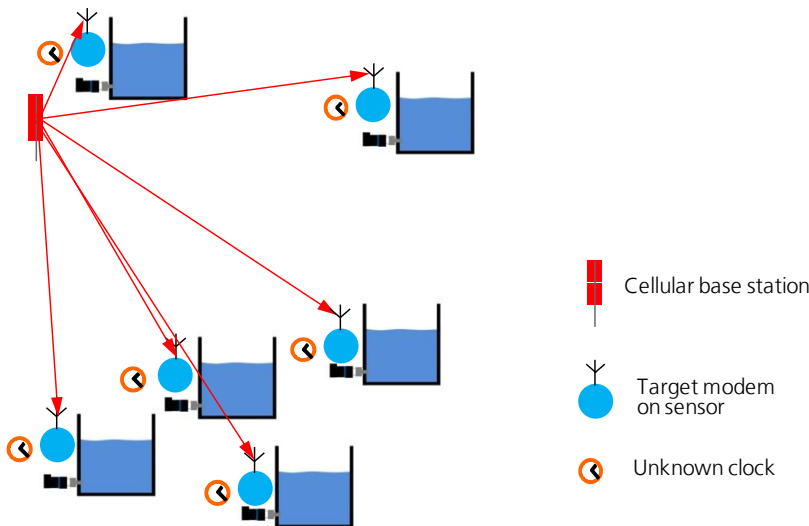


Figure 25: Relative timing between a cluster modems using a common LTE base station as a reference

The relative timing of the modules is affected by the relative separations of the different modules to the base station, as illustrated in [Figure 26](#).



Figure 26: The effect on relative timing of uncertainty in the base station location

The location of the modules might be known, at least approximately, but the location of the serving cell base station used for timing is normally not known. This will lead to uncertainty in the relative timing of the arrival of signals at the modules, and hence in the perceived relative timing at the modules.

As illustrated in [Figure 26](#) for the case of two modules at A and B separated by a distance d_{AB} if the base station is close to A then the signal from the base station arrives at the module at B after a delay of $t_B - t_A = d_{AB}/c$, where c is the speed of light. Two clocks synchronized by receiving this signal will therefore be running with an offset, with the clock at A running in advance of the clock at . Similarly if the base station happens to be sited close to the location, then the use of the transmitted signal to

synchronize the clocks will result in an offset of $t_B - t_A = -d_{AB}/c$. The uncertainty in the relative timing caused by these propagation delays thus depends on the separation between the modules, and on the relative location of the base station and the modules. As we have seen, in the worst case the error is

$$t_B - t_A = \pm d_{AB}/c$$

For module sensors separated by 300 m this gives a worst case error of $\pm 1 \mu\text{s}$. For many applications this is a minor effect and may be neglected. This is worst case, and should be taken into account. However modules at the same distance from the base station will have more accurately similar timing.

Note that for this use case:

- The absolute UTC time is not known, but this is not needed for handling relative timing between the modules
- Any disturbance or change in the LTE base station may also affect the relative time measurements by the module, if the measurements by the modules take place at different times. For example, care should be taken when accurately comparing a measurement in the morning by one module, with a measurement in the afternoon by a second module.
- No GNSS is involved or required

6.3.4 Modules distributed over a wide area

In some applications sensors are widely distributed across an area. In this case the sensors do not all see the same serving cell or base station.

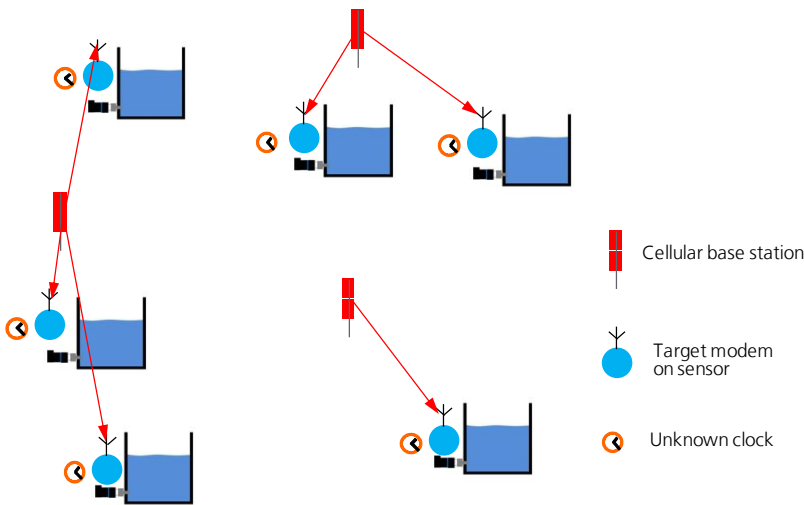


Figure 27: Timing for modems distributed over a wide area

In the example of [Figure 27](#) the application wishes to establish the relative timing between events in a number of modules which are distributed over a wide area. The application may wish to coordinate activities in different areas, or to report measurements with knowledge of time.

In this case we may be interested

- In the interval of time between events on the same device
- The differences in time between events on different devices
- Synchronization of the clocks on the different devices

The most accurate way to do this is to use GNSS, but this is not always applicable, on the grounds of signal availability, or equipment cost. Timing can still be performed using the network, though naturally with some limitations on the accuracy.

In operation for such applications

- The signal from the LTE base station is used by the module to establish its local clock rate, for timing the intervals between events on the single module
- The timestamps from the different modules may be compared using the estimates of the absolute time
- It might also be that the relative time between different base stations is managed by the network operator within limits, for example to maintain connectivity specifications. In which case this can be used to support relative timing between clusters of modules listening to different base stations

- Note that for this use case
- The relative timing of events on a single module is normally very precise, as it is determined by the timekeeping performance of the LTE system base station (This assumes that the module is stationary, as the absolute time reported by the module will change, if it is moved)
 - For relative timing within each cluster the absolute UTC time does not need to be known accurately
 - For relative timing between clusters, GNSS integrated in at least one sensor module in each cluster may be used to synchronize the different clusters together

6.3.5 Local anchor with GNSS giving accurate time

Figure 28 illustrates a further example, addressing applications in which the absolute time is important, but GNSS is not available - perhaps because the module is located deep indoors. In this case an additional module, with GNSS, is installed as a local reference anchor.

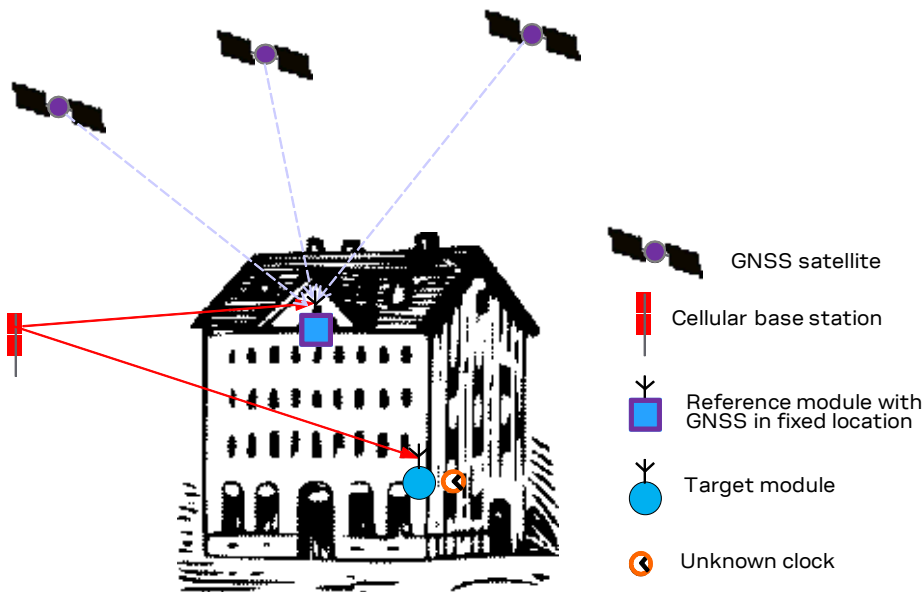


Figure 28: Using a local anchor with GNSS to calibrate the timing of a signal from an LTE base station

The anchor has good GNSS, and calibrates the timing of the signals from the cellular base station. The calibration information is shared with other modules which are listening to the cellular base station, so that they can use this as a timing reference.

In operation

- The anchor module performs a GNSS fix, establishing time at the anchor
- The timing of the signal received by the anchor from the LTE base station is measured, and calibrated against the GNSS time. This calibrates the timing of the LTE base station
- The calibration information is communicated to the timing module
- The timing module receives the signal from the LTE base station, and measures its timing

- The calibration information is then used to generate the correct absolute time at the timing module, which is then available for the application



Note that for this use case

- The anchor is assumed to be placed such that it has good GNSS reception, for the calibration of the signal from the base station
- If the distances from the base station to the anchor and to the timing module are not the same, then there will be a corresponding small timing offset between them
- If GNSS reception by the anchor is lost for some reason (such as interference) then timing continues to be provided to the modems by reference to the LTE base station

6.4 Application interface

Some AT commands have been implemented explicitly for providing and configuring timing information to the user application.

6.4.1 Time information +UTIME

The +UTIME AT command is intended to provide timing information from the cellular module via three operating modes:

- Pulse Per Second (PPS) output sequence from a GPIO pin
- single time pulse output from a GPIO pin and a URC with the accurate time stamp of the pulse
- time stamp of external interrupts (received in a dedicated GPIO pin)

Time pulses will be generated using one of the supported GPIO pins of the cellular module (see the sections [2.2.1.3](#) and [2.3.1.4](#)). Similarly, the external interrupts will be received using one of the supported GPIO pins of the cellular module (see sections [2.2.1.3](#) and [2.3.1.4](#)).

The time information given as output will reference to the rising edge of the pulse.

The time information source may be GNSS or the autonomous time propagation (LTE module clock). In addition unsolicited messages are output when the device changes the source of the timing – in particular when GNSS becomes unavailable, and available again (see +UTIMEIND on section [6.4.2](#)). It is possible to configure which aiding types and GNSS systems (see section [3](#)) are available to the GNSS sensor by means of the +ULOGGNSS AT command.

Two (or more) modules registered to the same base station (see usage model in section [6.3.3](#)) can be synchronized if the +UTIME AT command is sent simultaneously (+/- 1s) to both devices.

6.4.2 Time information request +UTIMEIND

The +UTIMEIND AT command enables the sending of URCs during +UTIME operations. The URC provides the status of the timekeeping in the module.

In particular, it informs the user about:

- the operation in progress
- the source used for timekeeping
- whether time is in UTC or on an arbitrary time scale
- generic results of intermediate operation steps



In case of alignment with UTC time (by mean of GNSS), it also returns the discontinuity in the local time. The knowledge of this discontinuity is needed to compare in time two events occurred before and after the re-synchronization.

6.4.3 UTIME configuration +UTIMECFG

This command sets the UTIME configuration parameters.

The user can configure a time offset to correct the local time scale or align it with the UTC time.

For example, considering the usage model in section 6.3.5 when the anchor module calibrates the timing of the LTE base station against the GNSS time, it returns a URC (+UTIMEIND) providing the discontinuity in the local time. This calibration information can be used to generate the correct absolute time at the timing module (without GNSS) by means of the +UTIMECFG AT command.

6.5 Expected performance

The target specifications for the hybrid timing function for u-blox LTE platforms are shown in [Table 28](#).

Timing	GNSS	LTE
Relative between events ¹	< 0.1 μ s	< 1 μ s for a limited period ²
Relative between modems	< 1 μ s	< 1 μ s
Timing relative to base station ³		< 0.5 μ s ⁴
Absolute, UTC ⁵	< 0.1 μ s for timestamp	~10 μ s for one day ⁷
Absolute, UTC with calibration	< 0.5 μ s for 1pps output	< 1 μ s for a limited period ⁷
Anchor Assisted absolute UTC		< 1 μ s

Table 28: Expected timing precision and accuracy, for CellTime hybrid timing on the u-blox LTE modems

Notes

1. Relative timestamp of two events on the same (stationary) module
2. The measured timing interval will become less accurate over time, depending on the drift of the LTE base station, and whether the base station timing has been measured against GNSS
3. The timekeeping from a stationary module, relative to the timekeeping of the local LTE base station, over a period of time. If the LTE base station drifts, so will the timekeeping and output of the module. This assumes that there is no calibration (which actually would introduce additional errors into the measurement of relative timing)
4. There will also be a time offset, depending on the separation of the module from the base station
5. Strictly speaking this is GNSS time, not UTC. Assuming the base station signal is not calibrated by the GNSS receiver, and that the GNSS receiver has visibility of at least 4 GNSS satellites
6. In the temporary absence of GNSS, depends on the drift of local LTE base station. This is typically managed by the network operator to be within a limit, over time
7. The variability of the drift of the base station will degrade the fit to the calibration measurement over time
8. This also depends on the distance of the module from the anchor with GNSS, which affects the relative propagation time of the signal from the base station to the anchor and the module
9. The performance reported in [Table 28](#) are expected for the PPS mode and the timestamping of external interrupts mode. Lower accuracy is expected for the one shot mode (can be generalized < 5 μ s for both GNSS and LTE cases)

6.6 AT commands examples

6.6.1 Activation of UTIME - PPS mode

Command	Response	Description
AT+UTIMEIND=1	OK	Enables the timing information request status.
AT+UTIMECFG=0,0	OK	Reset the time offset configuration
AT+UGPIOC=19,22	OK	Configure the output pin for the PPS.
AT+UTIME=1,1	OK	Request PPS output generation enabling GNSS/LTE (best effort).
	+UUTIMEIND: 1,0,0,0	Initialization of sensors after starting UTIME operations (PPS mode).
	+UUTIMEIND: 4,2,0,0	Synchronized with LTE BS (local time scale): start PPS output.
	+UUTIMEIND: 4,1,1,0	Synchronized with GNSS TP (UTC time): align PPS output.
	+UUTIMEIND: 4,1,1,1,295045451,0	Alignment with UTC time: offset compared to local time scale.
	+UUTIMEIND: 4,2,1,0	GNSS fix lost. Synchronized with LTE BS: keep PPS output aligned to UTC time.
AT+UTIMECFG=3000,0	OK	Configure a time offset of 3000 ns: re-align PPS output.
AT+UTIME=0	OK	Turn off the UTIME operations.
	+UUTIMEIND: 0,3,1,0	UTIME operations are off.

6.6.2 Activation of UTIME – One shot mode

Command	Response	Description
AT+UTIMEIND=1	OK	Enables the timing information request status.
AT+UTIMECFG=0,0	OK	Reset the time offset configuration.
AT+UGPIOC=19,22	OK	Configure the output pin for the time pulse.
AT+UTIME=2,1	OK	Request single output pulse with time stamp enabling GNSS/LTE (best effort).
	+UUTIMEIND: 2,0,0,0	Initialization of sensors after starting UTIME operations (one shot mode).
	+UUTIMEIND: 4,2,0,0	Synchronized with LTE BS (local time scale): generate single output pulse with timestamp (default time origin: 1 st of January 2018).
	+UUTIME: 01/01/2018,00:00:03,123.456789,0.000000000,0	Timestamp of a single pulse (local time scale).
	+UUTIMEIND: 4,1,1,0	Synchronized with GNSS TP (UTC time): align timestamps to UTC time.
	+UUTIMEIND: 4,1,1,1,22962682,74774978	Alignment with UTC time: offset compared to local time scale.
AT+UTIME=2,1	OK	Request single output pulse with time stamp (UTIME already initialized).
	+UUTIME: 15/05/2020,10:12:34,123.456789,0.000001234,1	Timestamp of a single pulse (UTC time scale).
AT+UTIMECFG=3000,60	OK	Configure a time offset of 3000 ns and 60 s: re-align timestamps.
AT+UTIME=0	OK	Turn off the UTIME operations.
	+UUTIMEIND: 0,3,1,0	UTIME operations are off.

6.6.3 Activation of UTIME – Timestamping of external interrupts mode

Command	Response	Description
AT+UTIMEIND=1	OK	Enables the timing information request status.
AT+UTIMECFG=0,0	OK	Reset the time offset configuration.
AT+UGPIOC=33,23	OK	Configure the input pin for the external interrupts.
AT+UTIME=3,1	OK	Request timestamping of external interrupts enabling GNSS/LTE (best effort).
	+UUTIMEIND: 3,0,0,0	Initialization of sensors after starting UTIME operations (timestamp of ext-int mode).
	+UUTIMEIND: 4,2,0,0	Synchronized with LTE BS (local time scale): start timestamping external interrupts (default time origin: 1 st of January 2018).
	+UUTIME: 01/01/2018,00:00:03,12 3.456789,0.000000000,0	Timestamp of an external interrupt (local time scale).
	+UUTIMEIND: 4,1,1,0	Synchronized with GNSS TP (UTC time): align timestamps to UTC time.
	+UUTIMEIND: 4,1,1,1,22962682,74 774978	Alignment with UTC time: offset compared to local time scale.
	+UUTIME: 15/05/2020,10:12:34,12 3.456789,0.000001234,1	Timestamp of an external interrupt (UTC time scale).
	+UUTIMEIND: 4,2,1,0	GNSS fix lost. Synchronized with LTE BS: keep timestamps aligned to UTC time.
AT+UTIMECFG=3000,60	OK	Configure a time offset of 3000 ns and 60 s: re-align timestamps.
AT+UTIME=0	OK	Turn off the UTIME operations.
	+UUTIMEIND: 0,3,1,0	UTIME operations are off.

6.6.4 Synchronize two modules using LTE frame

Two modules registered to the same Base Station (see use case in section 6.3.3) can be synchronized if the +UTIME AT command is sent simultaneously (+/- 1s) to both devices.

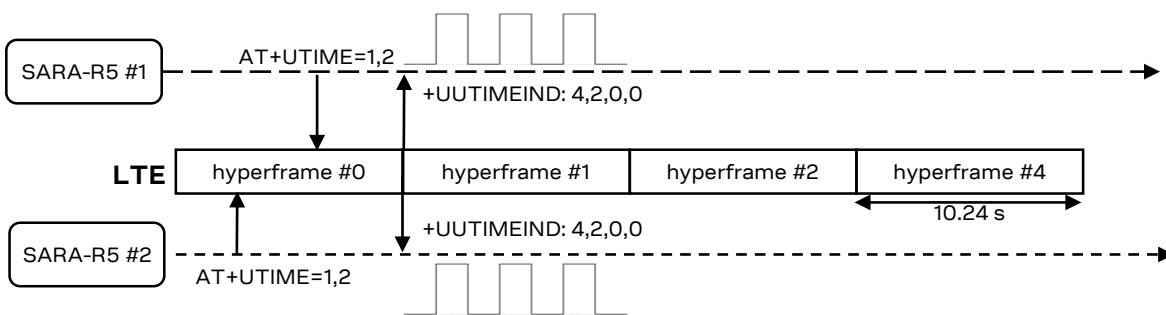


Figure 29: Example of time synchronization between two modules registered to the same base station

Appendix

A Compatibility matrix

A.1 “GNSS data ready” compatibility matrix

GNSS	Status
u-blox M8	Supported, but needs to be configured via +UGUBX

Table 29: “GNSS data ready” compatibility matrix


As an example, the command to configure the “GNSS data ready” on the UART1 TX pin of an external u-blox M8 GNSS receiver connected to SARA-R500S / SARA-R510S modules:

```
AT+UGUBX="B5 62 06 00 28 00 01 00 00 00 D0 08 00 00 00 E1 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 19 00 84 00 00 00 00 00 00 00 07 00 07 00 02 00 00 00 95 C3"
```

Where the meaning is:

Bytes	Meaning
B5 62	UBX message header
06 00	CFG-PRT message
28 00	Message length (40 bytes)
01	Port UART 1
00	Reserved
00 00	txReady
D0 08 00 00	UART mode
00 E1 00 00	Baudrate
00 00	In protocols (none)
00 00	Out protocols (none)
00 00	Flags
00 00	Reserved
00	Port I2C
00	Reserved
19 00	txReady (enable pin 6)
84 00 00 00	DCC Mode
00 00 00 00	Reserved
07 00	In protocols
07 00	Out protocols
02 00	Flags
00 00	Reserved
95 C3	Checksum

Table 30: +UGUBX parameter meaning

 The “GNSS data ready” command configuration is not required for SARA-R510M8S modules as it is already integrated in the firmware and sent automatically to the GNSS if the data ready feature has been enabled via +UGPRF AT command.

A.2 AssistNow Autonomous compatibility matrix

GNSS	Status
u-blox M8	Partially supported (see u-blox M8 receiver description [7] for any limitation)

Table 31: “AssistNow Autonomous” compatibility matrix

B Cellular module and GNSS receiver compatibility matrix

Table 32 summarizes compatibility between cellular modules and GNSS receivers.


Cellular module	Positioning chips and modules	Positioning chips and modules FW version
SARA-R500S / SARA-R510S	u-blox M8	SPG 2.01
		SPG 3.01
		SPG 3.51

Table 32: Cellular module and GNSS receiver compatibility matrix

C Best practices for CellLocate[®] (+ULOC)

The following is a list of the best practices for using hybrid positioning:

- It is suggested the use the detailed response, to know the sensor used in the position returned:
 - last valid position degraded in time (assuming as speed ~100 km/h)
 - the GNSS fix
 - the CellLocate[®] location information
- Once the +ULOC AT command is sent, the user/application should wait for the corresponding +UULOC URC before issuing the command again. If a new +ULOC AT command is sent before the +UULOC URC, previous command is aborted, but in this way the position returned is the available position at that time (which may not be the best one).
- The use of the CellLocate[®] sensor and/or some aiding mode requires a data connection, which must be active until the +UULOC URC is received.
- The network scan type can either be “normal” or “deep”, this influences the amount of data exchanged with the server.
- The network scan type also influences the time needed to complete the scan, so the timeout value should be set accordingly. Be aware that the cell information is sent to the server only when the scan is completed, so setting a small value for the timeout means that the scan information will not be used:
 - “normal” implies sending the information in the report from the serving cell: always available
 - “deep” is similar to sending AT+COPS=5 (extended network search). The duration is related to the number of visible cells; it could last about 1 minute (average value).
- The behavior of the hybrid positioning feature is determined by the configuration of the sensors and of the setting of the accuracy and timeout parameters:
 - to get the best possible position fix, set the desired accuracy very small, e.g. 1 m, and the timeout period duration long
 - to get a position estimate with the minimum energy consumption, for maximum battery life, set a large desired accuracy figure, e.g. 1 km

 Using the +ULOC AT command with GNSS sensor automatically submit new records to the database (even without GNSS aiding configured). The average data transmission amount is about 650 bytes but up to 1.5 kB can be transmitted: this information shall be taken into account for data and power optimized applications.

D Best practices for a data collection unit

The following is a list of the best practices for implementing a data collection unit:

- Set the type of network scan to “deep” using command: `AT+ULOCCELL=1`
- Set the minimum number of satellites for navigation, `<minSV>`, in `+ULOGNSS` to 4.
- If an aiding mode is needed, use AssistNow Offline (in `+ULOGNSS` set `<aiding>` to 2), to limit the data exchange between the module and the server, because the network scan is very sensitive to the data traffic.
- Start the hybrid positioning by enabling both GNSS and CellLocate[®] sensors. The suggested values are:
 - `<timeout>` = 120 s for low dynamic or 60 s for high speed (highway)
 - `<accuracy>` = 100 m

With these values, the suggested command is: `AT+ULOC=2,3,1,120,100`

- The CellLocate[®] performance depends on how much the database is populated: submitting new fixes will improve the CellLocate[®] overall performance.
- Positions submitted to the u-blox database are anonymous, so it is impossible to retrieve the real identity of a device.
- If the CellLocate[®] service must be tested, a “tag” is suggested to ease the debugging from the u-blox side:
 - `AT+ULOCCELL=1,1,"Tag_ID"`

E Best practices for time information (+UTIME)

The following is a list of the best practices for receiving the most accurate time information available from the cellular module:

- The `+UUTIMEIND` URC reports which sensor provides the time information:
 - GNSS clock (from the GNSS fix)
 - LTE base station
- Once the `+UTIME` AT command is issued, the user/application should wait for the `+UUTIMEIND: 4,2,0,0` indication (synchronized to LTE base station).
- The use of the `+UTIME` AT command could require a data connection, e.g. for GNSS aiding (AssistNow Online, AssistNow Offline) for faster and more accurate GNSS performance.
 - The user shall set the APN parameters of the network provider (`AT+UPSDA=0,1,"apn.name"`) and activate the PDP context (`AT+UPSDA=0,3`)
 - The user shall configure the servers that provide time information using the `+UGSRV` AT command (e.g. `AT+UGSRV="cell-live1.services.u-blox.com","cell-live2.services.u-blox.com","token"`)
- Configure the output pin (GPIO6) for the time pulse output by means of the `AT+UGPIOC=19,22` command
- Configure the input pin (EXT_INT) for the time stamp of external interrupts by means of the `AT+UGPIOC=33,23` command
- In case of SARA-R500S / SARA-R510S with an external GNSS, the user has to configure two additional pins to allow calibration and interaction with the external GNSS:
 - Connect the SDIO_CMD pin of SARA-R500S / SARA-R510S with the PPS pin of the external GNSS
 - Configure the input pin (SDIO_CMD) for the external GNSS time pulse input (input to receive an accurate time reference, as a sequence with 1 PPS from an external GNSS system) by means of the `AT+UGPIOC=46,28` command

- Connect the GPIO4 pin of SARA-R500S / SARA-R510S with the EXT-INT pin of the external GNSS
- Configure the output pin (GPIO4) for the external GNSS time stamp of external interrupt (output triggering via interrupt the generation of an URC timestamp from an external GNSS system) by means of the `AT+UGPIOC=25,29` command
- To get time information from the GNSS, the application waits for a valid fully resolved fix and time. This could last some tens of seconds up to 2 minutes, depending on the environment and satellites in view.

F CellLocate[®] customer proxy server

The proxy server implementation for the devices using HTTPS is very straightforward. The customer's proxy server must listen on port 443 and once a request is received, just forward it on to the u-blox CellLocate[®] service without token acknowledgement.

The port 443 (the default port for all HTTPS connections) must be opened if not already opened.

The HTTPS is a connection-oriented request-response protocol, whereas the UDP is connectionless. This means once the client has sent a request to the server, the connection remains open to the server and the client can receive the response from it. Hence, every request is managed against the device without any problem, unlike UDP where the user needs to ensure the requests are going to the correct device, etc.

As with most other Internet traffic, the requests to the u-blox services are standard HTTPS requests. If the requests originate from within a private network, then configure a standard HTTPS proxy or firewall to forward requests and pass back responses between the private network and the u-blox services on the public Internet. No special handling is needed, as the requests are all standard HTTPS requests. The users should communicate to their local IT/network administrators to correctly enable this access.

If the services are accessed via an HTTPS proxy or firewall, all the requests may appear to come from the HTTPS proxy or firewall itself. To avoid overuse restrictions being applied in this case, follow these steps:

- Inform u-blox of the IP address of the HTTPS proxy or firewall so that overuse restrictions can be removed for this IP address.
- Configure the HTTPS proxy or firewall to append the actual source IP address of the request to the standard HTTP "X-Forwarded-For" header field

If these conditions are met, then overuse restrictions will be correctly applied to the source device rather than the HTTPS proxy or firewall itself. The users should communicate to their local IT/network administrators to ensure this is the case.


G Glossary

Abbreviation	Definition
3GPP	3 rd Generation Partnership Project
AT	AT Command Interpreter Software Subsystem, or attention
CI	Cell Identity
DDC	Display Data Channel
DLC	Data Link Connection
FS	File System
FW	Firmware
GLONASS	Globalnaya Navigatsionnaya Sputnikovaya Sistema
GNSS	Global Navigation Satellite System
GPRS	General Packet Radio Service
GPS	Global Positioning System
GSM	Global System for Mobile Communication
HTTP	HyperText Transfer Protocol
HTTPS	HyperText Transfer Protocol Secure
I2C	Inter-Integrated Circuit
IMEI	International Mobile Equipment Identity
IMSI	International Mobile Station Identity
LAC	Location Area Code
LES	Location Estimation Service
LNA	Low Noise Amplifier
MCC	Mobile Country Code
MGA	Multi-GNSS Assistance
MNC	Mobile Network Code
NMEA	National Marine Electronics Association
PSM	Power Saving Mode
QZSS	Quasi-Zenith Satellite System
SAW	Surface Acoustic Wave
SV	Satellite Vehicle
TA	Timing Advance
TTFB	Time To First Fix
UART	Universal Asynchronous Receiver-Transmitter
UBX	u-blox
UDP	User Datagram Protocol
URC	Unsolicited Result Code

Table 33: Explanation of the abbreviations and terms used

Related documents

- [1] u-blox SARA-R5 series data sheet, [UBX-19016638](#)
- [2] u-blox SARA-R5 series AT commands manual, [UBX-19047455](#)
- [3] u-blox SARA-R5 series system integration manual, [UBX-19041356](#)
- [4] GSM Association TS.09 - Battery Life Measurement and Current Consumption Technique, <https://www.gsma.com/newsroom/wp-content/uploads//TS.09-v10.2.pdf>
- [5] I2C-bus specification and user manual - NXP Semiconductors, <https://www.nxp.com/docs/en/user-guide/UM10204.pdf>
- [6] u-blox B36 vehicle tracking blueprint product summary, [UBX-20012630](#)
- [7] u-blox M8 receiver description including protocol specification, [UBX-13003221](#)
- [8] GNSS antennas application note, [UBX-15030289](#)
- [9] u-blox multiplexer implementation in cellular modules application note, [UBX-13001887](#)
- [10] 3GPP TS 27.010 – Terminal Equipment to User Equipment (TE-UE) multiplexer protocol
- [11] u-blox Accurate Timing for the IoT whitepaper, <https://www.u-blox.com/en/publication/white-paper/accurate-timing-iot>

 For regular updates to u-blox documentation and to receive product change notifications, register on our homepage (www.u-blox.com).

Revision history

Revision	Date	Name	Comments
R01	02-Oct-2020	sses	Initial release

Contact

For complete contact information, visit us at www.u-blox.com.

u-blox Offices

North, Central and South America

u-blox America, Inc.

Phone: +1 703 483 3180
E-mail: info_us@u-blox.com

Regional Office West Coast:

Phone: +1 408 573 3640
E-mail: info_us@u-blox.com

Technical Support:

Phone: +1 703 483 3185
E-mail: support@u-blox.com

Headquarters

Europe, Middle East, Africa

u-blox AG

Phone: +41 44 722 74 44
E-mail: info@u-blox.com
Support: support@u-blox.com

Asia, Australia, Pacific

u-blox Singapore Pte. Ltd.

Phone: +65 6734 3811
E-mail: info_ap@u-blox.com
Support: support_ap@u-blox.com

Regional Office Australia:

Phone: +61 2 8448 2016
E-mail: info_australia@u-blox.com
Support: support_ap@u-blox.com

Regional Office China (Beijing):

Phone: +86 10 68 133 545
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Chongqing):

Phone: +86 23 6815 1588
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shanghai):

Phone: +86 21 6090 4832
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shenzhen):

Phone: +86 755 8627 1083
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office India:

Phone: +91 80 405 092 00
E-mail: info_in@u-blox.com
Support: support_in@u-blox.com

Regional Office Japan (Osaka):

Phone: +81 6 6941 3660
E-mail: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Japan (Tokyo):

Phone: +81 3 5775 3850
E-mail: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Korea:

Phone: +82 2 542 0861
E-mail: info_kr@u-blox.com
Support: support_kr@u-blox.com

Regional Office Taiwan:

Phone: +886 2 2657 1090
E-mail: info_tw@u-blox.com
Support: support_tw@u-blox.com