u-blox M10 SPG 5.10

Standard precision GNSS firmware

Protocol version 34.10

Interface description

Abstract

This document describes the interface (version 34.10) of the u-blox M10 SPG 5.10 firmware.

www.u-blox.com

UBX-21035062 - R02
C1-Public

Document information

Title	**u-blox M10 SPG 5.10**	
Subtitle	Standard precision GNSS firmware	
Document type	Interface description	
Document number	UBX-21035062	
Revision and date	R02	02-May-2022
Disclosure restriction	C1-Public	

Contents

1 General information

1.1 Document overview

This document describes the interface of the u-blox M10 SPG 5.10 Standard precision GNSS firmware. The interface consists of the following parts:

- NMEA protocol
- UBX protocol
- Configuration interface

☞ Some of the features described here may not be available in the receiver, and some may require specific configurations to be enabled. See the data sheet for availability of the features and the integration manual for instructions for enabling them.

☞ Previous versions of u-blox receiver documentation combined general receiver description and interface specification. In the current documentation the receiver description is included in the integration manual.

See also Related documents.

1.2 Firmware and protocol versions

u-blox generation 10 receivers execute firmware from internal ROM.

The location and the version of the boot loader and the currently running firmware can be found in the boot screen and in the UBX-MON-VER message. If the firmware has been loaded from a connected flash or from the host processor, it is indicated by text "EXT". When the receiver is started, the boot screen is output automatically in UBX-INF-NOTICE or NMEA-Standard-TXT messages if configured using CFG-INFMSG. The UBX-MON-VER message can be polled using the UBX polling mechanism.

The following u-center screenshots show an example of a u-blox receiver running firmware from ROM:

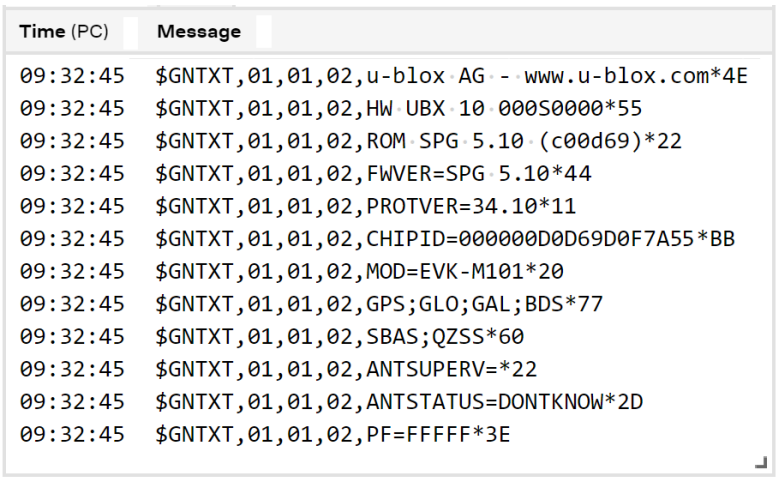

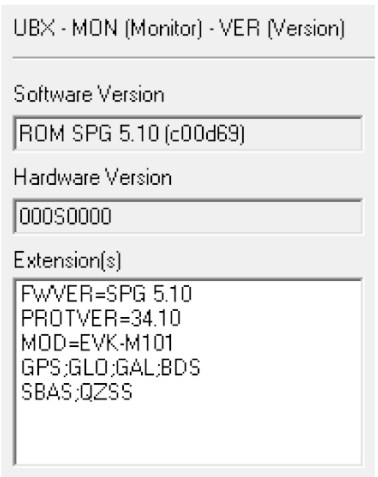

The following information is available (✓) from the boot screen (**B**) and the UBX-MON-VER message (**M**):

B	M	Example	Information
✓		`u-blox AG - www.u-blox.com`	Start of the boot screen.

B	M	Example	Information
✓		HW UBX 10 000A0000	Hardware version of the u-blox receiver.
	✓	000A0000	
✓	✓	ROM SPG 5.10 (10ca7e)	Firmware version and revision number, running from internal ROM.
✓	✓	FWVER=SPG 5.00	Product firmware version number, where: • SPG = Standard precision GNSS product • HPG = High precision GNSS product • ADR = Automotive dead reckoning product • TIM = Time sync product • LAP = Lane accurate positioning product • HPS = High precision sensor fusion product • DBS = Dual band standard precision • MDR = Multi-mode dead reckoning product • PMP = L-Band Inmarsat point-to-multipoint receiver • QZS = QZSS L6 centimeter level augmentation service (CLAS) message receiver • DBD = Dual band dead reckoning product • LDR = ROM bootloader, no GNSS functionality
✓	✓	PROTVER=34.00	Supported protocol version.
✓		CHIPID=000000D0D69D0F7A54	Unique chip identification number.
✓	✓	MOD=EVK-M101	Module name (if available).
✓	✓	GPS;GLO;GAL;BDS	List of supported major GNSS (see GNSS identifiers).
✓	✓	SBAS;QZSS	List of supported augmentation systems (see GNSS identifiers).
✓		ANTSUPERV=AC SD PDoS SR	Configuration of the antenna supervisor (if available), where: • AC = Active antenna control enabled • SD = Short circuit detection enabled • OD = Open circuit detection enabled • PDoS = Short circuit power down logic enabled • SR = Automatic recovery from short state enabled
✓		PF=FFF79	Product configuration.
✓		BD=E01C	GNSS band configuration.

☞ The "FWVER" product firmware version indicates which firmware is currently running. This is referred to as "firmware version" in this and other documents.

☞ The revision numbers should only be used to identify a known firmware version. They are not necessarily numeric nor are they guaranteed to increase with newer firmware versions.

☞ Similarly, firmware version numbers can have additional non-numeric information appended, such as in "5.00B03".

☞ Not every entry is output by all u-blox receivers. The availability of some of the information depends on the product, the firmware location and the firmware version.

The product firmware version and the base firmware version relate to the protocol version:

Product firmware version	Base firmware version	Protocol version
SPG 5.10	ROM SPG 5.10 (7b202e)	34.10

1.3 Receiver configuration

u-blox positioning receivers are fully configurable with UBX protocol messages. The configuration used by the receiver during normal operation is called the "current configuration". The current

configuration can be changed during normal operation by sending UBX-CFG-VALSET messages over any I/O port. The receiver will change its current configuration immediately after receiving a configuration message. The receiver will always use the current configuration only.

The current configuration is loaded from permanent configuration hard-coded in the receiver firmware (the defaults) and from non-volatile memory (user configuration) on startup of the receiver. Changes made to the current configuration at run-time will be lost when there is a power cycle, a hardware reset or a (complete) controlled software reset (see Configuration reset behavior).

See Configuration interface for a detailed description of the receiver configuration system, the explanation of the configuration concept and its principles and interfaces.

☞ The configuration interface has changed from earlier u-blox positioning receivers. There is some backwards compatibility provided in UBX-CFG configuration messages. Users are strongly advised to only use the Configuration interface. See also Legacy UBX message fields reference.

☞ See the integration manual for a basic receiver configuration most commonly used.

1.4 Message naming

Message names are written in full with the parts of the name separated by hyphens ("-"). The full message name consists of the protocol name (e.g., *UBX)*, the class name (e.g. *NAV*) and the message name (e.g. *PVT*). For example the receiver software version information message is referred to as *UBX-MON-VER*. Similarly, the *NMEA-Standard-GGA* is the NMEA standard message (sentence) with the global positioning fix data.

References to fields of the message add the field name separated by a dot ("."), e.g. *UBX-MON-VER.swVersion*.

Some messages use a fourth level of naming, called the message version. One example is the *UBX-MGA-GPS* message for GPS assistance data, which exists in versions for ephemerides (*UBX-MGA-GPS-EPH*) and almanacs (*UBX-MGA-GPS-ALM*).

Names of configuration items are of the form *CFG-GROUP-ITEM*. For example, *CFG-NAVSPG-DYNMODEL* refers to the navigation dynamic platform model the receiver uses. Constants add a fourth level to the item name, such as *CFG-NAVSPG-DYNMODEL-AUTOMOT* for the automotive platform model. In the context of describing an item's value, only the last part of the constant name can be used (e.g. "set *CFG-NAVSPG-DYNMODEL* to *PORT* for portable applications").

1.5 GNSS, satellite, and signal identifiers

1.5.1 Overview

Some UBX protocol messages contain infomation about specific satellites. Any single satellite can be identified by a `gnssId` field indicating the GNSS the satellite is part of and an `svId` (SV for space vehicle) field indicating the number of the satellite in that system. Usually, the `svId` is the native number associated with the satellite in the specific GNSS. For example the GLONASS SV4 is identified as gnssId 6, svId 4, while the GPS SV4 is gnssId 0, svId 4.

GLONASS satellites can be tracked before they have been identified. In UBX messages, the unknown satellites will be reported with svId 255. In NMEA messages, the unknown satellites will be null (empty) fields. Product-related documentation and u-center will use R? to label unidentified GLONASS satellites.

Signal identifiers are used when different signals from the same GNSS satellite need to be distinguished (e.g. in the UBX-NAV-SIG message). A separate `sigId` field identifies the signal. These signal identifiers are only valid when combined with a GNSS identifier (`gnssId` field).

The NMEA protocol (version 4.10 and later) identifies GNSS satellites with a one-digit system ID and a two-digit satellite number. u-blox receivers support this method in their NMEA output when "strict" SV numbering is selected. In most cases this is the default setting, but it can be checked or changed using the Configuration interface (see also NMEA GNSS, satellite, and signal numbering).

In order to support some GNSS (e.g. BeiDou, Galileo, QZSS), which are not supported by some or all NMEA protocol versions, an "extended" SV numbering scheme can be enabled. This uses the NMEA-defined numbers where possible but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3-digit numbers, which may not be supported by some NMEA parsing software. For example, QZSS satellites use numbers in the range 193 to 202.

The NMEA standard defines signal identifiers to distinguish different signals sent by a single GNSS satellite (e.g. L2 CL and CM). u-blox positioning receivers use those identifiers for signal identification, as far as the corresponding standard is supported in a particular product.

☞ Note that the following sections are a generic overview for different u-blox positioning receivers. A particular product may not support all of the described GNSS identifiers, satellite numbers, signal identifiers or combinations thereof.

1.5.2 GNSS identifiers

Table 1 lists each GNSS along with the GNSS identifier (UBX protocol), the NMEA system identifiers (NMEA protocol), and abbreviations used in this document:

GNSS	Abbreviations		UBX gnssId	NMEA system ID		
				2.3 - 4.0	4.10	4.11
GPS	GPS	G	0	1	1	1
SBAS	SBAS	S	1	1	1	1
Galileo	GAL	E	2	n/a	3	3
BeiDou	BDS	B	3	n/a	(4)[1]	4
IMES	IMES	I	4	n/a	n/a	n/a
QZSS	QZSS	Q	5	n/a	(1)[1]	5
GLONASS	GLO	R	6	2	2	2
NavIC	NavIC	N	7	n/a	n/a	6

Table 1: GNSS identifiers

See also NMEA Talker ID.

1.5.3 Satellite identifiers

The satellite numbering scheme for the UBX protocol is provided in Table 2. The satellite numbering scheme for the NMEA protocol is provided in Table 3.

GNSS	SV Range	gnssId:svId
GPS	G1-G32	0:1-32
SBAS	S120-S158	1:120-158
Galileo	E1-E36	2:1-36

[1] While not defined by NMEA 4.10, u-blox receivers in this mode will use system ID 4 for BeiDou and, if extended satellite numbering is enabled, system ID 1 for QZSS.

GNSS	SV Range	gnssId:svId
BeiDou	B1-B5	3:1-5
	B6-B37	3:6-37
	B38-B63	3:38-63
IMES	I1-I10	4:1-10
QZSS	Q1-Q10	5:1-10
GLONASS	R1-R32	6:1-32
	R?	6:255
NavIC	N1-N7	7:1-7

Table 2: UBX protocol satellite numbering scheme

		NMEA 2.3 - 4.0		NMEA 4.10		NMEA 4.11	
GNSS	SV Range	strict	extended	strict	extended	strict	extended
GPS	G1-G32	1-32	1-32	1-32	1-32	1-32	1-32
SBAS	S120-S158	33-64	33-64, 152-158	33-64	33-64, 152-158	33-64	33-64, 152-158
Galileo	E1-E36	211-246	301-336	1-36	1-36	1-36	1-36
BeiDou	B1-B5	159-163	401-405	1-5	1-5	1-5	1-5
	B6-B37	33-64	406-437	6-37	6-37	6-37	6-37
	B38-B63	n/a	438-463	38-63	38-63	38-63	38-63
IMES	I1-I10	173-182	173-182	n/a	173-182	n/a	173-182
QZSS	Q1-Q10	193-202	193-202	n/a	193-202	1-10	1-10
GLONASS	R1-R32	65-96	65-96	65-96	65-96	65-96	65-96
	R?	255	null	null	null	null	null
NavIC	N1-N7	247-253	n/a	n/a	n/a	n/a	n/a

Table 3: NMEA protocol satellite numbering scheme

1.5.4 Signal identifiers

A summary of all the signal identification schemes used in the NMEA protocol and the UBX protocol is provided in the following table. (Only a subset of the signals is supported by each product.) In NMEA protocol, the system and signal identifiers are in hexadecimal format.

	UBX Protocol		NMEA Protocol 4.10		NMEA Protocol 4.11	
Signal	gnssId	sigId	System ID	Signal ID	System ID	Signal ID
GPS L1C/A[2]	0	0	1	1	1	1
GPS L2 CL	0	3	1	6	1	6
GPS L2 CM	0	4	1	5	1	5
GPS L5 I	0	6	1	7	1	7
GPS L5 Q	0	7	1	8	1	8
SBAS L1C/A[2]	1	0	1	1	1	1
Galileo E1 C[2]	2	0	3	7	3	7
Galileo E1 B[2]	2	1	3	7	3	7
Galileo E5 al	2	3	3	1	3	1

[2] UBX messages that do not have an explicit `sigId` field contain information about the subset of signals marked.

[3] While not defined by NMEA 4.10, u-blox receivers in this mode will use system ID 4 for BeiDou and, if extended satellite numbering is enabled, system ID 1 for QZSS.

[4] BeiDou and QZSS signal ID are not defined in the NMEA protocol version 4.10. Values shown in the table are only valid for u-blox products and, for QZSS signal ID, if extended satellite numbering is enabled.

	UBX Protocol		NMEA Protocol 4.10		NMEA Protocol 4.11	
Signal	**gnssId**	**sigId**	**System ID**	**Signal ID**	**System ID**	**Signal ID**
Galileo E5 aQ	2	4	3	1	3	1
Galileo E5 bI	2	5	3	2	3	2
Galileo E5 bQ	2	6	3	2	3	2
BeiDou B1I D1[2]	3	0	(4)[3]	(1)[4]	4	1
BeiDou B1I D2[2]	3	1	(4)[3]	(1)[4]	4	1
BeiDou B2I D1	3	2	(4)[3]	(3)[4]	4	B
BeiDou B2I D2	3	3	(4)[3]	(3)[4]	4	B
BeiDou B1C	3	5	(4)[3]	N/A	4	3
BeiDou B2a	3	7	(4)[3]	N/A	4	5
QZSS L1C/A[2]	5	0	(1)[3]	(1)[4]	5	1
QZSS L1S	5	1	(1)[3]	(4)[4]	5	4
QZSS L2 CM	5	4	(1)[3]	(5)[4]	5	5
QZSS L2 CL	5	5	(1)[3]	(6)[4]	5	6
QZSS L5 I	5	8	(1)[3]	N/A	5	7
QZSS L5 Q	5	9	(1)[3]	N/A	5	8
GLONASS L1 OF[2]	6	0	2	1	2	1
GLONASS L2 OF	6	2	2	3	2	3
NavIC L5 A[2]	7	0	N/A	N/A	6	1

Table 4: Signal identifiers

1.6 Message types

The following message types are defined:

Message type	Description
Input	Messages that are input to the receiver and never output. E.g. UBX-MGA-GPS-EPH.
Output	Messages that are output by the receiver in no particular interval and never input. E.g. UBX-ACK-ACK.
Input/output	Messages that can be output by or input to the receiver. E.g. UBX-MGA-DBD-DATA0.
Periodic	Messages that are output in regular intervals but cannot be polled. E.g. UBX-NAV-EOE.
Periodic/polled	Messages that are output in regular intervals and can be polled. E.g. UBX-NAV-PVT.
Command	Messages that are a command to the receiver. Similar to type *Input* these are input-only. E.g. UBX-CFG-RST.
Get	Output-only configuration or command messages. E.g. UBX-CFG-DAT.
Set	Input-only configuration or command messages. E.g. UBX-CFG-VALDEL.
Get/set	Input/output configuration or command messages. E.g. UBX-CFG-NAVX5.
Polled	Non-periodic messages that can only be polled. E.g. UBX-MON-VER.
Poll request	Poll request. E.g. UBX-MGA-DBD-POLL.

2 NMEA protocol

The following sections give an overview of the NMEA messages used by u-blox positioning receivers.

By default, the NMEA messages sent by u-blox positioning receivers are based on the NMEA 0183 version 4.11 standard. For further information on the NMEA standard, refer to the *NMEA 0183 Standard for Interfacing Marine Electronic Devices*, Version 4.11, November 2018, which is available on http://www.nmea.org/.

2.1 NMEA frame structure

The following figure shows the structure of a NMEA protocol message (called "sentences" in the standard).

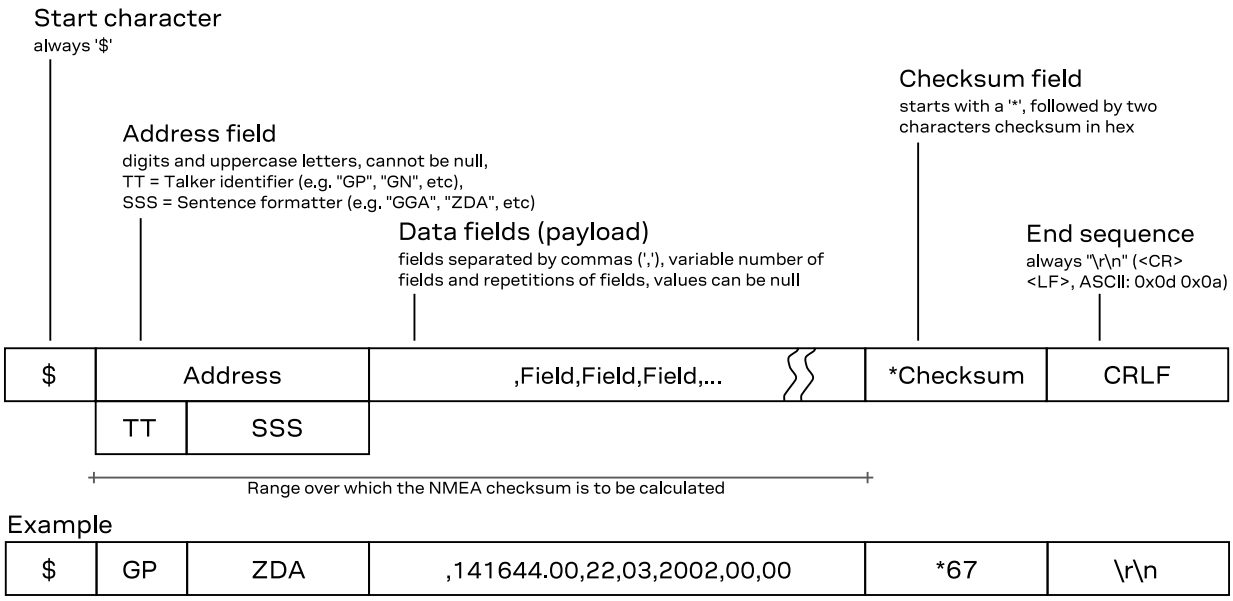

2.2 NMEA protocol configuration

The NMEA protocol on u-blox receivers can be configured for customer applications by using the Configuration interface (CFG-NMEA-* items).

Several NMEA standard versions are supported. Version 4.11 (not in all products), 4.10, 4.00, 2.3, or 2.1 can be configured. See Configuration defaults for the default version. See CFG-NMEA-PROTVER to configure the version. See NMEA multi-GNSS operation and NMEA data fields for details on how this affects the output.

The following filtering flags can be used to configure the output of some NMEA message fields:

Filter	Configuration Item	Description
Position filtering	CFG-NMEA-OUT_INVFIX	Enable to permit positions from failed or invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Valid position filtering	CFG-NMEA-OUT_MSKFIX	Enable to permit positions from invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Time filtering	CFG-NMEA-OUT_INVTIME	Enable to permit the receiver's best knowledge of time to be output, even though it might be wrong.

Filter	Configuration Item	Description
Date filtering	CFG-NMEA-OUT_INVDATE	Enable to permit the receiver's best knowledge of date to be output, even though it might be wrong.
GPS-only filtering	CFG-NMEA-OUT_ONLYGPS	Enable to restrict output to only report GPS satellites.
Track filtering	CFG-NMEA-OUT_FROZENCOG	Enable to permit course over ground (COG) to be reported even when it would otherwise be frozen.

The following filtering flags can be used to configure the output of some NMEA message flags:

Mode	Configuration Item	Description
Compatibility mode	CFG-NMEA-COMPAT	Some older NMEA applications expect the NMEA output to be formatted in a specific way, for example, they will only work if the latitude and longitude have exactly four digits behind the decimal point. u-blox receivers offer a compatibility mode to support these legacy applications.
Consideration mode	CFG-NMEA-CONSIDER	u-blox receivers use a sophisticated signal quality detection scheme, in order to produce the best possible position output. This algorithm considers all SV measurements, and may eventually decide to only use a subset thereof, if it improves the overall position accuracy. If consideration mode is enabled, all satellites, which were considered for navigation, are communicated as being used for the position determination. If consideration mode is disabled, only those satellites which after the consideration step remained in the position output are marked as being used.
Limit length mode	CFG-NMEA-LIMIT82	Enabling this mode will limit the NMEA sentence length to a maximum of 82 characters.
High precision mode	CFG-NMEA-HIGHPREC	Enabling this mode increases precision of the position output. Latitude and longitude then have seven digits after the decimal point, and altitude has three digits after the decimal point. Note: The high precision mode cannot be set in conjunction with either compatibility mode or Limit82 mode.

The following extended configuration options are available:

Option	Configuration Item(s)	Description
GNSS to filter	CFG-NMEA-FILT_GPS etc.	Filters satellites based on the GNSS they belong to.
Satellite numbering	CFG-NMEA-SVNUMBERING	This field configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. See also Satellite identifiers.
Main Talker ID	CFG-NMEA-MAINTALKERID	By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see configuration items CFG-SIGNAL-*). This field enables the main Talker ID to be overridden. See also NMEA Talker ID.
GSV Talker ID	CFG-NMEA-GSVTALKERID	By default the Talker ID for GSV messages is GNSS-specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden.
BDS Talker ID	CFG-NMEA-BDSTALKERID	By default the Talker ID for BeiDou is "GB". This field enables the BeiDou Talker ID to be overridden.

2.3 NMEA-proprietary messages

The NMEA standard allows for proprietary, manufacturer-specific messages to be added. These shall be marked with a manufacturer mnemonic. The mnemonic assigned to u-blox is UBX and is used for all non-standard messages. These proprietary NMEA messages therefore have the address field set to PUBX. The first data field in a PUBX message identifies the message number with two digits.

2.4 NMEA multi-GNSS operation

Many applications that process NMEA messages assume that only a single GNSS is active. However, when multiple GNSS are configured, the NMEA specification requires the output to change in the following ways:

Main Talker ID The main NMEA Talker ID will be "GN" (e.g. instead of "GP" for a GPS-only receiver).

GSV Talker IDs The GSV message reports the signal strength of the visible satellites. However, the Talker ID it uses is specific to the GNSS it is reporting information for, so for a multi-GNSS receiver it will not be the same as the main Talker ID. While other messages use the "GN" Talker ID, the GSV message will use GNSS-specific Talker IDs. See also NMEA protocol configuration.

Multiple GSA and GRS messages Multiple GSA and GRS messages are output for each fix, one for each GNSS. This may confuse applications that assume they are output only once per position fix (as is the case for a single GNSS receiver).

GGA Talker IDs The NMEA specification indicates that the GGA message is GPS-specific. However, u-blox receivers support the output of a GGA message for each of the Talker IDs.

BeiDou and Galileo Only NMEA version 4.10 and later have support for these systems.

QZSS Only NMEA version 4.11 and later have support for this system.

Extended satellite numbering In order to support some GNSS (e.g. BeiDou, Galileo, QZSS) that are not supported by some or all NMEA protocol versions, an "extended" SV numbering scheme can be enabled. This uses the NMEA-defined numbers where possible, but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3-digit numbers, which may not be supported by some NMEA parsing software. For example, QZSS satellites use numbers in the range 193 to 202. See NMEA protocol configuration and Satellite identifiers.

2.5 NMEA data fields

Various data fields in NMEA messages depend on NMEA protocol configuration or require a definition for their interpretation.

2.5.1 NMEA Talker ID

One of the ways the NMEA standard differs depending on the GNSS is by using a two-letter message identifier, the "Talker ID". The specific Talker ID used by a u-blox receiver will depend on the product and its configuration. The table below shows the Talker ID that will be used for various GNSS configurations by default.

GNSS	Talker ID	Comments
GPS, SBAS	GP	NMEA 2.3+
GLONASS	GL	NMEA 2.3+
Galileo	GA	NMEA 4.10+
BeiDou	GB	NMEA 4.10+ (official NMEA only since 4.11)
NavIC	GI	NMEA 4.11+
QZSS	GQ	NMEA 4.11+ (GP for NMEA 2.3 - 4.10)
Any combination of GNSS	GN	

2.5.2 NMEA extra fields

The following extra fields are available in NMEA 4.10 and later.

Message	Extra fields
NMEA-Standard-GBS	`systemId` and `signalId`
NMEA-Standard-GNS	`navStatus`
NMEA-Standard-GRS	`systemId` and `signalId`
NMEA-Standard-GSA	`systemId`
NMEA-Standard-GSV	`signalId`
NMEA-Standard-RMC	`navStatus`

2.5.3 NMEA latitude and longitude format

According to the NMEA standard, latitude and longitude are output in the format *degrees, minutes and (decimal) fractions of minutes*. To convert to *degrees and fractions of degrees*, or *degrees, minutes, seconds and fractions of seconds*, the *minutes* and *fractional minutes* parts need to be converted. For example:

Format	Latitude	Longitude
Receiver output	`$GNRMC,014230.00,A,4722.80340,N,00831.68218,E,0.000,,120477,,,A,V*14`	
(d)ddmm.mmmmm	4722.80340 North	00831.68218 East
Degrees and minutes	47 degrees, 22.80340 minutes	8 degrees, 31.68218 minutes
Degrees	47.38005667 degrees	8.52803633 degrees
Degrees, minutes and seconds	47 degrees, 22 minutes, 48.2040 seconds	8 degrees, 31 minutes, 40.9308 seconds

2.5.4 NMEA GNSS, satellite, and signal numbering

See GNSS, satellite, and signal identifiers for details on how GNSS, satellites and signals are numbered in the NMEA protocol.

NMEA defines satellite numbering systems for some, but not all GNSS. The exact behavior depends on the configured NMEA protocol version and ("extended" or "strict") mode. See NMEA protocol configuration for details.

2.5.5 NMEA position fix flags

This section shows how u-blox positioning receivers implement the NMEA protocol and the conditions determining how flags are set.

The following flags are used in NMEA 4.10 and later.

NMEA Message	GLL, RMC	GGA	GLL, VTG	RMC, GNS
Field	**status**[5]	**quality**[6]	**posMode**[7]	**posMode**[7]
No position fix (at power-up, after losing satellite lock)	V	0	N	N
GNSS fix, but user limits exceeded	V	0	N	N
Dead reckoning fix, but user limits exceeded	V	6	E	E
Dead reckoning fix	A	6	E	E
RTK float	A	5	D	F
RTK fixed	A	4	D	R

5 Possible *status* values: V = data invalid, A = data valid

6 Possible values for *quality*: 0 = No fix, 1 = autonomous GNSS fix, 2 = differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = estimated/dead reckoning fix

7 Possible values for *posMode*: N = No fix, E = estimated/dead reckoning fix, A = autonomous GNSS fix, D = differential GNSS fix, F = RTK float, R = RTK fixed

NMEA Message	GLL, RMC	GGA	GLL, VTG	RMC, GNS
Field	**status**[5]	**quality**[6]	**posMode**[7]	**posMode**[7]
2D GNSS fix	A	1 / 2	A / D	A / D
3D GNSS fix	A	1 / 2	A / D	A / D
Combined GNSS/dead reckoning fix	A	1 / 2	A / D	A / D

In high precision GNSS (HPG) products it is recommended to select NMEA version 4.10 or above. Earlier versions do not support the float RTK (F) and real time kinematic (R) mode indicator flags in all messages.

The following flags are used in NMEA 2.3 - 4.0.

NMEA Message	GLL, RMC	GGA	GSA	GLL, VTG, RMC, GNS
Field	**status**[8]	**quality**[9]	**navMode**[10]	**posMode**[11]
No position fix (at power-up, after losing satellite lock)	V	0	1	N
GNSS fix, but user limits exceeded	V	0	1	N
Dead reckoning fix, but user limits exceeded	V	6	2	E
Dead reckoning fix	A	6	2	E
2D GNSS fix	A	1 / 2	2	A / D
3D GNSS fix	A	1 / 2	3	A / D
Combined GNSS/dead reckoning fix	A	1 / 2	3	A / D

The flags in NMEA 2.1 and earlier are the same as NMEA 2.3 but with the following differences:

- The *posMode* field is not output for GLL, RMC and VTG messages (each message has one field less).
- The GGA *quality* field is set to 1 (instead of 6) for both types of dead reckoning fix.

2.5.6 NMEA output of invalid or unknown data

By default the receiver will not output invalid data. In such cases, it will output empty fields. See NMEA protocol configuration for options to adjust this behavior.

A valid position fix is reported as follows:

```
$GPGLL,4717.11634,N,00833.91297,E,124923.00,A,A*6E
```

An invalid position fix (but valid time) is reported as follows:

```
$GPGLL,,,,,124924.00,V,N*42
```

If the time is unknown (e.g. during a cold start):

```
$GPGLL,,,,,,V,N*64
```

Unlike the NMEA standard behavior to invalid data, dead reckoning products always report a position. It is marked as invalid (V) when the user limits are exceeded or valid (A) if the user limits are met.

8 Possible values for *status*: V = data invalid, A = data valid

9 Possible values for *quality*: 0 = no fix, 1 = autonomous GNSS fix, 2 = differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = estimated/dead reckoning fix

10 Possible values for *navMode*: 1 = No fix, 2 = 2D fix, 3 = 3D fix

11 Possible values for *posMode*: N = No fix, E = estimated/dead reckoning fix, A = autonomous GNSS fix, D = differential GNSS fix

2.6 NMEA messages overview

Message	*Class/ID*	*Description (Type)*
NMEA-Standard – Standard NMEA messages		
NMEA-Standard-DTM	0xf0 0x0a	• Datum reference (Output)
NMEA-Standard-GAQ	0xf0 0x45	• Poll a standard message (Talker ID GA) (Poll request)
NMEA-Standard-GBQ	0xf0 0x44	• Poll a standard message (Talker ID GB) (Poll request)
NMEA-Standard-GBS	0xf0 0x09	• GNSS satellite fault detection (Output)
NMEA-Standard-GGA	0xf0 0x00	• Global positioning system fix data (Output)
NMEA-Standard-GLL	0xf0 0x01	• Latitude and longitude, with time of position fix and status (Output)
NMEA-Standard-GLQ	0xf0 0x43	• Poll a standard message (Talker ID GL) (Poll request)
NMEA-Standard-GNQ	0xf0 0x42	• Poll a standard message (Talker ID GN) (Poll request)
NMEA-Standard-GNS	0xf0 0x0d	• GNSS fix data (Output)
NMEA-Standard-GPQ	0xf0 0x40	• Poll a standard message (Talker ID GP) (Poll request)
NMEA-Standard-GQQ	0xf0 0x47	• Poll a standard message (Talker ID GQ) (Poll request)
NMEA-Standard-GRS	0xf0 0x06	• GNSS range residuals (Output)
NMEA-Standard-GSA	0xf0 0x02	• GNSS DOP and active satellites (Output)
NMEA-Standard-GST	0xf0 0x07	• GNSS pseudorange error statistics (Output)
NMEA-Standard-GSV	0xf0 0x03	• GNSS satellites in view (Output)
NMEA-Standard-RLM	0xf0 0x0b	• Return link message (RLM) (Output)
NMEA-Standard-RMC	0xf0 0x04	• Recommended minimum data (Output)
NMEA-Standard-TXT	0xf0 0x41	• Text transmission (Output)
NMEA-Standard-VLW	0xf0 0x0f	• Dual ground/water distance (Output)
NMEA-Standard-VTG	0xf0 0x05	• Course over ground and ground speed (Output)
NMEA-Standard-ZDA	0xf0 0x08	• Time and date (Output)
NMEA-PUBX – u-blox proprietary NMEA messages		
NMEA-PUBX-CONFIG	0xf1 0x41	• Set protocols and baud rate (Set)
NMEA-PUBX-POSITION	0xf1 0x00	• Poll a PUBX,00 message (Poll request) • Lat/Long position data (Output)
NMEA-PUBX-RATE	0xf1 0x40	• Set NMEA message output rate (Set)
NMEA-PUBX-SVSTATUS	0xf1 0x03	• Poll a PUBX,03 message (Poll request) • Satellite status (Output)
NMEA-PUBX-TIME	0xf1 0x04	• Poll a PUBX,04 message (Poll request) • Time of day and clock information (Output)

2.7 Standard messages

Standard NMEA messages as defined by the NMEA 0183 standard. See NMEA protocol for details.

2.7.1 DTM

2.7.1.1 Datum reference

Message	**NMEA-Standard-DTM** **Datum reference**
Type	Output
Comment	This message gives the difference between the current datum and the reference datum. The current datum is set to WGS84 by default.

	The reference datum cannot be changed and is always set to WGS84.
Information	*Class/ID:* 0xf0 0x0a *Number of fields:* 11
Structure	`$xxDTM,datum,subDatum,lat,NS,lon,EW,alt,refDatum*cs\r\n`
Examples	`$GPDTM,W84,,0.0,N,0.0,E,0.0,W84*6F\r\n` `$GPDTM,999,,0.08,N,0.07,E,-47.7,W84*1C\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`xxDTM`	string	-	$GPDTM	DTM Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	`datum`	string	-	W84	Local datum code: W84 = WGS84, P90 = PZ90, 999 = user-defined
2	`subDatum`	string	-	-	A null field (or a string describing the currently selected datum for protocol versions less than 14.00)
3	`lat`	numeric	min	0.08	Offset in Latitude
4	`NS`	character	-	S	North/South indicator
5	`lon`	numeric	min	0.07	Offset in Longitude
6	`EW`	character	-	E	East/West indicator
7	`alt`	numeric	m	-2.8	Offset in altitude
8	`refDatum`	string	-	W84	Reference datum code: W84 (WGS 84, fixed field)
9	`cs`	hexadecimal	-	*67	Checksum
10	`CRLF`	character	-	-	Carriage return and line feed

2.7.2 GAQ

2.7.2.1 Poll a standard message (Talker ID GA)

Message	**NMEA-Standard-GAQ** **Poll a standard message (Talker ID GA)**
Type	Poll request
Comment	Polls a standard NMEA message if the current Talker ID is GA.
Information	*Class/ID:* 0xf0 0x45 *Number of fields:* 4
Structure	`$xxGAQ,msgId*cs\r\n`
Example	`$EIGAQ,RMC*2B\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`xxGAQ`	string	-	$EIGAQ	GAQ Message ID (xx = Talker ID of the device requesting the poll)
1	`msgId`	string	-	RMC	Message ID of the message to be polled
2	`cs`	hexadecimal	-	*2B	Checksum
3	`CRLF`	character	-	-	Carriage return and line feed

2.7.3 GBQ

2.7.3.1 Poll a standard message (Talker ID GB)

Message	**NMEA-Standard-GBQ** **Poll a standard message (Talker ID GB)**
Type	Poll request

Comment	Polls a standard NMEA message if the current Talker ID is GB
Information	*Class/ID:* 0xf0 0x44 *Number of fields:* 4
Structure	`$xxGBQ,msgId*cs\r\n`
Example	`$EIGBQ,RMC*28\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`xxGBQ`	string	-	$EIGBQ	GBQ Message ID (xx = Talker ID of the device requesting the poll)
1	`msgId`	string	-	RMC	Message ID of the message to be polled
2	`cs`	hexadecimal	-	*28	Checksum
3	`CRLF`	character	-	-	Carriage return and line feed

2.7.4 GBS

2.7.4.1 GNSS satellite fault detection

Message	**NMEA-Standard-GBS** **GNSS satellite fault detection**
Type	Output
Comment	This message outputs the results of the Receiver Autonomous Integrity Monitoring Algorithm (RAIM). • The fields **errLat**, **errLon** and **errAlt** output the standard deviation of the position calculation, using all satellites that pass the RAIM test successfully. • The fields **errLat**, **errLon** and **errAlt** are only output if the RAIM process passed successfully (i.e. no or successful edits happened). These fields are never output if 4 or fewer satellites are used for the navigation calculation (because, in such cases, integrity cannot be determined by the receiver autonomously). • The fields **prob**, **bias** and **stdev** are only output if at least one satellite failed in the RAIM test. If more than one satellites fail the RAIM test, only the information for the worst satellite is output in this message.
Information	*Class/ID:* 0xf0 0x09 *Number of fields:* 13
Structure	`$xxGBS,time,errLat,errLon,errAlt,svid,prob,bias,stddev,systemId,signalId*cs\r\n`
Examples	`$GPGBS,235503.00,1.6,1.4,3.2,,,,,,*40\r\n` `$GPGBS,235458.00,1.4,1.3,3.1,03,,-21.4,3.8,1,0*5B\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`xxGBS`	string	-	$GPGBS	GBS Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	`time`	hhmmss.ss	-	235503.00	UTC time to which this RAIM sentence belongs. See section UTC representation in the integration manual for details.
2	`errLat`	numeric	m	1.6	Expected error in latitude
3	`errLon`	numeric	m	1.4	Expected error in longitude
4	`errAlt`	numeric	m	3.2	Expected error in altitude
5	`svid`	numeric	-	03	Satellite ID of most likely failed satellite
6	`prob`	numeric	-	-	Probability of missed detection: null (not supported, fixed field)
7	`bias`	numeric	m	-21.4	Estimated bias of most likely failed satellite (a priori residual)
8	`stddev`	numeric	m	3.8	Standard deviation of estimated bias

9	systemId	hexadecimal	-	1	NMEA-defined GNSS system ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
10	signalId	hexadecimal	-	-	NMEA-defined GNSS signal ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
11	cs	hexadecimal	-	*5B	Checksum
12	CRLF	character	-	-	Carriage return and line feed

2.7.5 GGA

2.7.5.1 Global positioning system fix data

Message	**NMEA-Standard-GGA** **Global positioning system fix data**
Type	Output
Comment	Time and position, together with GPS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.). ☞ The output of this message is dependent on the currently selected datum (default: WGS84). The NMEA specification indicates that the GGA message is GPS-specific. However, when the receiver is configured for multi-GNSS, the GGA message contents will be generated from the multi-GNSS solution. For multi-GNSS use, it is recommended that the NMEA-GNS message is used instead.
Information	*Class/ID:* 0xf0 0x00 *Number of fields:* 17
Structure	`$xxGGA,time,lat,NS,lon,EW,quality,numSV,HDOP,alt,altUnit,sep,sepUnit,diffAge,diffSta ↵ tion*cs\r\n`
Example	`$GPGGA,092725.00,4717.11399,N,00833.91590,E,1,08,1.01,499.6,M,48.0,M,,*5B\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	xxGGA	string	-	$GPGGA	GGA Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	hhmmss.ss	-	092725.00	UTC time. See section UTC representation in the integration manual for details.
2	lat	ddmm.mmmmm	-	4717.11399	Latitude (degrees and minutes), see format description
3	NS	character	-	N	North/South indicator
4	lon	dddmm.mmmmm	-	00833.91590	Longitude (degrees and minutes), see format description
5	EW	character	-	E	East/West indicator
6	quality	digit	-	1	Quality indicator for position fix, see position fix flags description
7	numSV	numeric	-	08	Number of satellites used (range: 0-12)
8	HDOP	numeric	-	1.01	Horizontal Dilution of Precision
9	alt	numeric	m	499.6	Altitude above mean sea level
10	altUnit	character	-	M	Altitude units: M (meters, fixed field)
11	sep	numeric	m	48.0	Geoid separation: difference between ellipsoid and mean sea level
12	sepUnit	character	-	M	Geoid separation units: M (meters, fixed field)
13	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
14	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)

15	cs	hexadecimal	-	*5B	Checksum
16	CRLF	character	-	-	Carriage return and line feed

2.7.6 GLL

2.7.6.1 Latitude and longitude, with time of position fix and status

Message	**NMEA-Standard-GLL** **Latitude and longitude, with time of position fix and status**
Type	Output
Comment	☞ The output of this message is dependent on the currently selected datum (default: WGS84)
Information	*Class/ID:* 0xf0 0x01 *Number of fields:* 10
Structure	`$xxGLL,lat,NS,lon,EW,time,status,posMode*cs\r\n`
Example	`$GPGLL,4717.11364,N,00833.91565,E,092321.00,A,A*60\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	xxGLL	string	-	$GPGLL	GLL Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	lat	ddmm.mmmmm	-	4717.11364	Latitude (degrees and minutes), see format description
2	NS	character	-	N	North/South indicator
3	lon	dddmm.mmmmm	-	00833.91565	Longitude (degrees and minutes), see format description
4	EW	character	-	E	East/West indicator
5	time	hhmmss.ss	-	092321.00	UTC time. See section UTC representation in the integration manual for details.
6	status	character	-	A	Data validity status, see position fix flags description
7	posMode	character	-	A	Positioning mode, see position fix flags description (only available in NMEA 2.3 and later)
8	cs	hexadecimal	-	*60	Checksum
9	CRLF	character	-	-	Carriage return and line feed

2.7.7 GLQ

2.7.7.1 Poll a standard message (Talker ID GL)

Message	**NMEA-Standard-GLQ** **Poll a standard message (Talker ID GL)**
Type	Poll request
Comment	Polls a standard NMEA message if the current Talker ID is GL
Information	*Class/ID:* 0xf0 0x43 *Number of fields:* 4
Structure	`$xxGLQ,msgId*cs\r\n`
Example	`$EIGLQ,RMC*3A\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	xxGLQ	string	-	$EIGLQ	GLQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled

2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

2.7.8 GNQ

2.7.8.1 Poll a standard message (Talker ID GN)

Message	**NMEA-Standard-GNQ** **Poll a standard message (Talker ID GN)**
Type	Poll request
Comment	Polls a standard NMEA message if the current Talker ID is GN
Information	*Class/ID:* 0xf0 0x42 *Number of fields:* 4
Structure	`$xxGNQ,msgId*cs\r\n`
Example	`$EIGNQ,RMC*3A\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	xxGNQ	string	-	$EIGNQ	GNQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

2.7.9 GNS

2.7.9.1 GNSS fix data

Message	**NMEA-Standard-GNS** **GNSS fix data**
Type	Output
Comment	Time and position, together with GNSS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.). ☞ The output of this message is dependent on the currently selected datum (default: WGS84)
Information	*Class/ID:* 0xf0 0x0d *Number of fields:* 16
Structure	`$xxGNS,time,lat,NS,lon,EW,posMode,numSV,HDOP,alt,sep,diffAge,diffStation,navStatus*cs\r\n`

Examples	`$GNGNS,103600.01,5114.51176,N,00012.29380,W,ANNN,07,1.18,111.5,45.6,,,V*00\r\n`
	`$GNGNS,122310.2,3722.425671,N,12258.856215,W,DAAA,14,0.9,1005.543,6.5,,,V*0E\r\n`
	`$GPGNS,122310.2,,,,,,07,,,,5.2,23,V*02\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	xxGNS	string	-	$GPGNS	GNS Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	hhmmss.ss	-	091547.00	UTC time. See section UTC representation in the integration manual for details.
2	lat	ddmm.mmmmm	-	5114.50897	Latitude (degrees and minutes), see format description
3	NS	character	-	N	North/South indicator
4	lon	dddmm.mmmmm	-	00012.28663	Longitude (degrees and minutes), see format description
5	EW	character	-	E	East/West indicator

6	posMode	character	-	AAAA	Positioning mode, see position fix flags description. First character for GPS, second character for GLONASS, third character for Galileo, fourth character for BeiDou
7	numSV	numeric	-	10	Number of satellites used (range: 0-99)
8	HDOP	numeric	-	0.83	Horizontal Dilution of Precision
9	alt	numeric	m	111.1	Altitude above mean sea level
10	sep	numeric	m	45.6	Geoid separation: difference between ellipsoid and mean sea level
11	diffAge	numeric	s	-	Age of differential corrections (null when DGPS is not used)
12	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
13	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
14	cs	hexadecimal	-	*71	Checksum
15	CRLF	character	-	-	Carriage return and line feed

2.7.10 GPQ

2.7.10.1 Poll a standard message (Talker ID GP)

Message	**NMEA-Standard-GPQ** **Poll a standard message (Talker ID GP)**
Type	Poll request
Comment	Polls a standard NMEA message if the current Talker ID is GP
Information	*Class/ID:* 0xf0 0x40 *Number of fields:* 4
Structure	$xxGPQ,msgId*cs\r\n
Example	$EIGPQ,RMC*3A\r\n
Payload:	

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	xxGPQ	string	-	$EIGPQ	GPQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

2.7.11 GQQ

2.7.11.1 Poll a standard message (Talker ID GQ)

Message	**NMEA-Standard-GQQ** **Poll a standard message (Talker ID GQ)**
Type	Poll request
Comment	Polls a standard NMEA message if the current Talker ID is GQ
Information	*Class/ID:* 0xf0 0x47 *Number of fields:* 4
Structure	$xxGQQ,msgId*cs\r\n
Example	$EIGQQ,RMC*3A\r\n
Payload:	

Field	Name	Format	Unit	Example	Description
0	xxGQQ	string	-	$EIGQQ	GQQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string	-	RMC	Message ID of the message to be polled
2	cs	hexadecimal	-	*3A	Checksum
3	CRLF	character	-	-	Carriage return and line feed

2.7.12 GRS

2.7.12.1 GNSS range residuals

Message	**NMEA-Standard-GRS** **GNSS range residuals**
Type	Output
Comment	If less than 12 SVs are available, the remaining fields are output empty. If more than 12 SVs are used, only the residuals of the first 12 SVs are output, in order to remain consistent with the NMEA standard. **In a multi-GNSS system this message will be output multiple times, once for each GNSS.** ☞ This message relates to associated GGA and GSA messages.
Information	*Class/ID:* 0xf0 0x06 *Number of fields:* 19
Structure	`$xxGRS,time,mode{,residual},systemId,signalId*cs\r\n`
Examples	`$GNGRS,104148.00,1,2.6,2.2,-1.6,-1.1,-1.7,-1.5,5.8,1.7,,,,,1,1*52\r\n` `$GNGRS,104148.00,1,,0.0,2.5,0.0,,2.8,,,,,,,1,5*52\r\n`

Payload:

Field	Name	Format	Unit	Example	Description
0	xxGRS	string	-	$GPGRS	GRS Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	hhmmss.ss	-	082632.00	UTC time of associated position fix. See section UTC representation in the integration manual for details.
2	mode	digit	-	1	Computation method used: • 1 = Residuals were recomputed after the GGA position was computed (fixed)
Start of repeated group (12 times)					
3 + n	residual	numeric	m	0.54	Range residuals for SVs used in navigation. The SV order matches the order from the GSA sentence
End of repeated group (12 times)					
15	systemId	hexadecimal	-	1	NMEA-defined GNSS system ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
16	signalId	hexadecimal	-	-	NMEA-defined GNSS signal ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
17	cs	hexadecimal	-	*70	Checksum
18	CRLF	character	-	-	Carriage return and line feed

2.7.13 GSA

2.7.13.1 GNSS DOP and active satellites

Message	**NMEA-Standard-GSA** **GNSS DOP and active satellites**
Type	Output
Comment	The GNSS receiver operating mode, satellites used for navigation, and DOP values.

- If less than 12 SVs are used for navigation, the remaining fields are left empty. If more than 12 SVs are used for navigation, only the IDs of the first 12 are output.
- The SV numbers (fields 'svid') are in the range of 1 to 32 for GPS satellites, and 33 to 64 for SBAS satellites (33 = SBAS PRN 120, 34 = SBAS PRN 121, and so on)

In a multi-GNSS system this message will be output multiple times, once for each GNSS.

Information	*Class/ID:* 0xf0 0x02		*Number of fields:* 21		
Structure	`$xxGSA,opMode,navMode{,svid},PDOP,HDOP,VDOP,systemId*cs\r\n`				
Example	`$GPGSA,A,3,23,29,07,08,09,18,26,28,,,,,1.94,1.18,1.54,1*0D\r\n`				
Payload:					
Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`xxGSA`	string	-	$GPGSA	GSA Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	`opMode`	character	-	A	Operation mode: • M = Manually set to operate in 2D or 3D mode • A = Automatically switching between 2D or 3D mode
2	`navMode`	digit	-	3	Navigation mode, see position fix flags description
Start of repeated group (12 times)					
3 + n	`svid`	numeric	-	29	Satellite number
End of repeated group (12 times)					
15	`PDOP`	numeric	-	1.94	Position dilution of precision
16	`HDOP`	numeric	-	1.18	Horizontal dilution of precision
17	`VDOP`	numeric	-	1.54	Vertical dilution of precision
18	`systemId`	hexadecimal	-	1	NMEA-defined GNSS system ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
19	`cs`	hexadecimal	-	*0D	Checksum
20	`CRLF`	character	-	-	Carriage return and line feed

2.7.14 GST

2.7.14.1 GNSS pseudorange error statistics

Message	**NMEA-Standard-GST** **GNSS pseudorange error statistics**				
Type	Output				
Comment	This message reports statistical information on the quality of the position solution.				
Information	*Class/ID:* 0xf0 0x07		*Number of fields:* 11		
Structure	`$xxGST,time,rangeRms,stdMajor,stdMinor,orient,stdLat,stdLong,stdAlt*cs\r\n`				
Example	`$GPGST,082356.00,1.8,,,,1.7,1.3,2.2*7E\r\n`				
Payload:					
Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`xxGST`	string	-	$GPGST	GST Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	`time`	hhmmss.ss	-	082356.00	UTC time of associated position fix. See section UTC representation in the integration manual for details.
2	`rangeRms`	numeric	m	1.8	RMS value of the standard deviation of the ranges
3	`stdMajor`	numeric	m	-	Standard deviation of semi-major axis
4	`stdMinor`	numeric	m	-	Standard deviation of semi-minor axis

5	orient	numeric	deg	-	Orientation of semi-major axis
6	stdLat	numeric	m	1.7	Standard deviation of latitude error
7	stdLong	numeric	m	1.3	Standard deviation of longitude error
8	stdAlt	numeric	m	2.2	Standard deviation of altitude error
9	cs	hexadecimal	-	*7E	Checksum
10	CRLF	character	-	-	Carriage return and line feed

2.7.15 GSV

2.7.15.1 GNSS satellites in view

Message	**NMEA-Standard-GSV** **GNSS satellites in view**
Type	Output
Comment	The number of satellites in view, together with each SV ID, elevation azimuth, and signal strength (C/No) value. Only four satellite details are transmitted in one message. **In a multi-GNSS system sets of GSV messages will be output multiple times, one set for each GNSS.**
Information	*Class/ID:* 0xf0 0x03 *Number of fields:* 7 + [1..4]·4
Structure	`$xxGSV,numMsg,msgNum,numSV{,svid,elv,az,cno},signalId*cs\r\n`

Examples	`$GPGSV,3,1,09,09,,,17,10,,,40,12,,,49,13,,,35,1*6F\r\n`
	`$GPGSV,3,2,09,15,,,44,17,,,45,19,,,44,24,,,50,1*64\r\n`
	`$GPGSV,3,3,09,25,,,40,1*6E\r\n`
	`$GPGSV,1,1,03,12,,,42,24,,,47,32,,,37,5*66\r\n`
	`$GAGSV,1,1,00,2*76\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	xxGSV	string	-	$GPGSV	GSV Message ID (xx = GSV Talker ID, see NMEA Talker IDs table). Talker ID GN shall not be used.
1	numMsg	digit	-	3	Number of messages, total number of GSV messages being output (range: 1-9)
2	msgNum	digit	-	1	Number of this message (range: 1-numMsg)
3	numSV	numeric	-	10	Number of known satellites in view regarding both the talker ID and the signalId
Start of repeated group (1...4 times)					
4 + n·4	svid	numeric	-	23	Satellite ID
5 + n·4	elv	numeric	deg	38	Elevation (<= 90)
6 + n·4	az	numeric	deg	230	Azimuth (range: 0-359)
7 + n·4	cno	numeric	dBHz	44	Signal strength (C/N0, range: 0-99), null when not tracking
End of repeated group (1...4 times)					
4 + N·4	signalId	hexadecimal	-	-	NMEA-defined GNSS signal ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
5 + N·4	cs	hexadecimal	-	*7F	Checksum
6 + N·4	CRLF	character	-	-	Carriage return and line feed

2.7.16 RLM

2.7.16.1 Return link message (RLM)

Message	**NMEA-Standard-RLM** **Return link message (RLM)**
Type	Output
Comment	The RLM sentence is used to transfer a Return link message from a Cospas-Sarsat recognized Return link service provider (RLSP). The RLM sentence supports communications to an emitting beacon once a distress alert has been detected, located and confirmed. The communications may include acknowledgement of the alert to the emitting beacon as well as optional text messages, and may also include remote beacon configuration and testing.
Information	*Class/ID:* 0xf0 0x0b *Number of fields:* 7
Structure	`$xxRLM,beacon,time,code,body*cs\r\n`
Examples	`$GARLM,00000078A9FBAD5,083559.00,3,C45B*57\r\n` `$GARLM,F7129D41BC6A78C,034433.02,3,B63CA732AFD419D2*57\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`xxRLM`	string	-	$GARLM	RLM message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	`beacon`	hexadecimal	-	00000078A9FBAD5	Beacon ID, identifies beacon intended to receive this message (fixed length 15 hexadecimal character field)
2	`time`	hhmmss.ss	-	083559.00	Time of reception field to indicate RLM timestamp in UTC. See section UTC representation in the integration manual for details.
3	`code`	character	-	3	Message code field to identify type of RLM Message Service: • 0 = Reserved for future RLM services • 1 = Acknowledgement service RLM • 2 = Command service RLM • 3 = Message service RLM • 4-E = Reserved for future RLM services • F = Test service RLM (currently used only by the Galileo program)
4	`body`	hexadecimal	-	C45B	Message body encapsulates the data parameters provided by the RLSP into hexadecimal format.
5	`cs`	hexadecimal	-	*57	Checksum
6	`CRLF`	character	-	-	Carriage return and line feed

2.7.17 RMC

2.7.17.1 Recommended minimum data

Message	**NMEA-Standard-RMC** **Recommended minimum data**
Type	Output
Comment	The recommended minimum sentence defined by NMEA for GNSS system data. ☞ The output of this message is dependent on the currently selected datum (default: WGS84)
Information	*Class/ID:* 0xf0 0x04 *Number of fields:* 16
Structure	`$xxRMC,time,status,lat,NS,lon,EW,spd,cog,date,mv,mvEW,posMode,navStatus*cs\r\n`
Example	`$GPRMC,083559.00,A,4717.11437,N,00833.91522,E,0.004,77.52,091202,,,A,V*57\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*

0	xxRMC	string	-	$GPRMC	RMC Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	hhmmss.ss	-	083559.00	UTC time. See section UTC representation in the integration manual for details.
2	status	character	-	A	Data validity status, see position fix flags description
3	lat	ddmm.mmmmm	-	4717.11437	Latitude (degrees and minutes), see format description
4	NS	character	-	N	North/South indicator
5	lon	dddmm.mmmmm	-	00833.91522	Longitude (degrees and minutes), see format description
6	EW	character	-	E	East/West indicator
7	spd	numeric	knots	0.004	Speed over ground
8	cog	numeric	deg	77.52	Course over ground
9	date	ddmmyy	-	091202	Date in day, month, year format. See section UTC representation in the integration manual for details.
10	mv	numeric	deg	-	Magnetic variation value
11	mvEW	character	-	-	Magnetic variation E/W indicator
12	posMode	character	-	A	Mode Indicator, see position fix flags description (only available in NMEA 2.3 and later)
13	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
14	cs	hexadecimal	-	*57	Checksum
15	CRLF	character	-	-	Carriage return and line feed

2.7.18 TXT

2.7.18.1 Text transmission

Message	**NMEA-Standard-TXT** **Text transmission**
Type	Output
Comment	This message outputs various information on the receiver, such as power-up screen, software version etc. This message can be configured using the CFG-INFMSG configuration group.
Information	*Class/ID:* 0xf0 0x41 *Number of fields:* 7
Structure	`$xxTXT,numMsg,msgNum,msgType,text*cs\r\n`
Examples	`$GPTXT,01,01,02,u-blox ag - www.u-blox.com*50\r\n` `$GPTXT,01,01,02,ANTARIS ATR0620 HW 00000040*67\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	xxTXT	string	-	$GPTXT	TXT Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	numMsg	numeric	-	01	Total number of messages in this transmission (range: 1-99)
2	msgNum	numeric	-	01	Message number in this transmission (range: 1-numMsg)

3	msgType	numeric	-	02	Text identifier (u-blox receivers specify the type of the message with this number): • 00 = Error • 01 = Warning • 02 = Notice • 07 = User
4	text	string	-	www.u-blox.com	Any ASCII text
5	cs	hexadecimal	-	*67	Checksum
6	CRLF	character	-	-	Carriage return and line feed

2.7.19 VLW

2.7.19.1 Dual ground/water distance

Message	**NMEA-Standard-VLW** **Dual ground/water distance**
Type	Output
Comment	The distance traveled, relative to the water and over the ground. This message relates to the odometer feature detailed in the integration manual.
Information	*Class/ID:* 0xf0 0x0f *Number of fields:* 11
Structure	`$xxVLW,twd,twdUnit,wd,wdUnit,tgd,tgdUnit,gd,gdUnit*cs\r\n`
Example	`$GPVLW,,N,,N,15.8,N,1.2,N*06\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	xxVLW	string	-	$GPVLW	VLW Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	twd	numeric	nmi	-	Total cumulative water distance: null (fixed field)
2	twdUnit	character	-	N	Total cumulative water distance units: N (nautical miles, fixed field)
3	wd	numeric	nmi	-	Water distance since reset: null (fixed field)
4	wdUnit	character	-	N	Water distance since reset units: N (nautical miles, fixed field)
5	tgd	numeric	nmi	15.8	Total cumulative ground distance (only available in NMEA 4.00 and later)
6	tgdUnit	character	-	N	Total cumulative ground distance units: N (nautical miles, fixed field, only available in NMEA 4.00 and later)
7	gd	numeric	nmi	1.2	Ground distance since reset (only available in NMEA 4.00 and later)
8	gdUnit	character	-	N	Ground distance since reset units: N (nautical miles, fixed field, only available in NMEA 4.00 and later)
9	cs	hexadecimal	-	*06	Checksum
10	CRLF	character	-	-	Carriage return and line feed

2.7.20 VTG

2.7.20.1 Course over ground and ground speed

Message	**NMEA-Standard-VTG** **Course over ground and ground speed**
Type	Output
Comment	Velocity is given as course over ground (COG) and speed over ground (SOG).
Information	*Class/ID:* 0xf0 0x05 *Number of fields:* 12
Structure	`$xxVTG,cogt,cogtUnit,cogm,cogmUnit,sogn,sognUnit,sogk,sogkUnit,posMode*cs\r\n`
Example	`$GPVTG,77.52,T,,M,0.004,N,0.008,K,A*06\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`xxVTG`	string	-	$GPVTG	VTG Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	`cogt`	numeric	degrees	77.52	Course over ground (true)
2	`cogtUnit`	character	-	T	Course over ground units: T (degrees true, fixed field)
3	`cogm`	numeric	degrees	-	Course over ground (magnetic)
4	`cogmUnit`	character	-	M	Course over ground units: M (degrees magnetic, fixed field)
5	`sogn`	numeric	knots	0.004	Speed over ground
6	`sognUnit`	character	-	N	Speed over ground units: N (knots, fixed field)
7	`sogk`	numeric	km/h	0.008	Speed over ground
8	`sogkUnit`	character	-	K	Speed over ground units: K (kilometers per hour, fixed field)
9	`posMode`	character	-	A	Mode indicator, see position fix flags description (only available in NMEA 2.3 and later)
10	`cs`	hexadecimal	-	*06	Checksum
11	`CRLF`	character	-	-	Carriage return and line feed

2.7.21 ZDA

2.7.21.1 Time and date

Message	**NMEA-Standard-ZDA** **Time and date**
Type	Output
Comment	UTC, day, month, year and local time zone.
Information	*Class/ID:* 0xf0 0x08 *Number of fields:* 9
Structure	`$xxZDA,time,day,month,year,ltzh,ltzn*cs\r\n`
Example	`$GPZDA,082710.00,16,09,2002,00,00*64\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`xxZDA`	string	-	$GPZDA	ZDA Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	`time`	hhmmss.ss	-	082710.00	UTC Time. See section UTC representation in the integration manual for details.
2	`day`	dd	day	16	UTC day (range: 1-31)
3	`month`	mm	month	09	UTC month (range: 1-12)
4	`year`	yyyy	year	2002	UTC year

5	ltzh	xx	-	00	Local time zone hours (fixed field, always 00)
6	ltzn	zz	-	00	Local time zone minutes (fixed field, always 00)
7	cs	hexadecimal	-	*64	Checksum
8	CRLF	character	-	-	Carriage return and line feed

2.8 PUBX messages

Proprietary NMEA messages for u-blox positioning receivers. See also NMEA-proprietary messages.

2.8.1 CONFIG (PUBX,41)

2.8.1.1 Set protocols and baud rate

Message	**NMEA-PUBX-CONFIG** **Set protocols and baud rate**
Type	Set
Comment	
Information	*Class/ID:* 0xf1 0x41 *Number of fields:* 9
Structure	`$PUBX,41,portId,inProto,outProto,baudrate,autobauding*cs\r\n`
Example	`$PUBX,41,1,0007,0003,19200,0*25\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	PUBX	string	-	$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	41	Proprietary message identifier
2	portId	numeric	-	1	ID of communication port. See section Communication ports in the integration manual for details.
3	inProto	hexadecimal	-	0007	Input protocol mask. Bitmask, specifying which protocols(s) are allowed for input. See section Communication ports in the integration manual for details.
4	outProto	hexadecimal	-	0003	Output protocol mask. Bitmask, specifying which protocols(s) are allowed for input. See section Communication ports in the integration manual for details.
5	baudrate	numeric	bits/s	19200	Baud rate
6	autobauding	numeric	-	-	Autobauding: 1=enable, 0=disable (not supported on u-blox 5, set to 0)
7	cs	hexadecimal	-	*25	Checksum
8	CRLF	character	-	-	Carriage return and line feed

2.8.2 POSITION (PUBX,00)

2.8.2.1 Poll a PUBX,00 message

Message	**NMEA-PUBX-POSITION** **Poll a PUBX,00 message**
Type	Poll request
Comment	A PUBX,00 message is polled by sending the PUBX,00 message without any data fields.
Information	*Class/ID:* 0xf1 0x00 *Number of fields:* 4
Structure	`$PUBX,00*33\r\n`

Example	`$PUBX,00*33\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`PUBX`	string	-	$PUBX	Message ID, UBX protocol header, proprietary sentence
1	`msgId`	numeric	-	00	Set to 00 to poll a PUBX,00 message
2	`cs`	hexadecimal	-	*33	Checksum
3	`CRLF`	character	-	-	Carriage return and line feed

2.8.2.2 Lat/Long position data

Message	**NMEA-PUBX-POSITION** **Lat/Long position data**
Type	Output
Comment	This message contains position solution data. The datum selection may be changed using the message UBX-CFG-DAT. ☞ The output of this message is dependent on the currently selected datum (default: WGS84).
Information	*Class/ID:* 0xf1 0x00 *Number of fields:* 23
Structure	`$PUBX,00,time,lat,NS,long,EW,altRef,navStat,hAcc,vAcc,SOG,COG,vVel,diffAge,HDOP,VDOP ↲ ,TDOP,numSvs,reserved,DR,*cs\r\n`
Example	`$PUBX,00,081350.00,4717.113210,N,00833.915187,E,546.589,G3,2.1,2.0,0.007,77.52,0.007 ↲ ,,0.92,1.19,0.77,9,0,0*5F\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	`PUBX`	string	-	$PUBX	Message ID, UBX protocol header, proprietary sentence
1	`msgId`	numeric	-	00	Proprietary message identifier: 00
2	`time`	hhmmss.ss	-	081350.00	UTC time. See section UTC representation in the integration manual for details.
3	`lat`	ddmm.mmmmm	-	4717.113210	Latitude (degrees and minutes), see format description
4	`NS`	character	-	N	North/South Indicator
5	`long`	dddmm.mmmmm	-	00833.915187	Longitude (degrees and minutes), see format description
6	`EW`	character	-	E	East/West indicator
7	`altRef`	numeric	m	546.589	Altitude above user datum ellipsoid
8	`navStat`	string	-	G3	Navigation Status: • NF = No Fix • DR = Dead reckoning only solution • G2 = Stand alone 2D solution • G3 = Stand alone 3D solution • D2 = Differential 2D solution • D3 = Differential 3D solution • RK = Combined GPS + dead reckoning solution • TT = Time only solution
9	`hAcc`	numeric	m	2.1	Horizontal accuracy estimate
10	`vAcc`	numeric	m	2.0	Vertical accuracy estimate
11	`SOG`	numeric	km/h	0.007	Speed over ground
12	`COG`	numeric	deg	77.52	Course over ground
13	`vVel`	numeric	m/s	0.007	Vertical velocity (positive downwards)

14	diffAge	numeric	s	-	Age of differential corrections (blank when DGPS is not used)
15	HDOP	numeric	-	0.92	HDOP, Horizontal Dilution of Precision
16	VDOP	numeric	-	1.19	VDOP, Vertical Dilution of Precision
17	TDOP	numeric	-	0.77	TDOP, Time Dilution of Precision
18	numSvs	numeric	-	9	Number of satellites used in the navigation solution
19	reserved	numeric	-	-	Reserved, always set to 0
20	DR	numeric	-	-	DR used
21	cs	hexadecimal	-	*5B	Checksum
22	CRLF	character	-	-	Carriage return and line feed

2.8.3 RATE (PUBX,40)

2.8.3.1 Set NMEA message output rate

Message	**NMEA-PUBX-RATE** **Set NMEA message output rate**
Type	Set
Comment	Set/Get message rate configuration (s) to/from the receiver. • Send rate is relative to the event a message is registered on. For example, if the rate of a navigation message is set to 2, the message is sent every second navigation solution.
Information	*Class/ID:* 0xf1 0x40 *Number of fields:* 11
Structure	`$PUBX,40,msgId,rddc,rus1,rus2,rusb,rspi,reserved*cs\r\n`
Example	`$PUBX,40,GLL,1,0,0,0,0*5D\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	PUBX	string	-	$PUBX	Message ID, UBX protocol header, proprietary sentence
1	ID	numeric	-	40	Proprietary message identifier
2	msgId	string	-	GLL	NMEA message identifier
3	rddc	numeric	cycles	1	output rate on DDC • 0 disables that message from being output on this port • 1 means that this message is output every epoch
4	rus1	numeric	cycles	1	output rate on USART 1 • 0 disables that message from being output on this port • 1 means that this message is output every epoch
5	rus2	numeric	cycles	1	output rate on USART 2 • 0 disables that message from being output on this port • 1 means that this message is output every epoch
6	rusb	numeric	cycles	1	output rate on USB • 0 disables that message from being output on this port • 1 means that this message is output every epoch
7	rspi	numeric	cycles	1	output rate on SPI • 0 disables that message from being output on this port • 1 means that this message is output every epoch

8	reserved	numeric	-	-	Reserved: always fill with 0
9	cs	hexadecimal	-	*5D	Checksum
10	CRLF	character	-	-	Carriage return and line feed

2.8.4 SVSTATUS (PUBX,03)

2.8.4.1 Poll a PUBX,03 message

Message	**NMEA-PUBX-SVSTATUS** **Poll a PUBX,03 message**
Type	Poll request
Comment	A PUBX,03 message is polled by sending the PUBX,03 message without any data fields.
Information	*Class/ID:* 0xf1 0x03 *Number of fields:* 4
Structure	`$PUBX,03*30\r\n`
Example	`$PUBX,03*30\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	PUBX	string	-	$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	03	Set to 03 to poll a PUBX,03 message
2	cs	hexadecimal	-	*30	Checksum
3	CRLF	character	-	-	Carriage return and line feed

2.8.4.2 Satellite status

Message	**NMEA-PUBX-SVSTATUS** **Satellite status**
Type	Output
Comment	The PUBX,03 message contains satellite status information.
Information	*Class/ID:* 0xf1 0x03 *Number of fields:* 5 + n·6
Structure	`$PUBX,03,GT{,sv,s,az,el,cno,lck},*cs\r\n`
Example	`$PUBX,03,11,23,-,,,45,010,29,-,,,46,013,07,-,,,42,015,08,U,067,31,42,025,10,U,195,33 ↵ ,46,026,18,U,326,08,39,026,17,-,,,32,015,26,U,306,66,48,025,27,U,073,10,36,026,28,U, ↵ 089,61,46,024,15,-,,,39,014*0D\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	PUBX	string	-	$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	03	Proprietary message identifier: 03
2	n	numeric	-	11	Number of GNSS satellites tracked
Start of repeated group (n times)					
3 + n·6	sv	numeric	-	23	Satellite ID according to UBX svId mapping (see Satellite Numbering)
4 + n·6	s	character	-	-	Satellite status: • - = Not used • U = Used in solution • e = Ephemeris available, but not used for navigation
5 + n·6	az	numeric	deg	-	Satellite azimuth (range: 0-359)
6 + n·6	el	numeric	deg	-	Satellite elevation (<= 90)

7 + n·6	cno	numeric	dBHz	45	Signal strength (C/N0, range 0-99), blank when not tracking
8 + n·6	lck	numeric	s	010	Satellite carrier lock time (range: 0-64) • 0 = code lock only • 64 = lock for 64 seconds or more
End of repeated group (n times)					
3 + n·6	cs	hexadecimal	-	*0D	Checksum
4 + n·6	CRLF	character	-	-	Carriage return and line feed

2.8.5 TIME (PUBX,04)

2.8.5.1 Poll a PUBX,04 message

Message	**NMEA-PUBX-TIME** **Poll a PUBX,04 message**
Type	Poll request
Comment	A PUBX,04 message is polled by sending the PUBX,04 message without any data fields.
Information	*Class/ID:* 0xf1 0x04 *Number of fields:* 4
Structure	`$PUBX,04*37\r\n`
Example	`$PUBX,04*37\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	PUBX	string	-	$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	04	Set to 04 to poll a PUBX,04 message
2	cs	hexadecimal	-	*37	Checksum
3	CRLF	character	-	-	Carriage return and line feed

2.8.5.2 Time of day and clock information

Message	**NMEA-PUBX-TIME** **Time of day and clock information**
Type	Output
Comment	
Information	*Class/ID:* 0xf1 0x04 *Number of fields:* 12
Structure	`$PUBX,04,time,date,utcTow,utcWk,leapSec,clkBias,clkDrift,tpGran,*cs\r\n`
Example	`$PUBX,04,073731.00,091202,113851.00,1196,15D,1930035,-2660.664,43,*3C\r\n`

Payload:

Field	*Name*	*Format*	*Unit*	*Example*	*Description*
0	PUBX	string	-	$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msgId	numeric	-	04	Proprietary message identifier: 04
2	time	hhmmss.ss	-	073731.00	UTC time. See section UTC representation in the integration manual for details.
3	date	ddmmyy	-	091202	UTC date, day, month, year. See section UTC representation in the integration manual for details.
4	utcTow	numeric	s	113851.00	UTC time of week
5	utcWk	numeric	-	1196	UTC week number, continues beyond 1023

6	leapSec	numeric/ text	s	15D	Leap seconds (not supported for protocol versions less than 13.01) The number is marked with a *D* if the value is the firmware default value. If the value is not marked it has been received from a satellite.
7	clkBias	numeric	ns	1930035	Receiver clock bias
8	clkDrift	numeric	ns/s	-2660.664	Receiver clock drift
9	tpGran	numeric	ns	43	Time pulse granularity, the quantization error of the TIMEPULSE pin
10	cs	hexadecimal	-	*3C	Checksum
11	CRLF	character	-	-	Carriage return and line feed

3 UBX protocol

3.1 UBX protocol key features

u-blox receivers support a u-blox-proprietary protocol to communicate with a host computer. This protocol has the following key features:

- Compact – uses 8-bit binary data
- Checksum protected – uses a low-overhead checksum algorithm
- Modular – uses a two-stage message identifier (Class and Message ID)

3.2 UBX frame structure

The structure of a basic UBX frame is shown in the following diagram.

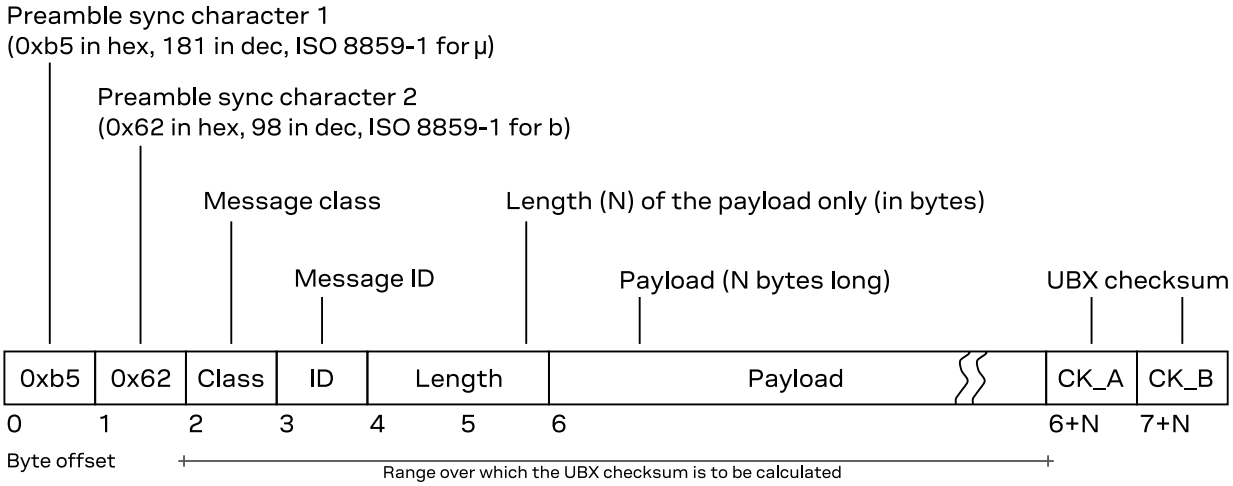

- Every *frame* starts with a 2-byte *preamble* consisting of two synchronization characters: `0xb5` and `0x62`.
- A 1-byte *message class* field follows. A class is a group of messages that are related to each other.
- A 1-byte *message ID* field defines the message that is to follow.
- A 2-byte *length* field follows. The length is defined as being that of the payload only. It does not include the preamble, message class, message ID, length, or UBX checksum fields. The number format of the length field is an unsigned little-endian 16-bit integer (a "U2" in UBX data types).
- The *payload* field contains a variable number (= *length*) of bytes.
- The two 1-byte *CK_A* and *CK_B* fields hold a 16-bit checksum whose calculation is defined in UBX checksum section. This concludes the frame.

3.3 UBX payload definition rules

This section contains the rules and guidelines for UBX message payloads. See also UBX message example.

3.3.1 UBX structure packing

Values are placed in such an order that structure packing is not a problem. This means that two-byte values shall start on offsets that are a multiple of two; four-byte values shall start at a multiple of four; and so on.

3.3.2 UBX reserved elements

Some messages contain reserved fields or bits to allow for future expansion. The contents of these elements should be ignored in output messages and must be set to zero in input messages. Where a message is output and subsequently returned to the receiver as an input message, reserved elements can either be explicitly set to zero or left with whatever value they were output with.

For fields in a bitfield the same rules apply. Note that bits not described are automatically reserved and are not explicitly stated (see UBX message example).

3.3.3 UBX undefined values

The description of some fields provide specific meanings for specific values. For example, the field `gnssId` appears in many UBX messages and uses 0 to indicate GPS, 1 for SBAS and so on (see GNSS identifiers for details); however it is usually stored in a byte with far more possible values than the handful currently defined. All such undefined values are reserved for future expansion and therefore should not be used.

3.3.4 UBX conditional values

Some UBX messages use validity flag fields to indicate whether the values of some value fields are valid. For example the UBX-NAV-PVT message has the `validDate` and `validTime` fields that indicate whether the date (`year`, `month` and `day` fields), and, respectively, the time (`hour`, `min` and `sec` fields) are valid. This means that these value fields will only contain meaningful data if the corresponding flag field is set (has the value 1).

3.3.5 UBX data types

The following data types (number formats) are defined.

Name	Type	Size (Bytes)	Range	Resolution
U1	unsigned 8-bit integer	1	$0...2^8-1$	1
I1	signed 8-bit integer, two's complement	1	$-2^7...2^7-1$	1
X1	8-bit bitfield	1	n/a	n/a
U2	unsigned little-endian 16-bit integer	2	$0...2^{16}-1$	1
I2	signed little-endian 16-bit integer, two's complement	2	$-2^{15}...2^{15}-1$	1
X2	16-bit little-endian bitfield	2	n/a	n/a
U4	unsigned little-endian 32-bit integer	4	$0...2^{32}-1$	1
I4	signed little-endian 32-bit integer, two's complement	4	$-2^{31}...2^{31}-1$	1
X4	32-bit little-endian bitfield	4	n/a	n/a

Name	Type	Size (Bytes)	Range	Resolution
R4	IEEE 754 single (32-bit) precision	4	$-2^{127}...2^{127}$	~ value·2^{-24}
R8	IEEE 754 double (64-bit) precision	8	$-2^{1023}...2^{1023}$	~ value·2^{-53}
CH	ASCII / ISO 8859-1 char (8-bit)	1	n/a	n/a
$U_{:n}$	unsigned bitfield value of *n* bits width	var.	variable	variable
$I_{:n}$	signed (two's complement) bitfield value of *n* bits width	var.	variable	variable
$S_{:n}$	signed bitfield value of *n* bits width, in sign (most significant bit) and magnitude (remaining bits) notation	var.	variable	variable

3.3.6 UBX fields scale and unit

Fields in UBX messages can have a unit defined. Whenever possible, SI units and symbols are used (e.g. "m" for meters, "s" for seconds). For civil (UTC) time representation units of years (y), months (month), days (d), hours (h), minutes (min) and seconds (s) are used.

Fields in UBX messages can have a scale factor defined. Unity (factor 1) is assumed if no scale is specified. For integer type fields this is often combined with a unit. When a scale is combined with a unit, the scale represents the smallest storage unit. For example, if meters (m) are expressed (stored) in centimeters the scale would be 0.01 (or 1e-2). This is equivalent of specifying a unit of centimeters (cm) and no scale.

The description of some integer values (e.g. U2, I4 or I8) indicates a fixed-point format (e.g. [UU.FF], [IIIII.FFF] or [IIIIIII.FFFFFFFF]). The fixed-point value can be retrieved from the integer value by first casting it to appropriate type (e.g. as a floating-point number) and then scaling it with the indicated scaling factor.

3.3.7 UBX repeated fields

There are two types of repetitions in UBX messages. The first type specifies that a single field is repeated a constant number of times. This repetition is defined in the type of the field. For example, the UBX message example can specify a field `data` of type *U1[5]*. In this case the `data` field should be interpreted as an array of five U1 values.

The second type of repetition in messages is referred to as *repeated groups*, which groups one or more fields into a block of payload data. There are several types of repetition:

- The number of repetitions of *variable-by-field group* is indicated by another, earlier field in the same message. The number of repetitions can be zero or more, depending on the value of the referenced field.
- A *constant group* has a constant number of repetitions.
- An *optional group* is repeated zero or one times, depending on the available payload data. That is, the fields are present in the message only if the payload of the message is large enough to cover the whole group of fields.
- The number of repetitions of a *variable-by-size* group is given by the available payload size. The group will repeat until there is not enough payload data left to cover the whole group of fields another time.

Note that only some combinations of repeated groups of fields are possible in a single message. See also UBX payload decoding.

3.3.8 UBX payload decoding

UBX message payloads are designed so that the data (fields) can be extracted by a single pass through the payload from start to end. Fixed-size messages are the trivial case where the offset of all fields is unambiguously defined. Variable-size messages have variable number of repetitions of one or multiple groups of fields. For groups where the number of repetitions is given by the value of another field, that field can always be found at a fixed offset in the message payload before the respective group of fields. Groups whose number of repetitions depend on the payload size can only be the last group of fields in a message and only one such group may exist in a message. See also UBX repeated fields.

3.4 UBX checksum

The checksum is calculated over the message, starting and including the class field up until, but excluding, the checksum fields (see the figure UBX frame structure).

The checksum algorithm used is the 8-bit Fletcher algorithm, which is used in the TCP standard RFC 1145). This algorithm works as follows:

- `Buffer[N]` is an array of bytes that contains the data over which the checksum is to be calculated.
- The two `CK_A` and `CK_A` values are 8-bit unsigned integers, only! If implementing with larger-sized integer values, make sure to mask both `CK_A` and `CK_B` with the value `0xff` after both operations in the loop.
- After the loop, the two *U1* values contain the checksum, transmitted after the message payload, which concludes the frame.

```
CK_A = 0, CK_B = 0
For (I = 0; I < N; I++)
{
    CK_A = CK_A + Buffer[I]
    CK_B = CK_B + CK_A
}
```

3.5 UBX message flow

There are certain features associated with the messages being sent back and forth:

3.5.1 UBX acknowledgement

When messages from the class CFG are sent to the receiver, the receiver will send an "acknowledge" (UBX-ACK-ACK) or a "not acknowledge" (UBX-ACK-NAK) message back to the sender, depending on whether or not the message was processed correctly.

Some messages from other classes also use the same acknowledgement mechanism.

3.5.2 UBX polling mechanism

The UBX protocol is designed so that messages can be polled by sending the message required to the receiver but without a payload (or with just a single parameter that identifies the poll request). The receiver then responds with the same message with the payload populated.

3.6 GNSS, satellite, and signal numbering

See GNSS, satellite, and signal identifiers for details on how GNSS, satellites and signals are numbered in the UBX protocol.

3.7 UBX message example

This is an example of the definition of UBX messages as shown in the following sections.

Message ❶	**UBX-DEMO-EXAMPLE** **Example demo message**					
Type ❷	Periodic/polled					
Comment ❸	This is a comment that describes the use of the demo example message. There can be references to other sections in the documentation (such as: UBX protocol). ☞ Note that there can be important remarks here.					
Message ❹	*Header*	*Class ID*	*Length (bytes)*		*Payload*	*Checksum*
Structure	0xb5 0x62	0x01 0x07	16 + numRepeat*4		*see below*	CK_A CK_B
Payload description: ❺						
Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*	
0	U4	`aField`	-	-	a field that contains an unsigned integer with no particular scale or unit	
4	I4	`anotherField`	1e-2	m	a field that contains a length in meters (m) with a scale of 1e-2 (= 0.01), i.e. a length in centimeters	
8	X2	`bitfield` ❻	-	-	this field contains flags or values smaller than one byte, whose definition follows below (bits not described are reserved)	
bit 0	U:1	`aFieldValid`	-	-	the first bit in `bitfield` indicates whether the `aField` is valid or not (see UBX conditional values)	
bit 1	U:1	`someFlag`	-	-	the second bit is a flag (1 = true, 0 = false)	
bits 5...2	U:4	`aBitFieldValue`	-	-	a 4-bits value (range: 0...15)	
10	U1[5] ❼	`reserved0`	-	-	a reserved field, whose value shall be ignored (in output messages) or set to 0 (in input messages)	
15	U1	`numRepeat`	-	-	number of repetitions in the group of fields below	
Start of repeated group (`numRepeat` times) ❽						
16 + n*4	I2	`someValue`	-	-	a signed value in a repeated group of fields	
18 + n*4	U2	`anotherValue`	-	-	another value in a repeated group of fields	
End of repeated group (`numRepeat` times)						

❶ The first line shows the message name (see Message naming). The second line shows a short description of the message.

❷ The message type (see Message types).

❸ This section contains comments that describe the message. Often links to other related sections in the documentation or other related messages are found here.

❹ The message structure gives the parameters for the UBX frame structure, notably the message class and message ID values and the payload length. For many messages the payload length is a fixed number (of bytes). Messages that contain repeated blocks of information (fields) have a variable payload (see UBX repeated fields).

❺ The message payload definition is given as a list of fields and their parameters. Each field starts at a specified offset (in bytes) in the payload (see also UBX structure packing), is of a specific type (see UBX data types), has a unique name (within the message), and a description. Optionally, fields can have a scale and/or a unit (see UBX fields scale and unit).

❻ Bitfields ("X" types) are broken down into smaller parts. Each part can be one or more bits wide. Values that are two or more bits wide can be unsigned or one of two signed value representation (see UBX data types). Note that the ten unused bits 15...6 are not explicitly stated as UBX reserved elements.

❼ Fields can be arrays of values of the same type (see UBX repeated fields).

❽ Groups of fields can be repeated in the payload. The number of repetitions can be given by another field in the message (this example), a constant number, zero or one times (known as "optional group"), or derived from the remaining payload size (labeled as "repeated N times"). See also UBX repeated fields and UBX payload decoding.

3.8 UBX messages overview

Message	*Class/ID*	*Description (Type)*
UBX-ACK – Acknowledgement and negative acknowledgement messages		
UBX-ACK-ACK	0x05 0x01	• Message acknowledged (Output)
UBX-ACK-NAK	0x05 0x00	• Message not acknowledged (Output)
UBX-CFG – Configuration and command messages		
UBX-CFG-CFG	0x06 0x09	• Clear, save and load configurations (Command)
UBX-CFG-RST	0x06 0x04	• Reset receiver / Clear backup data structures (Command)
UBX-CFG-VALDEL	0x06 0x8c	• Delete configuration item values (Set) • Delete configuration item values (with transaction) (Set)
UBX-CFG-VALGET	0x06 0x8b	• Get configuration items (Poll request) • Configuration items (Polled)
UBX-CFG-VALSET	0x06 0x8a	• Set configuration item values (Set) • Set configuration item values (with transaction) (Set)
UBX-INF – Information messages		
UBX-INF-DEBUG	0x04 0x04	• ASCII output with debug contents (Output)
UBX-INF-ERROR	0x04 0x00	• ASCII output with error contents (Output)
UBX-INF-NOTICE	0x04 0x02	• ASCII output with informational contents (Output)
UBX-INF-TEST	0x04 0x03	• ASCII output with test contents (Output)
UBX-INF-WARNING	0x04 0x01	• ASCII output with warning contents (Output)
UBX-LOG – Logging messages		
UBX-LOG-BATCH	0x21 0x11	• Batched data (Polled)
UBX-LOG-RETRIEVEBATCH	0x21 0x10	• Request batch data (Command)
UBX-MGA – GNSS assistance (A-GNSS) messages		
UBX-MGA-ACK	0x13 0x60	• Multiple GNSS acknowledge message (Output)
UBX-MGA-ANO	0x13 0x20	• Multiple GNSS AssistNow Offline assistance (Input)
UBX-MGA-BDS	0x13 0x03	• BeiDou ephemeris assistance (Input) • BeiDou almanac assistance (Input)

Message	Class/ID	Description (Type)
		• BeiDou health assistance (Input) • BeiDou UTC assistance (Input) • BeiDou ionosphere assistance (Input)
UBX-MGA-DBD	0x13 0x80	• Poll the navigation database (Poll request) • Navigation database dump entry (Input/output)
UBX-MGA-GAL	0x13 0x02	• Galileo ephemeris assistance (Input) • Galileo almanac assistance (Input) • Galileo GPS time offset assistance (Input) • Galileo UTC assistance (Input)
UBX-MGA-GLO	0x13 0x06	• GLONASS ephemeris assistance (Input) • GLONASS almanac assistance (Input) • GLONASS auxiliary time offset assistance (Input)
UBX-MGA-GPS	0x13 0x00	• GPS ephemeris assistance (Input) • GPS almanac assistance (Input) • GPS health assistance (Input) • GPS UTC assistance (Input) • GPS ionosphere assistance (Input)
UBX-MGA-INI	0x13 0x40	• Initial position assistance (Input) • Initial time assistance (Input) • Initial clock drift assistance (Input) • Initial frequency assistance (Input) • Earth orientation parameters assistance (Input)
UBX-MGA-QZSS	0x13 0x05	• QZSS ephemeris assistance (Input) • QZSS almanac assistance (Input) • QZSS health assistance (Input)
UBX-MON – Monitoring messages		
UBX-MON-BATCH	0x0a 0x32	• Data batching buffer status (Polled)
UBX-MON-COMMS	0x0a 0x36	• Communication port information (Periodic/polled)
UBX-MON-GNSS	0x0a 0x28	• Information message major GNSS selection (Polled)
UBX-MON-HW3	0x0a 0x37	• I/O pin status (Periodic/polled)
UBX-MON-PATCH	0x0a 0x27	• Installed patches (Polled)
UBX-MON-RF	0x0a 0x38	• RF information (Periodic/polled)
UBX-MON-RXR	0x0a 0x21	• Receiver status information (Output)
UBX-MON-SPAN	0x0a 0x31	• Signal characteristics (Periodic/polled)
UBX-MON-VER	0x0a 0x04	• Receiver and software version (Polled)
UBX-NAV – Navigation solution messages		
UBX-NAV-AOPSTATUS	0x01 0x60	• AssistNow Autonomous status (Periodic/polled)
UBX-NAV-CLOCK	0x01 0x22	• Clock solution (Periodic/polled)
UBX-NAV-COV	0x01 0x36	• Covariance matrices (Periodic/polled)
UBX-NAV-DOP	0x01 0x04	• Dilution of precision (Periodic/polled)
UBX-NAV-EOE	0x01 0x61	• End of epoch (Periodic)
UBX-NAV-ODO	0x01 0x09	• Odometer solution (Periodic/polled)
UBX-NAV-ORB	0x01 0x34	• GNSS orbit database info (Periodic/polled)
UBX-NAV-PL	0x01 0x62	• Protection level information (Periodic)
UBX-NAV-POSECEF	0x01 0x01	• Position solution in ECEF (Periodic/polled)
UBX-NAV-POSLLH	0x01 0x02	• Geodetic position solution (Periodic/polled)
UBX-NAV-PVT	0x01 0x07	• Navigation position velocity time solution (Periodic/polled)
UBX-NAV-RESETODO	0x01 0x10	• Reset odometer (Command)

Message	Class/ID	Description (Type)
UBX-NAV-SAT	0x01 0x35	• Satellite information (Periodic/polled)
UBX-NAV-SBAS	0x01 0x32	• SBAS status data (Periodic/polled)
UBX-NAV-SIG	0x01 0x43	• Signal information (Periodic/polled)
UBX-NAV-SLAS	0x01 0x42	• QZSS L1S SLAS status data (Periodic/polled)
UBX-NAV-STATUS	0x01 0x03	• Receiver navigation status (Periodic/polled)
UBX-NAV-TIMEBDS	0x01 0x24	• BeiDou time solution (Periodic/polled)
UBX-NAV-TIMEGAL	0x01 0x25	• Galileo time solution (Periodic/polled)
UBX-NAV-TIMEGLO	0x01 0x23	• GLONASS time solution (Periodic/polled)
UBX-NAV-TIMEGPS	0x01 0x20	• GPS time solution (Periodic/polled)
UBX-NAV-TIMELS	0x01 0x26	• Leap second event information (Periodic/polled)
UBX-NAV-TIMEQZSS	0x01 0x27	• QZSS time solution (Periodic/polled)
UBX-NAV-TIMEUTC	0x01 0x21	• UTC time solution (Periodic/polled)
UBX-NAV-VELECEF	0x01 0x11	• Velocity solution in ECEF (Periodic/polled)
UBX-NAV-VELNED	0x01 0x12	• Velocity solution in NED frame (Periodic/polled)
UBX-RXM – Receiver manager messages		
UBX-RXM-MEAS20	0x02 0x84	• Satellite measurements for CloudLocate location service (20 bytes message) (Periodic/polled)
UBX-RXM-MEAS50	0x02 0x86	• Satellite measurements for CloudLocate location service (50 bytes message) (Periodic/polled)
UBX-RXM-MEASC12	0x02 0x82	• Satellite measurements for CloudLocate location service (second 12 bytes message) (Periodic/polled)
UBX-RXM-MEASD12	0x02 0x80	• Satellite measurements for CloudLocate location service (first 12 bytes message) (Periodic/polled)
UBX-RXM-MEASX	0x02 0x14	• Satellite measurements for RRLP (Periodic/polled)
UBX-RXM-PMREQ	0x02 0x41	• Power management request (Command)
UBX-RXM-RLM	0x02 0x59	• Galileo SAR short-RLM report (Output) • Galileo SAR long-RLM report (Output)
UBX-RXM-SFRBX	0x02 0x13	• Broadcast navigation data subframe (Output)
UBX-SEC – Security messages		
UBX-SEC-UNIQID	0x27 0x03	• Unique chip ID (Output)
UBX-TIM – Timing messages		
UBX-TIM-TM2	0x0d 0x03	• Time mark data (Periodic/polled)
UBX-TIM-TP	0x0d 0x01	• Time pulse time data (Periodic/polled)
UBX-TIM-VRFY	0x0d 0x06	• Sourced time verification (Periodic/polled)
UBX-UPD – Firmware update messages		
UBX-UPD-SOS	0x09 0x14	• Poll backup restore status (Poll request) • Create backup in flash (Command) • Clear backup in flash (Command) • Backup creation acknowledge (Output) • System restored from backup (Output)

3.9 UBX-ACK (0x05)

The messages in the UBX-ACK class are used to indicate acknowledgement or rejection (i.e. negative acknowledgement) of input messages, such as UBX-CFG messages.

3.9.1 UBX-ACK-ACK (0x05 0x01)

3.9.1.1 Message acknowledged

Message	**UBX-ACK-ACK** **Message acknowledged**					
Type	Output					
Comment	Output upon processing of an input message. A UBX-ACK-ACK is sent as soon as possible but at least within one second.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x05	0x01	2	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`clsID`	-	-	Class ID of the Acknowledged Message
1	U1	`msgID`	-	-	Message ID of the Acknowledged Message

3.9.2 UBX-ACK-NAK (0x05 0x00)

3.9.2.1 Message not acknowledged

Message	**UBX-ACK-NAK** **Message not acknowledged**					
Type	Output					
Comment	Output upon processing of an input message. A UBX-ACK-NAK is sent as soon as possible but at least within one second.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x05	0x00	2	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`clsID`	-	-	Class ID of the Not-Acknowledged Message
1	U1	`msgID`	-	-	Message ID of the Not-Acknowledged Message

3.10 UBX-CFG (0x06)

The messages in the UBX-CFG class are used to configure the receiver and poll current configuration values as well as for sending commands to the receiver. Unless stated otherwise, any message in this class sent to the receiver is either acknowledged (by a UBX-ACK-ACK message) if processed successfully or rejected (with a UBX-ACK-NAK message) if processed unsuccessfully.

3.10.1 UBX-CFG-CFG (0x06 0x09)

3.10.1.1 Clear, save and load configurations

Message	**UBX-CFG-CFG** **Clear, save and load configurations**
Type	Command
Comment	See Receiver configuration for a detailed description on how receiver configuration should be used. The behavior of this message has changed for protocol versions greater than 23.01. Use UBX-CFG-VALSET and UBX-CFG-VALDEL with the appropriate layers instead. These new messages support selective saving and clearing to retain the behavior removed from this message. The three masks which were used to clear, save and load a subsection of configuration have lost their meaning. It is no longer possible to save or clear a subsection of the configuration using this message. The behavior of the masks is now: • if any bit is set in the clearMask: all configuration in the selected non-volatile memory is deleted • if any bit is set in the saveMask: all current configuration is stored (copied) to the selected layers

- if any bit is set in the loadMask: The current configuration is discarded and rebuilt from all the lower layers

Note that commands can be combined. The sequence of execution is clear, save, then load.

☞ Old functionality of this message is not available in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x06	0x09	12 + [0,1]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	X4	clearMask	-	-	Mask for configuration to clear
bits 31...0	U:32	clearAll	-	-	Clear all saved configuration from the selected non-volatile memory if any bit is set
4	X4	saveMask	-	-	Mask for configuration to save
bits 31...0	U:32	saveAll	-	-	Save all current configuration to the selected non-volatile memory if any bit is set
8	X4	loadMask	-	-	Mask for configuration to load
bits 31...0	U:32	loadAll	-	-	Discard current configuration and rebuilt it from lower non-volatile memory layers if any bit is set
Start of optional group					
12	X1	deviceMask	-	-	Mask which selects the memory devices for saving and/or clearing operation Note that if a deviceMask is not provided, the receiver defaults the operation requested to battery-backed RAM (BBR) and Flash (if available)
bit 0	U:1	devBBR	-	-	Battery-backed RAM
bit 1	U:1	devFlash	-	-	Flash
bit 2	U:1	devEEPROM	-	-	EEPROM (only supported for protocol versions less than 14.00)
bit 4	U:1	devSpiFlash	-	-	SPI Flash (only supported for protocol versions less than 14.00)
End of optional group					

3.10.2 UBX-CFG-RST (0x06 0x04)

3.10.2.1 Reset receiver / Clear backup data structures

Message	**UBX-CFG-RST** **Reset receiver / Clear backup data structures**
Type	Command
Comment	Do not expect this message to be acknowledged by the receiver. • Newer FW version will not acknowledge this message at all. • Older FW version will acknowledge this message but the acknowledge may not be sent completely before the receiver is reset.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x06	0x04	4	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*

0		X2	navBbrMask	-	-	BBR sections to clear. The following special sets apply: • 0x0000 Hot start • 0x0001 Warm start • 0xFFFF Cold start
	bit 0	U:1	eph	-	-	Ephemeris
	bit 1	U:1	alm	-	-	Almanac
	bit 2	U:1	health	-	-	Health
	bit 3	U:1	klob	-	-	Klobuchar parameters
	bit 4	U:1	pos	-	-	Position
	bit 5	U:1	clkd	-	-	Clock drift
	bit 6	U:1	osc	-	-	Oscillator parameter
	bit 7	U:1	utc	-	-	UTC correction + GPS leap seconds parameters
	bit 8	U:1	rtc	-	-	RTC
	bit 11	U:1	sfdr	-	-	SFDR Parameters (only available on the ADR/UDR/HPS product variant) and weak signal compensation estimates
	bit 12	U:1	vmon	-	-	SFDR Vehicle Monitoring Parameter (only available on the ADR/UDR/HPS product variant)
	bit 13	U:1	tct	-	-	TCT Parameters (only available on the ADR/UDR/HPS product variant)
	bit 15	U:1	aop	-	-	Autonomous orbit parameters
2		U1	resetMode	-	-	Reset Type • 0x00 = Hardware reset (watchdog) immediately • 0x01 = Controlled software reset • 0x02 = Controlled software reset (GNSS only) • 0x04 = Hardware reset (watchdog) after shutdown • 0x08 = Controlled GNSS stop • 0x09 = Controlled GNSS start
3		U1	reserved0	-	-	Reserved

3.10.3 UBX-CFG-VALDEL (0x06 0x8c)

3.10.3.1 Delete configuration item values

Message	**UBX-CFG-VALDEL** **Delete configuration item values**
Type	Set
Comment	Overview: • This message can be used to delete saved configuration to effectively revert the item values to defaults. • This message can delete saved configuration from the flash configuration layer and the BBR configuration layer. The changes will not be effective until these layers are loaded into the RAM layer. • This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64. • This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of UBX-CFG-VALDEL that supports transactions. • This message does not check if the resulting configuration is valid. • See Receiver configuration for details. This message returns a UBX-ACK-NAK and no configuration is applied: • if any key is unknown to the receiver FW • if the layer's bitfield does not specify a layer to delete a value from. Notes:

- If a key is sent multiple times within the same message, then the value is effectively deleted only once.
- Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x06	0x8c	4 + [0..n]·4	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x00 for this version)
1	X1	`layers`	-	-	The layers where the configuration should be deleted from
bit 1	U:1	`bbr`	-	-	Delete configuration from the BBR layer
bit 2	U:1	`flash`	-	-	Delete configuration from the Flash layer
2	U1[2]	`reserved0`	-	-	Reserved
Start of repeated group (N times)					
4 + n·4	U4	`keys`	-	-	Configuration key IDs of the configuration items to be deleted
End of repeated group (N times)					

3.10.3.2 Delete configuration item values (with transaction)

Message	**UBX-CFG-VALDEL** **Delete configuration item values (with transaction)**
Type	Set
Comment	Overview: • This message can be used to delete saved configuration to effectively revert them to defaults. • This message can delete saved configuration from the flash configuration layer and the BBR configuration layer. The changes will not be effective until these layers are loaded into the RAM layer. • This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64. • This message can be used multiple times with the result being managed within a transaction. • This message does not check if the resulting configuration is valid. • See Receiver configuration for details. • See version 0 of UBX-CFG-VALDEL for simplified version of this message. This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied: • if any key within a transaction is unknown to the receiver FW • if an invalid transaction state transition is requested • if the layer's bitfield changes within a transaction • if the layer's bitfield does not specify a layer to delete a value from. Notes: • Any request for another UBX-CFG- message type (including UBX-CFG-VALSET and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied. • This message can be sent with no keys to delete for the purposes of managing the transaction state transition. • If a key is sent multiple times within the same message or within the same transaction, then the value is effectively deleted only once. • Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x06	0x8c	4 + [0..n]·4	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x01 for this version)

1		X1	layers	-	-	The layers where the configuration should be deleted from
	bit 1	U:1	bbr	-	-	Delete configuration from the BBR layer
	bit 2	U:1	flash	-	-	Delete configuration from the Flash layer
2		X1	transaction	-	-	Transaction action to be applied:
	bits 1...0	U:2	action	-	-	Transaction action to be applied: • 0 = Transactionless UBX-CFG-VALDEL: In the next UBX-CFG-VALDEL, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied. If a transaction has already been started, cancels any started transaction and the incoming configuration is applied. • 1 = (Re)Start deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or 3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALDEL messages. • 2 = Deletion transaction ongoing: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or 3. • 3 = Apply and end a deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0 or 1.
3		U1	reserved0	-	-	Reserved
Start of repeated group (N times)						
4 + n·4		U4	keys	-	-	Configuration key IDs of the configuration items to be deleted
End of repeated group (N times)						

3.10.4 UBX-CFG-VALGET (0x06 0x8b)

3.10.4.1 Get configuration items

Message	**UBX-CFG-VALGET** **Get configuration items**
Type	Poll request
Comment	Overview: • This message is used to get configuration values by providing a list of configuration key IDs, which identify the configuration items to retrieve. • This message can specify the configuration layer where the values of the specified configuration items are retrieved from. • This message is limited to containing a maximum of 64 key IDs. • See Receiver configuration for details. This message returns a UBX-ACK-NAK: • if any key is unknown to the receiver FW • if the layer field specifies an invalid layer to get the value from • if the keys array specifies more than 64 key IDs. Notes: • If a value is requested multiple times within the same poll request, then the reply will contain it multiple times. • The provided keys can be complete key values (group and item specifiers) or wild-card specifications. A complete key value will constitute a request for one key-value pair. A key value that has a valid group specifier and 0xffff in the item part of the key value (bits 0-15) constitutes a request for all items in the specified group. A key with a value of 0xfff in the group part of the key value (bits 16-27) is a request for all items known to the receiver in all groups.

- The response message is limited to containing a maximum of 64 key-value pairs. If there are wild-card specifications then there may be more than 64 possible responses. In order to handle this, the 'position' field can specify that the response message should skip this number of key-value pairs before it starts constructing the message. This allows a large set of values to be retrieved 64 at a time. If the response contains less than 64 key-value pairs then all values have been reported, otherwise there may be more to read.
- It is not possible to retrieve configuration values for the same configuration item from multiple configuration layers. Separate poll requests must be made for each desired layer.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x06	0x8b	4 + [0..n]·4	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x00 for this version)
1	U1	`layer`	-	-	The layer from which the configuration items should be retrieved: • 0 - RAM layer • 1 - BBR layer • 2 - Flash layer • 7 - Default layer
2	U2	`position`	-	-	Skip this many key values before constructing output message
Start of repeated group (N times)					
4 + n·4	U4	`keys`	-	-	Configuration key IDs of the configuration items to be retrieved
End of repeated group (N times)					

3.10.4.2 Configuration items

Message	**UBX-CFG-VALGET** **Configuration items**
Type	Polled
Comment	This message is output by the receiver to return requested configuration data (key and value pairs). See Receiver configuration for details.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x06	0x8b	4 + [0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x01 for this version)
1	U1	`layer`	-	-	The layer from which the configuration item was retrieved: • 0 - RAM layer • 1 - BBR • 2 - Flash • 7 - Default
2	U2	`position`	-	-	Number of configuration items skipped in the result set before constructing this message (mirrors the equivalent field in the request message)
Start of repeated group (N times)					
4 + n	U1	`cfgData`	-	-	Configuration data (key and value pairs)
End of repeated group (N times)					

3.10.5 UBX-CFG-VALSET (0x06 0x8a)

3.10.5.1 Set configuration item values

Message	**UBX-CFG-VALSET** **Set configuration item values**
Type	Set
Comment	Overview: • This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration items to change, and their new values. • This message is limited to containing a maximum of 64 key-value pairs. • This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of UBX-CFG-VALSET that supports transactions. • See Receiver configuration for details. This message returns a UBX-ACK-NAK and no configuration is applied: • if any key is unknown to the receiver FW • if the layer's bitfield does not specify a layer to save a value to • if the requested configuration is not valid. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer. Notes: • If a key is sent multiple times within the same message, then the value eventually being applied is the last sent.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x06	0x8a	4 + [0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x00 for this version)
1	X1	`layers`	-	-	The layers where the configuration should be applied
bit 0	U:1	`ram`	-	-	Update configuration in the RAM layer
bit 1	U:1	`bbr`	-	-	Update configuration in the BBR layer
bit 2	U:1	`flash`	-	-	Update configuration in the Flash layer
2	U1[2]	`reserved0`	-	-	Reserved
Start of repeated group (N times)					
4 + n	U1	`cfgData`	-	-	Configuration data (key and value pairs)
End of repeated group (N times)					

3.10.5.2 Set configuration item values (with transaction)

Message	**UBX-CFG-VALSET** **Set configuration item values (with transaction)**
Type	Set
Comment	Overview: • This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration items to change, and their new values. • This message is limited to containing a maximum of 64 key-value pairs. • This message can be used multiple times with the result being managed within a transaction. Within a transaction there is no limit on the number key-value pairs; a transaction is effectively limited to the number of known keys. • See Receiver configuration for details. • See version 0 of UBX-CFG-VALSET for simplified version of this message. This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied: • if any key within a transaction is unknown to the receiver FW • if an invalid transaction state transition is requested • if the layer's bitfield changes within a transaction • if the layer's bitfield does not specify a layer to save a value to

This message returns a UBX-ACK-NAK, and no configuration is applied:

- if the requested configuration is not valid. While in a transaction context, only the last message that requests to apply the transaction returns a UBX-ACK-NAK. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer. This also applies to a transactionless request.

Notes:

- Any request for another UBX-CFG-message type (including UBX-CFG-VALDEL and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied.
- This message can be sent with no key/values to set for the purposes of managing the transaction state transition.
- If a key is sent multiple times within the same message or within the same transaction, then the value eventually being applied is the last sent.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x06	0x8a	4 + [0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x01 for this version)
1	X1	`layers`	-	-	The layers where the configuration should be applied
bit 0	$U_{:1}$	`ram`	-	-	Update configuration in the RAM layer
bit 1	$U_{:1}$	`bbr`	-	-	Update configuration in the BBR layer
bit 2	$U_{:1}$	`flash`	-	-	Update configuration in the Flash layer
2	U1	`transaction`	-	-	Transaction action to be applied
bits 1...0	$U_{:2}$	`action`	-	-	Transaction action to be applied: • 0 = Transactionless UBX-CFG-VALSET: In the next UBX-CFG-VALSET, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied (if valid). If a transaction has already been started, cancels any started transaction and the incoming configuration is applied (if valid). • 1 = (Re)Start set transaction: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALSET messages. • 2 = Set transaction ongoing: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3. • 3 = Apply and end a set transaction: In the next UBX-CFG-VALSET, it can be either 0 or 1.
3	U1	`reserved0`	-	-	Reserved
Start of repeated group (N times)					
4 + n	U1	`cfgData`	-	-	Configuration data (key and value pairs)
End of repeated group (N times)					

3.11 UBX-INF (0x04)

Messages in the UBX-INF class are used to output strings from the firmware or application code. All messages have an associated type to indicate the nature or priority of the message.

3.11.1 UBX-INF-DEBUG (0x04 0x04)

3.11.1.1 ASCII output with debug contents

Message	**UBX-INF-DEBUG** **ASCII output with debug contents**					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x04	0x04	[0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
Start of repeated group (N times)					
0 + n	CH	`str`	-	-	ASCII Character
End of repeated group (N times)					

3.11.2 UBX-INF-ERROR (0x04 0x00)

3.11.2.1 ASCII output with error contents

Message	**UBX-INF-ERROR** **ASCII output with error contents**					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x04	0x00	[0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
Start of repeated group (N times)					
0 + n	CH	`str`	-	-	ASCII Character
End of repeated group (N times)					

3.11.3 UBX-INF-NOTICE (0x04 0x02)

3.11.3.1 ASCII output with informational contents

Message	**UBX-INF-NOTICE** **ASCII output with informational contents**					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x04	0x02	[0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
Start of repeated group (N times)					
0 + n	CH	`str`	-	-	ASCII Character
End of repeated group (N times)					

3.11.4 UBX-INF-TEST (0x04 0x03)

3.11.4.1 ASCII output with test contents

Message	**UBX-INF-TEST** **ASCII output with test contents**					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x04	0x03	[0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
Start of repeated group (N times)					
0 + n	CH	`str`	-	-	ASCII Character
End of repeated group (N times)					

3.11.5 UBX-INF-WARNING (0x04 0x01)

3.11.5.1 ASCII output with warning contents

Message	**UBX-INF-WARNING** **ASCII output with warning contents**					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x04	0x01	[0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
Start of repeated group (N times)					
0 + n	CH	`str`	-	-	ASCII Character
End of repeated group (N times)					

3.12 UBX-LOG (0x21)

The messages in the UBX-LOG class are used to configure and report status information of the logging and data batching features.

3.12.1 UBX-LOG-BATCH (0x21 0x11)

3.12.1.1 Batched data

Message	**UBX-LOG-BATCH** **Batched data**
Type	Polled
Comment	This message combines position, velocity and time solution, including accuracy figures. The output of this message can be requested via UBX-LOG-RETRIEVEBATCH. The content of this message is influenced by the configuration (group CFG-BATCH-*). Depending on the items `EXTRAPVT` and `EXTRAODO` some of the fields in this message may not be valid. This validity information is indicated in this message via the flags `extraPvt` and `extraOdo`. See section Data batching in the integration manual for more information. Note that during a leap second there may be more or less than 60 seconds in a minute. See section Clocks and time in the integration manual for description of leap seconds.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x21	0x11	100	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x00 for this version)
1	X1	`contentValid`	-	-	Content validity flags
bit 0	U:1	`extraPvt`	-	-	Extra PVT information is valid The fields `iTOW`, `tAcc`, `numSV`, `hMSL`, `vAcc`, `velN`, `velE`, `velD`, `sAcc`, `headAcc` and `pDOP` are only valid if this flag is set.
bit 1	U:1	`extraOdo`	-	-	Odometer data is valid The fields `distance`, `totalDistance` and `distanceStd` are only valid if this flag is set. Note: the odometer feature itself must also be enabled.
2	U2	`msgCnt`	-	-	Message counter; increments for each sent UBX-LOG-BATCH message.
4	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section Clocks and time in the integration manual for description of navigation epoch and iTOW. Only valid if `extraPvt` is set.
8	U2	`year`	-	y	Year (UTC)
10	U1	`month`	-	month	Month, range 1..12 (UTC)
11	U1	`day`	-	d	Day of month, range 1..31 (UTC)
12	U1	`hour`	-	h	Hour of day, range 0..23 (UTC)
13	U1	`min`	-	min	Minute of hour, range 0..59 (UTC)
14	U1	`sec`	-	s	Seconds of minute, range 0..60 (UTC)
15	X1	`valid`	-	-	Validity flags
bit 0	U:1	`validDate`	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)
bit 1	U:1	`validTime`	-	-	1 = valid UTC Time of Day (see section Time validity in the integration manual for details)
16	U4	`tAcc`	-	ns	Time accuracy estimate (UTC) Only valid if `extraPvt` is set.
20	I4	`fracSec`	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
24	U1	`fixType`	-	-	GNSSfix Type: • 0 = no fix • 2 = 2D-fix • 3 = 3D-fix
25	X1	`flags`	-	-	Fix status flags
bit 0	U:1	`gnssFixOK`	-	-	1 = valid fix (i.e within DOP & accuracy masks)
bit 1	U:1	`diffSoln`	-	-	1 = differential corrections were applied
bits 4...2	U:3	`psmState`	-	-	Power save mode state (see section Power management in the integration manual for details)

					• 0 = PSM is not active • 1 = Enabled (an intermediate state before Acquisition state) • 2 = Acquisition • 3 = Tracking • 4 = Power optimized tracking • 5 = Inactive
26	X1	flags2	-	-	Additional flags
27	U1	numSV	-	-	Number of satellites used in Nav Solution Only valid if extraPvt is set.
28	I4	lon	1e-7	deg	Longitude
32	I4	lat	1e-7	deg	Latitude
36	I4	height	-	mm	Height above ellipsoid
40	I4	hMSL	-	mm	Height above mean sea level Only valid if extraPvt is set.
44	U4	hAcc	-	mm	Horizontal accuracy estimate
48	U4	vAcc	-	mm	Vertical accuracy estimate Only valid if extraPvt is set.
52	I4	velN	-	mm/s	NED north velocity Only valid if extraPvt is set.
56	I4	velE	-	mm/s	NED east velocity Only valid if extraPvt is set.
60	I4	velD	-	mm/s	NED down velocity Only valid if extraPvt is set.
64	I4	gSpeed	-	mm/s	Ground Speed (2-D)
68	I4	headMot	1e-5	deg	Heading of motion (2-D)
72	U4	sAcc	-	mm/s	Speed accuracy estimate Only valid if extraPvt is set.
76	U4	headAcc	1e-5	deg	Heading accuracy estimate Only valid if extraPvt is set.
80	U2	pDOP	0.01	-	Position DOP Only valid if extraPvt is set.
82	U1[2]	reserved0	-	-	Reserved
84	U4	distance	-	m	Ground distance since last reset Only valid if extraOdo is set.
88	U4	totalDistance	-	m	Total cumulative ground distance Only valid if extraOdo is set.
92	U4	distanceStd	-	m	Ground distance accuracy (1-sigma) Only valid if extraOdo is set.
96	U1[4]	reserved1	-	-	Reserved

3.12.2 UBX-LOG-RETRIEVEBATCH (0x21 0x10)

3.12.2.1 Request batch data

Message	**UBX-LOG-RETRIEVEBATCH** **Request batch data**					
Type	Command					
Comment	This message is used to request batched data. Batch entries are returned in chronological order, using one UBX-LOG-BATCH per navigation epoch. The speed of transfer can be maximized by using a high data rate. See Data batching section in the integration manual for more information.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x21	0x10	4	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x00 for this version)
1	X1	`flags`	-	-	Flags
bit 0	U:1	`sendMonFirst`	-	-	Send UBX-MON-BATCH message before sending the UBX-LOG-BATCH message(s).
2	U1[2]	`reserved0`	-	-	Reserved

3.13 UBX-MGA (0x13)

The messages in the UBX-MGA class are used for sending GNSS assistance (A-GNSS, aiding) information to the receiver as well as backing up the navigation database from the receiver to a host.

3.13.1 UBX-MGA-ACK (0x13 0x60)

3.13.1.1 Multiple GNSS acknowledge message

Message	**UBX-MGA-ACK-DATA0** **Multiple GNSS acknowledge message**					
Type	Output					
Comment	This message is sent by a u-blox receiver to acknowledge the receipt of an assistance message. Acknowledgments are enabled by setting the CFG-NAVSPG-ACKAIDING item. See section Flow control in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x60	8	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`type`	-	-	Type of acknowledgment: • 0 = The message was not used by the receiver (see infoCode field for an indication of why) • 1 = The message was accepted for use by the receiver (the infoCode field will be 0)
1	U1	`version`	-	-	Message version (0x00 for this version)

2	U1	infoCode	-	-	Provides greater information on what the receiver chose to do with the message contents: • 0 = The receiver accepted the data • 1 = The receiver does not know the time so it cannot use the data (To resolve this a UBX-MGA-INI-TIME_UTC message should be supplied first) • 2 = The message version is not supported by the receiver • 3 = The message size does not match the message version • 4 = The message data could not be stored to the database • 5 = The receiver is not ready to use the message data • 6 = The message type is unknown
3	U1	msgId	-	-	UBX message ID of the acknowledged message
4	U1[4]	msgPayload Start	-	-	The first 4 bytes of the acknowledged message's payload

3.13.2 UBX-MGA-ANO (0x13 0x20)

3.13.2.1 Multiple GNSS AssistNow Offline assistance

Message	**UBX-MGA-ANO** **Multiple GNSS AssistNow Offline assistance**					
Type	Input					
Comment	This message is created by the AssistNow Offline service to deliver AssistNow Offline assistance to the receiver. See AssistNow Offline section in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x20	76	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x00 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	Satellite identifier (see Satellite Numbering)
3	U1	gnssId	-	-	GNSS identifier (see Satellite Numbering)
4	U1	year	-	-	years since the year 2000
5	U1	month	-	-	month (1..12)
6	U1	day	-	-	day (1..31)
7	U1	reserved0	-	-	Reserved
8	U1[64]	data	-	-	assistance data
72	U1[4]	reserved1	-	-	Reserved

3.13.3 UBX-MGA-BDS (0x13 0x03)

3.13.3.1 BeiDou ephemeris assistance

Message	**UBX-MGA-BDS-EPH** **BeiDou ephemeris assistance**
Type	Input

Comment	This message allows the delivery of BeiDou ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x03	88	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`type`	-	-	Message type (0x01 for this type)
1	U1	`version`	-	-	Message version (0x00 for this version)
2	U1	`svId`	-	-	BeiDou satellite identifier (see Satellite Numbering)
3	U1	`reserved0`	-	-	Reserved
4	U1	`SatH1`	-	-	Autonomous satellite Health flag
5	U1	`IODC`	-	-	Issue of Data, Clock
6	I2	`a2`	2^-66	s/s^2	Time polynomial coefficient 2
8	I4	`a1`	2^-50	s/s	Time polynomial coefficient 1
12	I4	`a0`	2^-33	s	Time polynomial coefficient 0
16	U4	`toc`	2^3	s	Clock data reference time
20	I2	`TGD1`	0.1	ns	Equipment Group Delay Differential
22	U1	`URAI`	-	-	User Range Accuracy Index
23	U1	`IODE`	-	-	Issue of Data, Ephemeris
24	U4	`toe`	2^3	s	Ephemeris reference time
28	U4	`sqrtA`	2^-19	m^0.5	Square root of semi-major axis
32	U4	`e`	2^-33	-	Eccentricity
36	I4	`omega`	2^-31	semi-circles	Argument of perigee
40	I2	`Deltan`	2^-43	semi-circles/s	Mean motion difference from computed value
42	I2	`IDOT`	2^-43	semi-circles/s	Rate of inclination angle
44	I4	`M0`	2^-31	semi-circles	Mean anomaly at reference time
48	I4	`Omega0`	2^-31	semi-circles	Longitude of ascending node of orbital of plane computed according to reference time
52	I4	`OmegaDot`	2^-43	semi-circles/s	Rate of right ascension
56	I4	`i0`	2^-31	semi-circles	Inclination angle at reference time
60	I4	`Cuc`	2^-31	radians	Amplitude of cosine harmonic correction term to the argument of latitude
64	I4	`Cus`	2^-31	radians	Amplitude of sine harmonic correction term to the argument of latitude
68	I4	`Crc`	2^-6	m	Amplitude of cosine harmonic correction term to the orbit radius
72	I4	`Crs`	2^-6	m	Amplitude of sine harmonic correction term to the orbit radius
76	I4	`Cic`	2^-31	radians	Amplitude of cosine harmonic correction term to the angle of inclination

80	I4	Cis	2^-31	radians	Amplitude of sine harmonic correction term to the angle of inclination
84	U1[4]	reserved1	-	-	Reserved

3.13.3.2 BeiDou almanac assistance

Message	**UBX-MGA-BDS-ALM** **BeiDou almanac assistance**					
Type	Input					
Comment	This message allows the delivery of BeiDou almanac assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x03	40	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x02 for this version)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	BeiDou satellite identifier (see Satellite Numbering)
3	U1	reserved0	-	-	Reserved
4	U1	Wna	-	week	Almanac Week Number
5	U1	toa	2^12	s	Almanac reference time
6	I2	deltaI	2^-19	semi-circles	Almanac correction of orbit reference inclination at reference time
8	U4	sqrtA	2^-11	m^0.5	Almanac square root of semi-major axis
12	U4	e	2^-21	-	Almanac eccentricity
16	I4	omega	2^-23	semi-circles	Almanac argument of perigee
20	I4	M0	2^-23	semi-circles	Almanac mean anomaly at reference time
24	I4	Omega0	2^-23	semi-circles	Almanac longitude of ascending node of orbit plane at computed according to reference time
28	I4	omegaDot	2^-38	semi-circles/s	Almanac rate of right ascension
32	I2	a0	2^-20	s	Almanac satellite clock bias
34	I2	a1	2^-38	s/s	Almanac satellite clock rate
36	U1[4]	reserved1	-	-	Reserved

3.13.3.3 BeiDou health assistance

Message	**UBX-MGA-BDS-HEALTH** **BeiDou health assistance**					
Type	Input					
Comment	This message allows the delivery of BeiDou health assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x03	68	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*

0	U1	type	-	-	Message type (0x04 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	U2[30]	healthCode	-	-	Each two-byte value represents a BeiDou SV (1-30). The 9 LSBs of each byte contain the 9 bit health code from subframe 5 pages 7,8 of the D1 message, and from subframe 5 pages 35,36 of the D1 message.
64	U1[4]	reserved1	-	-	Reserved

3.13.3.4 BeiDou UTC assistance

Message	**UBX-MGA-BDS-UTC** **BeiDou UTC assistance**					
Type	Input					
Comment	This message allows the delivery of BeiDou UTC assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x03	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x05 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	a0UTC	2^-30	s	BDT clock bias relative to UTC
8	I4	a1UTC	2^-50	s/s	BDT clock rate relative to UTC
12	I1	dtLS	-	s	Delta time due to leap seconds before the new leap second effective
13	U1	reserved1	-	-	Reserved
14	U1	wnRec	-	week	BeiDou week number of reception of this UTC parameter set (8-bit truncated)
15	U1	wnLSF	-	week	Week number of the new leap second
16	U1	dN	-	day	Day number of the new leap second
17	I1	dtLSF	-	s	Delta time due to leap seconds after the new leap second effective
18	U1[2]	reserved2	-	-	Reserved

3.13.3.5 BeiDou ionosphere assistance

Message	**UBX-MGA-BDS-IONO** **BeiDou ionosphere assistance**					
Type	Input					
Comment	This message allows the delivery of BeiDou ionospheric assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x03	16	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x06 for this type)

1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I1	alpha0	2^-30	s	Ionospheric parameter alpha0
5	I1	alpha1	2^-27	s/pi	Ionospheric parameter alpha1
6	I1	alpha2	2^-24	s/pi^2	Ionospheric parameter alpha2
7	I1	alpha3	2^-24	s/pi^3	Ionospheric parameter alpha3
8	I1	beta0	2^11	s	Ionospheric parameter beta0
9	I1	beta1	2^14	s/pi	Ionospheric parameter beta1
10	I1	beta2	2^16	s/pi^2	Ionospheric parameter beta2
11	I1	beta3	2^16	s/pi^3	Ionospheric parameter beta3
12	U1[4]	reserved1	-	-	Reserved

3.13.4 UBX-MGA-DBD (0x13 0x80)

3.13.4.1 Poll the navigation database

Message	**UBX-MGA-DBD** **Poll the navigation database**					
Type	Poll request					
Comment	Poll the whole navigation data base. The receiver will send all available data from its internal database. The receiver will indicate the finish of the transmission with a UBX-MGA-ACK. The msgPayloadStart field of the UBX-MGA-ACK message will contain a U4 representing the number of UBX-MGA-DBD-DATA* messages sent.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x80	0	*see below*	CK_A CK_B
Payload	This message has no payload.					

3.13.4.2 Navigation database dump entry

Message	**UBX-MGA-DBD** **Navigation database dump entry**					
Type	Input/output					
Comment	Navigation database entry. The data fields are firmware-specific. Transmission of this type of message will be acknowledged by UBX-MGA-ACK messages, if acknowledgment has been enabled. See section AssistNow online in the integration manual for details. The maximum payload size for firmware 2.01 onwards is 164 bytes (which makes the maximum message size 172 bytes). ☞ UBX-MGA-DBD messages are only intended to be sent back to the same receiver that generated them.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x80	12 + [0..n]	*see below*	CK_A CK_B
Payload description:						
Byte offset	*Type*	*Name*		*Scale*	*Unit*	*Description*
0	U1[12]	reserved0		-	-	Reserved
Start of repeated group (N times)						
12 + n	U1	data		-	-	firmware-specific data
End of repeated group (N times)						

3.13.5 UBX-MGA-GAL (0x13 0x02)

3.13.5.1 Galileo ephemeris assistance

Message	**UBX-MGA-GAL-EPH** **Galileo ephemeris assistance**					
Type	Input					
Comment	This message allows the delivery of Galileo ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x02	76	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`type`	-	-	Message type (0x01 for this type)
1	U1	`version`	-	-	Message version (0x00 for this version)
2	U1	`svId`	-	-	Galileo Satellite identifier (see Satellite Numbering)
3	U1	`reserved0`	-	-	Reserved
4	U2	`iodNav`	-	-	Ephemeris and clock correction Issue of Data
6	I2	`deltaN`	2^-43	semi-circles/s	Mean motion difference from computed value
8	I4	`m0`	2^-31	semi-circles	Mean anomaly at reference time
12	U4	`e`	2^-33	-	Eccentricity
16	U4	`sqrtA`	2^-19	m^0.5	Square root of the semi-major axis
20	I4	`omega0`	2^-31	semi-circles	Longitude of ascending node of orbital plane at weekly epoch
24	I4	`i0`	2^-31	semi-circles	Inclination angle at reference time
28	I4	`omega`	2^-31	semi-circles	Argument of perigee
32	I4	`omegaDot`	2^-43	semi-circles/s	Rate of change of right ascension
36	I2	`iDot`	2^-43	semi-circles/s	Rate of change of inclination angle
38	I2	`cuc`	2^-29	radians	Amplitude of the cosine harmonic correction term to the argument of latitude
40	I2	`cus`	2^-29	radians	Amplitude of the sine harmonic correction term to the argument of latitude
42	I2	`crc`	2^-5	radians	Amplitude of the cosine harmonic correction term to the orbit radius
44	I2	`crs`	2^-5	radians	Amplitude of the sine harmonic correction term to the orbit radius
46	I2	`cic`	2^-29	radians	Amplitude of the cosine harmonic correction term to the angle of inclination
48	I2	`cis`	2^-29	radians	Amplitude of the sine harmonic correction term to the angle of inclination
50	U2	`toe`	60	s	Ephemeris reference time
52	I4	`af0`	2^-34	s	SV clock bias correction coefficient
56	I4	`af1`	2^-46	s/s	SV clock drift correction coefficient
60	I1	`af2`	2^-59	s/s squared	SV clock drift rate correction coefficient

61	U1	sisaIndexE1E5b	-	-	Signal-In-Space Accuracy index for dual frequency E1-E5b
62	U2	toc	60	s	Clock correction data reference Time of Week
64	I2	bgdE1E5b	2^-32	s	E1-E5b Broadcast Group Delay
66	U1[2]	reserved1	-	-	Reserved
68	U1	healthE1B	-	-	E1-B Signal Health Status
69	U1	dataValidityE1B	-	-	E1-B Data Validity Status
70	U1	healthE5b	-	-	E5b Signal Health Status
71	U1	dataValidityE5b	-	-	E5b Data Validity Status
72	U1[4]	reserved2	-	-	Reserved

3.13.5.2 Galileo almanac assistance

Message	**UBX-MGA-GAL-ALM** **Galileo almanac assistance**					
Type	Input					
Comment	This message allows the delivery of Galileo almanac assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x02	32	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	Galileo Satellite identifier (see Satellite Numbering)
3	U1	reserved0	-	-	Reserved
4	U1	ioda	-	-	Almanac Issue of Data
5	U1	almWNa	-	week	Almanac reference week number
6	U2	toa	600	s	Almanac reference time
8	I2	deltaSqrtA	2^-9	m^0.5	Difference with respect to the square root of the nominal semi-major axis (29 600 km)
10	U2	e	2^-16	-	Eccentricity
12	I2	deltaI	2^-14	semi-circles	Inclination at reference time relative to i0 = 56 degree
14	I2	omega0	2^-15	semi-circles	Longitude of ascending node of orbital plane at weekly epoch
16	I2	omegaDot	2^-33	semi-circles/s	Rate of change of right ascension
18	I2	omega	2^-15	semi-circles	Argument of perigee
20	I2	m0	2^-15	semi-circles	Satellite mean anomaly at reference time
22	I2	af0	2^-19	s	Satellite clock correction bias 'truncated'
24	I2	af1	2^-38	s/s	Satellite clock correction linear 'truncated'
26	U1	healthE1B	-	-	Satellite E1-B signal health status

27	U1	healthE5b	-	-	Satellite E5b signal health status
28	U1[4]	reserved1	-	-	Reserved

3.13.5.3 Galileo GPS time offset assistance

Message	**UBX-MGA-GAL-TIMEOFFSET** **Galileo GPS time offset assistance**					
Type	Input					
Comment	This message allows the delivery of Galileo time to GPS time offset. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x02	12	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x03 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I2	a0G	2^-35	s	Constant term of the polynomial describing the offset
6	I2	a1G	2^-51	s/s	Rate of change of the offset
8	U1	t0G	3600	s	Reference time for GGTO data
9	U1	wn0G	-	weeks	Week Number of GGTO reference
10	U1[2]	reserved1	-	-	Reserved

3.13.5.4 Galileo UTC assistance

Message	**UBX-MGA-GAL-UTC** **Galileo UTC assistance**					
Type	Input					
Comment	This message allows the delivery of Galileo UTC assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x02	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x05 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	a0	2^-30	s	First parameter of UTC polynomial
8	I4	a1	2^-50	s/s	Second parameter of UTC polynomial
12	I1	dtLS	-	s	Delta time due to current leap seconds
13	U1	tot	3600	s	UTC parameters reference time of week (Galileo time)
14	U1	wnt	-	weeks	UTC parameters reference week number (the 8-bit WNt field)
15	U1	wnLSF	-	weeks	Week number at the end of which the future leap second becomes effective (the 8-bit WNLSF field)
16	U1	dN	-	days	Day number at the end of which the future leap second becomes effective

17	I1	dTLSF	-	s	Delta time due to future leap seconds
18	U1[2]	reserved1	-	-	Reserved

3.13.6 UBX-MGA-GLO (0x13 0x06)

3.13.6.1 GLONASS ephemeris assistance

Message	**UBX-MGA-GLO-EPH** **GLONASS ephemeris assistance**					
Type	Input					
Comment	This message allows the delivery of GLONASS ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x06	48	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x01 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	GLONASS Satellite identifier (see Satellite Numbering)
3	U1	reserved0	-	-	Reserved
4	U1	FT	-	-	User range accuracy
5	U1	B	-	-	Health flag from string 2
6	U1	M	-	-	Type of GLONASS satellite (1 indicates GLONASS-M)
7	I1	H	-	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6), -128 for unknown
8	I4	x	2^-11	km	X component of the SV position in PZ-90.02 coordinate System
12	I4	y	2^-11	km	Y component of the SV position in PZ-90.02 coordinate System
16	I4	z	2^-11	km	Z component of the SV position in PZ-90.02 coordinate System
20	I4	dx	2^-20	km/s	X component of the SV velocity in PZ-90.02 coordinate System
24	I4	dy	2^-20	km/s	Y component of the SV velocity in PZ-90.02 coordinate System
28	I4	dz	2^-20	km/s	Z component of the SV velocity in PZ-90.02 coordinate System
32	I1	ddx	2^-30	km/s^2	X component of the SV acceleration in PZ-90.02 coordinate System
33	I1	ddy	2^-30	km/s^2	Y component of the SV acceleration in PZ-90.02 coordinate System
34	I1	ddz	2^-30	km/s^2	Z component of the SV acceleration in PZ-90.02 coordinate System
35	U1	tb	15	minutes	Index of a time interval within current day according to UTC(SU)
36	I2	gamma	2^-40	-	Relative carrier frequency deviation
38	U1	E	-	days	Ephemeris data age indicator

39	I1	deltaTau	2^-30	s	Time difference between L2 and L1 band
40	I4	tau	2^-30	s	SV clock bias
44	U1[4]	reserved1	-	-	Reserved

3.13.6.2 GLONASS almanac assistance

Message	**UBX-MGA-GLO-ALM** **GLONASS almanac assistance**					
Type	Input					
Comment	This message allows the delivery of GLONASS almanac assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x06	36	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	GLONASS Satellite identifier (see Satellite Numbering)
3	U1	reserved0	-	-	Reserved
4	U2	N	-	days	Reference calender day number of almanac within the four-year period (from string 5)
6	U1	M	-	-	Type of GLONASS satellite (1 indicates GLONASS-M)
7	U1	C	-	-	Unhealthy flag at instant of almanac upload (1 indicates operability of satellite)
8	I2	tau	2^-18	s	Coarse time correction to GLONASS time
10	U2	epsilon	2^-20	-	Eccentricity
12	I4	lambda	2^-20	semi-circles	Longitude of the first (within the N-day) ascending node of satellite orbit in PC-90.02 coordinate system
16	I4	deltaI	2^-20	semi-circles	Correction to the mean value of inclination
20	U4	tLambda	2^-5	s	Time of the first ascending node passage
24	I4	deltaT	2^-9	s/orbital-period	Correction to the mean value of Draconian period
28	I1	deltaDT	2^-14	s/orbital-period^2	Rate of change of Draconian period
29	I1	H	-	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6)
30	I2	omega	-	-	Argument of perigee
32	U1[4]	reserved1	-	-	Reserved

3.13.6.3 GLONASS auxiliary time offset assistance

Message	**UBX-MGA-GLO-TIMEOFFSET** **GLONASS auxiliary time offset assistance**
Type	Input
Comment	This message allows the delivery of auxiliary GLONASS assistance (including the GLONASS time offsets to other GNSS systems) to a receiver. See section AssistNow online in the integration manual for details.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x06	20	*see below*	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x03 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U2	N	-	days	Reference calendar day number within the four-year period of almanac (from string 5)
4	I4	tauC	2^-27	s	Time scale correction to UTC(SU) time
8	I4	tauGps	2^-31	s	Correction to GPS time relative to GLONASS time
12	I2	B1	2^-10	s	Coefficient to determine delta UT1
14	I2	B2	2^-16	s/msd	Rate of change of delta UT1
16	U1[4]	reserved0	-	-	Reserved

3.13.7 UBX-MGA-GPS (0x13 0x00)

3.13.7.1 GPS ephemeris assistance

Message	**UBX-MGA-GPS-EPH** **GPS ephemeris assistance**
Type	Input
Comment	This message allows the delivery of GPS ephemeris assistance to a receiver. See section AssistNow online in the integration manual for details.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x13	0x00	68	*see below*	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x01 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	GPS Satellite identifier (see Satellite Numbering)
3	U1	reserved0	-	-	Reserved
4	U1	fitInterval	-	-	Fit interval flag
5	U1	uraIndex	-	-	URA index
6	U1	svHealth	-	-	SV health
7	I1	tgd	2^-31	s	Group delay differential
8	U2	iodc	-	-	IODC
10	U2	toc	2^4	s	Clock data reference time
12	U1	reserved1	-	-	Reserved
13	I1	af2	2^-55	s/s squared	Time polynomial coefficient 2
14	I2	af1	2^-43	s/s	Time polynomial coefficient 1
16	I4	af0	2^-31	s	Time polynomial coefficient 0
20	I2	crs	2^-5	m	Crs
22	I2	deltaN	2^-43	semi-circles/s	Mean motion difference from computed value

24	I4	m0	2^-31	semi-circles	Mean anomaly at reference time
28	I2	cuc	2^-29	radians	Amplitude of cosine harmonic correction term to argument of latitude
30	I2	cus	2^-29	radians	Amplitude of sine harmonic correction term to argument of latitude
32	U4	e	2^-33	-	Eccentricity
36	U4	sqrtA	2^-19	m^0.5	Square root of the semi-major axis
40	U2	toe	2^4	s	Reference time of ephemeris
42	I2	cic	2^-29	radians	Amplitude of cos harmonic correction term to angle of inclination
44	I4	omega0	2^-31	semi-circles	Longitude of ascending node of orbit plane at weekly epoch
48	I2	cis	2^-29	radians	Amplitude of sine harmonic correction term to angle of inclination
50	I2	crc	2^-5	m	Amplitude of cosine harmonic correction term to orbit radius
52	I4	i0	2^-31	semi-circles	Inclination angle at reference time
56	I4	omega	2^-31	semi-circles	Argument of perigee
60	I4	omegaDot	2^-43	semi-circles/s	Rate of right ascension
64	I2	idot	2^-43	semi-circles/s	Rate of inclination angle
66	U1[2]	reserved2	-	-	Reserved

3.13.7.2 GPS almanac assistance

Message	**UBX-MGA-GPS-ALM** **GPS almanac assistance**					
Type	Input					
Comment	This message allows the delivery of GPS almanac assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x00	36	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	GPS Satellite identifier (see Satellite Numbering)
3	U1	svHealth	-	-	SV health information
4	U2	e	2^-21	-	Eccentricity
6	U1	almWNa	-	week	Reference week number of almanac (the 8-bit WNa field)
7	U1	toa	2^12	s	Reference time of almanac
8	I2	deltaI	2^-19	semi-circles	Delta inclination angle at reference time

10	I2	omegaDot	2^-38	semi-circles/s	Rate of right ascension
12	U4	sqrtA	2^-11	m^0.5	Square root of the semi-major axis
16	I4	omega0	2^-23	semi-circles	Longitude of ascending node of orbit plane
20	I4	omega	2^-23	semi-circles	Argument of perigee
24	I4	m0	2^-23	semi-circles	Mean anomaly at reference time
28	I2	af0	2^-20	s	Time polynomial coefficient 0 (8 MSBs)
30	I2	af1	2^-38	s/s	Time polynomial coefficient 1
32	U1[4]	reserved0	-	-	Reserved

3.13.7.3 GPS health assistance

Message	**UBX-MGA-GPS-HEALTH**					
	GPS health assistance					
Type	Input					
Comment	This message allows the delivery of GPS health assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x00	40	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x04 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	U1[32]	healthCode	-	-	Each byte represents a GPS SV (1-32). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5 page 25.
36	U1[4]	reserved1	-	-	Reserved

3.13.7.4 GPS UTC assistance

Message	**UBX-MGA-GPS-UTC**					
	GPS UTC assistance					
Type	Input					
Comment	This message allows the delivery of GPS UTC assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x00	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x05 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	utcA0	2^-30	s	First parameter of UTC polynomial
8	I4	utcA1	2^-50	s/s	Second parameter of UTC polynomial

12	I1	utcDtLS	-	s	Delta time due to current leap seconds
13	U1	utcTot	2^12	s	UTC parameters reference time of week (GPS time)
14	U1	utcWNt	-	weeks	UTC parameters reference week number (the 8-bit WNt field)
15	U1	utcWNlsf	-	weeks	Week number at the end of which the future leap second becomes effective (the 8-bit WNLSF field)
16	U1	utcDn	-	days	Day number at the end of which the future leap second becomes effective
17	I1	utcDtLSF	-	s	Delta time due to future leap seconds
18	U1[2]	reserved1	-	-	Reserved

3.13.7.5 GPS ionosphere assistance

Message	**UBX-MGA-GPS-IONO** **GPS ionosphere assistance**					
Type	Input					
Comment	This message allows the delivery of GPS ionospheric assistance to a receiver. See section AssistNow online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x00	16	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x06 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I1	ionoAlpha0	2^-30	s	Ionospheric parameter alpha0 [s]
5	I1	ionoAlpha1	2^-27	s/semi-circle	Ionospheric parameter alpha1 [s/semi-circle]
6	I1	ionoAlpha2	2^-24	s/(semi-circle^2)	Ionospheric parameter alpha2 [s/semi-circle^2]
7	I1	ionoAlpha3	2^-24	s/(semi-circle^3)	Ionospheric parameter alpha3 [s/semi-circle^3]
8	I1	ionoBeta0	2^11	s	Ionospheric parameter beta0 [s]
9	I1	ionoBeta1	2^14	s/semi-circle	Ionospheric parameter beta1 [s/semi-circle]
10	I1	ionoBeta2	2^16	s/(semi-circle^2)	Ionospheric parameter beta2 [s/semi-circle^2]
11	I1	ionoBeta3	2^16	s/(semi-circle^3)	Ionospheric parameter beta3 [s/semi-circle^3]
12	U1[4]	reserved1	-	-	Reserved

3.13.8 UBX-MGA-INI (0x13 0x40)

3.13.8.1 Initial position assistance

Message	**UBX-MGA-INI-POS_XYZ** **Initial position assistance**
Type	Input
Comment	This message allows the delivery of initial position assistance to a receiver in cartesian ECEF coordinates. This message is equivalent to the UBX-MGA-INI-POS_LLH message, except for the coordinate system.

See section AssistNow Online in the integration manual for details.

☞ Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance.

	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message structure	0xb5 0x62	0x13	0x40	20	*see below*	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x00 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	ecefX	-	cm	WGS84 ECEF X coordinate
8	I4	ecefY	-	cm	WGS84 ECEF Y coordinate
12	I4	ecefZ	-	cm	WGS84 ECEF Z coordinate
16	U4	posAcc	-	cm	Position accuracy (stddev)

3.13.8.2 Initial position assistance

Message	**UBX-MGA-INI-POS_LLH** **Initial position assistance**
Type	Input
Comment	This message allows the delivery of initial position assistance to a receiver in WGS84 lat/long/alt coordinates. This message is equivalent to the UBX-MGA-INI-POS_XYZ message, except for the coordinate system. See section AssistNow online in the integration manual for details. ☞ Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance.

	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message structure	0xb5 0x62	0x13	0x40	20	*see below*	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x01 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	lat	1e-7	deg	WGS84 Latitude
8	I4	lon	1e-7	deg	WGS84 Longitude
12	I4	alt	-	cm	WGS84 Altitude
16	U4	posAcc	-	cm	Position accuracy (stddev)

3.13.8.3 Initial time assistance

Message	**UBX-MGA-INI-TIME_UTC** **Initial time assistance**
Type	Input
Comment	This message allows the delivery of UTC time assistance to a receiver. This message is equivalent to the UBX-MGA-INI-TIME_GNSS message, except for the time base. See section AssistNow online in the integration manual for details. ☞ Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.

	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message structure	0xb5 0x62	0x13	0x40	24	*see below*	CK_A CK_B

Payload description:					
Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x10 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	X1	ref	-	-	Reference to be used to set time
bits 3...0	U:4	source	-	-	• 0 = none, i.e. on receipt of message (will be inaccurate!) • 1 = relative to pulse sent to EXTINT0 • 2 = relative to pulse sent to EXTINT1 • 3-15 = reserved
bit 4	U:1	fall	-	-	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT
bit 5	U:1	last	-	-	use last EXTINT pulse (default next pulse) - only if source is EXTINT
3	I1	leapSecs	-	s	Number of leap seconds since 1980 (or 0x80 = -128 if unknown)
4	U2	year	-	-	Year
6	U1	month	-	-	Month, starting at 1
7	U1	day	-	-	Day, starting at 1
8	U1	hour	-	-	Hour, from 0 to 23
9	U1	minute	-	-	Minute, from 0 to 59
10	U1	second	-	s	Seconds, from 0 to 59
11	U1	reserved0	-	-	Reserved
12	U4	ns	-	ns	Nanoseconds, from 0 to 999,999,999
16	U2	tAccS	-	s	Seconds part of time accuracy
18	U1[2]	reserved1	-	-	Reserved
20	U4	tAccNs	-	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999

3.13.8.4 Initial time assistance

Message	**UBX-MGA-INI-TIME_GNSS** **Initial time assistance**					
Type	Input					
Comment	This message allows the delivery of time assistance to a receiver in a chosen GNSS timebase. This message is equivalent to the UBX-MGA-INI-TIME_UTC message, except for the time base. See section AssistNow online in the integration manual for details. ☞ Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x40	24	*see below*	CK_A CK_B

Payload description:					
Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x11 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	X1	ref	-	-	Reference to be used to set time
bits 3...0	U:4	source	-	-	• 0 = none, i.e. on receipt of message (will be inaccurate!)

					• 1 = relative to pulse sent to EXTINT0 • 2 = relative to pulse sent to EXTINT1 • 3-15 = reserved
bit 4	U:1	fall	-	-	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT
bit 5	U:1	last	-	-	use last EXTINT pulse (default next pulse) - only if source is EXTINT
3	U1	gnssId	-	-	Source of time information. Currently supported: • 0 = GPS time • 2 = Galileo time • 3 = BeiDou time • 6 = GLONASS time • 7 = NavIC time
4	U1[2]	reserved0	-	-	Reserved
6	U2	week	-	-	GNSS week number
8	U4	tow	-	s	GNSS time of week
12	U4	ns	-	ns	GNSS time of week, nanosecond part from 0 to 999,999,999
16	U2	tAccS	-	s	Seconds part of time accuracy
18	U1[2]	reserved1	-	-	Reserved
20	U4	tAccNs	-	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999

3.13.8.5 Initial clock drift assistance

Message	**UBX-MGA-INI-CLKD** **Initial clock drift assistance**					
Type	Input					
Comment	This message allows the delivery of clock drift assistance to a receiver. See section AssistNow online in the integration manual for details. ☞ Supplying clock drift assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x40	12	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x20 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1[2]	reserved0	-	-	Reserved
4	I4	clkD	-	ns/s	Clock drift
8	U4	clkDAcc	-	ns/s	Clock drift accuracy

3.13.8.6 Initial frequency assistance

Message	**UBX-MGA-INI-FREQ** **Initial frequency assistance**
Type	Input
Comment	This message allows the delivery of external frequency assistance to a receiver. See section AssistNow online in the integration manual for details.

☞ Supplying external frequency assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x40	12	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`type`	-	-	Message type (0x21 for this type)
1	U1	`version`	-	-	Message version (0x00 for this version)
2	U1	`reserved0`	-	-	Reserved
3	X1	`flags`	-	-	Frequency reference
bits 3...0	U:4	`source`	-	-	• 0 = frequency available on EXTINT0 • 1 = frequency available on EXTINT1 • 2-15 = reserved
bit 4	U:1	`fall`	-	-	use falling edge of EXTINT pulse (default rising)
4	I4	`freq`	1e-2	Hz	Frequency
8	U4	`freqAcc`	-	ppb	Frequency accuracy

3.13.8.7 Earth orientation parameters assistance

Message	**UBX-MGA-INI-EOP** **Earth orientation parameters assistance**
Type	Input
Comment	This message allows the delivery of new earth orientation parameters (EOP) to a receiver to improve AssistNow Autonomous operation.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x40	72	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`type`	-	-	Message type (0x30 for this type)
1	U1	`version`	-	-	Message version (0x00 for this version)
2	U1[2]	`reserved0`	-	-	Reserved
4	U2	`d2kRef`	-	d	reference time (days since 1.1.2000 12.00h UTC)
6	U2	`d2kMax`	-	d	expiration time (days since 1.1.2000 12.00h UTC)
8	I4	`xpP0`	2^-30	arcsec	x_p t^0 polynomial term (offset)
12	I4	`xpP1`	2^-30	arcsec/d	x_p t^1 polynomial term (drift)
16	I4	`ypP0`	2^-30	arcsec	y_p t^0 polynomial term (offset)
20	I4	`ypP1`	2^-30	arcsec/d	y_p t^1 polynomial term (drift)
24	I4	`dUT1`	2^-25	s	dUT1 t^0 polynomial term (offset)
28	I4	`ddUT1`	2^-30	s/d	dUT1 t^1 polynomial term (drift)
32	U1[40]	`reserved1`	-	-	Reserved

3.13.9 UBX-MGA-QZSS (0x13 0x05)

3.13.9.1 QZSS ephemeris assistance

Message	**UBX-MGA-QZSS-EPH** **QZSS ephemeris assistance**					
Type	Input					
Comment	This message allows the delivery of QZSS ephemeris assistance to a receiver. See section AssistNow Online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x05	68	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`type`	-	-	Message type (0x01 for this type)
1	U1	`version`	-	-	Message version (0x00 for this version)
2	U1	`svId`	-	-	QZSS Satellite identifier (see Satellite Numbering), Range 1-5
3	U1	`reserved0`	-	-	Reserved
4	U1	`fitInterval`	-	-	Fit interval flag
5	U1	`uraIndex`	-	-	URA index
6	U1	`svHealth`	-	-	SV health
7	I1	`tgd`	2^-31	s	Group delay differential
8	U2	`iodc`	-	-	IODC
10	U2	`toc`	2^4	s	Clock data reference time
12	U1	`reserved1`	-	-	Reserved
13	I1	`af2`	2^-55	s/s squared	Time polynomial coefficient 2
14	I2	`af1`	2^-43	s/s	Time polynomial coefficient 1
16	I4	`af0`	2^-31	s	Time polynomial coefficient 0
20	I2	`crs`	2^-5	m	Crs
22	I2	`deltaN`	2^-43	semi-circles/s	Mean motion difference from computed value
24	I4	`m0`	2^-31	semi-circles	Mean anomaly at reference time
28	I2	`cuc`	2^-29	radians	Amp of cosine harmonic corr term to arg of lat
30	I2	`cus`	2^-29	radians	Amp of sine harmonic corr term to arg of lat
32	U4	`e`	2^-33	-	eccentricity
36	U4	`sqrtA`	2^-19	m^0.5	Square root of the semi-major axis A
40	U2	`toe`	2^4	s	Reference time of ephemeris
42	I2	`cic`	2^-29	radians	Amp of cos harmonic corr term to angle of inclination
44	I4	`omega0`	2^-31	semi-circles	Long of asc node of orbit plane at weekly epoch
48	I2	`cis`	2^-29	radians	Amp of sine harmonic corr term to angle of inclination
50	I2	`crc`	2^-5	m	Amp of cosine harmonic corr term to orbit radius
52	I4	`i0`	2^-31	semi-circles	Inclination angle at reference time
56	I4	`omega`	2^-31	semi-circles	Argument of perigee

60	I4	omegaDot	2^-43	semi-circles/s	Rate of right ascension
64	I2	idot	2^-43	semi-circles/s	Rate of inclination angle
66	U1[2]	reserved2	-	-	Reserved

3.13.9.2 QZSS almanac assistance

Message	**UBX-MGA-QZSS-ALM** **QZSS almanac assistance**					
Type	Input					
Comment	This message allows the delivery of QZSS almanac assistance to a receiver. See section AssistNow Online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x05	36	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	type	-	-	Message type (0x02 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	QZSS Satellite identifier (see Satellite Numbering), Range 1-5
3	U1	svHealth	-	-	Almanac SV health information
4	U2	e	2^-21	-	Almanac eccentricity
6	U1	almWNa	-	week	Reference week number of almanac (the 8-bit WNa field)
7	U1	toa	2^12	s	Reference time of almanac
8	I2	deltaI	2^-19	semi-circles	Delta inclination angle at reference time
10	I2	omegaDot	2^-38	semi-circles/s	Almanac rate of right ascension
12	U4	sqrtA	2^-11	m^0.5	Almanac square root of the semi-major axis A
16	I4	omega0	2^-23	semi-circles	Almanac long of asc node of orbit plane at weekly
20	I4	omega	2^-23	semi-circles	Almanac argument of perigee
24	I4	m0	2^-23	semi-circles	Almanac mean anomaly at reference time
28	I2	af0	2^-20	s	Almanac time polynomial coefficient 0 (8 MSBs)
30	I2	af1	2^-38	s/s	Almanac time polynomial coefficient 1
32	U1[4]	reserved0	-	-	Reserved

3.13.9.3 QZSS health assistance

Message	**UBX-MGA-QZSS-HEALTH** **QZSS health assistance**					
Type	Input					
Comment	This message allows the delivery of QZSS health assistance to a receiver. See section AssistNow Online in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x13	0x05	12	*see below*	CK_A CK_B

Payload description:					
Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`type`	-	-	Message type (0x04 for this type)
1	U1	`version`	-	-	Message version (0x00 for this version)
2	U1[2]	`reserved0`	-	-	Reserved
4	U1[5]	`healthCode`	-	-	Each byte represents a QZSS SV (1-5). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5, data ID = 3, SV ID = 51
9	U1[3]	`reserved1`	-	-	Reserved

3.14 UBX-MON (0x0a)

The messages in the UBX-MON class are used to report the receiver status, such as hardware status or I/O subsystem statistics.

3.14.1 UBX-MON-BATCH (0x0a 0x32)

3.14.1.1 Data batching buffer status

Message	**UBX-MON-BATCH** **Data batching buffer status**					
Type	Polled					
Comment	This message contains status information about the batching buffer. It can be polled and it can also be sent by the receiver as a response to a UBX-LOG-RETRIEVEBATCH message before the UBX-LOG-BATCH messages. See Data batching section in the integration manual for more information.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0a	0x32	12	*see below*	CK_A CK_B

Payload description:					
Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x00 for this version)
1	U1[3]	`reserved0`	-	-	Reserved
4	U2	`fillLevel`	-	-	Current buffer fill level, i.e. number of epochs currently stored
6	U2	`dropsAll`	-	-	Number of dropped epochs since startup Note: changing the batching configuration will reset this counter.
8	U2	`dropsSinceMon`	-	-	Number of dropped epochs since last MON-BATCH message
10	U2	`nextMsgCnt`	-	-	The next retrieved UBX-LOG-BATCH will have this `msgCnt` value.

3.14.2 UBX-MON-COMMS (0x0a 0x36)

3.14.2.1 Communication port information

Message	**UBX-MON-COMMS** **Communication port information**
Type	Periodic/polled

Comment	Consolidated communications information for all ports. The size of the message is determined by the number of ports that are in use on the receiver. A port is only included if communication, either send or receive, has been initiated on that port.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0a	0x36	8 + nPorts·40	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x00 for this version)
1	U1	`nPorts`	-	-	Number of ports included
2	X1	`txErrors`	-	-	TX error bitmask
bit 0	$U_{:1}$	`mem`	-	-	Memory Allocation error
bit 1	$U_{:1}$	`alloc`	-	-	Allocation error (TX buffer full)
3	U1	`reserved0`	-	-	Reserved
4	U1[4]	`protIds`	-		The identifiers of the protocols reported in the msgs array. 0: UBX, 1: NMEA, 2: RTCM2, 5: RTCM3, 6: SPARTN, 0xFF: No protocol reported.
Start of repeated group (`nPorts` times)					
8 + n·40	U2	`portId`	-	-	Unique identifier for the port. See section Communications ports in the integration manual for details.
10 + n·40	U2	`txPending`	-	bytes	Number of bytes pending in transmitter buffer
12 + n·40	U4	`txBytes`	-	bytes	Number of bytes ever sent
16 + n·40	U1	`txUsage`	-	%	Maximum usage transmitter buffer during the last sysmon period
17 + n·40	U1	`txPeakUsage`	-	%	Maximum usage transmitter buffer
18 + n·40	U2	`rxPending`	-	bytes	Number of bytes in receiver buffer
20 + n·40	U4	`rxBytes`	-	bytes	Number of bytes ever received
24 + n·40	U1	`rxUsage`	-	%	Maximum usage receiver buffer during the last sysmon period
25 + n·40	U1	`rxPeakUsage`	-	%	Maximum usage receiver buffer
26 + n·40	U2	`overrunErrs`	-	-	Number of 100 ms timeslots with overrun errors
28 + n·40	U2[4]	`msgs`	-	msg	Number of successfully parsed messages for each protocol. The reported protocols are identified through the protIds field.
36 + n·40	U1[8]	`reserved1`	-	-	Reserved
44 + n·40	U4	`skipped`	-	bytes	Number of skipped bytes
End of repeated group (`nPorts` times)					

3.14.3 UBX-MON-GNSS (0x0a 0x28)

3.14.3.1 Information message major GNSS selection

Message	**UBX-MON-GNSS** **Information message major GNSS selection**
Type	Polled
Comment	This message reports major GNSS selection. It does this by means of bit masks in U1 fields. Each bit in a bit mask corresponds to one major GNSS. Augmentation systems are not reported.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x28	8	*see below*	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	X1	supported	-	-	A bit mask showing the major GNSS that can be supported by this receiver
bit 0	U:1	GPSSup	-	-	GPS is supported
bit 1	U:1	GlonassSup	-	-	GLONASS is supported
bit 2	U:1	BeidouSup	-	-	BeiDou is supported
bit 3	U:1	GalileoSup	-	-	Galileo is supported
2	X1	defaultGnss	-	-	A bit mask showing the default major GNSS selection. If the default major GNSS selection is currently configured in the efuse for this receiver, it takes precedence over the default major GNSS selection configured in the executing firmware of this receiver.
bit 0	U:1	GPSDef	-	-	GPS is default-enabled
bit 1	U:1	GlonassDef	-	-	GLONASS is default-enabled
bit 2	U:1	BeidouDef	-	-	BeiDou is default-enabled
bit 3	U:1	GalileoDef	-	-	Galileo is default-enabled
3	X1	enabled	-	-	A bit mask showing the current major GNSS selection enabled for this receiver
bit 0	U:1	GPSEna	-	-	GPS is enabled
bit 1	U:1	GlonassEna	-	-	GLONASS is enabled
bit 2	U:1	BeidouEna	-	-	BeiDou is enabled
bit 3	U:1	GalileoEna	-	-	Galileo is enabled
4	U1	simultaneous	-	-	Maximum number of concurrent major GNSS that can be supported by this receiver
5	U1[3]	reserved0	-	-	Reserved

3.14.4 UBX-MON-HW3 (0x0a 0x37)

3.14.4.1 I/O pin status

Message	**UBX-MON-HW3** **I/O pin status**
Type	Periodic/polled
Comment	This message contains information specific to each HW I/O pin, for example whether the pin is set as Input or Output. For the antenna supervisor status and other RF status information, see the UBX-MON-RF message.

Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xb5 0x62	0x0a	0x37	22 + nPins·6	*see below*	CK_A CK_B

Payload description:

Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	nPins	-	-	The number of I/O pins included
2	X1	flags	-	-	Flags

bit 0	U:1	rtcCalib	-	-	RTC is calibrated
bit 1	U:1	safeBoot	-	-	Safeboot mode (0 = inactive, 1 = active)
bit 2	U:1	xtalAbsent	-	-	RTC xtal has been determined to be absent
3	CH[10]	hwVersion	-	-	Zero-terminated hardware version string (same as that returned in the UBX-MON-VER message)
13	U1[9]	reserved0	-	-	Reserved
Start of repeated group (nPins times)					
22 + n·6	U2	pinId	-	-	Identifier for the pin, including both external and internal pins.
24 + n·6	X2	pinMask	-	-	Pin mask
bit 0	U:1	periphPIO	-	-	Pin is set to peripheral or PIO? 0=Peripheral 1=PIO
bits 3...1	U:3	pinBank	-	-	Bank the pin belongs to, where 0=A 1=B 2=C 3=D 4=E 5=F 6=G 7=H
bit 4	U:1	direction	-	-	Pin direction? 0=Input 1=Output
bit 5	U:1	value	-	-	Pin value? 0=Low 1=High
bit 6	U:1	vpManager	-	-	Used by virtual pin manager? 0=No 1=Yes
bit 7	U:1	pioIrq	-	-	Interrupt enabled? 0=No 1=Yes
bit 8	U:1	pioPullHigh	-	-	Using pull high resistor? 0=No 1=Yes
bit 9	U:1	pioPullLow	-	-	Using pull low resistor 0=No 1=Yes
26 + n·6	U1	VP	-	-	Virtual pin mapping
27 + n·6	U1	reserved1	-	-	Reserved
End of repeated group (nPins times)					

3.14.5 UBX-MON-PATCH (0x0a 0x27)

3.14.5.1 Installed patches

Message	**UBX-MON-PATCH**					
	Installed patches					
Type	Polled					
Comment	This message reports information about patches installed and currently enabled on the receiver. It does not report on patches installed and then disabled. An enabled patch is considered active when the receiver executes from the code space where the patch resides on. For example, a ROM patch is reported active only when the system runs from ROM.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0a	0x27	4 + nEntries·16	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U2	version	-	-	Message version (0x0001 for this version)
2	U2	nEntries	-	-	Total number of reported patches
Start of repeated group (nEntries times)					
4 + n·16	X4	patchInfo	-	-	Status information about the reported patch
bit 0	U:1	activated	-	-	1: the patch is active, 0: otherwise
bits 2...1	U:2	location	-	-	Indicates where the patch is stored. 0: eFuse, 1: ROM, 2: BBR, 3: file system

8 + n·16	U4	comparator Number	-	-	The number of the comparator
12 + n·16	U4	patchAddress	-	-	The address that is targeted by the patch
16 + n·16	U4	patchData	-	-	The data that is inserted at the patchAddress
End of repeated group (nEntries times)					

3.14.6 UBX-MON-RF (0x0a 0x38)

3.14.6.1 RF information

Message	**UBX-MON-RF** **RF information**					
Type	Periodic/polled					
Comment	Information for each RF block. There are as many RF blocks reported as bands supported by this receiver.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0a	0x38	4 + nBlocks·24	*see below*	CK_A CK_B
Payload description:						
Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*	
0	U1	version	-	-	Message version (0x00 for this version)	
1	U1	nBlocks	-	-	The number of RF blocks included	
2	U1[2]	reserved0	-	-	Reserved	
Start of repeated group (nBlocks times)						
4 + n·24	U1	blockId	-	-	RF block ID (0 = L1 band, 1 = L2 or L5 band depending on product configuration)	
5 + n·24	X1	flags	-	-	Flags	
bits 1...0	U:2	jammingState	-	-	output from Jamming/Interference Monitor (0 = unknown or feature disabled, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix). Deprecated, see jammingState in UBX-SEC-SIG instead.	
6 + n·24	U1	antStatus	-	-	Status of the antenna supervisor state machine (0x00=INIT, 0x01=DONTKNOW, 0x02=OK, 0x03=SHORT, 0x04=OPEN)	
7 + n·24	U1	antPower	-	-	Current power status of antenna (0x00=OFF, 0x01=ON, 0x02=DONTKNOW)	
8 + n·24	U4	postStatus	-	-	POST status word	
12 + n·24	U1[4]	reserved1	-	-	Reserved	
16 + n·24	U2	noisePerMS	-	-	Noise level as measured by the GPS core	
18 + n·24	U2	agcCnt	-	-	AGC Monitor (counts SIGHI xor SIGLO, range 0 to 8191)	
20 + n·24	U1	cwSuppression	-	-	CW interference suppression level, scaled (0=no CW jamming, 255 = strong CW jamming)	
21 + n·24	I1	ofsI	-	-	Imbalance of I-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)	
22 + n·24	U1	magI	-	-	Magnitude of I-part of complex signal, scaled (0 = no signal, 255 = max.magnitude)	

23 + n·24	I1	ofsQ	-	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
24 + n·24	U1	magQ	-	-	Magnitude of Q-part of complex signal, scaled (0 = no signal, 255 = max.magnitude)
25 + n·24	U1[3]	reserved2	-	-	Reserved
End of repeated group (nBlocks times)					

3.14.7 UBX-MON-RXR (0x0a 0x21)

3.14.7.1 Receiver status information

Message	**UBX-MON-RXR** **Receiver status information**					
Type	Output					
Comment	The receiver ready message is sent when the receiver changes from or to backup mode.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0a	0x21	1	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	X1	flags	-	-	Receiver status flags
bit 0	U:1	awake	-	-	not in backup mode

3.14.8 UBX-MON-SPAN (0x0a 0x31)

3.14.8.1 Signal characteristics

Message	**UBX-MON-SPAN** **Signal characteristics**					
Type	Periodic/polled					
Comment	This message is to be used as a basic spectrum analyzer, where it displays one spectrum for each of the receiver's existing RF paths. The spectrum is conveyed with the following parameters: The frequency span in Hz, the frequency bin resolution in Hz, the center frequency in Hz, and 256 bins with amplitude data. Additionally, in order to give further insight on the signal captured by the receiver, the current gain of the internal programmable gain amplifier (PGA) is provided. **This message gives information for comparative analysis rather than absolute and precise spectrum overview. Users should not expect highly accurate spectrum amplitude.** Note that the PGA gain is not included in the spectrum data but is available as a separate field. Neither the spectrum, nor the PGA gain considers the internal fixed LNA gain or an external third-party LNA. The center frequency at each bin, assuming a zero-based bin count, can be computed as *f(i) = center + span * (i - 127) / 256*					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0a	0x31	4 + numRfBlocks·272	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	numRfBlocks	-	-	Number of RF blocks included
2	U1[2]	reserved0	-	-	Reserved
Start of repeated group (numRfBlocks times)					
4 + n·272	U1[256]	spectrum	-	dB	Spectrum data (number of points = span/res)

260 + n·272	U4	span	-	Hz	Spectrum span
264 + n·272	U4	res	-	Hz	Resolution of the spectrum
268 + n·272	U4	center	-	Hz	Center of spectrum span
272 + n·272	U1	pga	-	dB	Programmable gain amplifier
273 + n·272	U1[3]	reserved1	-	-	Reserved
End of repeated group (numRfBlocks times)					

3.14.9 UBX-MON-VER (0x0a 0x04)

3.14.9.1 Receiver and software version

Message	**UBX-MON-VER** **Receiver and software version**					
Type	Polled					
Comment						
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0a	0x04	40 + [0..n]·30	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	CH[30]	swVersion	-	-	Nul-terminated software version string.
30	CH[10]	hwVersion	-	-	Nul-terminated hardware version string
Start of repeated group (N times)					
40 + n·30	CH[30]	extension	-	-	Extended software information strings. A series of nul-terminated strings. Each extension field is 30 characters long and contains varying software information. Not all extension fields may appear. Examples of reported information: the software version string of the underlying ROM (when the receiver's firmware is running from flash), the firmware version, the supported protocol version, the module identifier, the flash information structure (FIS) file information, the supported major GNSS, the supported augmentation systems. See Firmware and protocol versions for details.
End of repeated group (N times)					

3.15 UBX-NAV (0x01)

The messages in the UBX-NAV class are used to output navigation results and data, such as position, altitude and velocity in a number of formats, and status flags and accuracy estimate figures, or satellite and signal information. The messages are generated with the configured navigation rate.

3.15.1 UBX-NAV-AOPSTATUS (0x01 0x60)

3.15.1.1 AssistNow Autonomous status

Message	**UBX-NAV-AOPSTATUS** **AssistNow Autonomous status**
Type	Periodic/polled

Comment	This message provides information on the status of the *AssistNow Autonomous* subsystem on the receiver. For example, a host application can determine the optimal time to shut down the receiver by monitoring the `status` field for a steady 0. See the chapter AssistNow Autonomous in the receiver description for details on this feature.						
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*		*Payload*	*Checksum*
	0xb5 0x62	0x01	0x60	16		*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.
4	U1	`aopCfg`	-	-	AssistNow Autonomous configuration
bit 0	U:1	`useAOP`	-	-	AOP enabled flag
5	U1	`status`	-	-	AssistNow Autonomous subsystem is idle (0) or running (not 0)
6	U1[10]	`reserved0`	-	-	Reserved

3.15.2 UBX-NAV-CLOCK (0x01 0x22)

3.15.2.1 Clock solution

Message	**UBX-NAV-CLOCK** **Clock solution**						
Type	Periodic/polled						
Comment							
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*		*Payload*	*Checksum*
	0xb5 0x62	0x01	0x22	20		*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section Navigation epochs in the integration manual for details. See section iTOW timestamps in the integration manual for details.
4	I4	`clkB`	-	ns	Clock bias
8	I4	`clkD`	-	ns/s	Clock drift
12	U4	`tAcc`	-	ns	Time accuracy estimate
16	U4	`fAcc`	-	ps/s	Frequency accuracy estimate

3.15.3 UBX-NAV-COV (0x01 0x36)

3.15.3.1 Covariance matrices

Message	**UBX-NAV-COV** **Covariance matrices**
Type	Periodic/polled
Comment	This message outputs the covariance matrices for the position and velocity solutions in the topocentric coordinate system defined as the local-level North (N), East (E), Down (D) frame. As the covariance matrices are symmetric, only the upper triangular part is output.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x36	64	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x00 for this version)
5	U1	posCovValid	-	-	Position covariance matrix validity flag
6	U1	velCovValid	-	-	Velocity covariance matrix validity flag
7	U1[9]	reserved0	-	-	Reserved
16	R4	posCovNN	-	m^2	Position covariance matrix value p_NN
20	R4	posCovNE	-	m^2	Position covariance matrix value p_NE
24	R4	posCovND	-	m^2	Position covariance matrix value p_ND
28	R4	posCovEE	-	m^2	Position covariance matrix value p_EE
32	R4	posCovED	-	m^2	Position covariance matrix value p_ED
36	R4	posCovDD	-	m^2	Position covariance matrix value p_DD
40	R4	velCovNN	-	m^2/s^2	Velocity covariance matrix value v_NN
44	R4	velCovNE	-	m^2/s^2	Velocity covariance matrix value v_NE
48	R4	velCovND	-	m^2/s^2	Velocity covariance matrix value v_ND
52	R4	velCovEE	-	m^2/s^2	Velocity covariance matrix value v_EE
56	R4	velCovED	-	m^2/s^2	Velocity covariance matrix value v_ED
60	R4	velCovDD	-	m^2/s^2	Velocity covariance matrix value v_DD

3.15.4 UBX-NAV-DOP (0x01 0x04)

3.15.4.1 Dilution of precision

Message	**UBX-NAV-DOP** **Dilution of precision**
Type	Periodic/polled
Comment	• DOP values are dimensionless. • All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, the DOP value is 1.56.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x04	18	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U2	gDOP	0.01	-	Geometric DOP
6	U2	pDOP	0.01	-	Position DOP
8	U2	tDOP	0.01	-	Time DOP
10	U2	vDOP	0.01	-	Vertical DOP
12	U2	hDOP	0.01	-	Horizontal DOP

14	U2	nDOP	0.01	-	Northing DOP
16	U2	eDOP	0.01	-	Easting DOP

3.15.5 UBX-NAV-EOE (0x01 0x61)

3.15.5.1 End of epoch

Message	**UBX-NAV-EOE** **End of epoch**					
Type	Periodic					
Comment						
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x61	4	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.

3.15.6 UBX-NAV-ODO (0x01 0x09)

3.15.6.1 Odometer solution

Message	**UBX-NAV-ODO** **Odometer solution**					
Type	Periodic/polled					
Comment	This message outputs the traveled distance since last reset (see UBX-NAV-RESETODO) together with an associated estimated accuracy and the total cumulated ground distance (can only be reset by a cold start of the receiver).					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x09	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	version	-	-	Message version (0x00 for this version)
1	U1[3]	reserved0	-	-	Reserved
4	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
8	U4	distance	-	m	Ground distance since last reset
12	U4	totalDistance	-	m	Total cumulative ground distance
16	U4	distanceStd	-	m	Ground distance accuracy (1-sigma)

3.15.7 UBX-NAV-ORB (0x01 0x34)

3.15.7.1 GNSS orbit database info

Message	**UBX-NAV-ORB** **GNSS orbit database info**
Type	Periodic/polled
Comment	Status of the GNSS orbit database knowledge.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x34	8 + numSv·6	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x01 for this version)
5	U1	numSv	-	-	Number of SVs in the database
6	U1[2]	reserved0	-	-	Reserved
Start of repeated group (numSv times)					
8 + n·6	U1	gnssId	-	-	GNSS ID
9 + n·6	U1	svId	-	-	Satellite ID
10 + n·6	X1	svFlag	-	-	Information Flags
bits 1...0	U:2	health	-	-	SV health: • 0 = unknown • 1 = healthy • 2 = not healty
bits 3...2	U:2	visibility	-	-	SV health: • 0 = unknown • 1 = below horizon • 2 = above horizon • 3 = above elevation mask
11 + n·6	X1	eph	-	-	Ephemeris data In products supporting L5 signals, the receiver may store multiple ephemeris data sets per satellite. ephUsability and ephSource fields show information on one of the data sets. It is not possible to choose which data set's status is shown.
bits 4...0	U:5	ephUsability	-	-	How long the receiver will be able to use the stored ephemeris data from now on: • 31 = The usability period is unknown • 30 = The usability period is more than 450 minutes • 30 > n > 0 = The usability period is between (n-1)*15 and n*15 minutes • 0 = Ephemeris can no longer be used
bits 7...5	U:3	ephSource	-	-	• 0 = not available • 1 = GNSS transmission • 2 = external aiding • 3-7 = other
12 + n·6	X1	alm	-	-	Almanac data
bits 4...0	U:5	almUsability	-	-	How long the receiver will be able to use the stored almanac data from now on: • 31 = The usability period is unknown • 30 = The usability period is more than 30 days • 30 > n > 0 = The usability period is between n-1 and n days • 0 = Almanac can no longer be used
bits 7...5	U:3	almSource	-	-	• 0 = not available • 1 = GNSS transmission • 2 = external aiding

					• 3-7 = other
13 + n·6	X1	otherOrb	-	-	Other orbit data available
bits 4...0	U:5	anoAop Usability	-	-	How long the receiver will be able to use the orbit data from now on: • 31 = The usability period is unknown • 30 = The usability period is more than 30 days • 30 > n > 0 = The usability period is between n-1 and n days • 0 = Data can no longer be used
bits 7...5	U:3	type	-	-	Type of orbit data: • 0 = No orbit data available • 1 = AssistNow Offline data • 2 = AssistNow Autonomous data • 3-7 = Other orbit data
End of repeated group (numSv times)					

3.15.8 UBX-NAV-PL (0x01 0x62)

3.15.8.1 Protection level information

Message	**UBX-NAV-PL** **Protection level information**					
Type	Periodic					
Comment	This message provides protection level (PL) values per protection level state (e.g. position ECEF X/Y/Z) and w.r.t. the given target misleading information risk (TMIR) per coordinate axis. Target misleading information risk is expressed as X [%MI/epoch] (read: X% probability of having an MI per epoch). Misleading information (MI) occurs when the Protection Level value is smaller than the true position error.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x62	52	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	msgVersion	-	-	Message version (0x01 for this version)
1	U1	tmirCoeff	-	-	Target misleading information risk (TMIR) [%MI/epoch], coefficient integer number of base 10 scientific notation (see e.g. plPos field)
2	I1	tmirExp	-	-	Target misleading information risk (TMIR) [%MI/epoch], exponent integer number of base 10 scientific notation (see e.g. plPos field)
3	U1	plPosValid	-	-	Position protection level validity • 0 Invalid (Protection level should not be used) • 1 Protection level is valid
4	U1	plPosFrame	-	-	Position protection level frame: • 0 Invalid (not possible to calculate frame conversion) • 1 North-East-Down • 2 Longitudinal-Lateral-Vertical • 3 HorizSemiMajorAxis-HorizSemiMinorAxis-Vertical
5	U1	plVelValid	-	-	Velocity protection level validity • 0 Invalid (Protection level should not be used) • 1 Protection level is valid

6	U1	plVelFrame	-	-	Velocity protection level frame: • 0 Invalid (not possible to calculate frame conversion) • 1 North-East-Down • 2 Longitudinal-Lateral-Vertical • 3 HorizSemiMajorAxis-HorizSemiMinorAxis-Vertical
7	U1	plTimeValid	-	-	Time protection level validity • 0 Invalid (Protection level should not be used) • 1 Protection level is valid
8	U1[4]	reserved0	-	-	Reserved
12	U4	iTow	-	ms	GPS time of week
16	U4	plPos1	-	mm	First axis of position protection level value, given in coordinate frame of plPosFrame (see plPosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
20	U4	plPos2	-	mm	Second axis of position protection level value, given in coordinate frame of plPosFrame (see plPosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
24	U4	plPos3	-	mm	Third axis of position protection level value, given in coordinate frame of plPosFrame (see plPosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
28	U4	plVel1	-	mm/s	First axis of velocity protection level value, given in coordinate frame of plVelFrame (see plVelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
32	U4	plVel2	-	mm/s	Second axis of velocity protection level value, given in coordinate frame of plVelFrame (see plVelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
36	U4	plVel3	-	mm/s	Third axis of velocity protection level value, given in coordinate frame of plVelFrame (see plVelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
40	U2	plPosHorizOrient	1e-2	deg	Orientation of HorizSemiMajorAxis (see plPosFrame) of horizontal ellipse position protection level (clockwise degrees from true North), if plPosFrame==3; zero otherwise.
42	U2	plVelHorizOrient	1e-2	deg	Orientation of HorizSemiMajorAxis (see plVelFrame) of horizontal ellipse velocity protection level (clockwise degrees from true North), if plVelFrame==3; zero otherwise.
44	U4	plTime	-	ns	Time protection level value, w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
48	U1[4]	reserved1	-	-	Reserved

3.15.9 UBX-NAV-POSECEF (0x01 0x01)

3.15.9.1 Position solution in ECEF

Message	**UBX-NAV-POSECEF** **Position solution in ECEF**					
Type	Periodic/polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x01	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	`ecefX`	-	cm	ECEF X coordinate
8	I4	`ecefY`	-	cm	ECEF Y coordinate
12	I4	`ecefZ`	-	cm	ECEF Z coordinate
16	U4	`pAcc`	-	cm	Position Accuracy Estimate

3.15.10 UBX-NAV-POSLLH (0x01 0x02)

3.15.10.1 Geodetic position solution

Message	**UBX-NAV-POSLLH** **Geodetic position solution**					
Type	Periodic/polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual. This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message CFG-NAVSPG-USE_USRDAT.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x02	28	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	`lon`	1e-7	deg	Longitude
8	I4	`lat`	1e-7	deg	Latitude
12	I4	`height`	-	mm	Height above ellipsoid
16	I4	`hMSL`	-	mm	Height above mean sea level
20	U4	`hAcc`	-	mm	Horizontal accuracy estimate
24	U4	`vAcc`	-	mm	Vertical accuracy estimate

3.15.11 UBX-NAV-PVT (0x01 0x07)

3.15.11.1 Navigation position velocity time solution

Message	**UBX-NAV-PVT** **Navigation position velocity time solution**					
Type	Periodic/polled					
Comment	This message combines position, velocity and time solution, including accuracy figures. Note that during a leap second there may be more or less than 60 seconds in a minute. See description of leap seconds in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x07	92	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U2	year	-	y	Year (UTC)
6	U1	month	-	month	Month, range 1..12 (UTC)
7	U1	day	-	d	Day of month, range 1..31 (UTC)
8	U1	hour	-	h	Hour of day, range 0..23 (UTC)
9	U1	min	-	min	Minute of hour, range 0..59 (UTC)
10	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)
11	X1	valid	-	-	Validity flags
bit 0	$U_{:1}$	validDate	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)
bit 1	$U_{:1}$	validTime	-	-	1 = valid UTC time of day (see section Time validity in the integration manual for details)
bit 2	$U_{:1}$	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
bit 3	$U_{:1}$	validMag	-	-	1 = valid magnetic declination
12	U4	tAcc	-	ns	Time accuracy estimate (UTC)
16	I4	nano	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
20	U1	fixType	-	-	GNSSfix Type: • 0 = no fix • 1 = dead reckoning only • 2 = 2D-fix • 3 = 3D-fix • 4 = GNSS + dead reckoning combined • 5 = time only fix
21	X1	flags	-	-	Fix status flags
bit 0	$U_{:1}$	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)
bit 1	$U_{:1}$	diffSoln	-	-	1 = differential corrections were applied
bits 4...2	$U_{:3}$	psmState	-	-	Power save mode state (see Power management section in the integration manual for details. • 0 = PSM is not active • 1 = Enabled (an intermediate state before Acquisition state • 2 = Acquisition • 3 = Tracking • 4 = Power Optimized Tracking

					• 5 = Inactive
	bit 5	U:1	headVehValid	-	-	1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode
	bits 7...6	U:2	carrSoln	-	-	Carrier phase range solution status: • 0 = no carrier phase range solution • 1 = carrier phase range solution with floating ambiguities • 2 = carrier phase range solution with fixed ambiguities (not supported for protocol versions less than 20.00)
22		X1	flags2	-	-	Additional flags
	bit 5	U:1	confirmedAvai	-	-	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details) This flag is only supported in Protocol Versions 19.00, 19.10, 20.10, 20.20, 20.30, 22.00, 23.00, 23.01, 27 and 28.
	bit 6	U:1	confirmedDate	-	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
	bit 7	U:1	confirmedTime	-	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
23		U1	numSV	-	-	Number of satellites used in Nav Solution
24		I4	lon	1e-7	deg	Longitude
28		I4	lat	1e-7	deg	Latitude
32		I4	height	-	mm	Height above ellipsoid
36		I4	hMSL	-	mm	Height above mean sea level
40		U4	hAcc	-	mm	Horizontal accuracy estimate
44		U4	vAcc	-	mm	Vertical accuracy estimate
48		I4	velN	-	mm/s	NED north velocity
52		I4	velE	-	mm/s	NED east velocity
56		I4	velD	-	mm/s	NED down velocity
60		I4	gSpeed	-	mm/s	Ground Speed (2-D)
64		I4	headMot	1e-5	deg	Heading of motion (2-D)
68		U4	sAcc	-	mm/s	Speed accuracy estimate
72		U4	headAcc	1e-5	deg	Heading accuracy estimate (both motion and vehicle)
76		U2	pDOP	0.01	-	Position DOP
78		X2	flags3	-	-	Additional flags
	bit 0	U:1	invalidLlh	-	-	1 = Invalid lon, lat, height and hMSL
	bits 4...1	U:4	lastCorrectionAge	-	-	Age of the most recently received differential correction: • 0 = Not available • 1 = Age between 0 and 1 second • 2 = Age between 1 (inclusive) and 2 seconds • 3 = Age between 2 (inclusive) and 5 seconds • 4 = Age between 5 (inclusive) and 10 seconds • 5 = Age between 10 (inclusive) and 15 seconds • 6 = Age between 15 (inclusive) and 20 seconds • 7 = Age between 20 (inclusive) and 30 seconds • 8 = Age between 30 (inclusive) and 45 seconds • 9 = Age between 45 (inclusive) and 60 seconds

					• 10 = Age between 60 (inclusive) and 90 seconds • 11 = Age between 90 (inclusive) and 120 seconds • >=12 = Age greater or equal than 120 seconds
80	U1[4]	reserved0	-	-	Reserved
84	I4	headVeh	1e-5	deg	Heading of vehicle (2-D), this is only valid when headVehValid is set, otherwise the output is set to the heading of motion
88	I2	magDec	1e-2	deg	Magnetic declination. Only supported in ADR 4.10 and later.
90	U2	magAcc	1e-2	deg	Magnetic declination accuracy. Only supported in ADR 4.10 and later.

3.15.12 UBX-NAV-RESETODO (0x01 0x10)

3.15.12.1 Reset odometer

Message	**UBX-NAV-RESETODO** **Reset odometer**					
Type	Command					
Comment	This message resets the traveled distance computed by the odometer (see UBX-NAV-ODO). UBX-ACK-ACK or UBX-ACK-NAK are returned to indicate success or failure.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x10	0	*see below*	CK_A CK_B
Payload	This message has no payload.					

3.15.13 UBX-NAV-SAT (0x01 0x35)

3.15.13.1 Satellite information

Message	**UBX-NAV-SAT** **Satellite information**					
Type	Periodic/polled					
Comment	This message displays information about SVs that are either known to be visible or currently tracked by the receiver. All signal related information corresponds to the subset of signals specified in Signal Identifiers.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x35	8 + numSvs·12	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x01 for this version)
5	U1	numSvs	-	-	Number of satellites
6	U1[2]	reserved0	-	-	Reserved
Start of repeated group (`numSvs` times)					
8 + n·12	U1	gnssId	-	-	GNSS identifier (see Satellite Numbering) for assignment
9 + n·12	U1	svId	-	-	Satellite identifier (see Satellite Numbering) for assignment
10 + n·12	U1	cno	-	dBHz	Carrier to noise ratio (signal strength)

11 + n·12	I1	elev	-	deg	Elevation (range: +/-90), unknown if out of range
12 + n·12	I2	azim	-	deg	Azimuth (range 0-360), unknown if elevation is out of range
14 + n·12	I2	prRes	0.1	m	Pseudorange residual
16 + n·12	X4	flags	-	-	Bitmask
bits 2...0	U:3	qualityInd	-	-	Signal quality indicator: • 0 = no signal • 1 = searching signal • 2 = signal acquired • 3 = signal detected but unusable • 4 = code locked and time synchronized • 5, 6, 7 = code and carrier locked and time synchronized
bit 3	U:1	svUsed	-	-	1 = Signal in the subset specified in Signal Identifiers is currently being used for navigation
bits 5...4	U:2	health	-	-	Signal health flag: • 0 = unknown • 1 = healthy • 2 = unhealthy
bit 6	U:1	diffCorr	-	-	1 = differential correction data is available for this SV
bit 7	U:1	smoothed	-	-	1 = carrier smoothed pseudorange used
bits 10...8	U:3	orbitSource	-	-	Orbit source: • 0 = no orbit information is available for this SV • 1 = ephemeris is used • 2 = almanac is used • 3 = AssistNow Offline orbit is used • 4 = AssistNow Autonomous orbit is used • 5, 6, 7 = other orbit information is used
bit 11	U:1	ephAvail	-	-	1 = ephemeris is available for this SV
bit 12	U:1	almAvail	-	-	1 = almanac is available for this SV
bit 13	U:1	anoAvail	-	-	1 = AssistNow Offline data is available for this SV
bit 14	U:1	aopAvail	-	-	1 = AssistNow Autonomous data is available for this SV
bit 16	U:1	sbasCorrUsed	-	-	1 = SBAS corrections have been used for a signal in the subset specified in Signal Identifiers
bit 17	U:1	rtcmCorrUsed	-	-	1 = RTCM corrections have been used for a signal in the subset specified in Signal Identifiers
bit 18	U:1	slasCorrUsed	-	-	1 = QZSS SLAS corrections have been used for a signal in the subset specified in Signal Identifiers
bit 19	U:1	spartnCorrUsed	-	-	1 = SPARTN corrections have been used for a signal in the subset specified in Signal Identifiers
bit 20	U:1	prCorrUsed	-	-	1 = Pseudorange corrections have been used for a signal in the subset specified in Signal Identifiers
bit 21	U:1	crCorrUsed	-	-	1 = Carrier range corrections have been used for a signal in the subset specified in Signal Identifiers
bit 22	U:1	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for a signal in the subset specified in Signal Identifiers
bit 23	U:1	clasCorrUsed	-	-	1 = CLAS corrections have been used for a signal in the subset specified in Signal Identifiers

End of repeated group (`numSvs` times)

3.15.14 UBX-NAV-SBAS (0x01 0x32)

3.15.14.1 SBAS status data

Message	**UBX-NAV-SBAS** **SBAS status data**					
Type	Periodic/polled					
Comment	This message outputs the status of the SBAS sub system					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x32	12 + cnt·12	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.
4	U1	`geo`	-	-	PRN Number of the GEO where correction and integrity data is used from
5	U1	`mode`	-	-	SBAS Mode • 0 Disabled • 1 Enabled integrity • 3 Enabled test mode
6	I1	`sys`	-	-	SBAS System (WAAS/EGNOS/...) • -1 Unknown • 0 WAAS • 1 EGNOS • 2 MSAS • 3 GAGAN • 16 GPS
7	X1	`service`	-	-	SBAS Services available
bit 0	U:1	`Ranging`	-	-	GEO may be used as ranging source
bit 1	U:1	`Corrections`	-	-	GEO is providing correction data
bit 2	U:1	`Integrity`	-	-	GEO is providing integrity
bit 3	U:1	`Testmode`	-	-	GEO is in test mode
bit 4	U:1	`Bad`	-	-	Problem with signal or broadcast data indicated
8	U1	`cnt`	-	-	Number of SV data following
9	X1	`statusFlags`	-	-	SBAS status flags
bits 1...0	U:2	`integrityUsed`	-	-	SBAS integrity used • 0 = Unknown • 1 = Integrity information is not available or SBAS integrity is not enabled • 2 = Receiver uses only GPS satellites for which integrity information is available
10	U1[2]	`reserved0`	-	-	Reserved
Start of repeated group (`cnt` times)					
12 + n·12	U1	`svid`	-	-	SV ID
13 + n·12	U1	`reserved1`	-	-	Reserved
14 + n·12	U1	`udre`	-	-	Monitoring status

15 + n·12	U1	svSys	-	-	System (WAAS/EGNOS/...) same as SYS
16 + n·12	U1	svService	-	-	Services available same as SERVICE
17 + n·12	U1	reserved2	-	-	Reserved
18 + n·12	I2	prc	-	cm	Pseudo Range correction in [cm]
20 + n·12	U1[2]	reserved3	-	-	Reserved
22 + n·12	I2	ic	-	cm	Ionosphere correction in [cm]
End of repeated group (cnt times)					

3.15.15 UBX-NAV-SIG (0x01 0x43)

3.15.15.1 Signal information

Message	**UBX-NAV-SIG** **Signal information**					
Type	Periodic/polled					
Comment	This message displays information about signals currently tracked by the receiver.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x43	8 + numSigs·16	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x00 for this version)
5	U1	numSigs	-	-	Number of signals
6	U1[2]	reserved0	-	-	Reserved
Start of repeated group (numSigs times)					
8 + n·16	U1	gnssId	-	-	GNSS identifier (see Satellite Numbering) for assignment
9 + n·16	U1	svId	-	-	Satellite identifier (see Satellite Numbering) for assignment
10 + n·16	U1	sigId	-	-	New style signal identifier (see Signal Identifiers)
11 + n·16	U1	freqId	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
12 + n·16	I2	prRes	0.1	m	Pseudorange residual
14 + n·16	U1	cno	-	dBHz	Carrier-to-noise density ratio (signal strength)
15 + n·16	U1	qualityInd	-	-	Signal quality indicator: • 0 = no signal • 1 = searching signal • 2 = signal acquired • 3 = signal detected but unusable • 4 = code locked and time synchronized • 5, 6, 7 = code and carrier locked and time synchronized

16 + n·16	U1	corrSource	-	-	Correction source: • 0 = no corrections • 1 = SBAS corrections • 2 = BeiDou corrections • 3 = RTCM2 corrections • 4 = RTCM3 OSR corrections • 5 = RTCM3 SSR corrections • 6 = QZSS SLAS corrections • 7 = SPARTN corrections • 8 = CLAS corrections
17 + n·16	U1	ionoModel	-	-	Ionospheric model used: • 0 = no model • 1 = Klobuchar model transmitted by GPS • 2 = SBAS model • 3 = Klobuchar model transmitted by BeiDou • 8 = Iono delay derived from dual frequency observations
18 + n·16	X2	sigFlags	-	-	Signal related flags
bits 1...0	U:2	health	-	-	Signal health flag: • 0 = unknown • 1 = healthy • 2 = unhealthy
bit 2	U:1	prSmoothed	-	-	1 = Pseudorange has been smoothed
bit 3	U:1	prUsed	-	-	1 = Pseudorange has been used for this signal
bit 4	U:1	crUsed	-	-	1 = Carrier range has been used for this signal
bit 5	U:1	doUsed	-	-	1 = Range rate (Doppler) has been used for this signal
bit 6	U:1	prCorrUsed	-	-	1 = Pseudorange corrections have been used for this signal
bit 7	U:1	crCorrUsed	-	-	1 = Carrier range corrections have been used for this signal
bit 8	U:1	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for this signal
20 + n·16	U1[4]	reserved1	-	-	Reserved
End of repeated group (numSigs times)					

3.15.16 UBX-NAV-SLAS (0x01 0x42)

3.15.16.1 QZSS L1S SLAS status data

Message	**UBX-NAV-SLAS** **QZSS L1S SLAS status data**					
Type	Periodic/polled					
Comment	This message outputs the status of the QZSS L1S SLAS sub system					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x42	20 + cnt·8	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See the description of iTOW for details.
4	U1	version	-	-	Message version (0x00 for this version)

5	U1[3]	reserved0	-	-	Reserved
8	I4	gmsLon	1e-3	deg	Longitude of the used ground monitoring station
12	I4	gmsLat	1e-3	deg	Latitude of the used ground monitoring station
16	U1	gmsCode	-	-	Code of the used ground monitoring station according to the QZSS SLAS Interface Specification, available from qzss.go.jp/en/
17	U1	qzssSvId	-	-	Satellite identifier of the QZS/GEO whose correction data is used (see Satellite Numbering)
18	X1	serviceFlags	-	-	Flags regarding SLAS service
bit 0	U:1	gmsAvailable	-	-	1 = Ground monitoring station available
bit 1	U:1	qzssSv Available	-	-	1 = Correction providing QZSS SV available
bit 2	U:1	testMode	-	-	1 = Currently used QZSS SV in test mode
19	U1	cnt	-	-	Number of pseudorange corrections following
Start of repeated group (cnt times)					
20 + n·8	U1	gnssId	-	-	GNSS identifier (see Satellite Numbering)
21 + n·8	U1	svId	-	-	Satellite identifier (see Satellite Numbering)
22 + n·8	U1	reserved1	-	-	Reserved
23 + n·8	U1[3]	reserved2	-	-	Reserved
26 + n·8	I2	prc	-	cm	Pseudorange correction
End of repeated group (cnt times)					

3.15.17 UBX-NAV-STATUS (0x01 0x03)

3.15.17.1 Receiver navigation status

Message	**UBX-NAV-STATUS**					
	Receiver navigation status					
Type	Periodic/polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x03	16	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	gpsFix	-	-	GPSfix Type, this value does **not** qualify a fix as valid and within the limits. See note on flag gpsFixOk below. • 0x00 = no fix • 0x01 = dead reckoning only • 0x02 = 2D-fix • 0x03 = 3D-fix • 0x04 = GPS + dead reckoning combined • 0x05 = Time only fix • 0x06..0xff = reserved
5	X1	flags	-	-	Navigation Status Flags

	bit 0	U:1	gpsFixOk	-	-	1 = position and velocity valid and within DOP and ACC Masks.
	bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied
	bit 2	U:1	wknSet	-	-	1 = Week Number valid (see section Time validity in the integration manual for details)
	bit 3	U:1	towSet	-	-	1 = Time of Week valid (see section Time validity in the integration manual for details)
6		X1	fixStat	-	-	Fix Status Information
	bit 0	U:1	diffCorr	-	-	1 = differential corrections available
	bit 1	U:1	carrSolnValid	-	-	1 = valid carrSoln
	bits 7...6	U:2	mapMatching	-	-	map matching status: • 00: none • 01: valid but not used, i.e. map matching data was received, but was too old • 10: valid and used, map matching data was applied • 11: valid and used, map matching data was applied. In case of sensor unavailability map matching data enables dead reckoning. This requires map matched latitude/longitude or heading data.
7		X1	flags2	-	-	further information about navigation output
	bits 1...0	U:2	psmState	-	-	power save mode state (not supported for protocol versions less than 13.01) • 0 = ACQUISITION [or when psm disabled] • 1 = TRACKING • 2 = POWER OPTIMIZED TRACKING • 3 = INACTIVE
	bits 4...3	U:2	spoofDetState	-	-	Spoofing detection state (not supported for protocol versions less than 18.00) • 0: Unknown or deactivated • 1: No spoofing indicated • 2: Spoofing indicated • 3: Multiple spoofing indications Note that the spoofing state value only reflects the detector state for the current navigation epoch. As spoofing can be detected most easily at the transition from real signal to spoofing signal, this is also where the detector is triggered the most. I.e. a value of *1 - No spoofing indicated* does not mean that the receiver is not spoofed, it simply states that the detector was not triggered in this epoch.
	bits 7...6	U:2	carrSoln	-	-	Carrier phase range solution status: • 0 = no carrier phase range solution • 1 = carrier phase range solution with floating ambiguities • 2 = carrier phase range solution with fixed ambiguities
8		U4	ttff	-	ms	Time to first fix (millisecond time tag)
12		U4	msss	-	ms	Milliseconds since Startup / Reset

3.15.18 UBX-NAV-TIMEBDS (0x01 0x24)

3.15.18.1 BeiDou time solution

Message	**UBX-NAV-TIMEBDS** **BeiDou time solution**					
Type	Periodic/polled					
Comment	This message reports the precise BDS time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x24	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	`SOW`	-	s	BDS time of week (rounded to seconds)
8	I4	`fSOW`	-	ns	Fractional part of SOW (range: +/-500000000). The precise BDS time of week in seconds is: `SOW + fSOW * 1e-9`
12	I2	`week`	-	-	BDS week number of the navigation epoch
14	I1	`leapS`	-	s	BDS leap seconds (BDS-UTC)
15	X1	`valid`	-	-	Validity Flags
bit 0	$U_{:1}$	`sowValid`	-	-	1 = Valid SOW and fSOW (see section Time validity in the integration manual for details)
bit 1	$U_{:1}$	`weekValid`	-	-	1 = Valid week (see section Time validity in the integration manual for details)
bit 2	$U_{:1}$	`leapSValid`	-	-	1 = Valid leap second
16	U4	`tAcc`	-	ns	Time Accuracy Estimate

3.15.19 UBX-NAV-TIMEGAL (0x01 0x25)

3.15.19.1 Galileo time solution

Message	**UBX-NAV-TIMEGAL** **Galileo time solution**					
Type	Periodic/polled					
Comment	This message reports the precise Galileo time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x25	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	`galTow`	-	s	Galileo time of week (rounded to seconds)
8	I4	`fGalTow`	-	ns	Fractional part of the Galileo time of week (range: +/-500000000). The precise Galileo time of week in seconds is: `galTow + fGalTow * 1e-9`

12		I2	galWno	-	-	Galileo week number
14		I1	leapS	-	s	Galileo leap seconds (Galileo-UTC)
15		X1	valid	-	-	Validity Flags
	bit 0	U:1	galTowValid	-	-	1 = Valid galTow and fGalTow (see section Time validity in the integration manual for details)
	bit 1	U:1	galWnoValid	-	-	1 = Valid galWno (see section Time validity in the integration manual for details)
	bit 2	U:1	leapSValid	-	-	1 = Valid leapS
16		U4	tAcc	-	ns	Time Accuracy Estimate

3.15.20 UBX-NAV-TIMEGLO (0x01 0x23)

3.15.20.1 GLONASS time solution

Message	**UBX-NAV-TIMEGLO** **GLONASS time solution**					
Type	Periodic/polled					
Comment	This message reports the precise GLO time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x23	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	TOD	-	s	GLONASS time of day (rounded to integer seconds)
8	I4	fTOD	-	ns	Fractional part of TOD (range: +/-500000000). The precise GLONASS time of day in seconds is: `TOD + fTOD * 1e-9`
12	U2	Nt	-	days	Current date (range: 1-1461), starting at 1 from the 1st Jan of the year indicated by N4 and ending at 1461 at the 31st Dec of the third year after that indicated by N4
14	U1	N4	-	-	Four-year interval number starting from 1996 (1=1996, 2=2000, 3=2004...)
15	X1	valid	-	-	Validity flags
bit 0	U:1	todValid	-	-	1 = Valid TOD and fTOD (see section Time validity in the integration manual for details)
bit 1	U:1	dateValid	-	-	1 = Valid N4 and Nt (see section Time validity in the integration manual for details)
16	U4	tAcc	-	ns	Time Accuracy Estimate

3.15.21 UBX-NAV-TIMEGPS (0x01 0x20)

3.15.21.1 GPS time solution

Message	**UBX-NAV-TIMEGPS** **GPS time solution**
Type	Periodic/polled

Comment	This message reports the precise GPS time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x20	16	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	`fTOW`	-	ns	Fractional part of iTOW (range: +/-500000). The precise GPS time of week in seconds is: `(iTOW * 1e-3) + (fTOW * 1e-9)`
8	I2	`week`	-	-	GPS week number of the navigation epoch
10	I1	`leapS`	-	s	GPS leap seconds (GPS-UTC)
11	X1	`valid`	-	-	Validity Flags
bit 0	$U_{:1}$	`towValid`	-	-	1 = Valid GPS time of week (iTOW & fTOW, (see section Time validity in the integration manual for details)
bit 1	$U_{:1}$	`weekValid`	-	-	1 = Valid GPS week number (see section Time validity in the integration manual for details)
bit 2	$U_{:1}$	`leapSValid`	-	-	1 = Valid GPS leap seconds
12	U4	`tAcc`	-	ns	Time Accuracy Estimate

3.15.22 UBX-NAV-TIMELS (0x01 0x26)

3.15.22.1 Leap second event information

Message	**UBX-NAV-TIMELS** **Leap second event information**					
Type	Periodic/polled					
Comment	Information about the upcoming leap second event if one is scheduled.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x26	24	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U1	`version`	-	-	Message version (0x00 for this version)
5	U1[3]	`reserved0`	-	-	Reserved

8	U1	srcOfCurrLs	-	-	Information source for the current number of leap seconds. • 0 = Default (hardcoded in the firmware, can be outdated) • 1 = Derived from time difference between GPS and GLONASS time • 2 = GPS • 3 = SBAS • 4 = BeiDou • 5 = Galileo • 6 = Aided data • 7 = Configured • 8 = NavIC • 255 = Unknown
9	I1	currLs	-	s	Current number of leap seconds since start of GPS time (Jan 6, 1980). It reflects how much GPS time is ahead of UTC time. Galileo number of leap seconds is the same as GPS. BeiDou number of leap seconds is 14 less than GPS. GLONASS follows UTC time, so no leap seconds.
10	U1	srcOfLsChange	-	-	Information source for the future leap second event. • 0 = No source • 2 = GPS • 3 = SBAS • 4 = BeiDou • 5 = Galileo • 6 = GLONASS • 7 = NavIC
11	I1	lsChange	-	s	Future leap second change if one is scheduled. +1 = positive leap second, -1 = negative leap second, 0 = no future leap second event scheduled or no information available.
12	I4	timeToLsEvent	-	s	Number of seconds until the next leap second event, or from the last leap second event if no future event scheduled. If > 0 event is in the future, = 0 event is now, < 0 event is in the past. Valid only if validTimeToLsEvent = 1.
16	U2	dateOfLsGpsWn	-	-	GPS week number (WN) of the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1.
18	U2	dateOfLsGpsDn	-	-	GPS day of week number (DN) for the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1. (GPS and Galileo DN: from 1 = Sun to 7 = Sat. BeiDou DN: from 0 = Sun to 6 = Sat.)
20	U1[3]	reserved1	-	-	Reserved
23	X1	valid	-	-	Validity flags
bit 0	U:1	validCurrLs	-	-	1 = Valid current number of leap seconds value.
bit 1	U:1	validTimeToLsEvent	-	-	1 = Valid time to next leap second event or from the last leap second event if no future event scheduled.

3.15.23 UBX-NAV-TIMEQZSS (0x01 0x27)

3.15.23.1 QZSS time solution

Message	**UBX-NAV-TIMEQZSS** **QZSS time solution**					
Type	Periodic/polled					
Comment	This message reports the precise QZSS time of the most recent navigation solution including validity flags and an accuracy estimate. See the Clocks and time section in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x27	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch.
4	U4	`qzssTow`	-	s	QZSS time of week (rounded to seconds)
8	I4	`fQzssTow`	-	ns	Fractional part of QZSS time of week (range: +/-500000000). The precise QZSS time of week in seconds is: `qzssTow + (fQzssTow * 1e-9)`
12	I2	`qzssWno`	-	-	QZSS week number of the navigation epoch
14	I1	`leapS`	-	s	QZSS leap seconds (QZSS-UTC)
15	X1	`valid`	-	-	Validity Flags
bit 0	$U_{:1}$	`qzssTowValid`	-	-	1 = Valid QZSS time of week (qzssTow and fQzssTow)
bit 1	$U_{:1}$	`qzssWnoValid`	-	-	1 = Valid QZSS week number
bit 2	$U_{:1}$	`leapSValid`	-	-	1 = Valid QZSS leap seconds
16	U4	`tAcc`	-	ns	Time Accuracy Estimate

3.15.24 UBX-NAV-TIMEUTC (0x01 0x21)

3.15.24.1 UTC time solution

Message	**UBX-NAV-TIMEUTC** **UTC time solution**					
Type	Periodic/polled					
Comment	Note that during a leap second there may be more or less than 60 seconds in a minute. See the description of leap seconds in the integration manual for details.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x21	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	U4	`tAcc`	-	ns	Time accuracy estimate (UTC)
8	I4	`nano`	-	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
12	U2	`year`	-	y	Year, range 1999..2099 (UTC)
14	U1	`month`	-	month	Month, range 1..12 (UTC)
15	U1	`day`	-	d	Day of month, range 1..31 (UTC)

16	U1	hour	-	h	Hour of day, range 0..23 (UTC)
17	U1	min	-	min	Minute of hour, range 0..59 (UTC)
18	U1	sec	-	s	Seconds of minute, range 0..60 (UTC)
19	X1	valid	-	-	Validity Flags
bit 0	U:1	validTOW	-	-	1 = Valid Time of Week (see section Time validity in the integration manual for details)
bit 1	U:1	validWKN	-	-	1 = Valid Week Number (see section Time validity in the integration manual for details)
bit 2	U:1	validUTC	-	-	1 = Valid UTC Time
bits 7...4	U:4	utcStandard	-	-	UTC standard identifier. (Not supported for protocol versions less than 15.00) • 0 = Information not available • 1 = Communications Research Labratory (CRL), Tokyo, Japan • 2 = National Institute of Standards and Technology (NIST) • 3 = U.S. Naval Observatory (USNO) • 4 = International Bureau of Weights and Measures (BIPM) • 5 = European laboratories • 6 = Former Soviet Union (SU) • 7 = National Time Service Center (NTSC), China • 8 = National Physics Laboratory India (NPLI) • 15 = Unknown

3.15.25 UBX-NAV-VELECEF (0x01 0x11)

3.15.25.1 Velocity solution in ECEF

Message	**UBX-NAV-VELECEF** **Velocity solution in ECEF**					
Type	Periodic/polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x11	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	ecefVX	-	cm/s	ECEF X velocity
8	I4	ecefVY	-	cm/s	ECEF Y velocity
12	I4	ecefVZ	-	cm/s	ECEF Z velocity
16	U4	sAcc	-	cm/s	Speed accuracy estimate

3.15.26 UBX-NAV-VELNED (0x01 0x12)

3.15.26.1 Velocity solution in NED frame

Message	**UBX-NAV-VELNED** **Velocity solution in NED frame**					
Type	Periodic/polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x01	0x12	36	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	`iTOW`	-	ms	GPS time of week of the navigation epoch. See section iTOW timestamps in the integration manual for details.
4	I4	`velN`	-	cm/s	North velocity component
8	I4	`velE`	-	cm/s	East velocity component
12	I4	`velD`	-	cm/s	Down velocity component
16	U4	`speed`	-	cm/s	Speed (3-D)
20	U4	`gSpeed`	-	cm/s	Ground speed (2-D)
24	I4	`heading`	1e-5	deg	Heading of motion 2-D
28	U4	`sAcc`	-	cm/s	Speed accuracy Estimate
32	U4	`cAcc`	1e-5	deg	Course / Heading accuracy estimate

3.16 UBX-RXM (0x02)

The messages in the UBX-RXM class are used to output status and result data from the receiver manager as well as sending commands to the receiver manager.

3.16.1 UBX-RXM-MEAS20 (0x02 0x84)

3.16.1.1 Satellite measurements for CloudLocate location service (20 bytes message)

Message	**UBX-RXM-MEAS20** **Satellite measurements for CloudLocate location service (20 bytes message)**					
Type	Periodic/polled					
Comment						
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x02	0x84	[0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
Start of repeated group (N times)					
0 + n	U1	`payload`	-	-	The message payload
End of repeated group (N times)					

3.16.2 UBX-RXM-MEAS50 (0x02 0x86)

3.16.2.1 Satellite measurements for CloudLocate location service (50 bytes message)

Message	**UBX-RXM-MEAS50** **Satellite measurements for CloudLocate location service (50 bytes message)**				
Type	Periodic/polled				
Comment					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x02	0x86	[0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
Start of repeated group (N times)					
0 + n	U1	`payload`	-	-	The message payload
End of repeated group (N times)					

3.16.3 UBX-RXM-MEASC12 (0x02 0x82)

3.16.3.1 Satellite measurements for CloudLocate location service (second 12 bytes message)

Message	**UBX-RXM-MEASC12** **Satellite measurements for CloudLocate location service (second 12 bytes message)**				
Type	Periodic/polled				
Comment					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x02	0x82	[0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
Start of repeated group (N times)					
0 + n	U1	`payload`	-	-	The message payload
End of repeated group (N times)					

3.16.4 UBX-RXM-MEASD12 (0x02 0x80)

3.16.4.1 Satellite measurements for CloudLocate location service (first 12 bytes message)

Message	**UBX-RXM-MEASD12** **Satellite measurements for CloudLocate location service (first 12 bytes message)**				
Type	Periodic/polled				
Comment					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x02	0x80	[0..n]	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
Start of repeated group (N times)					
0 + n	U1	`payload`	-	-	The message payload
End of repeated group (N times)					

3.16.5 UBX-RXM-MEASX (0x02 0x14)

3.16.5.1 Satellite measurements for RRLP

Message	**UBX-RXM-MEASX** **Satellite measurements for RRLP**
Type	Periodic/polled
Comment	The message payload data is, where possible and appropriate, according to the Radio Resource LCS (Location Services) Protocol (RRLP) [1]. One exception is the satellite and GNSS IDs, which here are given according to the Satellite Numbering scheme. The correct satellites have to be selected and their satellite ID translated accordingly [1, tab. A.10.14] for use in a RRLP Measure Position Response Component. Similarly, the measurement reference time of week has to be forwarded correctly (modulo 14400000 for the 24 LSB GPS measurements variant, modulo 3600000 for the 22 LSB Galileo and Additional Navigation Satelllite Systems (GANSS) measurements variant) of the RRLP measure position response to the SMLC. Reference: [1] ETSI TS 144 031 V11.0.0 (2012-10), Digital cellular telecommunications system (Phase 2+), Location Services (LCS), Mobile Station (MS) - Serving Mobile Location Centre (SMLC), Radio Resource LCS Protocol (RRLP), (3GPP TS 44.031 version 11.0.0 Release 11).

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x02	0x14	44 + numSV·24	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	version	-	-	Message version, currently 0x01
1	U1[3]	reserved0	-	-	Reserved
4	U4	gpsTOW	-	ms	GPS measurement reference time
8	U4	gloTOW	-	ms	GLONASS measurement reference time
12	U4	bdsTOW	-	ms	BeiDou measurement reference time
16	U1[4]	reserved1	-	-	Reserved
20	U4	qzssTOW	-	ms	QZSS measurement reference time
24	U2	gpsTOWacc	2^-4	ms	GPS measurement reference time accuracy (0xffff = > 4s)
26	U2	gloTOWacc	2^-4	ms	GLONASS measurement reference time accuracy (0xffff = > 4s)
28	U2	bdsTOWacc	2^-4	ms	BeiDou measurement reference time accuracy (0xffff = > 4s)
30	U1[2]	reserved2	-	-	Reserved
32	U2	qzssTOWacc	2^-4	ms	QZSS measurement reference time accuracy (0xffff = > 4s)
34	U1	numSV	-	-	Number of satellites in repeated block
35	U1	flags	-	-	Flags
bits 1...0	$U_{:2}$	towSet	-	-	TOW set (0 = no, 1 or 2 = yes)
36	U1[8]	reserved3	-	-	Reserved
Start of repeated group (numSV times)					
44 + n·24	U1	gnssId	-	-	GNSS ID (see Satellite Numbering)
45 + n·24	U1	svId	-	-	Satellite ID (see Satellite Numbering)
46 + n·24	U1	cNo	-	-	carrier noise ratio (0..63)
47 + n·24	U1	mpathIndic	-	-	multipath index (according to [1]) (0 = not measured, 1 = low, 2 = medium, 3 = high)
48 + n·24	I4	dopplerMS	0.04	m/s	Doppler measurement
52 + n·24	I4	dopplerHz	0.2	Hz	Doppler measurement

56 + n·24	U2	wholeChips	-	-	whole value of the code phase measurement (0..1022 for GPS)
58 + n·24	U2	fracChips	-	-	fractional value of the code phase measurement (0..1023)
60 + n·24	U4	codePhase	2^-21	ms	Code phase
64 + n·24	U1	intCodePhase	-	ms	Integer (part of the) code phase
65 + n·24	U1	pseuRangeRMSErr	-	-	pseudorange RMS error index (according to [1]) (0..63)
66 + n·24	U1[2]	reserved4	-	-	Reserved
End of repeated group (numSV times)					

3.16.6 UBX-RXM-PMREQ (0x02 0x41)

3.16.6.1 Power management request

Message	**UBX-RXM-PMREQ** **Power management request**					
Type	Command					
Comment	This message requests a power management related task of the receiver.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x02	0x41	16	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	version	-	-	Message version (0x00 for this version)
1	U1[3]	reserved0	-	-	Reserved
4	U4	duration	-	ms	Duration of the requested task. The maximum supported value is 12 days. Set to 0 to wait for a wakeup signal on a pin
8	X4	flags	-	-	task flags
bit 1	U:1	backup	-	-	Set to 1 to put the receiver into backup mode
bit 2	U:1	force	-	-	Set to 1 for minimum power consumption
12	X4	wakeupSources	-	-	Configure pins to wake up the receiver. The receiver wakes up if there is either a falling or a rising edge on one of the configured pins.
bit 3	U:1	uartrx	-	-	Wake up the receiver if there is an edge on the UART RX pin
bit 5	U:1	extint0	-	-	Wake up the receiver if there is an edge on the EXTINT0 pin
bit 6	U:1	extint1	-	-	Wake up the receiver if there is an edge on the EXTINT1 pin
bit 7	U:1	spics	-	-	Wake up the receiver if there is an edge on the SPI CS pin

3.16.7 UBX-RXM-RLM (0x02 0x59)

3.16.7.1 Galileo SAR short-RLM report

Message	**UBX-RXM-RLM** **Galileo SAR short-RLM report**					
Type	Output					
Comment	This message contains the contents of any Galileo Search and Rescue (SAR) Short Return Link Message detected by the receiver.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x02	0x59	16	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x00 for this version)
1	U1	`type`	-	-	Message type (0x01 for Short-RLM)
2	U1	`svId`	-	-	Identifier of transmitting satellite (see Satellite Numbering)
3	U1	`reserved0`	-	-	Reserved
4	U1[8]	`beacon`	-	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.
12	U1	`message`	-	-	Message code (4 bits)
13	U1[2]	`params`	-	-	Parameters (16 bits), with bytes ordered by earliest transmitted (most significant) first.
15	U1	`reserved1`	-	-	Reserved

3.16.7.2 Galileo SAR long-RLM report

Message	**UBX-RXM-RLM** **Galileo SAR long-RLM report**					
Type	Output					
Comment	This message contains the contents of any Galileo Search and Rescue (SAR) Long Return Link Message detected by the receiver.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x02	0x59	28	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x00 for this version)
1	U1	`type`	-	-	Message type (0x02 for Long-RLM)
2	U1	`svId`	-	-	Identifier of transmitting satellite (see Satellite Numbering)
3	U1	`reserved0`	-	-	Reserved
4	U1[8]	`beacon`	-	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.
12	U1	`message`	-	-	Message code (4 bits)
13	U1[12]	`params`	-	-	Parameters (96 bits), with bytes ordered by earliest transmitted (most significant) first.
25	U1[3]	`reserved1`	-	-	Reserved

3.16.8 UBX-RXM-SFRBX (0x02 0x13)

3.16.8.1 Broadcast navigation data subframe

Message	**UBX-RXM-SFRBX** **Broadcast navigation data subframe**					
Type	Output					
Comment	This message reports a complete subframe of broadcast navigation data decoded from a single signal. The number of data words reported in each message depends on the nature of the signal.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x02	0x13	8 + numWords·4	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`gnssId`	-	-	GNSS identifier (see Satellite Numbering)
1	U1	`svId`	-	-	Satellite identifier (see Satellite Numbering)
2	U1	`sigId`	-	-	Signal identifier (see Signal Identifiers)
3	U1	`freqId`	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
4	U1	`numWords`	-	-	The number of data words contained in this message (up to 10, for currently supported signals)
5	U1	`chn`	-	-	The tracking channel number the message was received on
6	U1	`version`	-	-	Message version, (0x02 for this version)
7	U1	`reserved0`	-	-	Reserved
Start of repeated group (`numWords` times)					
8 + n·4	U4	`dwrd`	-	-	The data words
End of repeated group (`numWords` times)					

3.17 UBX-SEC (0x27)

The messages in the UBX-SEC class are used for security features of the receiver.

3.17.1 UBX-SEC-UNIQID (0x27 0x03)

3.17.1.1 Unique chip ID

Message	**UBX-SEC-UNIQID** **Unique chip ID**					
Type	Output					
Comment	This message is used to retrieve a unique chip identifier (48 bits, 6 bytes).					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x27	0x03	10	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`version`	-	-	Message version (0x02 for this version)
1	U1[3]	`reserved0`	-	-	Reserved
4	U1[6]	`uniqueId`	-	-	Unique chip ID

3.18 UBX-TIM (0x0d)

The messages in the UBX-TIM class are used to output timing information from the receiver, such as time pulse and time mark measurements.

3.18.1 UBX-TIM-TM2 (0x0d 0x03)

3.18.1.1 Time mark data

Message	**UBX-TIM-TM2** **Time mark data**
Type	Periodic/polled
Comment	This message contains information for high precision time stamping / pulse counting. The delay figures and timebase given in CFG-TP Configuration Items are also applied to the time results output in this message.

Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0d	0x03	28	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	ch	-	-	Channel (i.e. EXTINT) upon which the pulse was measured
1	X1	flags	-	-	Bitmask
bit 0	U:1	mode	-	-	• 0=single • 1=running
bit 1	U:1	run	-	-	• 0=armed • 1=stopped
bit 2	U:1	newFallingEdge	-	-	New falling edge detected
bits 4...3	U:2	timeBase	-	-	• 0=Time base is Receiver time • 1=Time base is GNSS time (the system according to the configuration in CFG-TP Configuration Items for tpIdx=0) • 2=Time base is UTC (the variant according to the configuration in CFG-NAVSPG-* configuration items)
bit 5	U:1	utc	-	-	• 0=UTC not available • 1=UTC available
bit 6	U:1	time	-	-	• 0=Time is not valid • 1=Time is valid (Valid GNSS fix)
bit 7	U:1	newRisingEdge	-	-	New rising edge detected
2	U2	count	-	-	Rising edge counter
4	U2	wnR	-	-	Week number of last rising edge
6	U2	wnF	-	-	Week number of last falling edge
8	U4	towMsR	-	ms	Tow of rising edge
12	U4	towSubMsR	-	ns	Millisecond fraction of tow of rising edge in nanoseconds
16	U4	towMsF	-	ms	Tow of falling edge
20	U4	towSubMsF	-	ns	Millisecond fraction of tow of falling edge in nanoseconds

24	U4	accEst	-	ns	Accuracy estimate

3.18.2 UBX-TIM-TP (0x0d 0x01)

3.18.2.1 Time pulse time data

Message	**UBX-TIM-TP** **Time pulse time data**					
Type	Periodic/polled					
Comment	This message contains information on the timing of the next pulse at the TIMEPULSE0 output. The recommended configuration when using this message is to set both the measurement rate (CFG-RATE) and the timepulse frequency (CFG-TP) to 1 Hz.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0d	0x01	16	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U4	towMS	-	ms	Time pulse time of week according to time base
4	U4	towSubMS	2^-32	ms	Submillisecond part of towMS
8	I4	qErr	-	ps	Quantization error of time pulse
12	U2	week	-	weeks	Time pulse week number according to time base
14	X1	flags	-	-	Flags
bit 0	U:1	timeBase	-	-	• 0 = Time base is GNSS • 1 = Time base is UTC
bit 1	U:1	utc	-	-	• 0 = UTC not available • 1 = UTC available
bits 3...2	U:2	raim	-	-	(T)RAIM information • 0 = Information not available • 1 = Not active • 2 = Active
bit 4	U:1	qErrInvalid	-	-	• 0 = Quantization error valid • 1 = Quantization error invalid
15	X1	refInfo	-	-	Time reference information
bits 3...0	U:4	timeRefGnss	-	-	GNSS reference information. Only valid if time base is GNSS (timeBase=0). • 0 = GPS • 1 = GLONASS • 2 = BeiDou • 3 = Galileo • 4 = NavIC • 15 = Unknown
bits 7...4	U:4	utcStandard	-	-	UTC standard identifier. Only valid if time base is UTC (timeBase=1). • 0 = Information not available • 1 = Communications Research Laboratory (CRL), Tokyo, Japan • 2 = National Institute of Standards and Technology (NIST) • 3 = U.S. Naval Observatory (USNO) • 4 = International Bureau of Weights and Measures (BIPM) • 5 = European laboratories • 6 = Former Soviet Union (SU)

- 7 = National Time Service Center (NTSC), China
- 8 = National Physics Laboratory India (NPLI)
- 15 = Unknown

3.18.3 UBX-TIM-VRFY (0x0d 0x06)

3.18.3.1 Sourced time verification

Message	**UBX-TIM-VRFY** **Sourced time verification**					
Type	Periodic/polled					
Comment	This message contains verification information about previous time received via assistance data or from RTC.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x0d	0x06	20	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	I4	`itow`	-	ms	integer millisecond tow received by source
4	I4	`frac`	-	ns	sub-millisecond part of tow
8	I4	`deltaMs`	-	ms	integer milliseconds of delta time (current time minus sourced time)
12	I4	`deltaNs`	-	ns	Sub-millisecond part of delta time
16	U2	`wno`	-	week	Week number
18	X1	`flags`	-	-	Flags
bits 2...0	$U_{:3}$	`src`	-	-	Aiding time source • 0 = no time aiding done • 2 = source was RTC • 3 = source was assistance data
19	U1	`reserved0`	-	-	Reserved

3.19 UBX-UPD (0x09)

The messages in the UBX-UPD class are used to download a firmware to the receiver and to update the firmware on the flash.

3.19.1 UBX-UPD-SOS (0x09 0x14)

3.19.1.1 Poll backup restore status

Message	**UBX-UPD-SOS** **Poll backup restore status**					
Type	Poll request					
Comment	Sending this (empty) message to the receiver results in the receiver returning a *System restored from backup* message as defined below.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x09	0x14	0	*see below*	CK_A CK_B
Payload	This message has no payload.					

3.19.1.2 Create backup in flash

Message	**UBX-UPD-SOS** **Create backup in flash**					
Type	Command					
Comment	The host can send this message in order to save part of the battery-backed memory (BBR) in a file in the flash file system. The feature is designed in order to emulate the presence of the backup battery even if it is not present; the host can issue the save on shutdown command before switching off the device supply. It is recommended to issue a GNSS stop command using UBX-CFG-RST before in order to keep the BBR memory content consistent.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x09	0x14	4	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`cmd`	-	-	Command (must be 0)
1	U1[3]	`reserved0`	-	-	Reserved

3.19.1.3 Clear backup in flash

Message	**UBX-UPD-SOS** **Clear backup in flash**					
Type	Command					
Comment	The host can send this message in order to erase the backup file present in flash. It is recommended that the clear operation is issued after the host has received the notification that the memory has been restored after a reset. Alternatively the host can parse the startup string *Restored data saved on shutdown* or poll the UBX-UPD-SOS message for obtaining the status.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x09	0x14	4	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`cmd`	-	-	Command (must be 1)
1	U1[3]	`reserved0`	-	-	Reserved

3.19.1.4 Backup creation acknowledge

Message	**UBX-UPD-SOS** **Backup creation acknowledge**					
Type	Output					
Comment	The message is sent from the device as confirmation of creation of a backup file in flash. The host can safely shut down the device after having received this message.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x09	0x14	8	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`cmd`	-	-	Command (must be 2)
1	U1[3]	`reserved0`	-	-	Reserved
4	U1	`response`	-	-	• 0 = Not acknowledged • 1 = Acknowledged
5	U1[3]	`reserved1`	-	-	Reserved

3.19.1.5 System restored from backup

Message	**UBX-UPD-SOS** **System restored from backup**					
Type	Output					
Comment	The message is sent from the device to notify the host the BBR has been restored from a backup file in the flash file sysetem. The host should clear the backup file after receiving this message. If the UBX-UPD-SOS message is polled, this message will be resent.					
Message structure	*Header*	*Class*	*ID*	*Length (Bytes)*	*Payload*	*Checksum*
	0xb5 0x62	0x09	0x14	8	*see below*	CK_A CK_B

Payload description:

Byte offset	*Type*	*Name*	*Scale*	*Unit*	*Description*
0	U1	`cmd`	-	-	Command (must be 3)
1	U1[3]	`reserved0`	-	-	Reserved
4	U1	`response`	-	-	• 0 = Unknown • 1 = Failed restoring from backup • 2 = Restored from backup • 3 = Not restored (no backup)
5	U1[3]	`reserved1`	-	-	Reserved

4 Configuration interface

This chapter describes the receiver configuration interface.

4.1 Configuration database

The configuration database in the receiver's RAM holds the current configuration, which is used by the receiver at run-time. It is constructed on startup of the receiver from several sources of configuration. These sources are called *Configuration Layers*. The current configuration is called the *RAM Layer*. Any configuration in any layer is organized as *Configuration Items*, where each Configuration Item is referenced to by a unique *Configuration Key ID* and holds a single *Configuration Value*.

4.2 Configuration items

The following figure shows the structure of a *Configuration Item*, which consists of a *(Configuration) Key ID* and its *(Configuration) Value*:

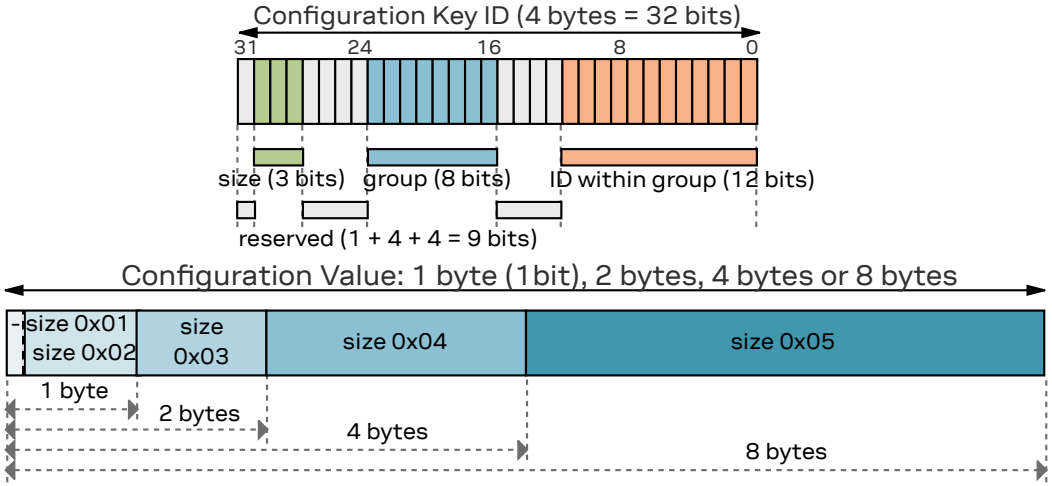

A Configuration Key ID is a 32-bit integer value, which is split into the following parts:

- Bit 31: Currently unused. Reserved for future use.
- Bits 30...28: Three bits that indicate the storage size of a Configuration Value (range 0x01-0x05, see below)
- Bits 27...24: Currently unused. Reserved for future use.
- Bits 23...16: Eight bits that define a unique group ID (range 0x01-0xfe)
- Bits 15...12: Currently unused. Reserved for future use.
- Bits 11...0: Twelve bits that define a unique item ID within a group (range 0x001-0xffe)

The entire 32-bit value is the unique Key ID, which uniquely identifies a particular item. The numeric representation of the Key ID uses the lower-case hexadecimal format, such as `0x20c400a1`. An easier, more readable text representation uses the form CFG-*GROUP-ITEM*. This is also referred to as the *(Configuration) Key Name*.

Supported storage size identifiers (bits 30...28 of the Key ID) are:

- 0x01: one bit (the actual storage used is one byte, but only the least significant bit is used)
- 0x02: one byte
- 0x03: two bytes
- 0x04: four bytes

- 0x05: eight bytes

Each Configuration Item is of a certain type, which defines the interpretation of the raw binary data (see also UBX data types):

- U1, U2, U4, U8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths
- I1, I2, I4, I8: signed little-endian, two's complement integers of 8-, 16-, 32- and 64-bit widths
- R4, R8: IEEE 754 single (32-bit) and double (64-bit) precision floats
- E1, E2, E4: unsigned little-endian enumeration of 8-, 16-, and 32-bit widths
- X1, X2, X4, X8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths for bitfields and other binary data, such as strings
- L: single-bit boolean (true = 1, false = 0), stored as U1

4.3 Configuration layers

Several *Configuration Layers* exist. They are separate sources of Configuration Items. Some of the layers are read-only and others are modifiable. Layers are organized in terms of priority. Values in a high-priority layer will replace values stored in low-priority layer. On startup of the receiver all configuration layers are read and the items within each layer are stacked up in order to create the *Current Configuration*, which is used by the receiver at run-time.

The following configuration layers are available (in order of priority, highest priority first):

- **RAM**: This layer contains items stored in volatile RAM. This is the Current Configuration. The value of any item can be set by the user at run-time (see UBX protocol interface) and it will become effective immediately.
- **BBR**: This layer contains items stored in the battery-backed RAM. The contents in this layer are preserved as long as a battery backup supply is provided during off periods. The value of any item can be set by the user at run-time (see UBX protocol interface) and it will become effective upon a restart of the receiver.
- **Flash**: This layer contains items stored permanently in the external flash memory. This layer is only available if there is a usable external flash memory. The value of any item can be set by the user at run-time (see UBX protocol interface) and it will become effective upon a restart of the receiver.
- **Default:** This layer contains all items known to the running receiver software and their hard-coded default values. Data in this layer is not writable.

The stacking of the configuration items from the different layers (sources) in order to construct the Current Configuration in the RAM Layer is depicted in the following figure. For each defined item, i.e. for each item in the Default Layer, the receiver software goes through the layers above and stacks all the found items on top. Some items may not be present in every layer. The result is the RAM Layer filled with all configuration items given Configuration Values coming from the highest priority layer the corresponding item was present. In the example figure below bold text indicates the source of the value in the Current Configuration (the RAM Layer). Empty boxes mean that the layer can hold the item but that it is not currently stored there. Boxes with text mean that an item is currently stored in the layer.

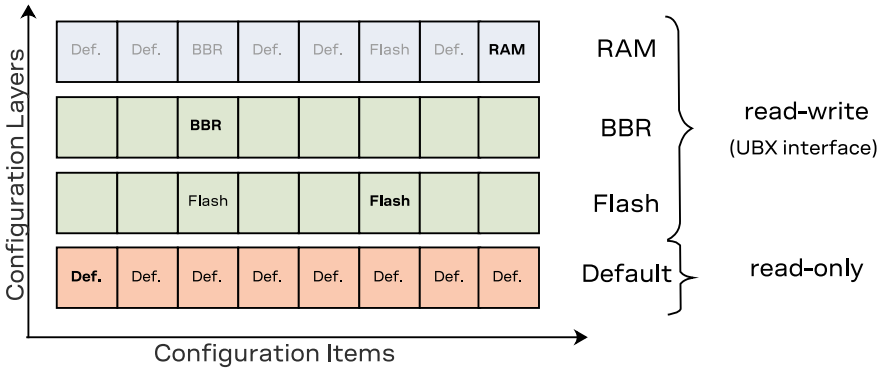

In the example figure above several items (e.g. the first item) are only set in the Default Layer and hence the default value ends up in Current Configuration in the RAM Layer. The third item is present in the Default, Flash and BBR Layers. The value from the BBR Layer has the highest priority and therefore it ends up in the RAM Layer. On the other hand, the default value of the sixth item is changed by the value in the Flash Layer. The value of the last item is changed in the RAM Layer only, i.e. upon startup the value in the RAM Layer was the value from the Default Layer, but the user has changed the value in the RAM Layer at run-time.

4.4 Configuration interface access

The following sections describe the existing interfaces to access the Configuration Database.

4.4.1 UBX protocol interface

The following UBX protocol messages are available to access the Configuration Database:

- UBX-CFG-VALGET to read configuration items from the database
- UBX-CFG-VALSET to set configuration items in the database
- UBX-CFG-VALDEL to delete configuration items from the database

4.5 Configuration data

Configuration data is the binary representation of a list of Key ID and Value pairs. It is formed by concatenating keys (U4 values) and values (variable type) without any padding. This format is used in the UBX-CFG-VALSET and UBX-CFG-VALGET messages.

The figure below shows an example. The four Items (Key ID - Value pairs) on the left use the four fundamental storage sizes: one byte (L, U1, I1, E1 and X1 types), 2 bytes (U2, I2, E2 and X2 types), four byte (U4, I4, E4, X4 and R4 types) and eight bytes (U8, I8, X8 and R8 types). When concatenated (right) the Key IDs and Values are not aligned and there is no padding.

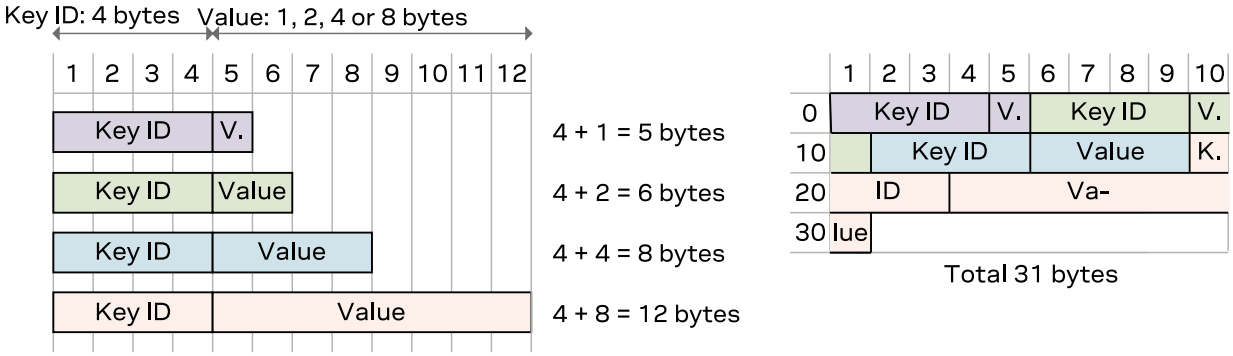

Note that this is an arbitrary example and any number of items of any value storage size can be concatenated the same way.

4.6 Configuration transactions

The configuration interface supports two mechanisms of configuration: the first is a transactionless mechanism where sent configuration changes are applied immediately to the configuration layer(s) requested. The second mechanism is a configuration transaction.

A transaction offers a way of queuing multiple configuration changes. It is particularly useful where different configuration keys depend on each other in such a way that sending one before the other can cause the configuration to be rejected. The queued configuration change requests are stored then checked collectively before being applied to the receiver.

A transaction can have the following states described in the figure below.

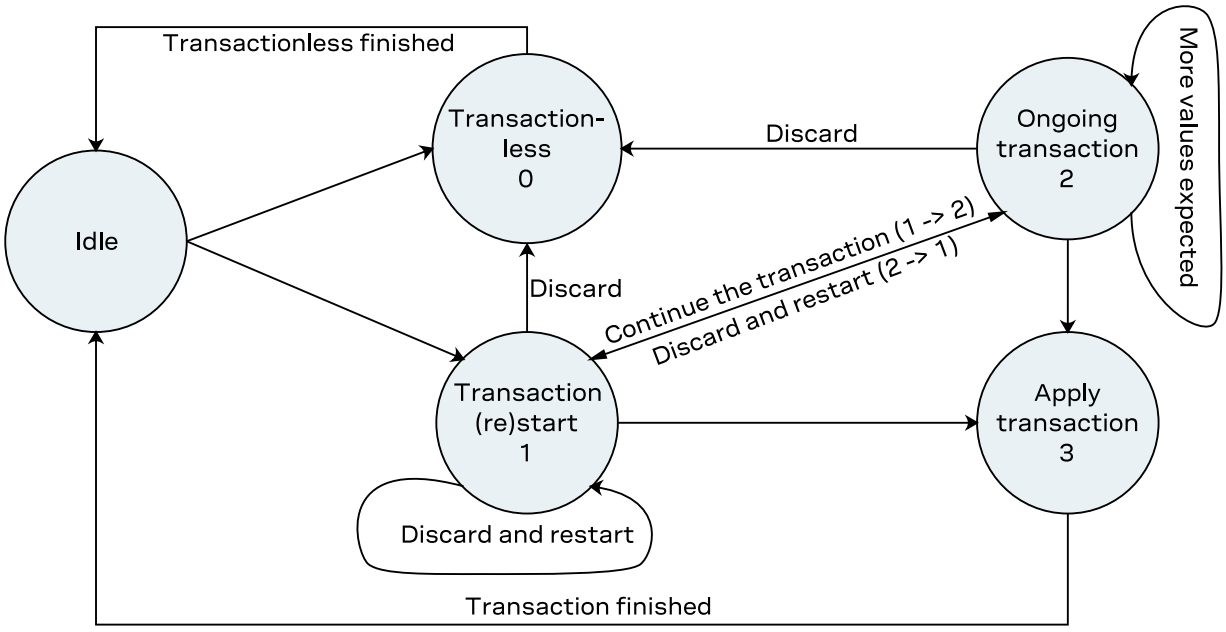

When starting a transaction, the user must specify the layer(s) the changes will be applied to. This list of configuration layer(s) must be observed throughout the transaction states. Modifying the configuration layer(s) mid-transaction will cause the transaction to be aborted and no queued changes will be applied.

In the start transaction state, the receiver will lock the configuration database so that changes from another entity or message cannot be applied. It is possible to send a configuration key-value pairs with the start transaction state. These will be queued waiting to be applied.

In the ongoing state, a configuration key and value must be sent. The receiver will abort the transaction and not apply any changes if this condition is violated. Key-value pairs sent in the ongoing state will be queued waiting to be applied.

In the apply state, the queued changes will be collectively checked and applied to the requested configuration layer(s). Note that any additional key-value pairs sent within the apply state will be ignored.

Note that a transaction can only come from a single source, a UBX-CFG-VALSET message or a UBX-CFG-VALDEL message. This means that in any given transaction it is not possible to mix a delete

and a save request. Starting a transaction from a different source will abort the current transaction and no queued changes would be applied.

Refer to UBX-CFG-VALSET and UBX-CFG-VALDEL messages for a detailed description of how to set up a configuration transaction, its limitations and conditions that would cause the transaction to be rejected.

4.7 Configuration reset behavior

The RAM layer is always rebuilt from the layers below when the chip's processor comes out from reset. When using UBX-CFG-RST the processor goes through a reset cycle with these reset types (`resetMode` field):

- `0x00` hardware reset (watchdog) immediately
- `0x01` controlled software reset
- `0x04` hardware reset (watchdog) after shutdown

See section Forcing a receiver reset in the integration manual.

4.8 Configuration overview

Group	Description
CFG-ANA	AssistNow Autonomous and Offline configuration
CFG-BATCH	Batched output configuration
CFG-BDS	BeiDou system configuration
CFG-HW	Hardware configuration
CFG-I2C	Configuration of the I2C interface
CFG-I2CINPROT	Input protocol configuration of the I2C interface
CFG-I2COUTPROT	Output protocol configuration of the I2C interface
CFG-INFMSG	Information message configuration
CFG-ITFM	Jamming and interference monitor configuration
CFG-MOT	Motion detector configuration
CFG-MSGOUT	Message output configuration
CFG-NAVSPG	Standard precision navigation configuration
CFG-NMEA	NMEA protocol configuration
CFG-ODO	Odometer and low-speed course over ground filter configuration
CFG-PM	Configuration for receiver power management
CFG-QZSS	QZSS system configuration
CFG-RATE	Navigation and measurement rate configuration
CFG-RINV	Remote inventory
CFG-SBAS	SBAS configuration
CFG-SEC	Security configuration
CFG-SIGNAL	Satellite systems (GNSS) signal configuration
CFG-SPI	Configuration of the SPI interface
CFG-SPIINPROT	Input protocol configuration of the SPI interface
CFG-SPIOUTPROT	Output protocol configuration of the SPI interface
CFG-TP	Timepulse configuration

Group	Description
CFG-TXREADY	TX ready configuration
CFG-UART1	Configuration of the UART1 interface
CFG-UART1INPROT	Input protocol configuration of the UART1 interface
CFG-UART1OUTPROT	Output protocol configuration of the UART1 interface

4.9 Configuration reference

4.9.1 CFG-ANA: AssistNow Autonomous and Offline configuration

Configuration for the AssistNow Autonomous feature. See section AssistNow Autonomous in the integration manual for feature details.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-ANA-USE_ANA	0x10230001	L	-	-	Use AssistNow Autonomous
CFG-ANA-ORBMAXERR	0x30230002	U2	-	m	Maximum acceptable (modeled) orbit error
Range is from 5 to 1000.					

Table 5: CFG-ANA configuration items

4.9.2 CFG-BATCH: Batched output configuration

Use this group to configure the data batching feature which allows position fixes to be stored in the RAM of the receiver to be retrieved later in one batch.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-BATCH-ENABLE	0x10260013	L	-	-	Enable data batching
Enable the feature. Note that it will do nothing unless a positive value is set for CFG-BATCH-MAXENTRIES.					
CFG-BATCH-PIOENABLE	0x10260014	L	-	-	Enable PIO notification
Enable PIO notification when the buffer fill level exceeds WARNTHRS.					
CFG-BATCH-MAXENTRIES	0x30260015	U2	-	-	Maximum entries in buffer
Size of buffer in number of epochs to store. The firmware will reject this configuration if it exceeds the available memory.					
CFG-BATCH-WARNTHRS	0x30260016	U2	-	-	Buffer fill level warning threshold
Buffer fill level that triggers PIO notification, in number of epochs stored.					
CFG-BATCH-PIOACTIVELOW	0x10260018	L	-	-	PIO is active low
If this is set the PIO selected with CFG-BATCH-PIOID will be driven low when the buffer fill level reaches WARNTHRS. Otherwise the polarity of the PIO will be the opposite.					
CFG-BATCH-PIOID	0x20260019	U1	-	-	PIO ID for buffer level notification
PIO that is used for buffer fill level notification. It must not be assigned to a different function.					
CFG-BATCH-EXTRAPVT	0x1026001a	L	-	-	Include extra PVT data
Include additional PVT information in UBX-LOG-BATCH messages. If not selected only basic information is included. The fields `iTOW`, `tAcc`, `numSV`, `hMSL`, `vAcc`, `velN`, `velE`, `velD`, `sAcc`, `headAcc` and `pDOP` in UBX-LOG-BATCH are only valid if this flag is set.					
CFG-BATCH-EXTRAODO	0x1026001b	L	-	-	Include odometer data

Configuration item	Key ID	Type	Scale	Unit	Description
The fields `distance`, `totalDistance` and `distanceStd` in UBX-LOG-BATCH are only valid if this flag is set.					

Table 6: CFG-BATCH configuration items

4.9.3 CFG-BDS: BeiDou system configuration

Note that enabling and disabling of individual GNSS is done via the CFG-SIGNAL configuration group.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-BDS-USE_GEO_PRN	`0x10340014`	L	-	-	Use BeiDou geostationary satellites (PRN 1-5 and 59-63)

Table 7: CFG-BDS configuration items

4.9.4 CFG-HW: Hardware configuration

Hardware configuration settings.

Note that not all settings are available for all products. See the data sheet for supported features.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-HW-ANT_CFG_VOLTCTRL	`0x10a3002e`	L	-	-	Active antenna voltage control flag
Enable active antenna voltage control flag. Used by EXT and MADC engines.					
CFG-HW-ANT_CFG_SHORTDET	`0x10a3002f`	L	-	-	Short antenna detection flag
Enable short antenna detection flag. Used by EXT and MADC engines.					
CFG-HW-ANT_CFG_SHORTDET_POL	`0x10a30030`	L	-	-	Short antenna detection polarity
Set to true if polarity of the antenna short detection is active low. Used by EXT engine.					
CFG-HW-ANT_CFG_OPENDET	`0x10a30031`	L	-	-	Open antenna detection flag
Enable open antenna detection flag. Used by EXT and MADC engines.					
CFG-HW-ANT_CFG_OPENDET_POL	`0x10a30032`	L	-	-	Open antenna detection polarity
Set to true if polarity of the antenna open detection is active low. Used by EXT engine.					
CFG-HW-ANT_CFG_PWRDOWN	`0x10a30033`	L	-	-	Power down antenna flag
Enable power down antenna logic in the event of antenna short circuit. CFG-HW-ANT_CFG_SHORTDET must be enabled to use this feature. Used by EXT and MADC engines.					
CFG-HW-ANT_CFG_PWRDOWN_POL	`0x10a30034`	L	-	-	Power down antenna logic polarity
Set to true if polarity of the antenna power down logic is active high. Used by EXT and MADC engines.					
CFG-HW-ANT_CFG_RECOVER	`0x10a30035`	L	-	-	Automatic recovery from short state flag
Enable automatic recovery from short state. Used by EXT and MADC engines.					
CFG-HW-ANT_SUP_SWITCH_PIN	`0x20a30036`	U1	-	-	ANT1 PIO number
Antenna Switch (ANT1) PIO number. Used by EXT and MADC engines.					
CFG-HW-ANT_SUP_SHORT_PIN	`0x20a30037`	U1	-	-	ANT0 PIO number
Antenna Short (ANT0) PIO number. Used by EXT engine.					
CFG-HW-ANT_SUP_OPEN_PIN	`0x20a30038`	U1	-	-	ANT2 PIO number
Antenna Switch (ANT2) PIO number. Used by EXT engine.					
CFG-HW-ANT_SUP_ENGINE	`0x20a30054`	E1	-	-	Antenna supervisor engine selection
Select the engine used to evaluate antenna state. The EXT engine uses an external comparator for current measurement. The MADC engine uses built-in measurement ADC and requires only a shunt resistor for current measurement. The MADC engine is available in u-blox generation 9 receivers. See Table 9 below for a list of possible constants for this item.					

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-HW-ANT_SUP_SHORT_THR	0x20a30055	U1	-	mV	Antenna supervisor MADC engine short detection threshold
Threshold above which antenna short is detected. Used by MADC engine.					
CFG-HW-ANT_SUP_OPEN_THR	0x20a30056	U1	-	mV	Antenna supervisor MADC engine open detection threshold
Threshold below which antenna open/disconnected is detected. Used by MADC engine.					
CFG-HW-RF_LNA_MODE	0x20a30057	E1	-	-	Mode for internal LNA
Sets the operating mode for the RF LNA (all RFs). Lowgain or bypass options can be used if there is already a external LNA in front of the chip with sufficient gain. See Table 10 below for a list of possible constants for this item.					

Table 8: CFG-HW configuration items

Constant	Value	Description
EXT	0	Use the EXT engine.
MADC	1	Use the MADC engine.

Table 9: Constants for CFG-HW-ANT_SUP_ENGINE

Constant	Value	Description
NORMAL	0	Normal operation, internal LNA enabled at full gain
LOWGAIN	1	LNA enabled in low gain mode
BYPASS	2	Bypass LNA

Table 10: Constants for CFG-HW-RF_LNA_MODE

4.9.5 CFG-I2C: Configuration of the I2C interface

Settings needed to configure the I2C communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-I2C-ADDRESS	0x20510001	U1	-	-	I2C slave address of the receiver (7 bits)
CFG-I2C-EXTENDEDTIMEOUT	0x10510002	L	-	-	Flag to disable timeouting the interface after 1.5 s
CFG-I2C-ENABLED	0x10510003	L	-	-	Flag to indicate if the I2C interface should be enabled

Table 11: CFG-I2C configuration items

4.9.6 CFG-I2CINPROT: Input protocol configuration of the I2C interface

Input protocol enable flags of the I2C interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-I2CINPROT-UBX	0x10710001	L	-	-	Flag to indicate if UBX should be an input protocol on I2C
CFG-I2CINPROT-NMEA	0x10710002	L	-	-	Flag to indicate if NMEA should be an input protocol on I2C

Table 12: CFG-I2CINPROT configuration items

4.9.7 CFG-I2COUTPROT: Output protocol configuration of the I2C interface

Output protocol enable flags of the I2C interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-I2COUTPROT-UBX	0x10720001	L	-	-	Flag to indicate if UBX should be an output protocol on I2C

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-I2COUTPROT-NMEA	0x10720002	L	-	-	Flag to indicate if NMEA should be an output protocol on I2C

Table 13: CFG-I2COUTPROT configuration items

4.9.8 CFG-INFMSG: Information message configuration

Information message configuration for the NMEA and UBX protocols.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-INFMSG-UBX_I2C	0x20920001	X1	-	-	Information message enable flags for the UBX protocol on the I2C interface
See Table 15 below for a list of possible constants for this item.					
CFG-INFMSG-UBX_UART1	0x20920002	X1	-	-	Information message enable flags for the UBX protocol on the UART1 interface
See Table 15 below for a list of possible constants for this item.					
CFG-INFMSG-UBX_SPI	0x20920005	X1	-	-	Information message enable flags for the UBX protocol on the SPI interface
See Table 15 below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_I2C	0x20920006	X1	-	-	Information message enable flags for the NMEA protocol on the I2C interface
See Table 15 below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_UART1	0x20920007	X1	-	-	Information message enable flags for the NMEA protocol on the UART1 interface
See Table 15 below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_SPI	0x2092000a	X1	-	-	Information message enable flags for the NMEA protocol on the SPI interface
See Table 15 below for a list of possible constants for this item.					

Table 14: CFG-INFMSG configuration items

Constant	Value	Description
ERROR	0x01	Enable ERROR information messages
WARNING	0x02	Enable WARNING information messages
NOTICE	0x04	Enable NOTICE information messages
TEST	0x08	Enable TEST information messages
DEBUG	0x10	Enable DEBUG information messages

Table 15: Constants for CFG-INFMSG-UBX_I2C, CFG-INFMSG-UBX_UART1, CFG-INFMSG-UBX_SPI, CFG-INFMSG-NMEA_I2C, CFG-INFMSG-NMEA_UART1, CFG-INFMSG-NMEA_SPI

4.9.9 CFG-ITFM: Jamming and interference monitor configuration

Configuration of jamming and interference monitor.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-ITFM-BBTHRESHOLD	0x20410001	U1	-	-	Broadband jamming detection threshold
CFG-ITFM-CWTHRESHOLD	0x20410002	U1	-	-	CW jamming detection threshold
CFG-ITFM-ENABLE	0x1041000d	L	-	-	Enable interference detection
CFG-ITFM-ANTSETTING	0x20410010	E1	-	-	Antenna setting
See Table 17 below for a list of possible constants for this item.					
CFG-ITFM-ENABLE_AUX	0x10410013	L	-	-	Scan auxiliary bands

Configuration item	Key ID	Type	Scale	Unit	Description
Set to true to scan auxiliary bands. Supported on u-blox 8 / u-blox M8 only, otherwise ignored.					

Table 16: CFG-ITFM configuration items

Constant	Value	Description
UNKNOWN	0	Unknown
PASSIVE	1	Passive
ACTIVE	2	Active

Table 17: Constants for CFG-ITFM-ANTSETTING

4.9.10 CFG-MOT: Motion detector configuration

The items in this group specify the parameters used for the internal receiver motion detector. The platform motion is assessed by combining the detected motion of different detectors looking at specific data types (i.e. GNSS, gyroscopes, accelerometers, wheel ticks). The decision thresholds of the internal detectors can be specified using the configuration items in this group.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MOT-GNSSSPEED_THRS	0x20250038	U1	0.01	m/s	GNSS speed threshold below which platform is considered as stationary (a.k.a. static hold threshold) Set this parameter to 0 for firmware default value or behavior.
CFG-MOT-GNSSDIST_THRS	0x3025003b	U2	-	-	Distance above which GNSS-based stationary motion is exit (a.k.a. static hold distance threshold) Set this parameter to 0 for firmware default value or behavior.

Table 18: CFG-MOT configuration items

4.9.11 CFG-MSGOUT: Message output configuration

For each message and port a separate output rate (per second, per epoch) can be configured.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_DTM_I2C	0x209100a6	U1	-	-	Output rate of the NMEA-GX-DTM message on port I2C
CFG-MSGOUT-NMEA_ID_DTM_SPI	0x209100aa	U1	-	-	Output rate of the NMEA-GX-DTM message on port SPI
CFG-MSGOUT-NMEA_ID_DTM_UART1	0x209100a7	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART1
CFG-MSGOUT-NMEA_ID_GBS_I2C	0x209100dd	U1	-	-	Output rate of the NMEA-GX-GBS message on port I2C
CFG-MSGOUT-NMEA_ID_GBS_SPI	0x209100e1	U1	-	-	Output rate of the NMEA-GX-GBS message on port SPI
CFG-MSGOUT-NMEA_ID_GBS_UART1	0x209100de	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART1
CFG-MSGOUT-NMEA_ID_GGA_I2C	0x209100ba	U1	-	-	Output rate of the NMEA-GX-GGA message on port I2C
CFG-MSGOUT-NMEA_ID_GGA_SPI	0x209100be	U1	-	-	Output rate of the NMEA-GX-GGA message on port SPI
CFG-MSGOUT-NMEA_ID_GGA_UART1	0x209100bb	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART1
CFG-MSGOUT-NMEA_ID_GLL_I2C	0x209100c9	U1	-	-	Output rate of the NMEA-GX-GLL message on port I2C

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_GLL_SPI	0x209100cd	U1	-	-	Output rate of the NMEA-GX-GLL message on port SPI
CFG-MSGOUT-NMEA_ID_GLL_UART1	0x209100ca	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART1
CFG-MSGOUT-NMEA_ID_GNS_I2C	0x209100b5	U1	-	-	Output rate of the NMEA-GX-GNS message on port I2C
CFG-MSGOUT-NMEA_ID_GNS_SPI	0x209100b9	U1	-	-	Output rate of the NMEA-GX-GNS message on port SPI
CFG-MSGOUT-NMEA_ID_GNS_UART1	0x209100b6	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART1
CFG-MSGOUT-NMEA_ID_GRS_I2C	0x209100ce	U1	-	-	Output rate of the NMEA-GX-GRS message on port I2C
CFG-MSGOUT-NMEA_ID_GRS_SPI	0x209100d2	U1	-	-	Output rate of the NMEA-GX-GRS message on port SPI
CFG-MSGOUT-NMEA_ID_GRS_UART1	0x209100cf	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART1
CFG-MSGOUT-NMEA_ID_GSA_I2C	0x209100bf	U1	-	-	Output rate of the NMEA-GX-GSA message on port I2C
CFG-MSGOUT-NMEA_ID_GSA_SPI	0x209100c3	U1	-	-	Output rate of the NMEA-GX-GSA message on port SPI
CFG-MSGOUT-NMEA_ID_GSA_UART1	0x209100c0	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART1
CFG-MSGOUT-NMEA_ID_GST_I2C	0x209100d3	U1	-	-	Output rate of the NMEA-GX-GST message on port I2C
CFG-MSGOUT-NMEA_ID_GST_SPI	0x209100d7	U1	-	-	Output rate of the NMEA-GX-GST message on port SPI
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	Output rate of the NMEA-GX-GST message on port UART1
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	Output rate of the NMEA-GX-GSV message on port I2C
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	Output rate of the NMEA-GX-GSV message on port SPI
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART1
CFG-MSGOUT-NMEA_ID_RLM_I2C	0x20910400	U1	-	-	Output rate of the NMEA-GX-RLM message on port I2C
CFG-MSGOUT-NMEA_ID_RLM_SPI	0x20910404	U1	-	-	Output rate of the NMEA-GX-RLM message on port SPI
CFG-MSGOUT-NMEA_ID_RLM_UART1	0x20910401	U1	-	-	Output rate of the NMEA-GX-RLM message on port UART1
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	Output rate of the NMEA-GX-RMC message on port I2C
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	Output rate of the NMEA-GX-RMC message on port SPI
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART1
CFG-MSGOUT-NMEA_ID_VLW_I2C	0x209100e7	U1	-	-	Output rate of the NMEA-GX-VLW message on port I2C
CFG-MSGOUT-NMEA_ID_VLW_SPI	0x209100eb	U1	-	-	Output rate of the NMEA-GX-VLW message on port SPI
CFG-MSGOUT-NMEA_ID_VLW_UART1	0x209100e8	U1	-	-	Output rate of the NMEA-GX-VLW message on port UART1

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	Output rate of the NMEA-GX-VTG message on port I2C
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	Output rate of the NMEA-GX-VTG message on port SPI
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART1
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	Output rate of the NMEA-GX-ZDA message on port I2C
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	Output rate of the NMEA-GX-ZDA message on port SPI
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART1
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYP_ UART1	0x209100ed	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYS_ UART1	0x209100f2	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYT_ UART1	0x209100f7	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART1
CFG-MSGOUT-UBX_MON_COMMS_ I2C	0x2091034f	U1	-	-	Output rate of the UBX-MON-COMMS message on port I2C
CFG-MSGOUT-UBX_MON_COMMS_ SPI	0x20910353	U1	-	-	Output rate of the UBX-MON-COMMS message on port SPI
CFG-MSGOUT-UBX_MON_COMMS_ UART1	0x20910350	U1	-	-	Output rate of the UBX-MON-COMMS message on port UART1
CFG-MSGOUT-UBX_MON_HW2_I2C	0x209101b9	U1	-	-	Output rate of the UBX-MON-HW2 message on port I2C
CFG-MSGOUT-UBX_MON_HW2_SPI	0x209101bd	U1	-	-	Output rate of the UBX-MON-HW2 message on port SPI
CFG-MSGOUT-UBX_MON_HW2_ UART1	0x209101ba	U1	-	-	Output rate of the UBX-MON-HW2 message on port UART1
CFG-MSGOUT-UBX_MON_HW3_I2C	0x20910354	U1	-	-	Output rate of the UBX-MON-HW3 message on port I2C
CFG-MSGOUT-UBX_MON_HW3_SPI	0x20910358	U1	-	-	Output rate of the UBX-MON-HW3 message on port SPI
CFG-MSGOUT-UBX_MON_HW3_ UART1	0x20910355	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART1
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	Output rate of the UBX-MON-HW message on port I2C
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	Output rate of the UBX-MON-HW message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	Output rate of the UBX-MON-HW message on port UART1
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	Output rate of the UBX-MON-IO message on port I2C
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	Output rate of the UBX-MON-IO message on port SPI
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	Output rate of the UBX-MON-IO message on port UART1
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	Output rate of the UBX-MON-MSGPP message on port I2C
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	Output rate of the UBX-MON-MSGPP message on port SPI
CFG-MSGOUT-UBX_MON_MSGPP_UART1	0x20910197	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART1
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	Output rate of the UBX-MON-RF message on port I2C
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	Output rate of the UBX-MON-RF message on port SPI
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	Output rate of the UBX-MON-RF message on port UART1
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	Output rate of the UBX-MON-RXBUF message on port I2C
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	Output rate of the UBX-MON-RXBUF message on port SPI
CFG-MSGOUT-UBX_MON_RXBUF_UART1	0x209101a1	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART1
CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	Output rate of the UBX-MON-RXR message on port I2C
CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	Output rate of the UBX-MON-RXR message on port SPI
CFG-MSGOUT-UBX_MON_RXR_UART1	0x20910188	U1	-	-	Output rate of the UBX-MON-RXR message on port UART1
CFG-MSGOUT-UBX_MON_SPAN_I2C	0x2091038b	U1	-	-	Output rate of the UBX-MON-SPAN message on port I2C
CFG-MSGOUT-UBX_MON_SPAN_SPI	0x2091038f	U1	-	-	Output rate of the UBX-MON-SPAN message on port SPI
CFG-MSGOUT-UBX_MON_SPAN_UART1	0x2091038c	U1	-	-	Output rate of the UBX-MON-SPAN message on port UART1
CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	Output rate of the UBX-MON-TXBUF message on port I2C
CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	Output rate of the UBX-MON-TXBUF message on port SPI
CFG-MSGOUT-UBX_MON_TXBUF_UART1	0x2091019c	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART1
CFG-MSGOUT-UBX_NAV_AOPSTATUS_I2C	0x20910079	U1	-	-	Output rate of the UBX-NAV-AOPSTATUS message on port I2C
CFG-MSGOUT-UBX_NAV_AOPSTATUS_SPI	0x2091007d	U1	-	-	Output rate of the UBX-NAV-AOPSTATUS message on port SPI
CFG-MSGOUT-UBX_NAV_AOPSTATUS_UART1	0x2091007a	U1	-	-	Output rate of the UBX-NAV-AOPSTATUS message on port UART1
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port I2C

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port SPI
CFG-MSGOUT-UBX_NAV_CLOCK_UART1	0x20910066	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART1
CFG-MSGOUT-UBX_NAV_COV_I2C	0x20910083	U1	-	-	Output rate of the UBX-NAV-COV message on port I2C
CFG-MSGOUT-UBX_NAV_COV_SPI	0x20910087	U1	-	-	Output rate of the UBX-NAV-COV message on port SPI
CFG-MSGOUT-UBX_NAV_COV_UART1	0x20910084	U1	-	-	Output rate of the UBX-NAV-COV message on port UART1
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	Output rate of the UBX-NAV-DOP message on port I2C
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	Output rate of the UBX-NAV-DOP message on port SPI
CFG-MSGOUT-UBX_NAV_DOP_UART1	0x20910039	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART1
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	Output rate of the UBX-NAV-EOE message on port I2C
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	Output rate of the UBX-NAV-EOE message on port SPI
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART1
CFG-MSGOUT-UBX_NAV_ODO_I2C	0x2091007e	U1	-	-	Output rate of the UBX-NAV-ODO message on port I2C
CFG-MSGOUT-UBX_NAV_ODO_SPI	0x20910082	U1	-	-	Output rate of the UBX-NAV-ODO message on port SPI
CFG-MSGOUT-UBX_NAV_ODO_UART1	0x2091007f	U1	-	-	Output rate of the UBX-NAV-ODO message on port UART1
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	Output rate of the UBX-NAV-ORB message on port I2C
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	Output rate of the UBX-NAV-ORB message on port SPI
CFG-MSGOUT-UBX_NAV_ORB_UART1	0x20910011	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART1
CFG-MSGOUT-UBX_NAV_PL_I2C	0x20910415	U1	-	-	Output rate of the UBX-NAV-PL message on port I2C
CFG-MSGOUT-UBX_NAV_PL_SPI	0x20910419	U1	-	-	Output rate of the UBX-NAV-PL message on port SPI
CFG-MSGOUT-UBX_NAV_PL_UART1	0x20910416	U1	-	-	Output rate of the UBX-NAV-PL message on port UART1
CFG-MSGOUT-UBX_NAV_POSECEF_I2C	0x20910024	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port I2C
CFG-MSGOUT-UBX_NAV_POSECEF_SPI	0x20910028	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port SPI
CFG-MSGOUT-UBX_NAV_POSECEF_UART1	0x20910025	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART1
CFG-MSGOUT-UBX_NAV_POSLLH_I2C	0x20910029	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port I2C
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port SPI
CFG-MSGOUT-UBX_NAV_POSLLH_UART1	0x2091002a	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART1

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	Output rate of the UBX-NAV-PVT message on port I2C
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	Output rate of the UBX-NAV-PVT message on port SPI
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART1
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	Output rate of the UBX-NAV-SAT message on port I2C
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	Output rate of the UBX-NAV-SAT message on port SPI
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART1
CFG-MSGOUT-UBX_NAV_SBAS_I2C	0x2091006a	U1	-	-	Output rate of the UBX-NAV-SBAS message on port I2C
CFG-MSGOUT-UBX_NAV_SBAS_SPI	0x2091006e	U1	-	-	Output rate of the UBX-NAV-SBAS message on port SPI
CFG-MSGOUT-UBX_NAV_SBAS_UART1	0x2091006b	U1	-	-	Output rate of the UBX-NAV-SBAS message on port UART1
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	Output rate of the UBX-NAV-SIG message on port I2C
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	Output rate of the UBX-NAV-SIG message on port SPI
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART1
CFG-MSGOUT-UBX_NAV_SLAS_I2C	0x20910336	U1	-	-	Output rate of the UBX-NAV-SLAS message on port I2C
CFG-MSGOUT-UBX_NAV_SLAS_SPI	0x2091033a	U1	-	-	Output rate of the UBX-NAV-SLAS message on port SPI
CFG-MSGOUT-UBX_NAV_SLAS_UART1	0x20910337	U1	-	-	Output rate of the UBX-NAV-SLAS message on port UART1
CFG-MSGOUT-UBX_NAV_STATUS_I2C	0x2091001a	U1	-	-	Output rate of the UBX-NAV-STATUS message on port I2C
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	Output rate of the UBX-NAV-STATUS message on port SPI
CFG-MSGOUT-UBX_NAV_STATUS_UART1	0x2091001b	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C	0x20910051	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI	0x20910055	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1	0x20910052	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C	0x20910056	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI	0x2091005a	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1	0x20910057	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C	0x2091004c	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI	0x20910050	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port SPI

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1	0x2091004d	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C	0x20910047	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI	0x2091004b	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1	0x20910048	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMELS_UART1	0x20910061	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEQZSS_I2C	0x20910386	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEQZSS_SPI	0x2091038a	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART1	0x20910387	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C	0x2091005b	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI	0x2091005f	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1	0x2091005c	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART1
CFG-MSGOUT-UBX_NAV_VELECEF_I2C	0x2091003d	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port I2C
CFG-MSGOUT-UBX_NAV_VELECEF_SPI	0x20910041	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port SPI
CFG-MSGOUT-UBX_NAV_VELECEF_UART1	0x2091003e	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART1
CFG-MSGOUT-UBX_NAV_VELNED_I2C	0x20910042	U1	-	-	Output rate of the UBX-NAV-VELNED message on port I2C
CFG-MSGOUT-UBX_NAV_VELNED_SPI	0x20910046	U1	-	-	Output rate of the UBX-NAV-VELNED message on port SPI
CFG-MSGOUT-UBX_NAV_VELNED_UART1	0x20910043	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART1
CFG-MSGOUT-UBX_RXM_MEAS20_I2C	0x20910643	U1	-	-	Output rate of the UBX-RXM-MEAS20 message on port I2C
CFG-MSGOUT-UBX_RXM_MEAS20_SPI	0x20910647	U1	-	-	Output rate of the UBX-RXM-MEAS20 message on port SPI
CFG-MSGOUT-UBX_RXM_MEAS20_UART1	0x20910644	U1	-	-	Output rate of the UBX-RXM-MEAS20 message on port UART1
CFG-MSGOUT-UBX_RXM_MEAS50_I2C	0x20910648	U1	-	-	Output rate of the UBX-RXM-MEAS50 message on port I2C
CFG-MSGOUT-UBX_RXM_MEAS50_SPI	0x2091064c	U1	-	-	Output rate of the UBX-RXM-MEAS50 message on port SPI
CFG-MSGOUT-UBX_RXM_MEAS50_UART1	0x20910649	U1	-	-	Output rate of the UBX-RXM-MEAS50 message on port UART1
CFG-MSGOUT-UBX_RXM_MEASC12_I2C	0x2091063e	U1	-	-	Output rate of the UBX-RXM-MEASC12 message on port I2C

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_RXM_MEASC12_SPI	0x20910642	U1	-	-	Output rate of the UBX-RXM-MEASC12 message on port SPI
CFG-MSGOUT-UBX_RXM_MEASC12_UART1	0x2091063f	U1	-	-	Output rate of the UBX-RXM-MEASC12 message on port UART1
CFG-MSGOUT-UBX_RXM_MEASD12_I2C	0x20910639	U1	-	-	Output rate of the UBX-RXM-MEASD12 message on port I2C
CFG-MSGOUT-UBX_RXM_MEASD12_SPI	0x2091063d	U1	-	-	Output rate of the UBX-RXM-MEASD12 message on port SPI
CFG-MSGOUT-UBX_RXM_MEASD12_UART1	0x2091063a	U1	-	-	Output rate of the UBX-RXM-MEASD12 message on port UART1
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	Output rate of the UBX-RXM-MEASX message on port I2C
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	Output rate of the UBX-RXM-MEASX message on port SPI
CFG-MSGOUT-UBX_RXM_MEASX_UART1	0x20910205	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART1
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	Output rate of the UBX-RXM-RLM message on port I2C
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	Output rate of the UBX-RXM-RLM message on port SPI
CFG-MSGOUT-UBX_RXM_RLM_UART1	0x2091025f	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART1
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port I2C
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port SPI
CFG-MSGOUT-UBX_RXM_SFRBX_UART1	0x20910232	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART1
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	Output rate of the UBX-TIM-TM2 message on port I2C
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c	U1	-	-	Output rate of the UBX-TIM-TM2 message on port SPI
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART1
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	Output rate of the UBX-TIM-TP message on port I2C
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	Output rate of the UBX-TIM-TP message on port SPI
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	Output rate of the UBX-TIM-TP message on port UART1
CFG-MSGOUT-UBX_TIM_VRFY_I2C	0x20910092	U1	-	-	Output rate of the UBX-TIM-VRFY message on port I2C
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	Output rate of the UBX-TIM-VRFY message on port SPI
CFG-MSGOUT-UBX_TIM_VRFY_UART1	0x20910093	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART1

Table 19: CFG-MSGOUT configuration items

4.9.12 CFG-NAVSPG: Standard precision navigation configuration

This group contains configuration items related to the operation of the receiver at standard precision, including configuring position fix mode, ionospheric model selection and other related items.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	Position fix mode
See Table 21 below for a list of possible constants for this item.					
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	Initial fix must be a 3D fix
CFG-NAVSPG-WKNROLLOVER	0x30110017	U2	-	-	GPS week rollover number
GPS week numbers will be set correctly from this week up to 1024 weeks after this week. Range is from 1 to 4096.					
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	UTC standard to be used
See section GNSS time base in the integration manual. See Table 22 below for a list of possible constants for this item.					
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	Dynamic platform model
See Table 23 below for a list of possible constants for this item.					
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	Acknowledge assistance input messages
CFG-NAVSPG-USE_USRDAT	0x10110061	L	-	-	Use user geodetic datum parameters
This must be set together with all CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_MAJA	0x50110062	R8	-	m	Geodetic datum semi-major axis
Accepted range is from 6,300,000.0 to 6,500,000.0 meters This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
CFG-NAVSPG-USRDAT_FLAT	0x50110063	R8	-	-	Geodetic datum 1.0 / flattening
Accepted range is 0.0 to 500.0. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
CFG-NAVSPG-USRDAT_DX	0x40110064	R4	-	m	Geodetic datum X axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
CFG-NAVSPG-USRDAT_DY	0x40110065	R4	-	m	Geodetic datum Y axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
CFG-NAVSPG-USRDAT_DZ	0x40110066	R4	-	m	Geodetic datum Z axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_.. parameters.					
CFG-NAVSPG-USRDAT_ROTX	0x40110067	R4	-	arcsec	Geodetic datum rotation about the X axis
Accepted range is +/- 20.0 milli arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
CFG-NAVSPG-USRDAT_ROTY	0x40110068	R4	-	arcsec	Geodetic datum rotation about the Y axis ()
Accepted range is +/- 20.0 milli-arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_ROTZ	0x40110069	R4	-	arcsec	Geodetic datum rotation about the Z axis
Accepted range is +/- 20.0 milli-arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4	-	ppm	Geodetic datum scale factor
Accepted range is 0.0 to 50.0 parts per million. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_... parameters.					
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	Minimum number of satellites for navigation
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	Maximum number of satellites for navigation
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	Minimum satellite signal level for navigation
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	Minimum elevation for a GNSS satellite to be used in navigation
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	Number of satellites required to have C/N0 above CFG-NAVSPG-INFIL_CNOTHRS for a fix to be attempted
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	C/N0 threshold for deciding whether to attempt a fix
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	Output filter position DOP mask (threshold)
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	Output filter time DOP mask (threshold)
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	Output filter position accuracy mask (threshold)
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	Output filter time accuracy mask (threshold)
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	Output filter frequency accuracy mask (threshold)
CFG-NAVSPG-CONSTR_ALT	0x401100c1	I4	0.01	m	Fixed altitude (mean sea level) for 2D fix mode
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m^2	Fixed altitude variance for 2D mode
CFG-NAVSPG-CONSTR_DGNSSTO	0x201100c4	U1	-	s	DGNSS timeout
CFG-NAVSPG-SIGATTCOMP	0x201100d6	E1	-	-	Permanently attenuated signal compensation mode
See Table 24 below for a list of possible constants for this item.					

Table 20: CFG-NAVSPG configuration items

Constant	Value	Description
2DONLY	1	2D only
3DONLY	2	3D only
AUTO	3	Auto 2D/3D

Table 21: Constants for CFG-NAVSPG-FIXMODE

Constant	Value	Description
AUTO	0	Automatic; receiver selects based on GNSS configuration
USNO	3	UTC as operated by the U.S. Naval Observatory (USNO); derived from GPS time
EU	5	UTC as combined from multiple European laboratories; derived from Galileo time
SU	6	UTC as operated by the former Soviet Union (SU); derived from GLONASS time
NTSC	7	UTC as operated by the National Time Service Center (NTSC), China; derived from BeiDou time
NPLI	8	UTC as operated by the National Physics Laboratory, India (NPLI); derived from NavIC time

Constant	Value	Description
NICT	9	UTC as operated by the National Institute of Information and Communications Technology, Japan (NICT); derived from QZSS time

Table 22: Constants for CFG-NAVSPG-UTCSTANDARD

Constant	Value	Description
PORT	0	Portable
STAT	2	Stationary
PED	3	Pedestrian
AUTOMOT	4	Automotive
SEA	5	Sea
AIR1	6	Airborne with <1g acceleration
AIR2	7	Airborne with <2g acceleration
AIR4	8	Airborne with <4g acceleration
WRIST	9	Wrist-worn watch (not available in all products)
BIKE	10	Motorbike (not available in all products)
MOWER	11	Robotic lawn mower (not available in all products)
ESCOOTER	12	E-scooter (not available in all products)

Table 23: Constants for CFG-NAVSPG-DYNMODEL

Constant	Value	Description
DIS	0	Disable signal attenuation compensation
AUTO	255	Automatic signal attenuation compensation
01DBHZ	1	Maximum expected C/NO level is 1 dBHz
02DBHZ	2	Maximum expected C/NO level is 2 dBHz
03DBHZ	3	Maximum expected C/NO level is 3 dBHz
04DBHZ	4	Maximum expected C/NO level is 4 dBHz
05DBHZ	5	Maximum expected C/NO level is 5 dBHz
06DBHZ	6	Maximum expected C/NO level is 6 dBHz
07DBHZ	7	Maximum expected C/NO level is 7 dBHz
08DBHZ	8	Maximum expected C/NO level is 8 dBHz
09DBHZ	9	Maximum expected C/NO level is 9 dBHz
10DBHZ	10	Maximum expected C/NO level is 10 dBHz
11DBHZ	11	Maximum expected C/NO level is 11 dBHz
12DBHZ	12	Maximum expected C/NO level is 12 dBHz
13DBHZ	13	Maximum expected C/NO level is 13 dBHz
14DBHZ	14	Maximum expected C/NO level is 14 dBHz
15DBHZ	15	Maximum expected C/NO level is 15 dBHz
16DBHZ	16	Maximum expected C/NO level is 16 dBHz
17DBHZ	17	Maximum expected C/NO level is 17 dBHz
18DBHZ	18	Maximum expected C/NO level is 18 dBHz
19DBHZ	19	Maximum expected C/NO level is 19 dBHz
20DBHZ	20	Maximum expected C/NO level is 20 dBHz
21DBHZ	21	Maximum expected C/NO level is 21 dBHz

Constant	Value	Description
22DBHZ	22	Maximum expected C/NO level is 22 dBHz
23DBHZ	23	Maximum expected C/NO level is 23 dBHz
24DBHZ	24	Maximum expected C/NO level is 24 dBHz
25DBHZ	25	Maximum expected C/NO level is 25 dBHz
26DBHZ	26	Maximum expected C/NO level is 26 dBHz
27DBHZ	27	Maximum expected C/NO level is 27 dBHz
28DBHZ	28	Maximum expected C/NO level is 28 dBHz
29DBHZ	29	Maximum expected C/NO level is 29 dBHz
30DBHZ	30	Maximum expected C/NO level is 30 dBHz
31DBHZ	31	Maximum expected C/NO level is 31 dBHz
32DBHZ	32	Maximum expected C/NO level is 32 dBHz
33DBHZ	33	Maximum expected C/NO level is 33 dBHz
34DBHZ	34	Maximum expected C/NO level is 34 dBHz
35DBHZ	35	Maximum expected C/NO level is 35 dBHz
36DBHZ	36	Maximum expected C/NO level is 36 dBHz
37DBHZ	37	Maximum expected C/NO level is 37 dBHz
38DBHZ	38	Maximum expected C/NO level is 38 dBHz
39DBHZ	39	Maximum expected C/NO level is 39 dBHz
40DBHZ	40	Maximum expected C/NO level is 40 dBHz
41DBHZ	41	Maximum expected C/NO level is 41 dBHz
42DBHZ	42	Maximum expected C/NO level is 42 dBHz
43DBHZ	43	Maximum expected C/NO level is 43 dBHz
44DBHZ	44	Maximum expected C/NO level is 44 dBHz
45DBHZ	45	Maximum expected C/NO level is 45 dBHz
46DBHZ	46	Maximum expected C/NO level is 46 dBHz
47DBHZ	47	Maximum expected C/NO level is 47 dBHz
48DBHZ	48	Maximum expected C/NO level is 48 dBHz
49DBHZ	49	Maximum expected C/NO level is 49 dBHz
50DBHZ	50	Maximum expected C/NO level is 50 dBHz
51DBHZ	51	Maximum expected C/NO level is 51 dBHz
52DBHZ	52	Maximum expected C/NO level is 52 dBHz
53DBHZ	53	Maximum expected C/NO level is 53 dBHz
54DBHZ	54	Maximum expected C/NO level is 54 dBHz
55DBHZ	55	Maximum expected C/NO level is 55 dBHz
56DBHZ	56	Maximum expected C/NO level is 56 dBHz
57DBHZ	57	Maximum expected C/NO level is 57 dBHz
58DBHZ	58	Maximum expected C/NO level is 58 dBHz
59DBHZ	59	Maximum expected C/NO level is 59 dBHz
60DBHZ	60	Maximum expected C/NO level is 60 dBHz
61DBHZ	61	Maximum expected C/NO level is 61 dBHz
62DBHZ	62	Maximum expected C/NO level is 62 dBHz

Constant	Value	Description
63DBHZ	63	Maximum expected C/NO level is 63 dBHz

Table 24: Constants for CFG-NAVSPG-SIGATTCOMP

4.9.13 CFG-NMEA: NMEA protocol configuration

This group configures the NMEA protocol. See section NMEA protocol configuration for a detailed description of the configuration effects on NMEA output.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-NMEA-PROTVER	0x20930001	E1	-	-	NMEA protocol version
See Table 26 below for a list of possible constants for this item.					
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	Maximum number of SVs to report per Talker ID
See Table 27 below for a list of possible constants for this item.					
CFG-NMEA-COMPAT	0x10930003	L	-	-	Enable compatibility mode
This might be needed for certain applications, e.g. for an NMEA parser that expects a fixed number of digits in position coordinates.					
CFG-NMEA-CONSIDER	0x10930004	L	-	-	Enable considering mode
This will affect NMEA output used satellite count. If set, also considered satellites (e.g. RAIMED) are counted as used satellites as well.					
CFG-NMEA-LIMIT82	0x10930005	L	-	-	Enable strict limit to 82 characters maximum NMEA message length
CFG-NMEA-HIGHPREC	0x10930006	L	-	-	Enable high precision mode
This flag cannot be set in conjunction with either CFG-NMEA-COMPAT or CFG-NMEA-LIMIT82 mode.					
CFG-NMEA-SVNUMBERING	0x20930007	E1	-	-	Display configuration for SVs that do not have value defined in NMEA
Configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. See also Satellite Numbering. See Table 28 below for a list of possible constants for this item.					
CFG-NMEA-FILT_GPS	0x10930011	L	-	-	Disable reporting of GPS satellites
CFG-NMEA-FILT_SBAS	0x10930012	L	-	-	Disable reporting of SBAS satellites
CFG-NMEA-FILT_GAL	0x10930013	L	-	-	Disable reporting of Galileo satellites
CFG-NMEA-FILT_QZSS	0x10930015	L	-	-	Disable reporting of QZSS satellites
CFG-NMEA-FILT_GLO	0x10930016	L	-	-	Disable reporting of GLONASS satellites
CFG-NMEA-FILT_BDS	0x10930017	L	-	-	Disable reporting of BeiDou satellites
CFG-NMEA-OUT_INVFIX	0x10930021	L	-	-	Enable position output for failed or invalid fixes
CFG-NMEA-OUT_MSKFIX	0x10930022	L	-	-	Enable position output for invalid fixes
CFG-NMEA-OUT_INVTIME	0x10930023	L	-	-	Enable time output for invalid times
CFG-NMEA-OUT_INVDATE	0x10930024	L	-	-	Enable date output for invalid dates
CFG-NMEA-OUT_ONLYGPS	0x10930025	L	-	-	Restrict output to GPS satellites only
CFG-NMEA-OUT_FROZENCOG	0x10930026	L	-	-	Enable course over ground output even if it is frozen
CFG-NMEA-MAINTALKERID	0x20930031	E1	-	-	Main Talker ID
By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see CFG-SIGNAL). This field enables the main Talker ID to be overridden. See Table 29 below for a list of possible constants for this item.					

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-NMEA-GSVTALKERID	0x20930032	E1	-	-	Talker ID for GSV NMEA messages
By default the Talker ID for GSV messages is GNSS-specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden. See Table 30 below for a list of possible constants for this item.					
CFG-NMEA-BDSTALKERID	0x30930033	U2	-	-	BeiDou Talker ID
Sets the two ASCII characters that should be used for the BeiDou Talker ID. If these are set to zero, the default BeiDou Talker ID will be used.					

Table 25: CFG-NMEA configuration items

Constant	Value	Description
V21	21	NMEA protocol version 2.1
V23	23	NMEA protocol version 2.3
V40	40	NMEA protocol version 4.0 (not available in all products)
V41	41	NMEA protocol version 4.10 (not available in all products)
V411	42	NMEA protocol version 4.11 (not available in all products)

Table 26: Constants for CFG-NMEA-PROTVER

Constant	Value	Description
UNLIM	0	Unlimited
8SVS	8	8 SVs
12SVS	12	12 SVs
16SVS	16	16 SVs

Table 27: Constants for CFG-NMEA-MAXSVS

Constant	Value	Description
STRICT	0	Strict - satellites are not output
EXTENDED	1	Extended - use proprietary numbering

Table 28: Constants for CFG-NMEA-SVNUMBERING

Constant	Value	Description
AUTO	0	Main Talker ID is not overridden
GP	1	Set main Talker ID to 'GP'
GL	2	Set main Talker ID to 'GL'
GN	3	Set main Talker ID to 'GN'
GA	4	Set main Talker ID to 'GA' (not available in all products)
GB	5	Set main Talker ID to 'GB' (not available in all products)
GQ	7	Set main Talker ID to 'GQ' (not available in all products)

Table 29: Constants for CFG-NMEA-MAINTALKERID

Constant	Value	Description
GNSS	0	Use GNSS-specific Talker ID (as defined by NMEA)

Constant	Value	Description
MAIN	1	Use the main Talker ID

Table 30: Constants for CFG-NMEA-GSVTALKERID

4.9.14 CFG-ODO: Odometer and low-speed course over ground filter configuration

The items in this group allow the user to configure the Odometer feature and Low-Speed Course Over Ground Filter.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-ODO-USE_ODO	0x10220001	L	-	-	Use odometer
CFG-ODO-USE_COG	0x10220002	L	-	-	Use low-speed course over ground filter
CFG-ODO-OUTLPVEL	0x10220003	L	-	-	Output low-pass filtered velocity
CFG-ODO-OUTLPCOG	0x10220004	L	-	-	Output low-pass filtered course over ground (heading)
CFG-ODO-PROFILE	0x20220005	E1	-	-	Odometer profile configuration See Table 32 below for a list of possible constants for this item.
CFG-ODO-COGMAXSPEED	0x20220021	U1	1e-1	m/s	Upper speed limit for low-speed course over ground filter
CFG-ODO-COGMAXPOSACC	0x20220022	U1	-	-	Maximum acceptable position accuracy for computing low-speed filtered course over ground
CFG-ODO-VELLPGAIN	0x20220031	U1	-	-	Velocity low-pass filter level Range is from 0 to 255.
CFG-ODO-COGLPGAIN	0x20220032	U1	-	-	Course over ground low-pass filter level (at speed < 8 m/s) Range is from 0 to 255.

Table 31: CFG-ODO configuration items

Constant	Value	Description
RUN	0	Running
CYCL	1	Cycling
SWIM	2	Swimming
CAR	3	Car
CUSTOM	4	Custom

Table 32: Constants for CFG-ODO-PROFILE

4.9.15 CFG-PM: Configuration for receiver power management

Use this configuration group to manage the two main receiver power save modes (on/off operation, PSMOO or cyclic tracking operation, PSMCT).

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-PM-OPERATEMODE	0x20d00001	E1	-	-	General mode of operation. Setting this to either PSMOO or PSMCT will turn the corresponding mode on. Setting this to FULL will turn any PSM off. See the integration manual for details. See Table 34 below for a list of possible constants for this item.
CFG-PM-POSUPDATEPERIOD	0x40d00002	U4	-	s	Position update period for PSMOO. Allowed range: >= 5 s and smaller than the number of seconds in a week. If set to 0, the receiver will never retry a fix and will wait for external events.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-PM-ACQPERIOD	0x40d00003	U4	-	s	Acquisition period used if the receiver previously failed to achieve a position fix.
If set to 0, the receiver will never retry an acquisition and will wait for external events.					
CFG-PM-GRIDOFFSET	0x40d00004	U4	-	s	Position update period grid offset relative to GPS start of week.
If set to 0, the position update periods are aligned to the GPS week.					
CFG-PM-ONTIME	0x30d00005	U2	-	s	Time to stay in Tracking state.
If set to 0, the receiver will only very briefly enter tracking state (after acquisition) and then go back to inactive.					
CFG-PM-MINACQTIME	0x20d00006	U1	-	s	Minimum time to spend in Acquisition state
CFG-PM-MAXACQTIME	0x20d00007	U1	-	s	Maximum time to spend in Acquisition state
If 0: bound disabled (see the Maximum startup state duration section in the integration manual for details).					
CFG-PM-DONOTENTEROFF	0x10d00008	L	-	-	Behavior of receiver in case it cannot achieve a position fix during a position update period.
Disable to make the receiver enter (Inactive) Awaiting next search state, enable to make the receiver not enter (Inactive) Awaiting next search state but keep trying to acquire a fix instead.					
CFG-PM-WAITTIMEFIX	0x10d00009	L	-	-	Wait for time fix
Disable to wait for normal fix OK before starting ONTIME, enable to wait for time fix OK before starting ONTIME.					
CFG-PM-UPDATEEPH	0x10d0000a	L	-	-	Update ephemeris regularly.
Disable to not wake up to update ephemeris data, enable adds extra wake-up cycles to update the ephemeris data.					
CFG-PM-EXTINTWAKE	0x10d0000c	L	-	-	EXTINT pin control (Wake)
Enable to keep receiver awake as long as selected EXTINT pin is "high".					
CFG-PM-EXTINTBACKUP	0x10d0000d	L	-	-	EXTINT pin control (Backup)
Enable to force receiver into BACKUP mode when selected EXTINT pin is "low".					
CFG-PM-EXTINTINACTIVE	0x10d0000e	L	-	-	EXTINT pin control (Inactive)
Enable to force backup in case EXTINT pin is inactive for time longer than CFG-PM-EXTINTINACTIVITY.					
CFG-PM-EXTINTINACTIVITY	0x40d0000f	U4	0.001	s	Inactivity time out on EXTINT pin if enabled
CFG-PM-LIMITPEAKCURR	0x10d00010	L	-	-	Limit peak current

Table 33: CFG-PM configuration items

Constant	Value	Description
FULL	0	normal operation, no power save mode active
PSMOO	1	PSM ON/OFF operation
PSMCT	2	PSM cyclic tracking operation

Table 34: Constants for CFG-PM-OPERATEMODE

4.9.16 CFG-QZSS: QZSS system configuration

Note that enabling and disabling of individual GNSS is done via the CFG-SIGNAL configuration group.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-QZSS-USE_SLAS_DGNSS	0x10370005	L	-	-	Apply QZSS SLAS DGNSS corrections
CFG-QZSS-USE_SLAS_TESTMODE	0x10370006	L	-	-	Use QZSS SLAS data when it is in test mode (SLAS msg 0)
CFG-QZSS-USE_SLAS_RAIM_UNCORR	0x10370007	L	-	-	Raim out measurements that are not corrected by QZSS SLAS, if at least 5 measurements are corrected
CFG-QZSS-SLAS_MAX_BASELINE	0x30370008	U2	-	km	Maximum baseline distance to closest GMS

Configuration item	Key ID	Type	Scale	Unit	Description
SLAS corrections are only applied if the receiver is at most this far away from the closest ground monitoring station (GMS). Note that due to the nature of the service, the usefulness of corrections degrades with distance. When far away from GMS, SBAS may be a better correction source.					

Table 35: CFG-QZSS configuration items

4.9.17 CFG-RATE: Navigation and measurement rate configuration

The configuration items in this group allow the user to alter the rate at which navigation solutions (and the measurements that they depend on) are generated by the receiver. The calculation of the navigation solution will always be aligned to the top of a second zero (first second of the week) of the configured reference time system. The navigation period is an integer multiple of the measurement period.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-RATE-MEAS	0x30210001	U2	0.001	s	Nominal time between GNSS measurements
E.g. 100 ms results in 10 Hz measurement rate, 1000 ms = 1 Hz measurement rate. The minimum value is 25.					
CFG-RATE-NAV	0x30210002	U2	-	-	Ratio of number of measurements to number of navigation solutions
E.g. 5 means five measurements for every navigation solution. The minimum value is 1. The maximum value is 127.					
CFG-RATE-TIMEREF	0x20210003	E1	-	-	Time system to which measurements are aligned
See Table 37 below for a list of possible constants for this item.					

Table 36: CFG-RATE configuration items

Constant	Value	Description
UTC	0	Align measurements to UTC time
GPS	1	Align measurements to GPS time
GLO	2	Align measurements to GLONASS time
BDS	3	Align measurements to BeiDou time
GAL	4	Align measurements to Galileo time
NAVIC	5	Align measurements to NavIC time

Table 37: Constants for CFG-RATE-TIMEREF

4.9.18 CFG-RINV: Remote inventory

The remote inventory enables storing user-defined data in the non-volatile memory of the receiver. The data can be either binary or a string of ASCII characters. In the latter case, it can optionally be output at startup after the boot screen.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-RINV-DUMP	0x10c70001	L	-	-	Dump data at startup
When true, data will be dumped to the interface on startup, unless CFG-RINV-BINARY is set.					
CFG-RINV-BINARY	0x10c70002	L	-	-	Data is binary
When true, the data is treated as binary data.					
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	Size of data
Size of data to store/be stored in the remote inventory (maximum 30 bytes).					
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	Data bytes 1-8 (LSB)
Data to store/be stored in remote inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	Data bytes 9-16

Configuration item	Key ID	Type	Scale	Unit	Description
Data to store/be stored in remote inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	Data bytes 17-24
Data to store/be stored in remote inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	Data bytes 25-30 (MSB)
Data to store/be stored in remote inventory - max 6 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					

Table 38: CFG-RINV configuration items

4.9.19 CFG-SBAS: SBAS configuration

This group configures the SBAS receiver subsystem (i.e. WAAS, EGNOS, MSAS). See SBAS configuration settings description in the integration manual for a detailed description of how these settings affect receiver operation.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SBAS-USE_TESTMODE	0x10360002	L	-	-	Use SBAS data when it is in test mode (SBAS msg 0)
CFG-SBAS-USE_RANGING	0x10360003	L	-	-	Use SBAS GEOs as a ranging source (for navigation)
CFG-SBAS-USE_DIFFCORR	0x10360004	L	-	-	Use SBAS differential corrections
CFG-SBAS-USE_INTEGRITY	0x10360005	L	-	-	Use SBAS integrity information
If enabled, the receiver will only use GPS satellites for which integrity information is available					
CFG-SBAS-PRNSCANMASK	0x50360006	X8	-	-	SBAS PRN search configuration
This configuration item determines which SBAS PRNs should be searched. Setting it to 0 indicates auto-scanning all SBAS PRNs. For non-zero values the bits correspond to the allocated SBAS PRNs ranging from PRN120 (bit 0) to PRN158 (bit 38), where a bit set enables searching for the corresponding PRN. See Table 40 below for a list of possible constants for this item.					

Table 39: CFG-SBAS configuration items

Constant	Value	Description
ALL	0x0000000000000000	Enable search for all SBAS PRNs
PRN120	0x0000000000000001	Enable search for SBAS PRN120
PRN121	0x0000000000000002	Enable search for SBAS PRN121
PRN122	0x0000000000000004	Enable search for SBAS PRN122
PRN123	0x0000000000000008	Enable search for SBAS PRN123
PRN124	0x0000000000000010	Enable search for SBAS PRN124
PRN125	0x0000000000000020	Enable search for SBAS PRN125
PRN126	0x0000000000000040	Enable search for SBAS PRN126
PRN127	0x0000000000000080	Enable search for SBAS PRN127
PRN128	0x0000000000000100	Enable search for SBAS PRN128
PRN129	0x0000000000000200	Enable search for SBAS PRN129
PRN130	0x0000000000000400	Enable search for SBAS PRN130
PRN131	0x0000000000000800	Enable search for SBAS PRN131
PRN132	0x0000000000001000	Enable search for SBAS PRN132
PRN133	0x0000000000002000	Enable search for SBAS PRN133
PRN134	0x0000000000004000	Enable search for SBAS PRN134
PRN135	0x0000000000008000	Enable search for SBAS PRN135

Constant	Value	Description
PRN136	0x0000000000010000	Enable search for SBAS PRN136
PRN137	0x0000000000020000	Enable search for SBAS PRN137
PRN138	0x0000000000040000	Enable search for SBAS PRN138
PRN139	0x0000000000080000	Enable search for SBAS PRN139
PRN140	0x0000000000100000	Enable search for SBAS PRN140
PRN141	0x0000000000200000	Enable search for SBAS PRN141
PRN142	0x0000000000400000	Enable search for SBAS PRN142
PRN143	0x0000000000800000	Enable search for SBAS PRN143
PRN144	0x0000000001000000	Enable search for SBAS PRN144
PRN145	0x0000000002000000	Enable search for SBAS PRN145
PRN146	0x0000000004000000	Enable search for SBAS PRN146
PRN147	0x0000000008000000	Enable search for SBAS PRN147
PRN148	0x0000000010000000	Enable search for SBAS PRN148
PRN149	0x0000000020000000	Enable search for SBAS PRN149
PRN150	0x0000000040000000	Enable search for SBAS PRN150
PRN151	0x0000000080000000	Enable search for SBAS PRN151
PRN152	0x0000000100000000	Enable search for SBAS PRN152
PRN153	0x0000000200000000	Enable search for SBAS PRN153
PRN154	0x0000000400000000	Enable search for SBAS PRN154
PRN155	0x0000000800000000	Enable search for SBAS PRN155
PRN156	0x0000001000000000	Enable search for SBAS PRN156
PRN157	0x0000002000000000	Enable search for SBAS PRN157
PRN158	0x0000004000000000	Enable search for SBAS PRN158

Table 40: Constants for CFG-SBAS-PRNSCANMASK

4.9.20 CFG-SEC: Security configuration

Security configuration.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SEC-CFG_LOCK	0x10f60009	L	-	-	Configuration lockdown
When set, receiver configuration is locked and cannot be changed any more.					
CFG-SEC-CFG_LOCK_UNLOCKGRP1	0x30f6000a	U2	-	-	Configuration lockdown exempted group 1
This item can be set before enabling the configuration lockdown. It will make writes to the specified group possible after the configuration lockdown has been enabled.					
CFG-SEC-CFG_LOCK_UNLOCKGRP2	0x30f6000b	U2	-	-	Configuration lockdown exempted group 2
This item can be set before enabling the configuration lockdown. It will make writes to the specified group possible after the configuration lockdown has been enabled.					

Table 41: CFG-SEC configuration items

4.9.21 CFG-SIGNAL: Satellite systems (GNSS) signal configuration

The enable items for individual signals are governed by their corresponding constellation enable item. It is necessary that at least one signal from a major GNSS constellation is enabled. See GNSS signal configuration in the integration manual for more details.

Configuration specific to a GNSS system is available in other groups (e.g. CFG-SBAS).

Note that changes to any items within this group will trigger a reset to the GNSS subsystem. The reset takes some time, so wait first for the acknowledgement from the receiver and then 0.5 seconds before sending the next command.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	GPS enable
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	GPS L1C/A
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	SBAS enable
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	SBAS L1C/A
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	Galileo enable
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	Galileo E1
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	BeiDou Enable
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	BeiDou B1I
CFG-SIGNAL-BDS_B1C_ENA	0x1031000f	L	-	-	BeiDou B1C
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	QZSS enable
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	QZSS L1C/A
CFG-SIGNAL-QZSS_L1S_ENA	0x10310014	L	-	-	QZSS L1S
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	GLONASS enable
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	GLONASS L1

Table 42: CFG-SIGNAL configuration items

4.9.22 CFG-SPI: Configuration of the SPI interface

Settings needed to configure the SPI communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPI-MAXFF	0x20640001	U1	-	-	Number of bytes containing 0xFF to receive before switching off reception. Range: 0 (mechanism off) - 63
CFG-SPI-CPOLARITY	0x10640002	L	-	-	Clock polarity select: 0: Active Hight Clock, SCLK idles low, 1: Active Low Clock, SCLK idles high
CFG-SPI-CPHASE	0x10640003	L	-	-	Clock phase select: 0: Data captured on first edge of SCLK, 1: Data captured on second edge of SCLK
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	Flag to disable timeouting the interface after 1.5s
CFG-SPI-ENABLED	0x10640006	L	-	-	Flag to indicate if the SPI interface should be enabled

Table 43: CFG-SPI configuration items

4.9.23 CFG-SPIINPROT: Input protocol configuration of the SPI interface

Input protocol enable flags of the SPI interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPIINPROT-UBX	0x10790001	L	-	-	Flag to indicate if UBX should be an input protocol on SPI

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	Flag to indicate if NMEA should be an input protocol on SPI

Table 44: CFG-SPIINPROT configuration items

4.9.24 CFG-SPIOUTPROT: Output protocol configuration of the SPI interface

Output protocol enable flags of the SPI interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	Flag to indicate if UBX should be an output protocol on SPI
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	Flag to indicate if NMEA should be an output protocol on SPI

Table 45: CFG-SPIOUTPROT configuration items

4.9.25 CFG-TP: Timepulse configuration

Use this group to configure the generation of timepulses.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-TP-PULSE_DEF	0x20050023	E1	-	-	Determines whether the time pulse is interpreted as frequency or period
See Table 47 below for a list of possible constants for this item.					
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	Determines whether the time pulse length is interpreted as length[us] or pulse ratio[%]
See Table 48 below for a list of possible constants for this item.					
CFG-TP-ANT_CABLEDELAY	0x30050001	I2	1e-9	s	Antenna cable delay
CFG-TP-PERIOD_TP1	0x40050002	U4	1e-6	s	Time pulse period (TP1)
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	1e-6	s	Time pulse period when locked to GNSS time (TP1)
Only used if CFG-TP-USE_LOCKED_TP1 is set.					
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	Time pulse frequency (TP1)
This will only be used if CFG-TP-PULSE_DEF=FREQ.					
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	Time pulse frequency when locked to GNSS time (TP1)
Only used if CFG-TP-USE_LOCKED_TP1 is set.					
CFG-TP-LEN_TP1	0x40050004	U4	1e-6	s	Time pulse length (TP1)
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	1e-6	s	Time pulse length when locked to GNSS time (TP1)
Only used if CFG-TP-USE_LOCKED_TP1 is set.					
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	Time pulse duty cycle (TP1)
Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO is set.					
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	Time pulse duty cycle when locked to GNSS time (TP1)
Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO and CFG-TP-USE_LOCKED_TP1 are set.					
CFG-TP-USER_DELAY_TP1	0x40050006	I4	1e-9	s	User-configurable time pulse delay (TP1)
CFG-TP-TP1_ENA	0x10050007	L	-	-	Enable the first timepulse
if pin associated with time pulse is assigned for another function, the other function takes precedence. Must be set for frequency-time products.					
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	Sync time pulse to GNSS time or local clock (TP1)

Configuration item	Key ID	Type	Scale	Unit	Description
If set, sync to GNSS if GNSS time is valid otherwise, if not set or not available, use local clock. Ignored by time-frequency product variants, which will attempt to use the best available time/frequency reference (not necessarily GNSS). This flag can be unset only in Timing product variants.					
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	Use locked parameters when possible (TP1)
If set, use CFG-TP-PERIOD_LOCK_TP1 and CFG-TP-LEN_LOCK_TP1 as soon as GNSS time is valid. Otherwise if not valid or not set, use CFG-TP-PERIOD_TP1 and CFG-TP-LEN_TP1.					
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	Align time pulse to top of second (TP1)
To use this feature, CFG-TP-USE_LOCKED_TP1 must be set. Time pulse period must be an integer fraction of 1 second. Ignored in time-frequency product variants, where it is assumed always enabled.					
CFG-TP-POL_TP1	0x1005000b	L	-	-	Set time pulse polarity (TP1)
false (0) : falling edge at top of second. true (1) : rising edge at top of second.					
CFG-TP-TIMEGRID_TP1	0x2005000c	E1	-	-	Time grid to use (TP1)
Only relevant if CFG-TP-USE_LOCKED_TP1 and ALIGN_TO_TOW_TP1 are set. Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix it will attempt to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in CFG-SIGNAL-*. See Table 49 below for a list of possible constants for this item.					

Table 46: CFG-TP configuration items

Constant	Value	Description
PERIOD	0	Time pulse period [us]
FREQ	1	Time pulse frequency [Hz]

Table 47: Constants for CFG-TP-PULSE_DEF

Constant	Value	Description
RATIO	0	Time pulse ratio
LENGTH	1	Time pulse length

Table 48: Constants for CFG-TP-PULSE_LENGTH_DEF

Constant	Value	Description
UTC	0	UTC time reference
GPS	1	GPS time reference
GLO	2	GLONASS time reference
BDS	3	BeiDou time reference
GAL	4	Galileo time reference
NAVIC	5	NavIC time reference

Table 49: Constants for CFG-TP-TIMEGRID_TP1

4.9.26 CFG-TXREADY: TX ready configuration

Configuration of the TX ready pin.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-TXREADY-ENABLED	0x10a20001	L	-	-	Flag to indicate if TX ready pin mechanism should be enabled

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-TXREADY-POLARITY	0x10a20002	L	-	-	The polarity of the TX ready pin: false:high-active, true:low-active
CFG-TXREADY-PIN	0x20a20003	U1	-	-	Pin number to use for the TX ready functionality
CFG-TXREADY-THRESHOLD	0x30a20004	U2	-	-	Amount of data that should be ready on the interface before triggering the TX ready pin
CFG-TXREADY-INTERFACE	0x20a20005	E1	-	-	Interface where the TX ready feature should be linked to
See Table 51 below for a list of possible constants for this item.					

Table 50: CFG-TXREADY configuration items

Constant	Value	Description
I2C	0	I2C interface
SPI	1	SPI interface

Table 51: Constants for CFG-TXREADY-INTERFACE

4.9.27 CFG-UART1: Configuration of the UART1 interface

Settings needed to configure the UART1 communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART1-BAUDRATE	0x40520001	U4	-	-	The baud rate that should be configured on the UART1
CFG-UART1-STOPBITS	0x20520002	E1	-	-	Number of stopbits that should be used on UART1
See Table 53 below for a list of possible constants for this item.					
CFG-UART1-DATABITS	0x20520003	E1	-	-	Number of databits that should be used on UART1
See Table 54 below for a list of possible constants for this item.					
CFG-UART1-PARITY	0x20520004	E1	-	-	Parity mode that should be used on UART1
See Table 55 below for a list of possible constants for this item.					
CFG-UART1-ENABLED	0x10520005	L	-	-	Flag to indicate if the UART1 should be enabled

Table 52: CFG-UART1 configuration items

Constant	Value	Description
HALF	0	0.5 stopbits
ONE	1	1.0 stopbits
ONEHALF	2	1.5 stopbits
TWO	3	2.0 stopbits

Table 53: Constants for CFG-UART1-STOPBITS

Constant	Value	Description
EIGHT	0	8 databits
SEVEN	1	7 databits

Table 54: Constants for CFG-UART1-DATABITS

Constant	Value	Description
NONE	0	No parity bit
ODD	1	Add an odd parity bit

Constant	Value	Description
EVEN	2	Add an even parity bit

Table 55: Constants for CFG-UART1-PARITY

4.9.28 CFG-UART1INPROT: Input protocol configuration of the UART1 interface

Input protocol enable flags of the UART1 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART1INPROT-UBX	0x10730001	L	-	-	Flag to indicate if UBX should be an input protocol on UART1
CFG-UART1INPROT-NMEA	0x10730002	L	-	-	Flag to indicate if NMEA should be an input protocol on UART1

Table 56: CFG-UART1INPROT configuration items

4.9.29 CFG-UART1OUTPROT: Output protocol configuration of the UART1 interface

Output protocol enable flags of the UART1 interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	Flag to indicate if UBX should be an output protocol on UART1
CFG-UART1OUTPROT-NMEA	0x10740002	L	-	-	Flag to indicate if NMEA should be an output protocol on UART1

Table 57: CFG-UART1OUTPROT configuration items

4.10 Legacy UBX message fields reference

The following table lists the legacy UBX message fields and the corresponding configuration item. Note that the mapping from UBX-CFG message fields to configuration items is not necessarily 1:1 and that that some legacy UBX-CFG messages may not be available for certain products.

UBX message and field	Configuration item(s)
UBX-CFG-ANT	
UBX-CFG-ANT.ocd	CFG-HW-ANT_CFG_OPENDET
UBX-CFG-ANT.pdwnOnSCD	CFG-HW-ANT_CFG_PWRDOWN
UBX-CFG-ANT.pinOCD	CFG-HW-ANT_SUP_OPEN_PIN
UBX-CFG-ANT.pinSCD	CFG-HW-ANT_SUP_SHORT_PIN
UBX-CFG-ANT.pinSwitch	CFG-HW-ANT_SUP_SWITCH_PIN
UBX-CFG-ANT.recovery	CFG-HW-ANT_CFG_RECOVER
UBX-CFG-ANT.scd	CFG-HW-ANT_CFG_SHORTDET
UBX-CFG-ANT.svcs	CFG-HW-ANT_CFG_VOLTCTRL
UBX-CFG-BATCH	
UBX-CFG-BATCH.bufSize	CFG-BATCH-MAXENTRIES
UBX-CFG-BATCH.enable	CFG-BATCH-ENABLE
UBX-CFG-BATCH.extraOdo	CFG-BATCH-EXTRAODO
UBX-CFG-BATCH.extraPvt	CFG-BATCH-EXTRAPVT
UBX-CFG-BATCH.notifThrs	CFG-BATCH-WARNTHRS
UBX-CFG-BATCH.pioActiveLow	CFG-BATCH-PIOACTIVELOW
UBX-CFG-BATCH.pioEnable	CFG-BATCH-PIOENABLE
UBX-CFG-BATCH.pioId	CFG-BATCH-PIOID

UBX message and field	Configuration item(s)
UBX-CFG-DAT	
UBX-CFG-DAT.dX	CFG-NAVSPG-USRDAT_DX
UBX-CFG-DAT.dY	CFG-NAVSPG-USRDAT_DY
UBX-CFG-DAT.dZ	CFG-NAVSPG-USRDAT_DZ
UBX-CFG-DAT.flat	CFG-NAVSPG-USRDAT_FLAT
UBX-CFG-DAT.majA	CFG-NAVSPG-USE_USRDAT, CFG-NAVSPG-USRDAT_MAJA
UBX-CFG-DAT.rotX	CFG-NAVSPG-USRDAT_ROTX
UBX-CFG-DAT.rotY	CFG-NAVSPG-USRDAT_ROTY
UBX-CFG-DAT.rotZ	CFG-NAVSPG-USRDAT_ROTZ
UBX-CFG-DAT.scale	CFG-NAVSPG-USRDAT_SCALE
UBX-CFG-GNSS	
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-GPS_ENA, CFG-SIGNAL-SBAS_ENA, CFG-SIGNAL-BDS_ENA, CFG-SIGNAL-QZSS_ENA, CFG-SIGNAL-GLO_ENA
UBX-CFG-INF	
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_I2C, CFG-INFMSG-UBX_UART1, CFG-INFMSG-UBX_SPI, CFG-INFMSG-NMEA_I2C, CFG-INFMSG-NMEA_UART1, CFG-INFMSG-NMEA_SPI
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_UART1, CFG-INFMSG-UBX_SPI, CFG-INFMSG-NMEA_I2C, CFG-INFMSG-NMEA_UART1, CFG-INFMSG-NMEA_SPI
UBX-CFG-ITFM	
UBX-CFG-ITFM.antSetting	CFG-ITFM-ANTSETTING
UBX-CFG-ITFM.bbThreshold	CFG-ITFM-BBTHRESHOLD
UBX-CFG-ITFM.cwThreshold	CFG-ITFM-CWTHRESHOLD
UBX-CFG-ITFM.enable	CFG-ITFM-ENABLE
UBX-CFG-ITFM.enable2	CFG-ITFM-ENABLE_AUX
UBX-CFG-MOT	
UBX-CFG-MOT.gnssDistThdl	CFG-MOT-GNSSDIST_THRS
UBX-CFG-MOT.gnssSpeedThdl	CFG-MOT-GNSSSPEED_THRS
UBX-CFG-NAV5	
UBX-CFG-NAV5.cnoThresh	CFG-NAVSPG-INFIL_CNOTHRS
UBX-CFG-NAV5.cnoThreshNumSVs	CFG-NAVSPG-INFIL_NCNOTHRS
UBX-CFG-NAV5.dgnssTimeout	CFG-NAVSPG-CONSTR_DGNSSTO
UBX-CFG-NAV5.dynModel	CFG-NAVSPG-DYNMODEL
UBX-CFG-NAV5.fixMode	CFG-NAVSPG-FIXMODE
UBX-CFG-NAV5.fixedAlt	CFG-NAVSPG-CONSTR_ALT
UBX-CFG-NAV5.fixedAltVar	CFG-NAVSPG-CONSTR_ALTVAR
UBX-CFG-NAV5.minElev	CFG-NAVSPG-INFIL_MINELEV
UBX-CFG-NAV5.pAcc	CFG-NAVSPG-OUTFIL_PACC
UBX-CFG-NAV5.pDop	CFG-NAVSPG-OUTFIL_PDOP
UBX-CFG-NAV5.staticHoldMaxDist	CFG-MOT-GNSSDIST_THRS
UBX-CFG-NAV5.staticHoldThresh	CFG-MOT-GNSSSPEED_THRS
UBX-CFG-NAV5.tAcc	CFG-NAVSPG-OUTFIL_TACC, CFG-NAVSPG-OUTFIL_FACC
UBX-CFG-NAV5.tDop	CFG-NAVSPG-OUTFIL_TDOP
UBX-CFG-NAV5.utcStandard	CFG-NAVSPG-UTCSTANDARD

UBX message and field	Configuration item(s)
UBX-CFG-NAVX5	
UBX-CFG-NAVX5.ackAiding	CFG-NAVSPG-ACKAIDING
UBX-CFG-NAVX5.aopOrbMaxErr	CFG-ANA-ORBMAXERR
UBX-CFG-NAVX5.iniFix3D	CFG-NAVSPG-INIFIX3D
UBX-CFG-NAVX5.maxSVs	CFG-NAVSPG-INFIL_MAXSVS
UBX-CFG-NAVX5.minCNO	CFG-NAVSPG-INFIL_MINCNO
UBX-CFG-NAVX5.minSVs	CFG-NAVSPG-INFIL_MINSVS
UBX-CFG-NAVX5.sigAttenCompMode	CFG-NAVSPG-SIGATTCOMP
UBX-CFG-NAVX5.useAOP	CFG-ANA-USE_ANA
UBX-CFG-NAVX5.wknRollover	CFG-NAVSPG-WKNROLLOVER
UBX-CFG-NMEA	
UBX-CFG-NMEA.bdsTalkerId	CFG-NMEA-BDSTALKERID
UBX-CFG-NMEA.beidou	CFG-NMEA-FILT_BDS
UBX-CFG-NMEA.compat	CFG-NMEA-COMPAT
UBX-CFG-NMEA.consider	CFG-NMEA-CONSIDER
UBX-CFG-NMEA.dateFilt	CFG-NMEA-OUT_INVDATE
UBX-CFG-NMEA.galileo	CFG-NMEA-FILT_GAL
UBX-CFG-NMEA.glonass	CFG-NMEA-FILT_GLO
UBX-CFG-NMEA.gps	CFG-NMEA-FILT_GPS
UBX-CFG-NMEA.gpsOnlyFilter	CFG-NMEA-OUT_ONLYGPS
UBX-CFG-NMEA.gsvTalkerId	CFG-NMEA-GSVTALKERID
UBX-CFG-NMEA.highPrec	CFG-NMEA-HIGHPREC
UBX-CFG-NMEA.limit82	CFG-NMEA-LIMIT82
UBX-CFG-NMEA.mainTalkerId	CFG-NMEA-MAINTALKERID
UBX-CFG-NMEA.mskPosFilt	CFG-NMEA-OUT_MSKFIX
UBX-CFG-NMEA.nmeaVersion	CFG-NMEA-PROTVER
UBX-CFG-NMEA.numSV	CFG-NMEA-MAXSVS
UBX-CFG-NMEA.posFilt	CFG-NMEA-OUT_INVFIX
UBX-CFG-NMEA.qzss	CFG-NMEA-FILT_QZSS
UBX-CFG-NMEA.sbas	CFG-NMEA-FILT_SBAS
UBX-CFG-NMEA.svNumbering	CFG-NMEA-SVNUMBERING
UBX-CFG-NMEA.timeFilt	CFG-NMEA-OUT_INVTIME
UBX-CFG-NMEA.trackFilt	CFG-NMEA-OUT_FROZENCOG
UBX-CFG-ODO	
UBX-CFG-ODO.cogLpGain	CFG-ODO-COGLPGAIN
UBX-CFG-ODO.cogMaxPosAcc	CFG-ODO-COGMAXPOSACC
UBX-CFG-ODO.cogMaxSpeed	CFG-ODO-COGMAXSPEED
UBX-CFG-ODO.outLPCog	CFG-ODO-OUTLPCOG
UBX-CFG-ODO.outLPVel	CFG-ODO-OUTLPVEL
UBX-CFG-ODO.profile	CFG-ODO-PROFILE
UBX-CFG-ODO.useCOG	CFG-ODO-USE_COG
UBX-CFG-ODO.useODO	CFG-ODO-USE_ODO
UBX-CFG-ODO.velLpGain	CFG-ODO-VELLPGAIN
UBX-CFG-PM2	

UBX message and field	Configuration item(s)
UBX-CFG-PM2.doNotEnterOff	CFG-PM-DONOTENTEROFF
UBX-CFG-PM2.extintBackup	CFG-PM-EXTINTBACKUP
UBX-CFG-PM2.extintInactive	CFG-PM-EXTINTINACTIVE
UBX-CFG-PM2.extintInactivityMs	CFG-PM-EXTINTINACTIVITY
UBX-CFG-PM2.extintWake	CFG-PM-EXTINTWAKE
UBX-CFG-PM2.gridOffset	CFG-PM-GRIDOFFSET
UBX-CFG-PM2.limitPeakCurr	CFG-PM-LIMITPEAKCURR
UBX-CFG-PM2.maxStartupStateDur	CFG-PM-MAXACQTIME
UBX-CFG-PM2.minAcqTime	CFG-PM-MINACQTIME
UBX-CFG-PM2.mode	CFG-PM-OPERATEMODE
UBX-CFG-PM2.onTime	CFG-PM-ONTIME
UBX-CFG-PM2.searchPeriod	CFG-PM-ACQPERIOD
UBX-CFG-PM2.updateEPH	CFG-PM-UPDATEEPH
UBX-CFG-PM2.updatePeriod	CFG-PM-POSUPDATEPERIOD
UBX-CFG-PM2.waitTimeFix	CFG-PM-WAITTIMEFIX
UBX-CFG-PRT	
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-I2C-EXTENDEDTIMEOUT
UBX-CFG-PRT.inNmea	CFG-I2CINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.inUbx	CFG-I2CINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-I2COUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.outUbx	CFG-I2COUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.slaveAddr	CFG-I2C-ADDRESS
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-SPI-EXTENDEDTIMEOUT
UBX-CFG-PRT.ffCnt	CFG-SPI-MAXFF
UBX-CFG-PRT.inNmea	CFG-SPIINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.inUbx	CFG-SPIINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-SPIOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.outUbx	CFG-SPIOUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.spiMode	CFG-SPI-CPOLARITY, CFG-SPI-CPHASE
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD
UBX-CFG-PRT.baudRate	CFG-UART1-BAUDRATE
UBX-CFG-PRT.charLen	CFG-UART1-DATABITS
UBX-CFG-PRT.inNmea	CFG-UART1INPROT-NMEA

UBX message and field	Configuration item(s)
UBX-CFG-PRT.inProtoMask	CFG-UART1-ENABLED
UBX-CFG-PRT.inUbx	CFG-UART1INPROT-UBX
UBX-CFG-PRT.nStopBits	CFG-UART1-STOPBITS
UBX-CFG-PRT.outNmea	CFG-UART1OUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-UART1-ENABLED
UBX-CFG-PRT.outUbx	CFG-UART1OUTPROT-UBX
UBX-CFG-PRT.parity	CFG-UART1-PARITY
UBX-CFG-RATE	
UBX-CFG-RATE.measRate	CFG-RATE-MEAS
UBX-CFG-RATE.navRate	CFG-RATE-NAV
UBX-CFG-RATE.timeRef	CFG-RATE-TIMEREF
UBX-CFG-RINV	
UBX-CFG-RINV.data	CFG-RINV-DATA_SIZE, CFG-RINV-CHUNK0, CFG-RINV-CHUNK1, CFG-RINV-CHUNK2, CFG-RINV-CHUNK3
UBX-CFG-RINV.flags	CFG-RINV-DUMP, CFG-RINV-BINARY
UBX-CFG-SBAS	
UBX-CFG-SBAS.diffCorr	CFG-SBAS-USE_DIFFCORR
UBX-CFG-SBAS.integrity	CFG-SBAS-USE_INTEGRITY
UBX-CFG-SBAS.range	CFG-SBAS-USE_RANGING
UBX-CFG-SBAS.scanmode1	CFG-SBAS-PRNSCANMASK
UBX-CFG-SBAS.test	CFG-SBAS-USE_TESTMODE
UBX-CFG-SLAS	
UBX-CFG-SLAS.enabled	CFG-QZSS-USE_SLAS_DGNSS
UBX-CFG-SLAS.raim	CFG-QZSS-USE_SLAS_RAIM_UNCORR
UBX-CFG-SLAS.test	CFG-QZSS-USE_SLAS_TESTMODE
UBX-CFG-TP5	
UBX-CFG-TP5.active	CFG-TP-TP1_ENA
UBX-CFG-TP5.alignToTow	CFG-TP-ALIGN_TO_TOW_TP1
UBX-CFG-TP5.antCableDelay	CFG-TP-ANT_CABLEDELAY
UBX-CFG-TP5.freqPeriod	CFG-TP-PERIOD_TP1, CFG-TP-FREQ_TP1
UBX-CFG-TP5.freqPeriodLock	CFG-TP-PERIOD_LOCK_TP1, CFG-TP-FREQ_LOCK_TP1
UBX-CFG-TP5.gridUtcGnss	CFG-TP-TIMEGRID_TP1
UBX-CFG-TP5.isFreq	CFG-TP-PULSE_DEF
UBX-CFG-TP5.isLength	CFG-TP-PULSE_LENGTH_DEF
UBX-CFG-TP5.lockGnssFreq	CFG-TP-SYNC_GNSS_TP1
UBX-CFG-TP5.lockedOtherSet	CFG-TP-USE_LOCKED_TP1
UBX-CFG-TP5.polarity	CFG-TP-POL_TP1
UBX-CFG-TP5.pulseLenRatio	CFG-TP-LEN_TP1, CFG-TP-DUTY_TP1
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-LEN_LOCK_TP1, CFG-TP-DUTY_LOCK_TP1
UBX-CFG-TP5.userConfigDelay	CFG-TP-USER_DELAY_TP1

Table 58: Legacy UBX message fields and the corresponding configuration items

Configuration defaults

The following tables contain the configuration defaults for the firmware. Some of these values may be changed in production. Refer to the integration manual for product-specific details.

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-ANA-USE_ANA	0x10230001	L	-	-	0 (false)
CFG-ANA-ORBMAXERR	0x30230002	U2	-	m	100

Table 59: CFG-ANA configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-BATCH-ENABLE	0x10260013	L	-	-	0 (false)
CFG-BATCH-PIOENABLE	0x10260014	L	-	-	0 (false)
CFG-BATCH-MAXENTRIES	0x30260015	U2	-	-	0
CFG-BATCH-WARNTHRS	0x30260016	U2	-	-	0
CFG-BATCH-PIOACTIVELOW	0x10260018	L	-	-	0 (false)
CFG-BATCH-PIOID	0x20260019	U1	-	-	0
CFG-BATCH-EXTRAPVT	0x1026001a	L	-	-	0 (false)
CFG-BATCH-EXTRAODO	0x1026001b	L	-	-	0 (false)

Table 60: CFG-BATCH configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-BDS-USE_GEO_PRN	0x10340014	L	-	-	1 (true)

Table 61: CFG-BDS configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	0 (false)
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	0 (false)
CFG-HW-ANT_CFG_SHORTDET_POL	0x10a30030	L	-	-	1 (true)
CFG-HW-ANT_CFG_OPENDET	0x10a30031	L	-	-	0 (false)
CFG-HW-ANT_CFG_OPENDET_POL	0x10a30032	L	-	-	1 (true)
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	0 (false)
CFG-HW-ANT_CFG_PWRDOWN_POL	0x10a30034	L	-	-	1 (true)
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	0 (false)
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	7
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	6
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	5
CFG-HW-ANT_SUP_ENGINE	0x20a30054	E1	-	-	0 (EXT)
CFG-HW-ANT_SUP_SHORT_THR	0x20a30055	U1	-	mV	0
CFG-HW-ANT_SUP_OPEN_THR	0x20a30056	U1	-	mV	0
CFG-HW-RF_LNA_MODE	0x20a30057	E1	-	-	0 (NORMAL)

Table 62: CFG-HW configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-I2C-ADDRESS	0x20510001	U1	-	-	132

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-I2C-EXTENDEDTIMEOUT	0x10510002	L	-	-	0 (false)
CFG-I2C-ENABLED	0x10510003	L	-	-	0 (false)

Table 63: CFG-I2C configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-I2CINPROT-UBX	0x10710001	L	-	-	1 (true)
CFG-I2CINPROT-NMEA	0x10710002	L	-	-	1 (true)

Table 64: CFG-I2CINPROT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-I2COUTPROT-UBX	0x10720001	L	-	-	1 (true)
CFG-I2COUTPROT-NMEA	0x10720002	L	-	-	1 (true)

Table 65: CFG-I2COUTPROT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-INFMSG-UBX_I2C	0x20920001	X1	-	-	0x00
CFG-INFMSG-UBX_UART1	0x20920002	X1	-	-	0x00
CFG-INFMSG-UBX_SPI	0x20920005	X1	-	-	0x00
CFG-INFMSG-NMEA_I2C	0x20920006	X1	-	-	0x07 (ERROR | WARNING | NOTICE)
CFG-INFMSG-NMEA_UART1	0x20920007	X1	-	-	0x07 (ERROR | WARNING | NOTICE)
CFG-INFMSG-NMEA_SPI	0x2092000a	X1	-	-	0x07 (ERROR | WARNING | NOTICE)

Table 66: CFG-INFMSG configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-ITFM-BBTHRESHOLD	0x20410001	U1	-	-	3
CFG-ITFM-CWTHRESHOLD	0x20410002	U1	-	-	15
CFG-ITFM-ENABLE	0x1041000d	L	-	-	0 (false)
CFG-ITFM-ANTSETTING	0x20410010	E1	-	-	0 (UNKNOWN)
CFG-ITFM-ENABLE_AUX	0x10410013	L	-	-	0 (false)

Table 67: CFG-ITFM configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MOT-GNSSSPEED_THRS	0x20250038	U1	0.01	m/s	0
CFG-MOT-GNSSDIST_THRS	0x3025003b	U2	-	-	0

Table 68: CFG-MOT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-NMEA_ID_DTM_I2C	0x209100a6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_SPI	0x209100aa	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_UART1	0x209100a7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_I2C	0x209100dd	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_SPI	0x209100e1	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_UART1	0x209100de	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GGA_I2C	0x209100ba	U1	-	-	1

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-NMEA_ID_GGA_SPI	0x209100be	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_UART1	0x209100bb	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_I2C	0x209100c9	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_SPI	0x209100cd	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_UART1	0x209100ca	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GNS_I2C	0x209100b5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_SPI	0x209100b9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_UART1	0x209100b6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_I2C	0x209100ce	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_SPI	0x209100d2	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_UART1	0x209100cf	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSA_I2C	0x209100bf	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_SPI	0x209100c3	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_UART1	0x209100c0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GST_I2C	0x209100d3	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_SPI	0x209100d7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RLM_I2C	0x20910400	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_SPI	0x20910404	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_UART1	0x20910401	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VLW_I2C	0x209100e7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_SPI	0x209100eb	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_UART1	0x209100e8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART1	0x209100ed	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART1	0x209100f2	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART1	0x209100f7	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_I2C	0x2091034f	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_SPI	0x20910353	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_UART1	0x20910350	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_I2C	0x209101b9	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_SPI	0x209101bd	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART1	0x209101ba	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_I2C	0x20910354	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_SPI	0x20910358	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART1	0x20910355	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART1	0x20910197	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART1	0x209101a1	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART1	0x20910188	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_I2C	0x2091038b	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_SPI	0x2091038f	U1	-	-	0
CFG-MSGOUT-UBX_MON_SPAN_UART1	0x2091038c	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_UART1	0x2091019c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_AOPSTATUS_I2C	0x20910079	U1	-	-	0
CFG-MSGOUT-UBX_NAV_AOPSTATUS_SPI	0x2091007d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_AOPSTATUS_UART1	0x2091007a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_CLOCK_UART1	0x20910066	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_I2C	0x20910083	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_SPI	0x20910087	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_UART1	0x20910084	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART1	0x20910039	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_I2C	0x2091007e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_SPI	0x20910082	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_UART1	0x2091007f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART1	0x20910011	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_I2C	0x20910415	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_SPI	0x20910419	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_UART1	0x20910416	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_I2C	0x20910024	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_SPI	0x20910028	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART1	0x20910025	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_I2C	0x20910029	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART1	0x2091002a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_I2C	0x2091006a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_SPI	0x2091006e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_UART1	0x2091006b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_I2C	0x20910336	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_SPI	0x2091033a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SLAS_UART1	0x20910337	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_I2C	0x2091001a	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART1	0x2091001b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C	0x20910051	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI	0x20910055	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1	0x20910052	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C	0x20910056	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI	0x2091005a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1	0x20910057	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C	0x2091004c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI	0x20910050	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1	0x2091004d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C	0x20910047	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI	0x2091004b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1	0x20910048	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_UART1	0x20910061	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_I2C	0x20910386	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_SPI	0x2091038a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART1	0x20910387	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C	0x2091005b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI	0x2091005f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1	0x2091005c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_I2C	0x2091003d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_SPI	0x20910041	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART1	0x2091003e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_I2C	0x20910042	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_SPI	0x20910046	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART1	0x20910043	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEAS20_I2C	0x20910643	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEAS20_SPI	0x20910647	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEAS20_UART1	0x20910644	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEAS50_I2C	0x20910648	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEAS50_SPI	0x2091064c	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEAS50_UART1	0x20910649	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASC12_I2C	0x2091063e	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASC12_SPI	0x20910642	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASC12_UART1	0x2091063f	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASD12_I2C	0x20910639	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASD12_SPI	0x2091063d	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASD12_UART1	0x2091063a	U1	-	-	0

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART1	0x20910205	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART1	0x2091025f	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART1	0x20910232	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_I2C	0x20910092	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART1	0x20910093	U1	-	-	0

Table 69: CFG-MSGOUT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	3 (AUTO)
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	0 (false)
CFG-NAVSPG-WKNROLLOVER	0x30110017	U2	-	-	2148
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	0 (AUTO)
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	0 (PORT)
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	0 (false)
CFG-NAVSPG-USE_USRDAT	0x10110061	L	-	-	0 (false)
CFG-NAVSPG-USRDAT_MAJA	0x50110062	R8	-	m	6378137
CFG-NAVSPG-USRDAT_FLAT	0x50110063	R8	-	-	298.25722356300002502
CFG-NAVSPG-USRDAT_DX	0x40110064	R4	-	m	0
CFG-NAVSPG-USRDAT_DY	0x40110065	R4	-	m	0
CFG-NAVSPG-USRDAT_DZ	0x40110066	R4	-	m	0
CFG-NAVSPG-USRDAT_ROTX	0x40110067	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROTY	0x40110068	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROTZ	0x40110069	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4	-	ppm	0
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	3
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	32
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	6
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	5

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	0
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	0
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	100
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	350
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	150
CFG-NAVSPG-CONSTR_ALT	0x401100c1	I4	0.01	m	0
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m^2	10000
CFG-NAVSPG-CONSTR_DGNSSTO	0x201100c4	U1	-	s	60
CFG-NAVSPG-SIGATTCOMP	0x201100d6	E1	-	-	255 (AUTO)

Table 70: CFG-NAVSPG configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NMEA-PROTVER	0x20930001	E1	-	-	42 (V411)
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	0 (UNLIM)
CFG-NMEA-COMPAT	0x10930003	L	-	-	0 (false)
CFG-NMEA-CONSIDER	0x10930004	L	-	-	1 (true)
CFG-NMEA-LIMIT82	0x10930005	L	-	-	0 (false)
CFG-NMEA-HIGHPREC	0x10930006	L	-	-	0 (false)
CFG-NMEA-SVNUMBERING	0x20930007	E1	-	-	0 (STRICT)
CFG-NMEA-FILT_GPS	0x10930011	L	-	-	0 (false)
CFG-NMEA-FILT_SBAS	0x10930012	L	-	-	0 (false)
CFG-NMEA-FILT_GAL	0x10930013	L	-	-	0 (false)
CFG-NMEA-FILT_QZSS	0x10930015	L	-	-	0 (false)
CFG-NMEA-FILT_GLO	0x10930016	L	-	-	0 (false)
CFG-NMEA-FILT_BDS	0x10930017	L	-	-	0 (false)
CFG-NMEA-OUT_INVFIX	0x10930021	L	-	-	0 (false)
CFG-NMEA-OUT_MSKFIX	0x10930022	L	-	-	0 (false)
CFG-NMEA-OUT_INVTIME	0x10930023	L	-	-	0 (false)
CFG-NMEA-OUT_INVDATE	0x10930024	L	-	-	0 (false)
CFG-NMEA-OUT_ONLYGPS	0x10930025	L	-	-	0 (false)
CFG-NMEA-OUT_FROZENCOG	0x10930026	L	-	-	0 (false)
CFG-NMEA-MAINTALKERID	0x20930031	E1	-	-	0 (AUTO)
CFG-NMEA-GSVTALKERID	0x20930032	E1	-	-	0 (GNSS)
CFG-NMEA-BDSTALKERID	0x30930033	U2	-	-	0

Table 71: CFG-NMEA configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-ODO-USE_ODO	0x10220001	L	-	-	0 (false)
CFG-ODO-USE_COG	0x10220002	L	-	-	0 (false)
CFG-ODO-OUTLPVEL	0x10220003	L	-	-	0 (false)

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-ODO-OUTLPCOG	0x10220004	L	-	-	0 (false)
CFG-ODO-PROFILE	0x20220005	E1	-	-	0 (RUN)
CFG-ODO-COGMAXSPEED	0x20220021	U1	1e-1	m/s	10
CFG-ODO-COGMAXPOSACC	0x20220022	U1	-	-	50
CFG-ODO-VELLPGAIN	0x20220031	U1	-	-	153
CFG-ODO-COGLPGAIN	0x20220032	U1	-	-	76

Table 72: CFG-ODO configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-PM-OPERATEMODE	0x20d00001	E1	-	-	0 (FULL)
CFG-PM-POSUPDATEPERIOD	0x40d00002	U4	-	s	10
CFG-PM-ACQPERIOD	0x40d00003	U4	-	s	10
CFG-PM-GRIDOFFSET	0x40d00004	U4	-	s	0
CFG-PM-ONTIME	0x30d00005	U2	-	s	0
CFG-PM-MINACQTIME	0x20d00006	U1	-	s	0
CFG-PM-MAXACQTIME	0x20d00007	U1	-	s	0
CFG-PM-DONOTENTEROFF	0x10d00008	L	-	-	0 (false)
CFG-PM-WAITTIMEFIX	0x10d00009	L	-	-	0 (false)
CFG-PM-UPDATEEPH	0x10d0000a	L	-	-	1 (true)
CFG-PM-EXTINTWAKE	0x10d0000c	L	-	-	0 (false)
CFG-PM-EXTINTBACKUP	0x10d0000d	L	-	-	0 (false)
CFG-PM-EXTINTINACTIVE	0x10d0000e	L	-	-	0 (false)
CFG-PM-EXTINTINACTIVITY	0x40d0000f	U4	0.001	s	0
CFG-PM-LIMITPEAKCURR	0x10d00010	L	-	-	0 (false)

Table 73: CFG-PM configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-QZSS-USE_SLAS_DGNSS	0x10370005	L	-	-	1 (true)
CFG-QZSS-USE_SLAS_TESTMODE	0x10370006	L	-	-	0 (false)
CFG-QZSS-USE_SLAS_RAIM_UNCORR	0x10370007	L	-	-	0 (false)
CFG-QZSS-SLAS_MAX_BASELINE	0x30370008	U2	-	km	200

Table 74: CFG-QZSS configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-RATE-MEAS	0x30210001	U2	0.001	s	1000
CFG-RATE-NAV	0x30210002	U2	-	-	1
CFG-RATE-TIMEREF	0x20210003	E1	-	-	1 (GPS)

Table 75: CFG-RATE configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-RINV-DUMP	0x10c70001	L	-	-	0 (false)
CFG-RINV-BINARY	0x10c70002	L	-	-	0 (false)
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	22

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	0x203a656369746f4e ("Notice: ")
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	0x2061746164206f6e ("no data ")
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	0x0000216465766173 ("saved!\0\0")
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	0x0000000000000000

Table 76: CFG-RINV configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SBAS-USE_TESTMODE	0x10360002	L	-	-	0 (false)
CFG-SBAS-USE_RANGING	0x10360003	L	-	-	1 (true)
CFG-SBAS-USE_DIFFCORR	0x10360004	L	-	-	1 (true)
CFG-SBAS-USE_INTEGRITY	0x10360005	L	-	-	0 (false)
CFG-SBAS-PRNSCANMASK	0x50360006	X8	-	-	0x0000000000072bc8 (ALL | PRN123 | PRN126 | PRN127 | PRN128 | PRN129 | PRN131 | PRN133 | PRN136 | PRN137 | PRN138)

Table 77: CFG-SBAS configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SEC-CFG_LOCK	0x10f60009	L	-	-	0 (false)
CFG-SEC-CFG_LOCK_UNLOCKGRP1	0x30f6000a	U2	-	-	0
CFG-SEC-CFG_LOCK_UNLOCKGRP2	0x30f6000b	U2	-	-	0

Table 78: CFG-SEC configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	1 (true)
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	1 (true)
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	1 (true)
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	1 (true)
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	1 (true)
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	1 (true)
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	0 (false)
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	0 (false)
CFG-SIGNAL-BDS_B1C_ENA	0x1031000f	L	-	-	1 (true)
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1S_ENA	0x10310014	L	-	-	1 (true)
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	0 (false)
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	1 (true)

Table 79: CFG-SIGNAL configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPI-MAXFF	0x20640001	U1	-	-	50
CFG-SPI-CPOLARITY	0x10640002	L	-	-	0 (false)

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPI-CPHASE	0x10640003	L	-	-	0 (false)
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	0 (false)
CFG-SPI-ENABLED	0x10640006	L	-	-	0 (false)

Table 80: CFG-SPI configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPIINPROT-UBX	0x10790001	L	-	-	1 (true)
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	1 (true)

Table 81: CFG-SPIINPROT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	1 (true)
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	1 (true)

Table 82: CFG-SPIOUTPROT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-TP-PULSE_DEF	0x20050023	E1	-	-	0 (PERIOD)
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	1 (LENGTH)
CFG-TP-ANT_CABLEDELAY	0x30050001	I2	1e-9	s	50
CFG-TP-PERIOD_TP1	0x40050002	U4	1e-6	s	1000000
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	1e-6	s	1000000
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	1
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	1
CFG-TP-LEN_TP1	0x40050004	U4	1e-6	s	0
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	1e-6	s	100000
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	0
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	10
CFG-TP-USER_DELAY_TP1	0x40050006	I4	1e-9	s	0
CFG-TP-TP1_ENA	0x10050007	L	-	-	1 (true)
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	1 (true)
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	1 (true)
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	1 (true)
CFG-TP-POL_TP1	0x1005000b	L	-	-	1 (true)
CFG-TP-TIMEGRID_TP1	0x2005000c	E1	-	-	0 (UTC)

Table 83: CFG-TP configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-TXREADY-ENABLED	0x10a20001	L	-	-	0 (false)
CFG-TXREADY-POLARITY	0x10a20002	L	-	-	0 (false)
CFG-TXREADY-PIN	0x20a20003	U1	-	-	0
CFG-TXREADY-THRESHOLD	0x30a20004	U2	-	-	0
CFG-TXREADY-INTERFACE	0x20a20005	E1	-	-	0 (I2C)

Table 84: CFG-TXREADY configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART1-BAUDRATE	0x40520001	U4	-	-	38400
CFG-UART1-STOPBITS	0x20520002	E1	-	-	1 (ONE)
CFG-UART1-DATABITS	0x20520003	E1	-	-	0 (EIGHT)
CFG-UART1-PARITY	0x20520004	E1	-	-	0 (NONE)
CFG-UART1-ENABLED	0x10520005	L	-	-	1 (true)

Table 85: CFG-UART1 configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART1INPROT-UBX	0x10730001	L	-	-	1 (true)
CFG-UART1INPROT-NMEA	0x10730002	L	-	-	1 (true)

Table 86: CFG-UART1INPROT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	1 (true)
CFG-UART1OUTPROT-NMEA	0x10740002	L	-	-	1 (true)

Table 87: CFG-UART1OUTPROT configuration defaults

Related documents

[1] Data sheet of the receiver
[2] Integration manual of the receiver
[3] NMEA 0183 Standard for Interfacing Marine Electronic Devices, Version 4.11, November 2018

☞ For regular updates to u-blox documentation and to receive product change notifications please register on our homepage (https://www.u-blox.com).

Revision history

Revision	Date	Name	Status / Comments
R01	11-Jan-2022	jesk	Initial release
R02	02-May-2022	jesk	• Clarified UBX-RXM-PMREQ message description • Clarified CFG-HW-ANT_SUP_ENGINE configuration key description • Removed CFG-HW-SINGLE_CLK configuration key

Contact

For complete contact information visit us at www.u-blox.com.

u-blox Offices

North, Central and South America

u-blox America, Inc.
Phone: +1 703 483 3180
E-mail: info_us@u-blox.com

Regional Office West Coast
Phone: +1 408 573 3640
E-mail: info_us@u-blox.com

Technical Support
Phone: +1 703 483 3185
E-mail: support_us@u-blox.com

Headquarters

Europe, Middle East, Africa

u-blox AG
Phone: +41 44 722 74 44
E-mail: info@u-blox.com
Support: support@u-blox.com

Asia, Australia, Pacific

u-blox Singapore Pte. Ltd.
Phone: +65 6734 3811
E-mail: info_ap@u-blox.com
Support: support_ap@u-blox.com

Regional Office Australia
Phone: +61 3 9566 7255
E-mail: info_anz@u-blox.com
Support: support_ap@u-blox.com

Regional Office China (Beijing)
Phone: +86 10 68 133 545
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Chongqing)
Phone: +86 23 6815 1588
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shanghai)
Phone: +86 21 6090 4832
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shenzhen)
Phone: +86 755 8627 1083
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office India
Phone: +91 80 4050 9200
E-mail: info_in@u-blox.com
Support: support_in@u-blox.com

Regional Office Japan (Osaka)
Phone: +81 6 6941 3660
E-mail: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Japan (Tokyo)
Phone: +81 3 5775 3850
E-mail: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Korea
Phone: +82 2 542 0861
E-mail: info_kr@u-blox.com
Support: support_kr@u-blox.com

Regional Office Taiwan
Phone: +886 2 2657 1090
E-mail: info_tw@u-blox.com
Support: support_tw@u-blox.com