


Current Sense Resistors R1, R2, R3
 $- 350\text{mA} \Rightarrow 0.3 \text{ Ohms}$

Use formula: $I_{\text{led}} = V_{\text{thd}} / R_{\text{set}}$
 $V_{\text{thd}} = 0.1$

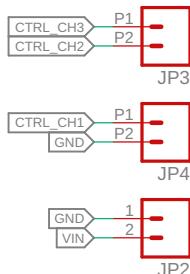

Released under the Creative Commons
Attribution Share-Alike 4.0 License
<https://creativecommons.org/licenses/by-sa/4.0/>

TITLE: picoBuck

SFE

Design by: Ethan Zonca/Mike Hord
Revised by: Priyanka Makin

REV:
v12

Date: 3/3/22 3:25 PM

Sheet: 1/1