

u-blox ZED-F9T

Interface Description

Abstract

The Interface Description describes the UBX (version 29), NMEA and RTCM protocols and serves as a reference manual for the u-blox ZED-F9T timing receiver.

Document Information

Title	u-blox ZED-F9T Interface Description	
Subtitle	v29.00	
Document type	Manual	
Document number	UBX-18053584	
Revision and date	R02 (fcc2171)	13 June 2019
Document status	Early Production Information	

Document status explanation

Objective Specification	Document contains target values. Revised and supplementary data will be published later.
Advance Information	Document contains data based on early testing. Revised and supplementary data will be published later.
Early Production Information	Document contains data from product verification. Revised and supplementary data may be published later.
Production Information	Document contains the final product specification.

u-blox reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. Reproduction, use, modification or disclosure to third parties of this document or any part thereof without the express permission of u-blox is strictly prohibited.

The information contained herein is provided "as is" and u-blox assumes no liability for the use of the information. No warranty, either express or implied, is given, including but not limited, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time. For most recent documents, please visit www.u-blox.com.

Copyright © 2019, u-blox AG.

u-blox is a registered trademark of u-blox Holding AG in the EU and other countries.

Table of Contents

Preface	1
1 Document Overview.....	1
2 Firmware and Protocol Versions	1
2.1 How to Determine the Version and the Location of the Firmware.....	1
2.1.1 Decoding the Boot Screen (for Protocol Version 24 and Above).....	1
2.1.2 Decoding the output of UBX-MON-VER (for Protocol Version 24 and above)	2
2.2 How to Determine the Supported Protocol Version of the u-blox Receiver	3
2.2.1 u-blox 9 Firmware and Supported Protocol Versions	3
3 Receiver Configuration.....	4
Interface Description.....	5
4 NMEA Protocol.....	5
4.1 Protocol Overview	5
4.1.1 Message Format.....	5
4.1.2 Talker ID	5
4.1.3 Protocol Configuration.....	6
4.1.4 Satellite Numbering	7
4.1.5 Latitude and Longitude Format.....	8
4.1.6 Position Fix Flags	8
4.1.7 Multi-GNSS Considerations.....	9
4.1.8 Output of Invalid/Unknown Data.....	10
4.1.9 Messages Overview	10
4.2 Standard Messages.....	12
4.2.1 DTM	12
4.2.2 GAQ	13
4.2.3 GBQ	13
4.2.4 GBS	14
4.2.5 GGA.....	15
4.2.6 GLL	16
4.2.7 GLQ.....	17
4.2.8 GNQ.....	17
4.2.9 GNS	18
4.2.10 GPQ	19
4.2.11 GRS.....	20
4.2.12 GSA.....	21
4.2.13 GST	22
4.2.14 GSV	23
4.2.15 RMC	24
4.2.16 TXT	25
4.2.17 VLW	26

4.2.18 VTG	27
4.2.19 ZDA.....	28
5 UBX Protocol	29
5.1 UBX Protocol Key Features.....	29
5.2 UBX Frame Structure.....	29
5.3 UBX Payload Definition Rules.....	29
5.3.1 Structure Packing.....	30
5.3.2 Reserved Elements.....	30
5.3.3 Undefined Values.....	30
5.3.4 Message Naming	30
5.3.5 Number Formats	30
5.4 UBX Checksum.....	31
5.5 UBX Message Flow	32
5.5.1 Acknowledgement.....	32
5.5.2 Polling Mechanism.....	32
5.6 UBX Class IDs	32
5.7 UBX Messages Overview	33
5.8 UBX-ACK (0x05)	37
5.8.1 UBX-ACK-ACK (0x05 0x01)	37
5.8.2 UBX-ACK-NAK (0x05 0x00)	37
5.9 UBX-CFG (0x06)	38
5.9.1 UBX-CFG-ANT (0x06 0x13)	38
5.9.2 UBX-CFG-CFG (0x06 0x09)	39
5.9.3 UBX-CFG-DAT (0x06 0x06).....	42
5.9.4 UBX-CFG-GEOFENCE (0x06 0x69).....	44
5.9.5 UBX-CFG-GNSS (0x06 0x3E).....	45
5.9.6 UBX-CFG-INF (0x06 0x02).....	47
5.9.7 UBX-CFG-ITFM (0x06 0x39)	49
5.9.8 UBX-CFG-LOGFILTER (0x06 0x47)	50
5.9.9 UBX-CFG-MSG (0x06 0x01).....	52
5.9.10 UBX-CFG-NAV5 (0x06 0x24)	53
5.9.11 UBX-CFG-NAVX5 (0x06 0x23)	56
5.9.12 UBX-CFG-NMEA (0x06 0x17).....	58
5.9.13 UBX-CFG-ODO (0x06 0x1E)	61
5.9.14 UBX-CFG-PM2 (0x06 0x3B).....	62
5.9.15 UBX-CFG-PRT (0x06 0x00)	64
5.9.16 UBX-CFG-PWR (0x06 0x57)	75
5.9.17 UBX-CFG-RATE (0x06 0x08)	76
5.9.18 UBX-CFG-RINV (0x06 0x34)	77
5.9.19 UBX-CFG-RST (0x06 0x04).....	78
5.9.20 UBX-CFG-TMODE2 (0x06 0x3D).....	79
5.9.21 UBX-CFG-TP5 (0x06 0x31).....	80
5.9.22 UBX-CFG-USB (0x06 0x1B)	82

5.9.23 UBX-CFG-VALDEL (0x06 0x8C).....	83
5.9.24 UBX-CFG-VALGET (0x06 0x8B).....	87
5.9.25 UBX-CFG-VALSET (0x06 0x8A)	88
5.10 UBX-INF (0x04)	92
5.10.1 UBX-INF-DEBUG (0x04 0x04)	92
5.10.2 UBX-INF-ERROR (0x04 0x00)	92
5.10.3 UBX-INF-NOTICE (0x04 0x02)	93
5.10.4 UBX-INF-TEST (0x04 0x03)	93
5.10.5 UBX-INF-WARNING (0x04 0x01)	94
5.11 UBX-LOG (0x21)	95
5.11.1 UBX-LOG-CREATE (0x21 0x07)	95
5.11.2 UBX-LOG-ERASE (0x21 0x03).....	96
5.11.3 UBX-LOG-FINDTIME (0x21 0x0E).....	96
5.11.4 UBX-LOG-INFO (0x21 0x08)	98
5.11.5 UBX-LOG-RETRIEVEPOSEXTRA (0x21 0x0f)	100
5.11.6 UBX-LOG-RETRIEVEPOS (0x21 0x0b).....	100
5.11.7 UBX-LOG-RETRIEVESTRING (0x21 0x0d)	101
5.11.8 UBX-LOG-RETRIEVE (0x21 0x09)	102
5.11.9 UBX-LOG-STRING (0x21 0x04)	103
5.12 UBX-MGA (0x13)	104
5.12.1 UBX-MGA-ACK (0x13 0x60)	104
5.12.2 UBX-MGA-BDS (0x13 0x03)	105
5.12.3 UBX-MGA-DBD (0x13 0x80)	109
5.12.4 UBX-MGA-GAL (0x13 0x02)	110
5.12.5 UBX-MGA-GLO (0x13 0x06)	114
5.12.6 UBX-MGA-GPS (0x13 0x00)	117
5.12.7 UBX-MGA-INI (0x13 0x40)	121
5.12.8 UBX-MGA-QZSS (0x13 0x05).....	127
5.13 UBX-MON (0x0A).....	131
5.13.1 UBX-MON-COMMS (0x0A 0x36).....	131
5.13.2 UBX-MON-GNSS (0x0A 0x28).....	132
5.13.3 UBX-MON-HW2 (0x0A 0x0B)	134
5.13.4 UBX-MON-HW3 (0x0A 0x37).....	135
5.13.5 UBX-MON-HW (0x0A 0x09)	137
5.13.6 UBX-MON-IO (0x0A 0x02).....	138
5.13.7 UBX-MON-MSGPP (0x0A 0x06)....	139
5.13.8 UBX-MON-PATCH (0x0A 0x27).....	139
5.13.9 UBX-MON-RF (0x0A 0x38)	140
5.13.10 UBX-MON-RXBUF (0x0A 0x07)	142
5.13.11 UBX-MON-RXR (0x0A 0x21)	142
5.13.12 UBX-MON-TXBUF (0x0A 0x08)	143
5.13.13 UBX-MON-VER (0x0A 0x04)	144
5.14 UBX-NAV (0x01)	145

5.14.1	UBX-NAV-CLOCK (0x01 0x22).....	145
5.14.2	UBX-NAV-DGPS (0x01 0x31)	145
5.14.3	UBX-NAV-DOP (0x01 0x04)	147
5.14.4	UBX-NAV-EOE (0x01 0x61)	147
5.14.5	UBX-NAV-GEOFENCE (0x01 0x39).....	148
5.14.6	UBX-NAV-HPOSECEF (0x01 0x13)	149
5.14.7	UBX-NAV-HPOSLLH (0x01 0x14).....	150
5.14.8	UBX-NAV-ODO (0x01 0x09)	151
5.14.9	UBX-NAV-ORB (0x01 0x34).....	151
5.14.10	UBX-NAV-POSECEF (0x01 0x01).....	154
5.14.11	UBX-NAV-POSLLH (0x01 0x02)	155
5.14.12	UBX-NAV-PVT (0x01 0x07).....	155
5.14.13	UBX-NAV-RESETODO (0x01 0x10)	158
5.14.14	UBX-NAV-SAT (0x01 0x35)	158
5.14.15	UBX-NAV-SIG (0x01 0x43)	160
5.14.16	UBX-NAV-STATUS (0x01 0x03)	162
5.14.17	UBX-NAV-TIMEBDS (0x01 0x24)	165
5.14.18	UBX-NAV-TIMEGAL (0x01 0x25).....	166
5.14.19	UBX-NAV-TIMEGLO (0x01 0x23)	167
5.14.20	UBX-NAV-TIMEGPS (0x01 0x20)	168
5.14.21	UBX-NAV-TIMELS (0x01 0x26)	169
5.14.22	UBX-NAV-TIMEUTC (0x01 0x21)	171
5.14.23	UBX-NAV-VELECEF (0x01 0x11)	172
5.14.24	UBX-NAV-VELNED (0x01 0x12)	173
5.15	UBX-RXM (0x02)	174
5.15.1	UBX-RXM-MEASX (0x02 0x14).....	174
5.15.2	UBX-RXM-PMREQ (0x02 0x41).....	176
5.15.3	UBX-RXM-RAWX (0x02 0x15)	178
5.15.4	UBX-RXM-RLM (0x02 0x59)	181
5.15.5	UBX-RXM-SFRBX (0x02 0x13)	182
5.16	UBX-SEC (0x27)	184
5.16.1	UBX-SEC-UNIQID (0x27 0x03)	184
5.17	UBX-TIM (0x0D)	185
5.17.1	UBX-TIM-SVIN (0x0D 0x04).....	185
5.17.2	UBX-TIM-TM2 (0x0D 0x03).....	186
5.17.3	UBX-TIM-TP (0x0D 0x01)	187
5.17.4	UBX-TIM-VRFY (0x0D 0x06)	189
5.18	UBX-UPD (0x09).....	190
5.18.1	UBX-UPD-SOS (0x09 0x14)	190
6	Configuration Interface	193
6.1	Configuration Database	193
6.2	Configuration Items.....	193
6.3	Configuration Layers.....	194

6.4 Configuration Interface Access	195
6.4.1 UBX Protocol Interface	195
6.5 Configuration Data	195
6.6 Configuration Transactions.....	195
6.7 Reset Behaviour.....	196
6.8 Configuration Reference.....	197
6.8.1 CFG-GEOFENCE: Geofencing Configuration	197
6.8.2 CFG-HW: Hardware Configuration	198
6.8.3 CFG-I2C: Configuration of the I2C Interface	199
6.8.4 CFG-I2CINPROT: Input Protocol Configuration of the I2C Interface	199
6.8.5 CFG-I2COUTPROT: Output Protocol Configuration of the I2C Interface	200
6.8.6 CFG-INFMSG: Inf Message Configuration	200
6.8.7 CFG-ITFM: Jamming/Interference Monitor configuration	201
6.8.8 CFG-LOGFILTER: Data Logger Configuration.....	202
6.8.9 CFG-MOT: Motion Detector Configuration	203
6.8.10 CFG-MSGOUT: Message Output Configuration	203
6.8.11 CFG-NAVSPG: Standard Precision Navigation Configuration	219
6.8.12 CFG-NMEA: NMEA Protocol Configuration	222
6.8.13 CFG-ODO: Odometer and Low-Speed Course Over Ground Filter Configuration..	224
6.8.14 CFG-RATE: Navigation and Measurement Rate Configuration	225
6.8.15 CFG-RINV: Remote Inventory	225
6.8.16 CFG-SBAS: SBAS Configuration.....	226
6.8.17 CFG-SIGNAL: Satellite Systems (GNSS) Signal Configuration	227
6.8.18 CFG-SPI: Configuration of the SPI Interface	228
6.8.19 CFG-SPIINPROT: Input Protocol Configuration of the SPI Interface.....	229
6.8.20 CFG-SPIOUTPROT: Output Protocol Configuration of the SPI Interface	229
6.8.21 CFG-TMODE: Time Mode Configuration	229
6.8.22 CFG-TP: Timepulse Configuration.....	231
6.8.23 CFG-UART1: Configuration of the UART1 Interface	234
6.8.24 CFG-UART1INPROT: Input Protocol Configuration of the UART1 Interface	235
6.8.25 CFG-UART1OUTPROT: Output Protocol Configuration of the UART1 Interface ..	235
6.8.26 CFG-UART2: Configuration of the UART2 Interface.....	236
6.8.27 CFG-UART2INPROT: Input Protocol Configuration of the UART2 Interface	237
6.8.28 CFG-UART2OUTPROT: Output Protocol Configuration of the UART2 Interface .	237
6.8.29 CFG-USB: Configuration of the USB Interface	237
6.8.30 CFG-USBINPROT: Input Protocol Configuration of the USB Interface	238
6.8.31 CFG-USBOOTPROT: Output Protocol Configuration of the USB Interface	238
6.9 Legacy UBX Message Fields Reference.....	239
7 RTCM Protocol	245
7.1 RTCM version 3.....	245
7.1.1 Supported Messages.....	245
7.1.2 u-blox Proprietary RTCM Messages	245
7.1.3 Configuration.....	246

7.1.4 Reference	246
Appendix	247
A Satellite Numbering	247
B UBX and NMEA Signal Identifiers	247
C Configuration Defaults	248
C.1 u-blox 9 ZED-F9T (version 1.00 TIM 2.01)	248
Related Documents.....	266
Overview.....	266
Related Documents for ZED-F9T and RCB-F9T	266
Revision History	267
Contact	268
u-blox Offices.....	268

Preface

1 Document Overview

The Interface Description is a reference describing the messages used by the u-blox receiver and is organized by the specific NMEA, UBX, and RTCM messages.

2 Firmware and Protocol Versions

The protocol version defines a set of messages that are applicable across various u-blox products. Each firmware used by a u-blox receiver supports a specific protocol version, which is not configurable.

The following sections will explain how to decode the shown information to get the firmware and the protocol version.

2.1 How to Determine the Version and the Location of the Firmware


The u-blox receiver contains a firmware in two different locations:

- Internal ROM
- External Flash memory

The location and the version of the currently running firmware can be found in the boot screen or in the UBX-MON-VER message.

2.1.1 Decoding the Boot Screen (for Protocol Version 24 and Above)

Boot screen for a u-blox receiver running from Flash:

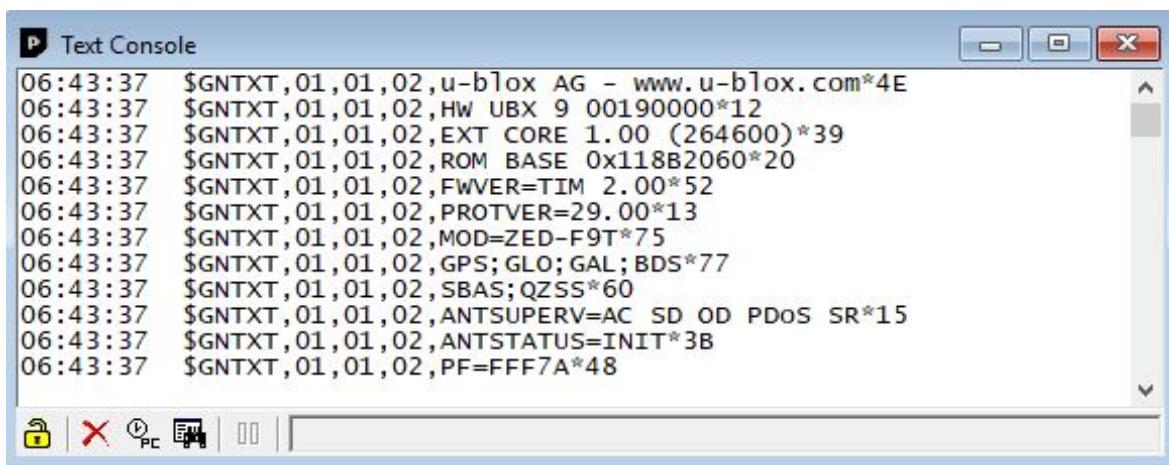

A screenshot of a Windows-style "Text Console" window titled "Text Console". The window displays a series of log entries starting with "06:43:37 \$GNTXT,01,01,02,u-blox AG - www.u-blox.com*4E" and ending with "06:43:37 \$GNTXT,01,01,02,PF=FFF7A*48". The entries provide detailed information about the receiver's configuration, including hardware version (HW UBX 9 00190000), firmware version (EXT CORE 1.00 (264600)*39), and supported constellations (GPS; GLO; GAL; BDS*77). It also shows antenna supervisory and status information.

Possible lines in the boot screen and their meanings:

Entry	Description
u-blox AG - www.u-blox.com	Start of the boot screen
HW UBX 9 00190000	Hardware version of the u-blox receiver (u-blox 9 receiver)
EXT CORE 1.00 (61ce84)	Firmware version 1.00 downloaded from Flash (revision number)
ROM BASE	Underlying firmware version in ROM (revision number)

Possible lines in the boot screen and their meanings: continued

Entry	Description
FWVER=TIM 2.00	Firmware of product category and version where SPG: Firmware of Standard Precision GNSS product HPG: Firmware of High Precision GNSS product ADR: Firmware of ADR product UDR: Firmware of UDR product TIM: Firmware of Time Sync product FTS: Firmware of Time & Frequency Sync product LAP: Firmware of Lane Accurate product
PROTVER=29.00	Supported protocol version
GPS;GLO;GAL;BDS	Supported major GNSS.
SBAS;IMES;QZSS	Supported augmentation systems.
ANTSUPERV=AC SD PDoS SR	Configuration of the Antenna supervisor where AC: Active Antenna Control enabled SD: Short Circuit Detection enabled OD: Open Circuit Detection enabled PDoS: Short Circuit Power Down Logic enabled SR: Automatic Recovery from Short state
PF=FFF79	Product configuration.

- ☞ The line containing the FWVER indicates which version of the firmware is currently running and is called **firmware version** in the rest of the document.
- ☞ The numbers in parentheses (revision numbers) should only be used to identify a known firmware version and are not guaranteed to increase over time.

2.1.2 Decoding the output of UBX-MON-VER (for Protocol Version 24 and above)

UBX - MON (Monitor) - VER (Version)

Software Version

EXT CORE 1.00 (264600)

Hardware Version

00190000

Extension(s)

ROM BASE 0x118B2060
 FwVER=TIM 2.00
 PROTVER=29.00
 MOD=ZED-F9T
 GPS;GLO;GAL;BDS
 SBAS;QZSS

Possible fields in UBX-MON-VER and their meanings:

Entry	Description
Software Version EXT CORE 1.00 (61ce84)	Currently running firmware version. If ROM CORE, then the u-blox receiver runs from ROM . If EXT CORE, then the u-blox receiver runs a firmware downloaded from Flash .
Hardware Version	The hardware version of the u-blox receiver.
Extension(s)	Extended information about the u-blox receiver firmware. See table below for the entries.

Not every entry is output by every u-blox receiver in the UBX-MON-VER extensions. This depends on the product, the firmware location and the firmware version.

Possible entries in UBX-MON-VER Extension(s):

Entry	Description
ROM BASE	Underlying firmware version in ROM. If such an entry is present, then the u-blox receiver runs a firmware downloaded from Flash .
FWVER=TIM 2.00	Firmware of product category and version where SPG: Firmware of Standard Precision GNSS product HPG: Firmware of High Precision GNSS product ADR: Firmware of ADR product UDR: Firmware of UDR product TIM: Firmware of Time Sync product FTS: Firmware of Time & Frequency Sync product LAP: Firmware of Lane Accurate product
PROTVER=29.00	Supported protocol version.
MOD=ZED-F9T	Module identification. Set in production.
GPS;GLO;GAL;BDS	Supported major GNSS.
SBAS;IMES;QZSS	Supported augmentation systems.

2.2 How to Determine the Supported Protocol Version of the u-blox Receiver

Each u-blox receiver reports its supported protocol version in the following ways:

- On start-up in the [boot screen](#)
- In the [UBX-MON-VER message](#)

with the line containing PROTVER (example: PROTVER=29.00).

Additionally, the firmware string, together with the firmware version, can be used to look up the corresponding protocol version. The tables below give an overview of the released firmware and their corresponding protocol versions.

2.2.1 u-blox 9 Firmware and Supported Protocol Versions

Firmware for Timing Products

Firmware version	Firmware string	Protocol Version
TIM 2.00	EXT CORE 1.00 (264600)	29.00
TIM 2.01	EXT CORE 1.00 (71b20c)	29.00

3 Receiver Configuration

u-blox positioning receivers are fully configurable with UBX protocol messages. The configuration used by the receiver during normal operation is called the "current configuration". The current configuration can be changed during normal operation by sending [UBX-CFG-VALSET](#) messages over any I/O port (except UART2). The receiver will change its current configuration immediately after receiving a configuration message. The receiver will always use the current configuration only.

The current configuration is loaded from permanent configuration hard-coded in the receiver firmware (the defaults) and from non-volatile memory (user configuration) on startup of the receiver. Changes made to the current configuration at run-time will be lost when there is a power cycle, a hardware reset or a (complete) controlled software reset (see chapter Forcing a Receiver Reset in the [Integration Manual](#)).

See the [Configuration Interface](#) section for a detailed description of the receiver configuration system, the explanation of the configuration concept and its principles and interfaces.

 The configuration interface has changed from earlier u-blox positioning receivers. There is some backwards compatibility. Users are strongly advised to only use the [Configuration Interface](#) referred to in the following sections. See also [Legacy Configuration Interface Compatibility](#).

 See the [Integration Manual](#) for a basic receiver configuration most commonly used.


Interface Description

4 NMEA Protocol

4.1 Protocol Overview

4.1.1 Message Format

NMEA messages sent by the GNSS receiver are based on NMEA 0183 Version 4.10. The following picture shows the structure of a NMEA protocol message.

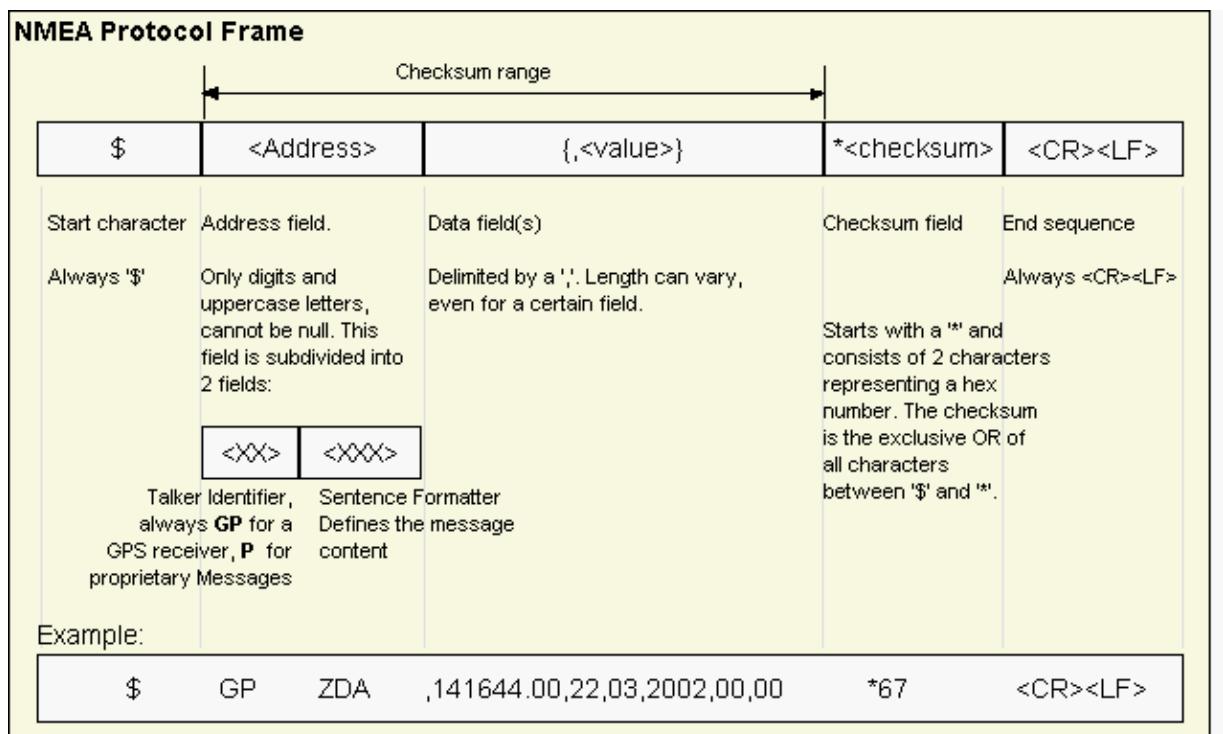

For further information on the NMEA Standard, refer to NMEA 0183 Standard For Interfacing Marine Electronic Devices, Version 4.10, June, 2012. See <http://www.nmea.org/> for ordering instructions.

The NMEA standard allows for proprietary, manufacturer-specific messages to be added. These shall be marked with a manufacturer mnemonic. The mnemonic assigned to u-blox is UBX and is used for all non-standard messages. These proprietary NMEA messages therefore have the address field set to PUBX. The first data field in a PUBX message identifies the message number with two digits.

4.1.2 Talker ID

One of the ways the NMEA standard differentiates between GNSS is by using a two-letter message identifier, the 'Talker ID'. The specific Talker ID used by a u-blox receiver will depend on the device model and system configuration. The table below shows the Talker ID that will be used for various GNSS configurations.

NMEA Talker IDs

Configured GNSS	Talker ID
GPS, SBAS, QZSS	GP
GLONASS	GL
Galileo	GA
BeiDou	GB*
Any combination of GNSS	GN

*This is a u-blox extension to the NMEA 4.10 standard. Only NMEA 4.11 defines the GB talker ID.
See also Extended Configuration in [Protocol Configuration](#).

4.1.3 Protocol Configuration

The [NMEA protocol](#) on u-blox receivers can be configured to the need of customer applications using configuration items [CFG-NMEA-*](#).

There are four NMEA standards supported. The default NMEA version is 4.10. Alternatively versions 4.00, 2.3, and 2.1 can be enabled (for details on how this affects the output refer to section [Position Fix Flags in NMEA Mode](#)).

NMEA defines satellite numbering systems for some, but not all GNSS (this is partly dependent on the NMEA version). Satellite numbers for unsupported GNSS can be configured using configuration items [CFG-NMEA-*](#). Unknown satellite numbers are always reported as a null NMEA field (i.e. an empty string).

The NMEA specification indicates that the GGA message is GPS specific. However, u-blox receivers support the output of a GGA message for each of the Talker IDs.

NMEA filtering flags

Parameter	Description
Position filtering	Enable positions from failed or invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Valid position filtering	Enable positions from invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Time filtering	Enable the receiver's best knowledge of time to be output, even though it might be wrong.
Date filtering	Enable the receiver's best knowledge of date to be output, even though it might be wrong.
GPS-only filtering	Restrict output to GPS satellites only.
Track filtering	Permit course over ground (COG) to be reported even when it would otherwise be frozen.

NMEA flags

Parameter	Description
Compatibility Mode	Some older NMEA applications expect the NMEA output to be formatted in a specific way, for example, they will only work if the latitude and longitude have exactly four digits behind the decimal point. u-blox receivers offer a compatibility mode to support these legacy applications.

NMEA flags continued

Parameter	Description
Consideration Mode	u-blox receivers use a sophisticated signal quality detection scheme, in order to produce the best possible position output. This algorithm considers all SV measurements, and may eventually decide to only use a subset thereof, if it improves the overall position accuracy. If Consideration mode is enabled, all satellites, which were considered for navigation, are communicated as being used for the position determination. If Consideration Mode is disabled, only those satellites which after the consideration step remained in the position output are marked as being used.
Limit82 Mode	Enabling this mode will limit the NMEA sentence length to a maximum of 82 characters.
High Precision Mode	Enabling this mode increases precision of the position output. Latitude and longitude then have seven digits after the decimal point, and altitude has three digits after the decimal point. Note: The High Precision Mode cannot be set in conjunction with either Compatibility Mode or Limit82 Mode.

Extended configuration

Option	Description
GNSS to filter	Filters satellites based on their GNSS
Satellite numbering	This field configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID.
Main Talker ID	By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see configuration items CFG-SIGNAL-*). This field enables the main Talker ID to be overridden.
GSV Talker ID	By default the Talker ID for GSV messages is GNSS specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden.
BDS Talker ID	By default the Talker ID for BeiDou is 'GB'. This field enables the BeiDou Talker ID to be overridden.

Extra fields in NMEA 4.10 and above

Message	Extra fields
GBS	systemId, signalId
GNS	navStatus
GRS	systemId, signalId
GSA	systemId
GSV	signalId
RMC	navStatus

4.1.4 Satellite Numbering

The NMEA protocol (V4.10) identifies GNSS satellites with a one digit system ID and a two digit satellite number. u-blox receivers support this method in their NMEA output when "strict" SV numbering is selected.

In most cases this is the default setting, but can be checked or set using configuration items [CFG-NMEA-*](#).

In order to support QZSS within current receivers and prepare for support of other systems (e.g.

Galileo) in future receivers, an "extended" SV numbering scheme can be enabled (using configuration items [CFG-NMEA-*](#)).

This uses the NMEA-defined numbers where possible, but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3 digit numbers, which may not be supported by some NMEA parsing software. For example QZSS satellites are reported using numbers in the range 193 to 197.

See [Satellite Numbering](#) for a complete list of satellite numbers.

 GLONASS satellites can be tracked before they have been identified. In NMEA output, such unknown satellite numbers are always reported as a null field (i.e. an empty string).

4.1.5 Latitude and Longitude Format

According to the NMEA Standard, Latitude and Longitude are output in the format Degrees, Minutes and (Decimal) Fractions of Minutes. To convert to Degrees and Fractions of Degrees, or Degrees, Minutes, Seconds and Fractions of seconds, the 'Minutes' and 'Fractional Minutes' parts need to be converted. In other words: If the GPS Receiver reports a Latitude of 4717.112671 North and Longitude of 00833.914843 East, this is

Latitude 47 Degrees, 17.112671 Minutes

Longitude 8 Degrees, 33.914843 Minutes

or

Latitude 47 Degrees, 17 Minutes, 6.76026 Seconds

Longitude 8 Degrees, 33 Minutes, 54.89058 Seconds

or

Latitude 47.2852118 Degrees

Longitude 8.56524738 Degrees

4.1.6 Position Fix Flags

This section shows how u-blox implements the NMEA protocol and the conditions determining how flags are set.

Flags in NMEA 4.10 and above

NMEA Message Field	GLL, RMC status	GGA quality	GLL, VTG posMode	RMC, GNS posMode
No position fix (at power-up, after losing satellite lock)	V	0	N	N
GNSS fix, but user limits exceeded	V	0	N	N
Dead reckoning fix, but user limits exceeded	V	6	E	E
Dead reckoning fix	A	6	E	E
RTK float	A	5	D	F
RTK fixed	A	4	D	R
2D GNSS fix	A	1/2	A/D	A/D
3D GNSS fix	A	1/2	A/D	A/D
Combined GNSS/dead reckoning fix	A	1/2	A/D	A/D
	See below (1)	See below (2)	See below (3)	See below (3)

(1) Possible values for status: V = Data invalid, A = Data valid

(2) Possible values for quality: 0 = No fix, 1 = Autonomous GNSS fix, 2 = Differential GNSS fix, 4 =

RTK fixed, 5 = RTK float, 6 = Estimated/Dead reckoning fix

(3) Possible values for posMode: N = No fix, E = Estimated/Dead reckoning fix, A = Autonomous GNSS fix, D = Differential GNSS fix, F = RTK float, R = RTK fixed

Flags in NMEA 2.3 and above

NMEA Message Field	GLL, RMC status	GGA quality	GSA navMode	GLL, VTG, RMC, GNS posMode
No position fix (at power-up, after losing satellite lock)	V	0	1	N
GNSS fix, but user limits exceeded	V	0	1	N
Dead reckoning fix, but user limits exceeded	V	6	2	E
Dead reckoning fix	A	6	2	E
2D GNSS fix	A	1/2	2	A/D
3D GNSS fix	A	1/2	3	A/D
Combined GNSS/dead reckoning fix	A	1/2	3	A/D
	See below (1)	See below (2)	See below (3)	See below (4)

(1) Possible values for status: V = Data invalid, A = Data valid

(2) Possible values for quality: 0 = No fix, 1 = Autonomous GNSS fix, 2 = Differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = Estimated/Dead reckoning fix

(3) Possible values for navMode: 1 = No fix, 2 = 2D fix, 3 = 3D fix

(4) Possible values for posMode: N = No fix, E = Estimated/Dead reckoning fix, A = Autonomous GNSS fix, D = Differential GNSS fix, F = RTK float, R = RTK fixed

Flags in NMEA 2.1 and below

The flags in NMEA 2.1 and below are the same as NMEA 2.3 and above but with the following differences:

- The posMode field is not output for GLL, RMC and VTG messages (each message has one field less).
- The GGA quality field is set to 1 (instead of 6) for both types of dead reckoning fix.

4.1.7 Multi-GNSS Considerations

Many applications which process NMEA messages assume that only a single GNSS is active. However, when multiple GNSS are configured, the NMEA specification requires the output to change in the following ways:

NMEA output for Multi-GNSS

Change	Description
Main Talker ID	The main Talker ID will be 'GN' (e.g. instead of 'GP' for a GPS receiver)
GSV Talker IDs	The GSV message reports the signal strength of the visible satellites. However, the Talker ID it uses is specific to the GNSS it is reporting information for, so for a multi-GNSS receiver it will not be the same as the main Talker ID. (e.g. other messages will be using the 'GN' Talker ID but the GSV message will use GNSS-specific Talker IDs)

NMEA output for Multi-GNSS continued

Change	Description
Multiple GSA and GRS Messages	Multiple GSA and GRS messages are output for each fix, one for each GNSS. This may confuse applications which assume they are output only once per position fix (as is the case for a single GNSS receiver).

4.1.8 Output of Invalid/Unknown Data

By default the receiver will not output invalid data. In such cases, it will output empty fields.

A valid position fix is reported as follows:

```
$GPGLL,4717.11634,N,00833.91297,E,124923.00,A,A*6E
```

An invalid position fix (but time valid) is reported as follows:

```
$GPGLL,,,,,124924.00,V,N*42
```

If Time is unknown (e.g. during a cold-start):

```
$GPGLL,,,,,V,N*64
```

Note:

Output of invalid data marked with the 'Invalid/Valid' Flags can be enabled using the configuration items [CFG-NMEA-*](#).

4.1.9 Messages Overview

When configuring NMEA messages using the configuration items [CFG-NMEA-*](#)), the Class/Ids shown in the table shall be used.

Page	Mnemonic	Cls/ID	Description
NMEA Standard Messages		Standard Messages	
12	DTM	0xF0 0x0A	Datum Reference
13	GAQ	0xF0 0x45	Poll a standard message (if the current Talker ID is GA)
13	GBQ	0xF0 0x44	Poll a standard message (if the current Talker ID is GB)
14	GBS	0xF0 0x09	GNSS Satellite Fault Detection
15	GGA	0xF0 0x00	Global positioning system fix data
16	GLL	0xF0 0x01	Latitude and longitude, with time of position fix and status
17	GLQ	0xF0 0x43	Poll a standard message (if the current Talker ID is GL)
17	GNQ	0xF0 0x42	Poll a standard message (if the current Talker ID is GN)
18	GNS	0xF0 0x0D	GNSS fix data
19	GPQ	0xF0 0x40	Poll a standard message (if the current Talker ID is GP)
20	GRS	0xF0 0x06	GNSS Range Residuals
21	GSA	0xF0 0x02	GNSS DOP and Active Satellites
22	GST	0xF0 0x07	GNSS Pseudo Range Error Statistics
23	GSV	0xF0 0x03	GNSS Satellites in View
24	RMC	0xF0 0x04	Recommended Minimum data
25	TXT	0xF0 0x41	Text Transmission
26	VLW	0xF0 0x0F	Dual ground/water distance

NMEA Messages Overview continued

Page	Mnemonic	Cls/ID	Description
27	VTG	0xF0 0x05	Course over ground and Ground speed
28	ZDA	0xF0 0x08	Time and Date

4.2 Standard Messages

Standard Messages: i.e. Messages as defined in the NMEA Standard.

4.2.1 DTM

4.2.1.1 Datum Reference

Message	DTM		
Description	Datum Reference		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	This message gives the difference between the current datum and the reference datum. The current datum defaults to WGS84. The reference datum cannot be changed and is always set to WGS84.		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x0A	11	

Message Structure:

```
$xxDTM,datum,subDatum,lat,NS,lon,EW,alt,refDatum*cs<CR><LF>
```

Example:

```
$GPDTM,W84,,0.0,N,0.0,E,0.0,W84*6F
```

```
$GPDTM,999,,0.08,N,0.07,E,-47.7,W84*1C
```

Field No.	Name	Unit	Format	Example	Description
0	xxDTM	-	string	\$GPDTM	DTM Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	datum	-	string	W84	Local datum code: W84 = WGS84, P90 = PZ90, 999 = user defined
2	subDatum	-	string	-	A null field
3	lat	min	numeric	0.08	Offset in Latitude
4	NS	-	character	S	North/South indicator
5	lon	min	numeric	0.07	Offset in Longitude
6	EW	-	character	E	East/West indicator
7	alt	m	numeric	-2.8	Offset in altitude
8	refDatum	-	string	W84	Reference datum code: W84 (WGS 84, fixed field)
9	cs	-	hexadecimal	*67	Checksum
10	<CR><LF>	-	character	-	Carriage return and line feed

4.2.2 GAQ

4.2.2.1 Poll a standard message (if the current Talker ID is GA)

Message	GAQ		
Description	Poll a standard message (if the current Talker ID is GA)		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Poll Request		
Comment	Polls a standard NMEA message if the current Talker ID is GA		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x45	4	

Message Structure:

```
$xxGAQ, msgId*cs<CR><LF>
```

Example:

```
$EIGAQ,RMC*2B
```

Field No.	Name	Unit	Format	Example	Description
0	xxGAQ	-	string	\$EIGAQ	GAQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	-	string	RMC	Message ID of the message to be polled
2	cs	-	hexadecimal	*2B	Checksum
3	<CR><LF>	-	character	-	Carriage return and line feed

4.2.3 GBQ

4.2.3.1 Poll a standard message (if the current Talker ID is GB)

Message	GBQ		
Description	Poll a standard message (if the current Talker ID is GB)		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Poll Request		
Comment	Polls a standard NMEA message if the current Talker ID is GB		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x44	4	

Message Structure:

```
$xxGBQ, msgId*cs<CR><LF>
```

Example:

```
$EIGBQ,RMC*28
```

Field No.	Name	Unit	Format	Example	Description
0	xxGBQ	-	string	\$EIGBQ	GBQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	-	string	RMC	Message ID of the message to be polled
2	cs	-	hexadecimal	*28	Checksum
3	<CR><LF>	-	character	-	Carriage return and line feed

4.2.4 GBS

4.2.4.1 GNSS Satellite Fault Detection

Message	GBS		
Description	GNSS Satellite Fault Detection		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	<p>This message outputs the results of the Receiver Autonomous Integrity Monitoring Algorithm (RAIM).</p> <ul style="list-style-type: none"> The fields errLat, errLon and errAlt output the standard deviation of the position calculation, using all satellites which pass the RAIM test successfully. The fields errLat, errLon and errAlt are only output if the RAIM process passed successfully (i.e. no or successful edits happened). These fields are never output if 4 or fewer satellites are used for the navigation calculation (because, in such cases, integrity can not be determined by the receiver autonomously). The fields prob, bias and stddev are only output if at least one satellite failed in the RAIM test. <p>If more than one satellites fail the RAIM test, only the information for the worst satellite is output in this message.</p>		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x09	13	

Message Structure:

```
$xxGBS,time,errLat,errLon,errAlt,svid,prob,bias,stddev,systemId,signalId*cs<CR><LF>
```

Example:

```
$GPGBS,235503.00,1.6,1.4,3.2,,,*40
$GPGBS,235458.00,1.4,1.3,3.1,03,,,-21.4,3.8,1,0*5B
```

Field No.	Name	Unit	Format	Example	Description
0	xxGBS	-	string	\$GPGBS	GBS Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	-	hhmmss.ss	235503.00	UTC time to which this RAIM sentence belongs, see note on UTC representation
2	errLat	m	numeric	1.6	Expected error in latitude
3	errLon	m	numeric	1.4	Expected error in longitude
4	errAlt	m	numeric	3.2	Expected error in altitude
5	svid	-	numeric	03	Satellite ID of most likely failed satellite
6	prob	-	numeric	-	Probability of missed detection: null (not supported, fixed field)
7	bias	m	numeric	-21.4	Estimated bias of most likely failed satellite (a priori residual)
8	stddev	m	numeric	3.8	Standard deviation of estimated bias
9	systemId	-	numeric	1	NMEA defined GNSS System ID, see Signal Identifiers table (only available in NMEA 4.10 and later)

GBS continued

Field No.	Name	Unit	Format	Example	Description
10	signalId	-	numeric	0	NMEA defined GNSS Signal ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
11	cs	-	hexadecimal	*5B	Checksum
12	<CR><LF>	-	character	-	Carriage return and line feed

4.2.5 GGA

4.2.5.1 Global positioning system fix data

Message	GGA		
Description	Global positioning system fix data		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	<p>The output of this message is dependent on the currently selected datum (default: WGS84). The NMEA specification indicates that the GGA message is GPS specific. However, when the receiver is configured for multi-GNSS, the GGA message contents will be generated from the multi-GNSS solution. For multi-GNSS use, it is recommended that the NMEA-GNS message is used instead.</p> <p>Time and position, together with GPS fixing related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).</p>		
Message Info	ID for CFG-MSG	Number of fields	
	0xFO 0x00	17	

Message Structure:

```
$xxGGA,time,lat,NS,lon,EW,quality,numSV,HDOP,alt,altUnit,sep,sepUnit,diffAge,diffStation*cs<CR><LF>
```

Example:

```
$GPGGA,092725.00,4717.11399,N,00833.91590,E,1,08,1.01,499.6,M,48.0,M,,*5B
```

Field No.	Name	Unit	Format	Example	Description
0	xxGGA	-	string	\$GPGGA	GGA Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	-	hhmmss.ss	092725.00	UTC time, see note on UTC representation
2	lat	-	ddmm. mmmmm	4717.11399	Latitude (degrees & minutes), see format description
3	NS	-	character	N	North/South indicator
4	lon	-	dddmm. mmmmm	00833.91590	Longitude (degrees & minutes), see format description
5	EW	-	character	E	East/West indicator
6	quality	-	digit	1	Quality indicator for position fix, see position fix flags description
7	numSV	-	numeric	08	Number of satellites used (range: 0-12)
8	HDOP	-	numeric	1.01	Horizontal Dilution of Precision
9	alt	m	numeric	499.6	Altitude above mean sea level

GGA continued

Field No.	Name	Unit	Format	Example	Description
10	altUnit	-	character	M	Altitude units: M (meters, fixed field)
11	sep	m	numeric	48.0	Geoid separation: difference between ellipsoid and mean sea level
12	sepUnit	-	character	M	Geoid separation units: M (meters, fixed field)
13	diffAge	s	numeric	-	Age of differential corrections (null when DGPS is not used)
14	diffStation	-	numeric	-	ID of station providing differential corrections (null when DGPS is not used)
15	cs	-	hexadecimal	*5B	Checksum
16	<CR><LF>	-	character	-	Carriage return and line feed

4.2.6 GLL

4.2.6.1 Latitude and longitude, with time of position fix and status

Message	GLL		
Description	Latitude and longitude, with time of position fix and status		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	The output of this message is dependent on the currently selected datum (default: WGS84) -		
Message Info	ID for CFG-MSG	Number of fields	
	0xFO	0x01	10

Message Structure:

```
$xxGLL,lat,NS,lon,EW,time,status,posMode*cs<CR><LF>
```

Example:

```
$GPGLL,4717.11364,N,00833.91565,E,092321.00,A,A*60
```

Field No.	Name	Unit	Format	Example	Description
0	xxGLL	-	string	\$GPGLL	GLL Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	lat	-	ddmm. mmmmm	4717.11364	Latitude (degrees & minutes), see format description
2	NS	-	character	N	North/South indicator
3	lon	-	dddmm. mmmmm	00833.91565	Longitude (degrees & minutes), see format description
4	EW	-	character	E	East/West indicator
5	time	-	hhmmss.ss	092321.00	UTC time, see note on UTC representation
6	status	-	character	A	Data validity status, see position fix flags description
7	posMode	-	character	A	Positioning mode, see position fix flags description (only available in NMEA 2.3 and later)

GLL continued

Field No.	Name	Unit	Format	Example	Description
8	cs	-	hexadecimal	*60	Checksum
9	<CR><LF>	-	character	-	Carriage return and line feed

4.2.7 GLQ

4.2.7.1 Poll a standard message (if the current Talker ID is GL)

Message	GLQ		
Description	Poll a standard message (if the current Talker ID is GL)		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Poll Request		
Comment	Polls a standard NMEA message if the current Talker ID is GL		
Message Info	ID for CFG-MSG	Number of fields	
	0xFO	0x43	4

Message Structure:

```
$xxGLQ, msgId*cs<CR><LF>
```

Example:

```
$EIGLQ,RMC*3A
```

Field No.	Name	Unit	Format	Example	Description
0	xxGLQ	-	string	\$EIGLQ	GLQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	-	string	RMC	Message ID of the message to be polled
2	cs	-	hexadecimal	*3A	Checksum
3	<CR><LF>	-	character	-	Carriage return and line feed

4.2.8 GNQ

4.2.8.1 Poll a standard message (if the current Talker ID is GN)

Message	GNQ		
Description	Poll a standard message (if the current Talker ID is GN)		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Poll Request		
Comment	Polls a standard NMEA message if the current Talker ID is GN		
Message Info	ID for CFG-MSG	Number of fields	
	0xFO	0x42	4

Message Structure:

```
$xxGNQ, msgId*cs<CR><LF>
```

Example:

```
$EIGNQ,RMC*3A
```

Field No.	Name	Unit	Format	Example	Description

GNQ continued

Field No.	Name	Unit	Format	Example	Description
0	xxGNQ	-	string	\$EIGNQ	GNQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	-	string	RMC	Message ID of the message to be polled
2	cs	-	hexadecimal	*3A	Checksum
3	<CR><LF>	-	character	-	Carriage return and line feed

4.2.9 GNS

4.2.9.1 GNSS fix data

Message	GNS		
Description	GNSS fix data		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	The output of this message is dependent on the currently selected datum (default: WGS84) Time and position, together with GNSS fixing related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0xD	16	

Message Structure:

```
$xxGNS,time,lat,NS,lon,EW,posMode,numSV,HDOP,alt,sep,diffAge,diffStation,navStatus*cs<CR><LF>
```

Example:

```
$GNGNS,103600.01,5114.51176,N,00012.29380,W,ANNN,07,1.18,111.5,45.6,,,V*00
```

```
$GNGNS,122310.2,3722.425671,N,12258.856215,W,DAAA,14,0.9,1005.543,6.5,,,V*0E
```

```
$GPGNS,122310.2,,,,,,07,,,5.2,23,V*02
```

Field No.	Name	Unit	Format	Example	Description
0	xxGNS	-	string	\$GPGNS	GNS Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	-	hhmmss.ss	091547.00	UTC time, see note on UTC representation
2	lat	-	ddmm. mmmmm	5114.50897	Latitude (degrees & minutes), see format description
3	NS	-	character	N	North/South indicator
4	lon	-	dddmm. mmmmm	00012.28663	Longitude (degrees & minutes), see format description
5	EW	-	character	E	East/West indicator
6	posMode	-	character	AAAA	Positioning mode, see position fix flags description . First character for GPS, second character for GLONASS, Third character for Galileo, Fourth character for BeiDou
7	numSV	-	numeric	10	Number of satellites used (range: 0-99)
8	HDOP	-	numeric	0.83	Horizontal Dilution of Precision

GNS continued

Field No.	Name	Unit	Format	Example	Description
9	alt	m	numeric	111.1	Altitude above mean sea level
10	sep	m	numeric	45.6	Geoid separation: difference between ellipsoid and mean sea level
11	diffAge	s	numeric	-	Age of differential corrections (null when DGPS is not used)
12	diffStation	-	numeric	-	ID of station providing differential corrections (null when DGPS is not used)
13	navStatus	-	character	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
14	cs	-	hexadecimal	*71	Checksum
15	<CR><LF>	-	character	-	Carriage return and line feed

4.2.10 GPQ

4.2.10.1 Poll a standard message (if the current Talker ID is GP)

Message	GPQ		
Description	Poll a standard message (if the current Talker ID is GP)		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Poll Request		
Comment	Polls a standard NMEA message if the current Talker ID is GP		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x40	4	

Message Structure:

```
$xxGPQ, msgId*cs<CR><LF>
```

Example:

```
$EIGPQ, RMC*3A
```

Field No.	Name	Unit	Format	Example	Description
0	xxGPQ	-	string	\$EIGPQ	GPQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	-	string	RMC	Message ID of the message to be polled
2	cs	-	hexadecimal	*3A	Checksum
3	<CR><LF>	-	character	-	Carriage return and line feed

4.2.11 GRS

4.2.11.1 GNSS Range Residuals

Message	GRS		
Description	GNSS Range Residuals		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	This message relates to associated GGA and GSA messages. If less than 12 SVs are available, the remaining fields are output empty. If more than 12 SVs are used, only the residuals of the first 12 SVs are output, in order to remain consistent with the NMEA standard. In a multi-GNSS system this message will be output multiple times, once for each GNSS.		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x06	19	

Message Structure:

```
$xxGRS,time,mode{,residual},systemId,signalId*cs<CR><LF>
```

Example:

```
$GNGRS,104148.00,1,2.6,2.2,-1.6,-1.1,-1.7,-1.5,5.8,1.7,,,,,1,1*52
```

```
$GNGRS,104148.00,1,,0.0,2.5,0.0,,2.8,,,,,,1,5*52
```

Field No.	Name	Unit	Format	Example	Description
0	xxGRS	-	string	\$GPGRS	GRS Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	-	hhmmss.ss	082632.00	UTC time of associated position fix, see note on UTC representation
2	mode	-	digit	1	Computation method used: 1 = Residuals were recomputed after the GGA position was computed (fixed)
Start of repeated block (12 times)					
3 + 1*N	residual	m	numeric	0.54	Range residuals for SVs used in navigation. The SV order matches the order from the GSA sentence
End of repeated block					
15	systemId	-	numeric	1	NMEA defined GNSS System ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
16	signalId	-	numeric	0	NMEA defined GNSS Signal ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
17	cs	-	hexadecimal	*70	Checksum
18	<CR><LF>	-	character	-	Carriage return and line feed

4.2.12 GSA

4.2.12.1 GNSS DOP and Active Satellites

Message	GSA		
Description	GNSS DOP and Active Satellites		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	<p>The GNSS receiver operating mode, satellites used for navigation, and DOP values.</p> <ul style="list-style-type: none"> If less than 12 SVs are used for navigation, the remaining fields are left empty. If more than 12 SVs are used for navigation, only the IDs of the first 12 are output. The SV numbers (fields 'svid') are in the range of 1 to 32 for GPS satellites, and 33 to 64 for SBAS satellites (33 = SBAS PRN 120, 34 = SBAS PRN 121, and so on) <p>In a multi-GNSS system this message will be output multiple times, once for each GNSS.</p>		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x02	21	

Message Structure:

```
$xxGSA,opMode,navMode{,svid},PDOP,HDOP,VDOP,systemId*cs<CR><LF>
```

Example:

```
$GPGSA,A,3,23,29,07,08,09,18,26,28,,,,,1.94,1.18,1.54,1*0D
```

Field No.	Name	Unit	Format	Example	Description
0	xxGSA	-	string	\$GPGSA	GSA Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	opMode	-	character	A	Operation mode: M = Manually set to operate in 2D or 3D mode A = Automatically switching between 2D or 3D mode
2	navMode	-	digit	3	Navigation mode, see position fix flags description
Start of repeated block (12 times)					
3 + 1*N	svid	-	numeric	29	Satellite number
End of repeated block					
15	PDOP	-	numeric	1.94	Position dilution of precision
16	HDOP	-	numeric	1.18	Horizontal dilution of precision
17	VDOP	-	numeric	1.54	Vertical dilution of precision
18	systemId	-	numeric	1	NMEA defined GNSS System ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
19	cs	-	hexadecimal	*0D	Checksum
20	<CR><LF>	-	character	-	Carriage return and line feed

4.2.13 GST

4.2.13.1 GNSS Pseudo Range Error Statistics

Message	GST		
Description	GNSS Pseudo Range Error Statistics		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	This message reports statistical information on the quality of the position solution.		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x07	11	

Message Structure:

```
$xxGST,time,rangeRms,stdMajor,stdMinor,orient,stdLat,stdLong,stdAlt*cs<CR><LF>
```

Example:

```
$GPGST,082356.00,1.8,,,1.7,1.3,2.2*7E
```

Field No.	Name	Unit	Format	Example	Description
0	xxGST	-	string	\$GPGST	GST Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	-	hhmmss.ss	082356.00	UTC time of associated position fix, see note on UTC representation
2	rangeRms	m	numeric	1.8	RMS value of the standard deviation of the ranges
3	stdMajor	m	numeric	-	Standard deviation of semi-major axis (only supported in ADR 4.10 and later)
4	stdMinor	m	numeric	-	Standard deviation of semi-minor axis (only supported in ADR 4.10 and later)
5	orient	deg	numeric	-	Orientation of semi-major axis (only supported in ADR 4.10 and later)
6	stdLat	m	numeric	1.7	Standard deviation of latitude error
7	stdLong	m	numeric	1.3	Standard deviation of longitude error
8	stdAlt	m	numeric	2.2	Standard deviation of altitude error
9	cs	-	hexadecimal	*7E	Checksum
10	<CR><LF>	-	character	-	Carriage return and line feed

4.2.14 GSV

4.2.14.1 GNSS Satellites in View

Message	GSV		
Description	GNSS Satellites in View		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	The number of satellites in view, together with each SV ID, elevation azimuth, and signal strength (C/No) value. Only four satellite details are transmitted in one message. In a multi-GNSS system sets of GSV messages will be output multiple times, one set for each GNSS.		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x03	8..16	

Message Structure:

```
$xxGSV,numMsg,msgNum,numSV{,svid,elv,az,cno},signalId*cs<CR><LF>
```

Example:

```
$GPGSV,3,1,09,09,,,17,10,,,40,12,,,49,13,,,35,1*6F
$GPGSV,3,2,09,15,,,44,17,,,45,19,,,44,24,,,50,1*64
$GPGSV,3,3,09,25,,,40,1*6E
$GPGSV,1,1,03,12,,42,24,,47,32,,,37,5*66
$GAGSV,1,1,00,2*76
```

Field No.	Name	Unit	Format	Example	Description
0	xxGSV	-	string	\$GPGSV	GSV Message ID (xx = GSV Talker ID, see NMEA Talker IDs table). Talker ID GN shall not be used
1	numMsg	-	digit	3	Number of messages, total number of GSV messages being output (range: 1-9)
2	msgNum	-	digit	1	Number of this message (range: 1-numMsg)
3	numSV	-	numeric	10	Number of known satellites in view regarding both the talker ID and the signalId
Start of repeated block (1..4 times)					
4 + 4*N	svid	-	numeric	23	Satellite ID
5 + 4*N	elv	deg	numeric	38	Elevation (range: 0-90)
6 + 4*N	az	deg	numeric	230	Azimuth (range: 0-359)
7 + 4*N	cno	dB Hz	numeric	44	Signal strength (C/NO, range: 0-99), null when not tracking
End of repeated block					

GSV continued

Field No.	Name	Unit	Format	Example	Description
5..16	signalId	-	numeric	0	NMEA defined GNSS Signal ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
6..16	cs	-	hexadecimal	*7F	Checksum
7..16	<CR><LF>	-	character	-	Carriage return and line feed

4.2.15 RMC

4.2.15.1 Recommended Minimum data

Message	RMC		
Description	Recommended Minimum data		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	The output of this message is dependent on the currently selected datum (default: WGS84) The recommended minimum sentence defined by NMEA for GNSS system data.		
Message Info	ID for CFG-MSG	Number of fields	
	0xFO	0x04	16

Message Structure:

```
$xxRMC,time,status,lat,NS,lon,EW,spd,cog,date,mv,mvEW,posMode,navStatus*cs<CR><LF>
```

Example:

```
$GPRMC,083559.00,A,4717.11437,N,00833.91522,E,0.004,77.52,091202,,,A,V*57
```

Field No.	Name	Unit	Format	Example	Description
0	xxRMC	-	string	\$GPRMC	RMC Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	-	hhmmss.ss	083559.00	UTC time, see note on UTC representation
2	status	-	character	A	Data validity status, see position fix flags description
3	lat	-	ddmm. mmmmm	4717.11437	Latitude (degrees & minutes), see format description
4	NS	-	character	N	North/South indicator
5	lon	-	dddmm. mmmmm	00833.91522	Longitude (degrees & minutes), see format description
6	EW	-	character	E	East/West indicator
7	spd	kno ts	numeric	0.004	Speed over ground
8	cog	deg ree s	numeric	77.52	Course over ground

RMC continued

Field No.	Name	Unit	Format	Example	Description
9	date	-	ddmmyy	091202	Date in day, month, year format, see note on UTC representation
10	mv	degree s	numeric	-	Magnetic variation value. Only supported in ADR 4.10 and later
11	mvEW	-	character	-	Magnetic variation E/W indicator. Only supported in ADR 4.10 and later
12	posMode	-	character	A	Mode Indicator, see position fix flags description (only available in NMEA 2.3 and later)
13	navStatus	-	character	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
14	cs	-	hexadecimal	*57	Checksum
15	<CR><LF>	-	character	-	Carriage return and line feed

4.2.16 TXT

4.2.16.1 Text Transmission

Message	TXT		
Description	Text Transmission		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	This message outputs various information on the receiver, such as power-up screen, software version etc. This message can be configured using UBX Protocol message UBX-CFG-INF .		
Message Info	ID for CFG-MSG	Number of fields	
	0xFO	0x41	7

Message Structure:

```
$xxTXT,numMsg,msgNum,msgType,text*cs<CR><LF>
```

Example:

```
$GPTXT,01,01,02,u-blox ag - www.u-blox.com*50
$GPTXT,01,01,02,ANTARIS ATR0620 HW 00000040*67
```

Field No.	Name	Unit	Format	Example	Description
0	xxTXT	-	string	\$GPTXT	TXT Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	numMsg	-	numeric	01	Total number of messages in this transmission (range: 1-99)
2	msgNum	-	numeric	01	Message number in this transmission (range: 1-numMsg)

TXT continued

Field No.	Name	Unit	Format	Example	Description
3	msgType	-	numeric	02	Text identifier (u-blox receivers specify the type of the message with this number): 00: Error 01: Warning 02: Notice 07: User
4	text	-	string	www.u-blox.com	Any ASCII text
5	cs	-	hexadecimal	*67	Checksum
6	<CR><LF>	-	character	-	Carriage return and line feed

4.2.17 VLW

4.2.17.1 Dual ground/water distance

Message	VLW		
Description	Dual ground/water distance		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	The distance traveled, relative to the water and over the ground. This message relates to the Odometer functionality. Contrarily to the NMEA standard, if NMEA 2.1 or 2.3 are configured, the sentence will additionally contain tgd, tgdUnit, gd and gdUnit fields.		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x0F	11	

Message Structure:

```
$xxVLW,twd,twdUnit,wd,wdUnit,tgd,tgdUnit,gd,gdUnit*cs<CR><LF>
```

Example:

```
$GPVLW,,N,,N,15.8,N,1.2,N*06
```

Field No.	Name	Unit	Format	Example	Description
0	xxVLW	-	string	\$GPVLW	VLW Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	twd	nmi	numeric	-	Total cumulative water distance: null (fixed field)
2	twdUnit	-	character	N	Total cumulative water distance units: N (nautical miles, fixed field)
3	wd	nmi	numeric	-	Water distance since reset: null (fixed field)
4	wdUnit	-	character	N	Water distance since reset units: N (nautical miles, fixed field)
5	tgd	nmi	numeric	15.8	Total cumulative ground distance (only available in NMEA 4.00 and later)

VLW continued

Field No.	Name	Unit	Format	Example	Description
6	tgdUnit	-	character	N	Total cumulative ground distance units: N (nautical miles, fixed field, only available in NMEA 4.00 and later)
7	gd	nmi	numeric	1.2	Ground distance since reset (only available in NMEA 4.00 and later)
8	gdUnit	-	character	N	Ground distance since reset units: N (nautical miles, fixed field, only available in NMEA 4.00 and later)
9	cs	-	hexadecimal	*06	Checksum
10	<CR><LF>	-	character	-	Carriage return and line feed

4.2.18 VTG

4.2.18.1 Course over ground and Ground speed

Message	VTG		
Description	Course over ground and Ground speed		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	Velocity is given as Course over Ground (COG) and Speed over Ground (SOG).		
Message Info	ID for CFG-MSG	Number of fields	
	0xF0 0x05	12	

Message Structure:

```
$xxVTG,cogt,cogtUnit,cogm,cogmUnit,sogn,sognUnit,sogk,sogkUnit, posMode*cs<CR><LF>
```

Example:

```
$GPVTG,77.52,T,,M,0.004,N,0.008,K,A*06
```

Field No.	Name	Unit	Format	Example	Description
0	xxVTG	-	string	\$GPVTG	VTG Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	cogt	degree s	numeric	77.52	Course over ground (true)
2	cogtUnit	-	character	T	Course over ground units: T (degrees true, fixed field)
3	cogm	degree s	numeric	-	Course over ground (magnetic). Only supported in ADR 4.10 and above
4	cogmUnit	-	character	M	Course over ground units: M (degrees magnetic, fixed field)
5	sogn	kno ts	numeric	0.004	Speed over ground
6	sognUnit	-	character	N	Speed over ground units: N (knots, fixed field)

VTG continued

Field No.	Name	Unit	Format	Example	Description
7	sogk	km/h	numeric	0.008	Speed over ground
8	sogkUnit	-	character	K	Speed over ground units: K (kilometers per hour, fixed field)
9	posMode	-	character	A	Mode Indicator, see position fix flags description (only available in NMEA 2.3 and later)
10	cs	-	hexadecimal	*06	Checksum
11	<CR><LF>	-	character	-	Carriage return and line feed

4.2.19 ZDA

4.2.19.1 Time and Date

Message	ZDA		
Description	Time and Date		
Firmware	Supported on: • u-blox 9 with protocol version 29		
Type	Output		
Comment	UTC, day, month, year and local time zone.		
Message Info	ID for CFG-MSG	Number of fields	
	0xFO	0x08	9

Message Structure:

```
$xxZDA,time,day,month,year,ltzh,ltzn*cs<CR><LF>
```

Example:

```
$GPZDA,082710.00,16,09,2002,00,00*64
```

Field No.	Name	Unit	Format	Example	Description
0	xxZDA	-	string	\$GPZDA	ZDA Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	-	hhmmss.ss	082710.00	UTC Time, see note on UTC representation
2	day	day	dd	16	UTC day (range: 1-31)
3	month	mo nth	mm	09	UTC month (range: 1-12)
4	year	yea r	yyyy	2002	UTC year
5	ltzh	-	xx	00	Local time zone hours: 00 (fixed field)
6	ltzn	-	zz	00	Local time zone minutes: 00 (fixed field)
7	cs	-	hexadecimal	*64	Checksum
8	<CR><LF>	-	character	-	Carriage return and line feed

5 UBX Protocol


5.1 UBX Protocol Key Features

u-blox receivers support a u-blox proprietary protocol to communicate with a host computer. This protocol has the following key features:

- Compact - uses 8-bit Binary Data.
- Checksum Protected - uses a low-overhead checksum algorithm
- Modular - uses a 2-stage message identifier (Class and Message ID)

5.2 UBX Frame Structure

The structure of a basic UBX Frame is shown in the following diagram.

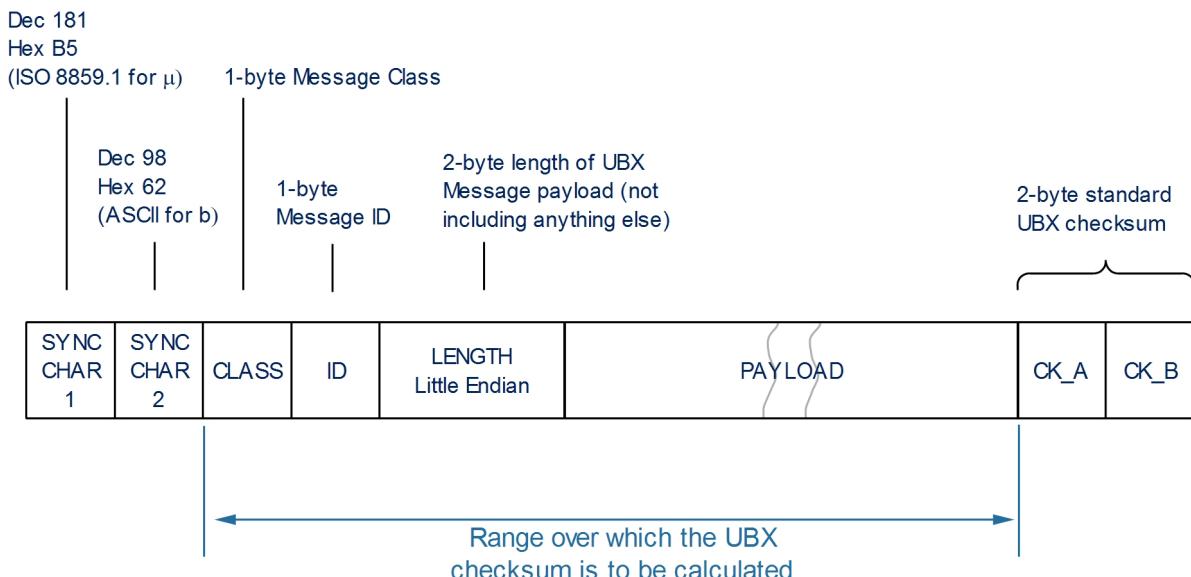

- Every **Frame** starts with a 2-byte Preamble consisting of two synchronization characters: 0xB5 0x62.
- A 1-byte Message **Class** field follows. A Class is a group of messages that are related to each other.
- A 1-byte Message **ID** field defines the message that is to follow.
- A 2-byte **Length** field follows. The length is defined as being that of the payload only. It does not include the Preamble, Message Class, Message ID, Length, or CRC fields. The number format of the length field is a Little-Endian unsigned 16-bit integer.
- The **Payload** field contains a variable number of bytes.
- The two 1-byte **CK_A** and **CK_B** fields hold a 16-bit checksum whose calculation is defined below. This concludes the Frame.

5.3 UBX Payload Definition Rules

5.3.1 Structure Packing

Values are placed in an order that structure packing is not a problem. This means that 2-byte values shall start on offsets which are a multiple of 2; 4-byte values shall start at a multiple of 4; and so on.

5.3.2 Reserved Elements

Some messages contain reserved fields or bits to allow for future expansion. The contents of these elements should be ignored in output messages and must be set to zero in input messages. Where a message is output and subsequently returned to the receiver as input message, reserved elements can either be explicitly set to zero or left with whatever value they were output with.

5.3.3 Undefined Values

The description of some fields provide specific meanings for specific values. For example, the field gnssId appears in many UBX messages and uses 0 to indicate GPS, 1 for SBAS and so on (see [Satellite Numbering](#) for details); however it is usually stored in a byte with far more possible values than the handful currently defined. All such undefined values are reserved for future expansion and therefore should not be used.

5.3.4 Message Naming

Referring to messages is done by adding the class name and a dash in front of the message name. For example, the version information message is referred to as UBX-MON-VER. Referring to message fields or their values is done by adding a dot and the name, e.g. UBX-MON-VER . swVersion.

5.3.5 Number Formats

All multi-byte values are ordered in Little Endian format, unless otherwise indicated.

All floating point values are transmitted in IEEE754 single or double precision.

Variable Type Definitions


Short	Type	Size (Bytes)	Comment	Min/Max	Resolution
U1	Unsigned Char	1		0..255	1
RU1_3	Unsigned Char	1	binary floating point with 3 bit exponent, eeeb bbbb, (Value & 0x1F) << (Value >> 5)	0..(31*2^7) non-continuous	$\sim 2^{(Value \gg 5)}$
I1	Signed Char	1	2's complement	-128 .. 127	1
X1	Bitfield	1		n/a	n/a
U2	Unsigned Short	2		0 .. 65535	1
I2	Signed Short	2	2's complement	-32768 .. 32767	1
X2	Bitfield	2		n/a	n/a
U4	Unsigned Long	4		0 .. 4'294'967'295	1
I4	Signed Long	4	2's complement	-2'147'483'648 .. 2'147'483'647	1

Variable Type Definitions continued

Short	Type	Size (Bytes)	Comment	Min/Max	Resolution
X4	Bitfield	4		n/a	n/a
R4	IEEE 754 Single Precision	4		-1*2^+127 .. 2^+127	~ Value * 2^-24
R8	IEEE 754 Double Precision	8		-1*2^+1023 .. 2^+1023	~ Value * 2^-53
CH	ASCII / ISO 8859.1 Encoding	1			

5.4 UBX Checksum

The checksum is calculated over the Message, starting and including the CLASS field, up until, but excluding, the Checksum Field:

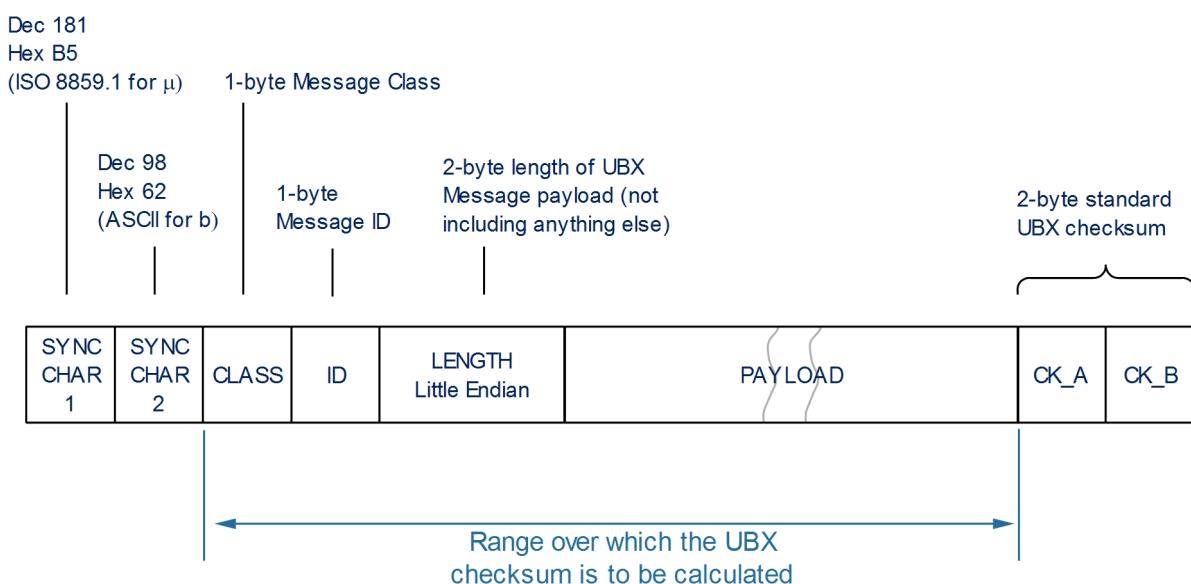

The checksum algorithm used is the 8-Bit Fletcher Algorithm, which is used in the TCP standard ([RFC 1145](#)). This algorithm works as follows:

- Buffer[N] contains the data over which the checksum is to be calculated.
- The two CK_ values are 8-Bit unsigned integers, only! If implementing with larger-sized integer values, make sure to mask both CK_A and CK_B with 0xFF after both operations in the loop.

```

CK_A = 0, CK_B = 0
For (I=0; I<N; I++)
{
    CK_A = CK_A + Buffer[I]
    CK_B = CK_B + CK_A
}

```

- After the loop, the two U1 values contain the checksum, transmitted after the Message, which conclude the Frame.

5.5 UBX Message Flow

There are certain features associated with the messages being sent back and forth:

5.5.1 Acknowledgement

When messages from the class CFG are sent to the receiver, the receiver will send an "acknowledge" ([UBX-ACK-ACK](#)) or a "not acknowledge" ([UBX-ACK-NAK](#)) message back to the sender, depending on whether or not the message was processed correctly.

Some messages from other classes (e.g. LOG) also use the same acknowledgement mechanism.

5.5.2 Polling Mechanism

All messages that are output by the receiver in a periodic manner (i.e. messages in classes MON, NAV and RXM) and Get/Set type messages, such as the messages in the CFG class, can also be polled.

The UBX protocol is designed so that messages can be polled by sending the message required to the receiver but without a payload (or with just a single parameter that identifies the poll request). The receiver then responds with the same message with the payload populated.

5.6 UBX Class IDs

A class is a grouping of messages which are related to each other. The following table lists all the current message classes.

Name	Class	Description
NAV	0x01	Navigation Results Messages: Position, Speed, Time, Acceleration, Heading, DOP, SVs used
RXM	0x02	Receiver Manager Messages: Satellite Status, RTC Status
INF	0x04	Information Messages: Printf-Style Messages, with IDs such as Error, Warning, Notice
ACK	0x05	Ack/Nak Messages: Acknowledge or Reject messages to UBX-CFG input messages
CFG	0x06	Configuration Input Messages: Configure the receiver.
UPD	0x09	Firmware Update Messages: Memory/Flash erase/write, Reboot, Flash identification, etc.
MON	0x0A	Monitoring Messages: Communication Status, CPU Load, Stack Usage, Task Status
TIM	0x0D	Timing Messages: Time Pulse Output, Time Mark Results
MGA	0x13	Multiple GNSS Assistance Messages: Assistance data for various GNSS
LOG	0x21	Logging Messages: Log creation, deletion, info and retrieval
SEC	0x27	Security Feature Messages

All remaining class IDs are reserved.

5.7 UBX Messages Overview

Page	Mnemonic	Cls/ID	Length	Type	Description
UBX Class ACK				Ack/Nak Messages	
37	ACK-ACK	0x05 0x01	2	Output	Message Acknowledged
37	ACK-NAK	0x05 0x00	2	Output	Message Not-Acknowledged
UBX Class CFG				Configuration Input Messages	
38	CFG-ANT	0x06 0x13	4	Get/Set	Antenna Control Settings
39	CFG-CFG	0x06 0x09	(12) or (13)	Command	Clear, Save and Load configurations
42	CFG-DAT	0x06 0x06	44	Set	Set User-defined Datum.
43	CFG-DAT	0x06 0x06	52	Get	The currently defined Datum
44	CFG-GEOFENCE	0x06 0x69	8 + 12*numF...	Get/Set	Geofencing configuration
45	CFG-GNSS	0x06 0x3E	4 + 8*numCo...	Get/Set	GNSS system configuration
47	CFG-INF	0x06 0x02	1	Poll Request	Poll configuration for one protocol
48	CFG-INF	0x06 0x02	0 + 10*N	Get/Set	Information message configuration
49	CFG-ITFM	0x06 0x39	8	Get/Set	Jamming/Interference Monitor...
50	CFG-LOGFILTER	0x06 0x47	12	Get/Set	Data Logger Configuration
52	CFG-MSG	0x06 0x01	2	Poll Request	Poll a message configuration
52	CFG-MSG	0x06 0x01	8	Get/Set	Set Message Rate(s)
53	CFG-MSG	0x06 0x01	3	Get/Set	Set Message Rate
53	CFG-NAV5	0x06 0x24	36	Get/Set	Navigation Engine Settings
56	CFG-NAVX5	0x06 0x23	40	Get/Set	Navigation Engine Expert Settings
58	CFG-NMEA	0x06 0x17	20	Get/Set	Extended NMEA protocol configuration V1
61	CFG-ODO	0x06 0x1E	20	Get/Set	Odometer, Low-speed COG Engine...
62	CFG-PM2	0x06 0x3B	44	Get/Set	Extended Power Management...
64	CFG-PRT	0x06 0x00	1	Poll Request	Polls the configuration for one I/O Port
65	CFG-PRT	0x06 0x00	20	Get/Set	Port configuration for UART ports
68	CFG-PRT	0x06 0x00	20	Get/Set	Port configuration for USB port
70	CFG-PRT	0x06 0x00	20	Get/Set	Port configuration for SPI port
73	CFG-PRT	0x06 0x00	20	Get/Set	Port configuration for DDC port
75	CFG-PWR	0x06 0x57	8	Set	Put receiver in a defined power state.
76	CFG-RATE	0x06 0x08	6	Get/Set	Navigation/Measurement Rate Settings
77	CFG-RINV	0x06 0x34	1 + 1*N	Get/Set	Contents of Remote Inventory
78	CFG-RST	0x06 0x04	4	Command	Reset Receiver / Clear Backup Data...
79	CFG-TMODE2	0x06 0x3D	28	Get/Set	Time Mode Settings 2
80	CFG-TP5	0x06 0x31	32	Get/Set	Time Pulse Parameters
82	CFG-USB	0x06 0x1B	108	Get/Set	USB Configuration
83	CFG-VALDEL	0x06 0x8C	4 + 4*N	Set	Deletes values corresponding to...
85	CFG-VALDEL	0x06 0x8C	4 + 4*N	Set	Deletes values corresponding to...
87	CFG-VALGET	0x06 0x8B	4 + 4*N	Poll Request	Get Configuration Items

UBX Messages Overview continued

Page	Mnemonic	Cls/ID	Length	Type	Description
88	CFG-VALGET	0x06 0x8B	4 + 1*N	Polled	Configuration Items
88	CFG-VALSET	0x06 0x8A	4 + 1*N	Set	Sets values corresponding to provided...
90	CFG-VALSET	0x06 0x8A	4 + 1*N	Set	Sets values corresponding to provided...
UBX Class INF				Information Messages	
92	INF-DEBUG	0x04 0x04	0 + 1*N	Output	ASCII output with debug contents
92	INF-ERROR	0x04 0x00	0 + 1*N	Output	ASCII output with error contents
93	INF-NOTICE	0x04 0x02	0 + 1*N	Output	ASCII output with informational contents
93	INF-TEST	0x04 0x03	0 + 1*N	Output	ASCII output with test contents
94	INF-WARNING	0x04 0x01	0 + 1*N	Output	ASCII output with warning contents
UBX Class LOG				Logging Messages	
95	LOG-CREATE	0x21 0x07	8	Command	Create Log File
96	LOG-ERASE	0x21 0x03	0	Command	Erase Logged Data
96	LOG-FINDTIME	0x21 0x0E	12	Input	Find index of a log entry based on a...
97	LOG-FINDTIME	0x21 0x0E	8	Output	Response to FINDTIME request
98	LOG-INFO	0x21 0x08	0	Poll Request	Poll for log information
98	LOG-INFO	0x21 0x08	48	Output	Log information
100	LOG-RETRIEVEPO...	0x21 0x0f	32	Output	Odometer log entry
100	LOG-RETRIEVEPOS	0x21 0x0b	40	Output	Position fix log entry
101	LOG-RETRIEVEST...	0x21 0x0d	16 + 1*byteCo...	Output	Byte string log entry
102	LOG-RETRIEVE	0x21 0x09	12	Command	Request log data
103	LOG-STRING	0x21 0x04	0 + 1*N	Command	Store arbitrary string in on-board flash
UBX Class MGA				Multiple GNSS Assistance Messages	
104	MGA-ACK-DATA0	0x13 0x60	8	Output	Multiple GNSS Acknowledge message
105	MGA-BDS-EPH	0x13 0x03	88	Input	BDS Ephemeris Assistance
106	MGA-BDS-ALM	0x13 0x03	40	Input	BDS Almanac Assistance
107	MGA-BDS-HEALTH	0x13 0x03	68	Input	BDS Health Assistance
108	MGA-BDS-UTC	0x13 0x03	20	Input	BDS UTC Assistance
108	MGA-BDS-IONO	0x13 0x03	16	Input	BDS Ionospheric Assistance
109	MGA-DBD	0x13 0x80	0	Poll Request	Poll the Navigation Database
109	MGA-DBD	0x13 0x80	12 + 1*N	Input/Output	Navigation Database Dump Entry
110	MGA-GAL-EPH	0x13 0x02	76	Input	Galileo Ephemeris Assistance
112	MGA-GAL-ALM	0x13 0x02	32	Input	Galileo Almanac Assistance
113	MGA-GAL-TIMEO...	0x13 0x02	12	Input	Galileo GPS time offset assistance
113	MGA-GAL-UTC	0x13 0x02	20	Input	Galileo UTC Assistance
114	MGA-GLO-EPH	0x13 0x06	48	Input	GLONASS Ephemeris Assistance
115	MGA-GLO-ALM	0x13 0x06	36	Input	GLONASS Almanac Assistance
116	MGA-GLO-TIMEO...	0x13 0x06	20	Input	GLONASS Auxiliary Time Offset...
117	MGA-GPS-EPH	0x13 0x00	68	Input	GPS Ephemeris Assistance

UBX Messages Overview continued

Page	Mnemonic	Cls/ID	Length	Type	Description
118	MGA-GPS-ALM	0x13 0x00	36	Input	GPS Almanac Assistance
119	MGA-GPS-HEALTH	0x13 0x00	40	Input	GPS Health Assistance
120	MGA-GPS-UTC	0x13 0x00	20	Input	GPS UTC Assistance
120	MGA-GPS-IONO	0x13 0x00	16	Input	GPS Ionosphere Assistance
121	MGA-INI-POS_XYZ	0x13 0x40	20	Input	Initial Position Assistance
122	MGA-INI-POS_LLH	0x13 0x40	20	Input	Initial Position Assistance
123	MGA-INI-TIME_UTC	0x13 0x40	24	Input	Initial Time Assistance
124	MGA-INI-TIME_GN...	0x13 0x40	24	Input	Initial Time Assistance
125	MGA-INI-CLKD	0x13 0x40	12	Input	Initial Clock Drift Assistance
126	MGA-INI-FREQ	0x13 0x40	12	Input	Initial Frequency Assistance
127	MGA-INI-EOP	0x13 0x40	72	Input	Earth Orientation Parameters Assistance
127	MGA-QZSS-EPH	0x13 0x05	68	Input	QZSS Ephemeris Assistance
129	MGA-QZSS-ALM	0x13 0x05	36	Input	QZSS Almanac Assistance
130	MGA-QZSS-HEAL...	0x13 0x05	12	Input	QZSS Health Assistance

UBX Class MON				Monitoring Messages	
131	MON-COMMS	0x0A 0x36	8 + 40*nPorts	Periodic/Polled	Comm port information
132	MON-GNSS	0x0A 0x28	8	Polled	Information message major GNSS...
134	MON-HW2	0x0A 0x0B	28	Periodic/Polled	Extended Hardware Status
135	MON-HW3	0x0A 0x37	22 + 6*nPins	Periodic/Polled	HW I/O pin information
137	MON-HW	0x0A 0x09	60	Periodic/Polled	Hardware Status
138	MON-IO	0x0A 0x02	0 + 20*N	Periodic/Polled	I/O Subsystem Status
139	MON-MSGPP	0x0A 0x06	120	Periodic/Polled	Message Parse and Process Status
139	MON-PATCH	0x0A 0x27	4 + 16*nEntries	Polled	Output information about installed...
140	MON-RF	0x0A 0x38	4 + 24*nBlocks	Periodic/Polled	RF information
142	MON-RXBUF	0x0A 0x07	24	Periodic/Polled	Receiver Buffer Status
142	MON-RXR	0x0A 0x21	1	Output	Receiver Status Information
143	MON-TXBUF	0x0A 0x08	28	Periodic/Polled	Transmitter Buffer Status
144	MON-VER	0x0A 0x04	40 + 30*N	Polled	Receiver/Software Version

UBX Class NAV				Navigation Results Messages	
145	NAV-CLOCK	0x01 0x22	20	Periodic/Polled	Clock Solution
145	NAV-DGPS	0x01 0x31	16 + 12*numCh	Periodic/Polled	DGPS Data Used for NAV
147	NAV-DOP	0x01 0x04	18	Periodic/Polled	Dilution of precision
147	NAV-EOE	0x01 0x61	4	Periodic	End Of Epoch
148	NAV-GEOFENCE	0x01 0x39	8 + 2*numFe...	Periodic/Polled	Geofencing status
149	NAV-HPOSECEF	0x01 0x13	28	Periodic/Polled	High Precision Position Solution in ECEF
150	NAV-HPOSSLH	0x01 0x14	36	Periodic/Polled	High Precision Geodetic Position Solution
151	NAV-ODO	0x01 0x09	20	Periodic/Polled	Odometer Solution
151	NAV-ORB	0x01 0x34	8 + 6*numSv	Periodic/Polled	GNSS Orbit Database Info

UBX Messages Overview continued

Page	Mnemonic	Cls/ID	Length	Type	Description
154	NAV-POSECEF	0x01 0x01	20	Periodic/Polled	Position Solution in ECEF
155	NAV-POSLH	0x01 0x02	28	Periodic/Polled	Geodetic Position Solution
155	NAV-PVT	0x01 0x07	92	Periodic/Polled	Navigation Position Velocity Time...
158	NAV-RESETODO	0x01 0x10	0	Command	Reset odometer
158	NAV-SAT	0x01 0x35	8 + 12*numSvs	Periodic/Polled	Satellite Information
160	NAV-SIG	0x01 0x43	8 + 16*numSi...	Periodic/Polled	Signal Information
162	NAV-STATUS	0x01 0x03	16	Periodic/Polled	Receiver Navigation Status
165	NAV-TIMEBDS	0x01 0x24	20	Periodic/Polled	BDS Time Solution
166	NAV-TIMEGAL	0x01 0x25	20	Periodic/Polled	Galileo Time Solution
167	NAV-TIMEGLO	0x01 0x23	20	Periodic/Polled	GLO Time Solution
168	NAV-TIMEGPS	0x01 0x20	16	Periodic/Polled	GPS Time Solution
169	NAV-TIMELS	0x01 0x26	24	Periodic/Polled	Leap second event information
171	NAV-TIMEUTC	0x01 0x21	20	Periodic/Polled	UTC Time Solution
172	NAV-VELECEF	0x01 0x11	20	Periodic/Polled	Velocity Solution in ECEF
173	NAV-VELNED	0x01 0x12	36	Periodic/Polled	Velocity Solution in NED
UBX Class RXM				Receiver Manager Messages	
174	RXM-MEASX	0x02 0x14	44 + 24*num...	Periodic/Polled	Satellite Measurements for RRLP
176	RXM-PMREQ	0x02 0x41	8	Command	Requests a Power Management task
176	RXM-PMREQ	0x02 0x41	16	Command	Requests a Power Management task
178	RXM-RAWX	0x02 0x15	16 + 32*num...	Periodic/Polled	Multi-GNSS Raw Measurement Data
181	RXM-RLM	0x02 0x59	16	Output	Galileo SAR Short-RLM report
182	RXM-RLM	0x02 0x59	28	Output	Galileo SAR Long-RLM report
182	RXM-SFRBX	0x02 0x13	8 + 4*numW...	Output	Broadcast Navigation Data Subframe
UBX Class SEC				Security Feature Messages	
184	SEC-UNIQID	0x27 0x03	9	Output	Unique Chip ID
UBX Class TIM				Timing Messages	
185	TIM-SVIN	0xD 0x04	28	Periodic/Polled	Survey-in data
186	TIM-TM2	0xD 0x03	28	Periodic/Polled	Time mark data
187	TIM-TP	0xD 0x01	16	Periodic/Polled	Time Pulse Timedata
189	TIM-VRFY	0xD 0x06	20	Periodic/Polled	Sourced Time Verification
UBX Class UPD				Firmware Update Messages	
190	UPD-SOS	0x09 0x14	0	Poll Request	Poll Backup File Restore Status
190	UPD-SOS	0x09 0x14	4	Command	Create Backup File in Flash
191	UPD-SOS	0x09 0x14	4	Command	Clear Backup in Flash
191	UPD-SOS	0x09 0x14	8	Output	Backup File Creation Acknowledge
192	UPD-SOS	0x09 0x14	8	Output	System Restored from Backup

5.8 UBX-ACK (0x05)

Ack/Nak Messages: i.e. Acknowledge or Reject messages to UBX-CFG input messages.

Messages in the UBX-ACK class output the processing results to UBX-CFG and some other messages.

5.8.1 UBX-ACK-ACK (0x05 0x01)

5.8.1.1 Message Acknowledged

Message	UBX-ACK-ACK					
Description	Message Acknowledged					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	Output upon processing of an input message. ACK Message is sent as soon as possible but at least within one second.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x05	0x01	2	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	clsID	-	Class ID of the Acknowledged Message	
1	U1	-	msgID	-	Message ID of the Acknowledged Message	

5.8.2 UBX-ACK-NAK (0x05 0x00)

5.8.2.1 Message Not-Acknowledged

Message	UBX-ACK-NAK					
Description	Message Not-Acknowledged					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	Output upon processing of an input message. NAK Message is sent as soon as possible but at least within one second.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x05	0x00	2	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	clsID	-	Class ID of the Not-Acknowledged Message	
1	U1	-	msgID	-	Message ID of the Not-Acknowledged Message	

5.9 UBX-CFG (0x06)

Configuration Input Messages: i.e. Configure the receiver..

Messages in the CFG class can be used to configure the receiver and poll current configuration values. Any messages in the CFG class sent to the receiver are either acknowledged (with message [UBX-ACK-ACK](#)) if processed successfully or rejected (with message [UBX-ACK-NAK](#)) if processing unsuccessfully.


5.9.1 UBX-CFG-ANT (0x06 0x13)

5.9.1.1 Antenna Control Settings

Message	UBX-CFG-ANT					
Description	Antenna Control Settings					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item. This message allows the user to configure the antenna supervisor. The antenna supervisor can be used to detect the status of an active antenna and control it. It can be used to turn off the supply to the antenna in the event of a short (for example) or to manage power consumption in Power Save Mode. Refer to Antenna Supervisor Configuration and the relevant Integration manual (IM) for more information regarding the behavior of the antenna supervisor. Refer to UBX-MON-HW for a description of the fields in the message used to obtain the status of the antenna. Note that not all pins can be used for antenna supervisor operation, it is recommended that you use the default pins, consult the Integration Manual if you need to use other pins.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x13	4	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X2	-	flags	-	Antenna Flag Mask (see graphic below)	
2	X2	-	pins	-	Antenna Pin Configuration (see graphic below)	

Bitfield flags


This graphic explains the bits of flags

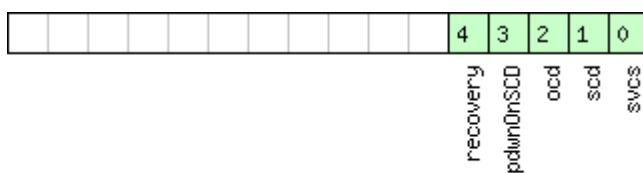

Name	Description
svcs	Enable Antenna Supply Voltage Control Signal
scd	Enable Short Circuit Detection
ocd	Enable Open Circuit Detection
pdwnOnSCD	Power Down Antenna supply if Short Circuit is detected. (only in combination with Bit 1)
recovery	Enable automatic recovery from short state

Bitfield pins

This graphic explains the bits of pins

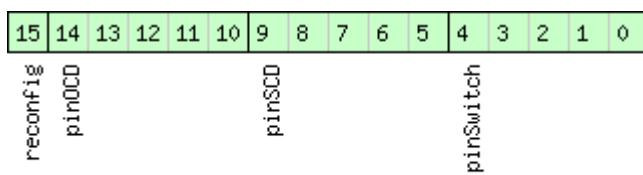

Name	Description
pinSwitch	PIO-Pin used for switching antenna supply
pinSCD	PIO-Pin used for detecting a short in the antenna supply
pinOCD	PIO-Pin used for detecting open/not connected antenna
reconfig	if set to one, and this command is sent to the receiver, the receiver will reconfigure the pins as specified.

5.9.2 UBX-CFG-CFG (0x06 0x09)

5.9.2.1 Clear, Save and Load configurations

Message	UBX-CFG-CFG
Description	Clear, Save and Load configurations
Firmware	Supported on: • u-blox 9 with protocol version 29
Type	Command
Comment	<p>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</p> <p>See Receiver Configuration for a detailed description on how Receiver Configuration should be used. The behaviour of this message has changed. The three masks which were used to clear, save and load a subsection of configuration lost their meaning. It is no longer possible to save or clear a subsection of the configuration using this message. The behaviour of the masks is described as follows:</p> <ul style="list-style-type: none"> if any bit is set in the clearMask: all configuration in the selected non-volatile

memory is deleted

- if any bit is set in the saveMask: all current configuration is stored (copied) to the selected layers
- if any bit is set in the loadMask: The current configuration is discarded and rebuilt from all the lower layers

Note that commands can be combined. The sequence of execution is clear, save, then load.

Also note that this message is considered deprecated. Use UBX-CFG-VALSET and UBX-CFG-VALDEL with the appropriate layers instead. These new messages support selective saving and clearing to retain the behaviour removed from this message.

	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x09 (12) or (13)	see below	CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	X4	-	clearMask	-	Mask for configuration to clear (see graphic below)
4	X4	-	saveMask	-	Mask for configuration to save (see graphic below)
8	X4	-	loadMask	-	Mask for configuration to load (see graphic below)


Start of optional block

12	X1	-	deviceMask	-	Mask which selects the memory devices for saving and/or clearing operation Note that if a deviceMask is not provided, the receiver defaults the operation requested to Battery Backed RAM (BBR) and Flash (if available) (see graphic below)
----	----	---	------------	---	--

End of optional block

Bitfield clearMask


This graphic explains the bits of clearMask

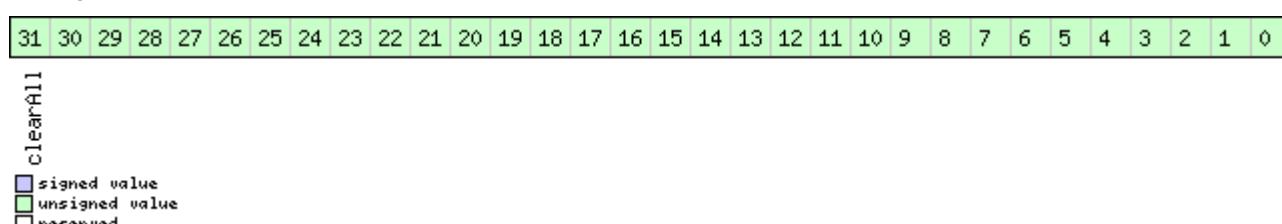

Name	Description
clearAll	Clear all saved configuration from the selected non-volatile memory if any bit is set

Bitfield saveMask


This graphic explains the bits of saveMask

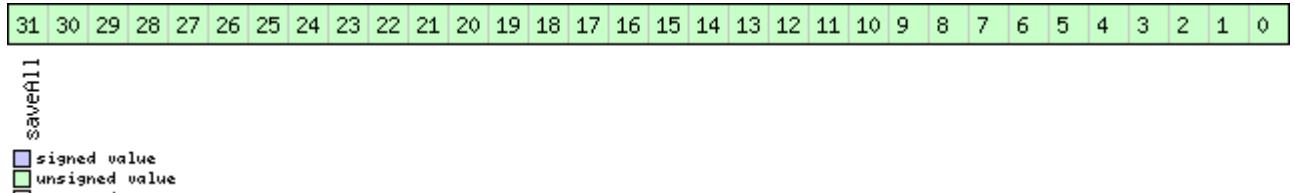

Name	Description
saveAll	Save all current configuration to the selected non-volatile memory if any bit is set

Bitfield loadMask

This graphic explains the bits of loadMask

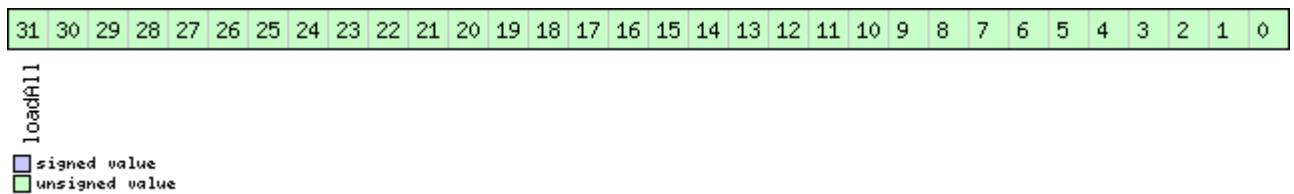

Name	Description
loadAll	Discard current configuration and rebuilt it from lower non-volatile memory layers if any bit is set

Bitfield deviceMask

This graphic explains the bits of deviceMask



Name	Description
devBBR	Battery Backed RAM
devFlash	Flash
devEEPROM	EEPROM
devSpiFlash	SPI Flash

5.9.3 UBX-CFG-DAT (0x06 0x06)

5.9.3.1 Set User-defined Datum.

Message	UBX-CFG-DAT					
Description	Set User-defined Datum.					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	44	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	R8	-	majA	m	Semi-major Axis (accepted range = 6,300,000.0 to 6,500,000.0 meters).	
8	R8	-	flat	-	1.0 / Flattening (accepted range is 0.0 to 500.0).	
16	R4	-	dx	m	X Axis shift at the origin (accepted range is +/- 5000.0 meters).	
20	R4	-	dy	m	Y Axis shift at the origin (accepted range is +/- 5000.0 meters).	
24	R4	-	dz	m	Z Axis shift at the origin (accepted range is +/- 5000.0 meters).	
28	R4	-	rotX	s	Rotation about the X Axis (accepted range is +/- 20.0 milli-arc seconds).	
32	R4	-	rotY	s	Rotation about the Y Axis (accepted range is +/- 20.0 milli-arc seconds).	
36	R4	-	rotZ	s	Rotation about the Z Axis (accepted range is +/- 20.0 milli-arc seconds).	
40	R4	-	scale	ppm	Scale change (accepted range is 0.0 to 50.0 parts per million).	

5.9.3.2 The currently defined Datum

Message	UBX-CFG-DAT					
Description	The currently defined Datum					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item. Returns the parameters of the currently defined datum. If no user-defined datum has been set, this will default to WGS84.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	0x06 52	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2	-	datumNum	-	Datum Number: 0 = WGS84, 0xFFFF = user-defined	
2	CH[6]	-	datumName	-	ASCII String: WGS84 or USER	
8	R8	-	majA	m	Semi-major Axis (accepted range = 6,300,000.0 to 6,500,000.0 meters).	
16	R8	-	flat	-	1.0 / Flattening (accepted range is 0.0 to 500.0).	
24	R4	-	dx	m	X Axis shift at the origin (accepted range is +/- 5000.0 meters).	
28	R4	-	dy	m	Y Axis shift at the origin (accepted range is +/- 5000.0 meters).	
32	R4	-	dz	m	Z Axis shift at the origin (accepted range is +/- 5000.0 meters).	
36	R4	-	rotX	s	Rotation about the X Axis (accepted range is +/- 20.0 milli-arc seconds).	
40	R4	-	rotY	s	Rotation about the Y Axis (accepted range is +/- 20.0 milli-arc seconds).	
44	R4	-	rotZ	s	Rotation about the Z Axis (accepted range is +/- 20.0 milli-arc seconds).	
48	R4	-	scale	ppm	Scale change (accepted range is 0.0 to 50.0 parts per million).	

5.9.4 UBX-CFG-GEOFENCE (0x06 0x69)

5.9.4.1 Geofencing configuration

Message	UBX-CFG-GEOFENCE					
Description	Geofencing configuration					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item. Gets or sets the geofencing configuration If the receiver is sent a valid new configuration, it will respond with a UBX-ACK message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a UBX-ACK-NAK and continuing operation with the previous configuration. Note that the acknowledge message does not indicate whether the PIO configuration has been successfully applied (pin assigned), it only indicates the successful configuration of the feature. The configured PIO must be previously unoccupied for successful assignment.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x69	8 + 12*numFences	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (=0x00 for this version)	
1	U1	-	numFences	-	Number of geofences contained in this message. Note that the receiver can only store a limited number of geofences (currently 4).	
2	U1	-	confLvl	-	Required confidence level for state evaluation. This value times the position's standard deviation (sigma) defines the confidence band. 0 = no confidence required 1 = 68% 2 = 95% 3 = 99.7% 4 = 99.99%	
3	U1[1]	-	reserved1	-	Reserved	
4	U1	-	pioEnabled	-	1 = Enable PIO combined fence state output, 0 = disable	
5	U1	-	pinPolarity	-	PIO pin polarity. 0 = Low means inside, 1 = Low means outside. Unknown state is always high.	
6	U1	-	pin	-	PIO pin number	

UBX-CFG-GEOFENCE continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
7	U1[1]	-	reserved2	-	Reserved
Start of repeated block (numFences times)					
8 + 12*N	I4	1e-7	lat	deg	Latitude of the geofence circle center
12 + 12*N	I4	1e-7	lon	deg	Longitude of the geofence circle center
16 + 12*N	U4	1e-2	radius	m	Radius of the geofence circle
End of repeated block					

5.9.5 UBX-CFG-GNSS (0x06 0x3E)


5.9.5.1 GNSS system configuration

Message	UBX-CFG-GNSS				
Description	GNSS system configuration				
Firmware	Supported on: • u-blox 9 with protocol version 29				
Type	Get/Set				
Comment	<p>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</p> <p>See the Legacy UBX Message Fields Reference for the corresponding configuration item.</p> <p>Gets or sets the GNSS system channel sharing configuration.</p> <p>If the receiver is sent a valid new configuration, it will respond with a UBX-ACK-ACK message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a UBX-ACK-NAK and continuing operation with the previous configuration.</p> <p>Configuration requirements:</p> <ul style="list-style-type: none"> It is necessary for at least one major GNSS to be enabled, after applying the new configuration to the current one. It is also required that at least 4 tracking channels are available to each enabled major GNSS, i.e. <code>maxTrkCh</code> must have a minimum value of 4 for each enabled major GNSS. The number of tracking channels in use must not exceed the number of tracking channels available in hardware, and the sum of all reserved tracking channels needs to be less than or equal to the number of tracking channels in use. <p>Notes:</p> <ul style="list-style-type: none"> To avoid cross-correlation issues, it is recommended that GPS and QZSS are always both enabled or both disabled. Polling this message returns the configuration of all supported GNSS, whether enabled or not; it may also include GNSS unsupported by the particular product, but in such cases the enable flag will always be unset. See section Satellite Numbering for a description of the GNSS IDs available. Configuration specific to the GNSS system can be done via other messages (e.g. UBX-CFG-SBAS). 				
	Header	Class	ID	Length (Bytes)	Payload Checksum

Message Structure	0xB5	0x62	0x06	0x3E	4 + 8*numConfigBlocks	see below	CK_A CK_B
Payload Contents:							
Byte Offset	Number Format	Scaling	Name	Unit	Description		
0	U1	-	msgVer	-	Message version (=0 for this version)		
1	U1	-	numTrkChHw	-	Number of tracking channels available in hardware (read only)		
2	U1	-	numTrkChUse	-	(Read only in protocol versions greater than 23) Number of tracking channels to use. Must be > 0, <= numTrkChHw. If 0xFF, then number of tracking channels to use will be set to numTrkChHw.		
3	U1	-	numConfigBlocks	-	Number of configuration blocks following		
Start of repeated block (numConfigBlocks times)							
4 + 8*N	U1	-	gnssId	-	System identifier (see Satellite Numbering)		
5 + 8*N	U1	-	resTrkCh	-	(Read only in protocol versions greater than 23) Number of reserved (minimum) tracking channels for this system.		
6 + 8*N	U1	-	maxTrkCh	-	(Read only in protocol versions greater than 23) Maximum number of tracking channels used for this system. Must be > 0, >= resTrkCh, <= numTrkChUse and <= maximum number of tracking channels supported for this system.		
7 + 8*N	U1	-	reserved1	-	Reserved		
8 + 8*N	X4	-	flags	-	bitfield of flags. At least one signal must be configured in every enabled system. (see graphic below)		
End of repeated block							

Bitfield flags

This graphic explains the bits of flags

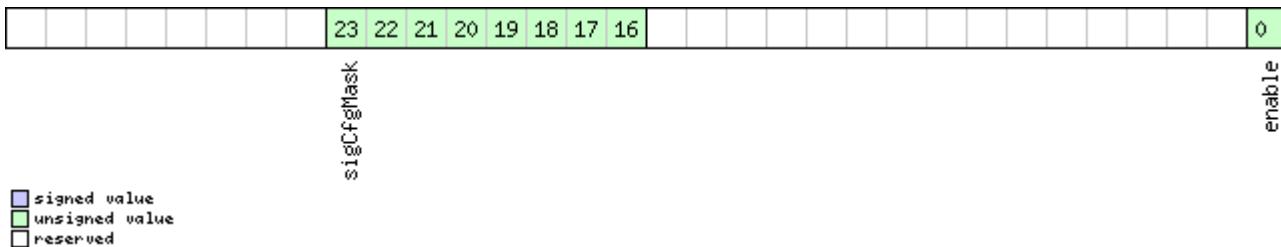

- signed value
- unsigned value
- reserved

Name	Description
enable	Enable this system
sigCfgMask	<p>Signal configuration mask</p> <p>When gnssId is 0 (GPS)</p> <ul style="list-style-type: none"> * 0x01 = GPS L1C/A * 0x10 = GPS L2C <p>When gnssId is 1 (SBAS)</p> <ul style="list-style-type: none"> * 0x01 = SBAS L1C/A <p>When gnssId is 2 (Galileo)</p> <ul style="list-style-type: none"> * 0x01 = Galileo E1 * 0x20 = Galileo E5b <p>When gnssId is 3 (BeiDou)</p> <ul style="list-style-type: none"> * 0x01 = BeiDou B1I * 0x10 = BeiDou B2I <p>When gnssId is 4 (IMES)</p> <ul style="list-style-type: none"> * 0x01 = IMES L1 <p>When gnssId is 5 (QZSS)</p> <ul style="list-style-type: none"> * 0x01 = QZSS L1C/A * 0x04 = QZSS L1S * 0x10 = QZSS L2C <p>When gnssId is 6 (GLONASS)</p> <ul style="list-style-type: none"> * 0x01 = GLONASS L1 * 0x10 = GLONASS L2 <p>When gnssId is 7 (IRNSS)</p> <ul style="list-style-type: none"> * 0x01 = IRNSS L5A

5.9.6 UBX-CFG-INF (0x06 0x02)

5.9.6.1 Poll configuration for one protocol

Message	UBX-CFG-INF					
Description	Poll configuration for one protocol					
Firmware	Supported on:					
	<ul style="list-style-type: none"> • u-blox 9 with protocol version 29 					
Type	Poll Request					
Comment	<p>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</p> <p>See the Legacy UBX Message Fields Reference for the corresponding configuration item.</p>					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x02	1	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	

UBX-CFG-INF continued


Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	protocolID	-	Protocol Identifier, identifying the output protocol for this Poll Request. The following are valid Protocol Identifiers: 0: UBX Protocol 1: NMEA Protocol 2-255: Reserved

5.9.6.2 Information message configuration

Message	UBX-CFG-INF					
Description	Information message configuration					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. The value of infMsgMask[x] below are that each bit represents one of the INF class messages (Bit 0 for ERROR, Bit 1 for WARNING and so on.). For a complete list, see the Message Class INF . Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length. Output messages from the module contain only one configuration unit. Note that I/O Ports 1 and 2 correspond to serial ports 1 and 2. I/O port 0 is DDC. I/O port 3 is USB. I/O port 4 is SPI. I/O port 5 is reserved for future use.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x06	0x02	0 + 10*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*10	U1	-	protocolID	-	Protocol Identifier, identifying for which protocol the configuration is set/get. The following are valid Protocol Identifiers: 0: UBX Protocol 1: NMEA Protocol 2-255: Reserved	
1 + 10*N	U1[3]	-	reserved1	-	Reserved	
4 + 10*N	X1[6]	-	infMsgMask	-	A bit mask, saying which information messages are enabled on each I/O port (see graphic below)	
End of repeated block						

Bitfield infMsgMask

This graphic explains the bits of infMsgMask

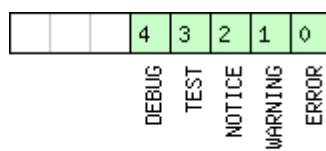

Name	Description
ERROR	enable ERROR
WARNING	enable WARNING
NOTICE	enable NOTICE
TEST	enable TEST
DEBUG	enable DEBUG


5.9.7 UBX-CFG-ITFM (0x06 0x39)

5.9.7.1 Jamming/Interference Monitor configuration

Message	UBX-CFG-ITFM					
Description	Jamming/Interference Monitor configuration					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item. Configuration of Jamming/Interference monitor.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	0x39	8	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X4	-	config	-	interference config word. (see graphic below)	
4	X4	-	config2	-	extra settings for jamming/interference monitor (see graphic below)	


Bitfield config

This graphic explains the bits of config

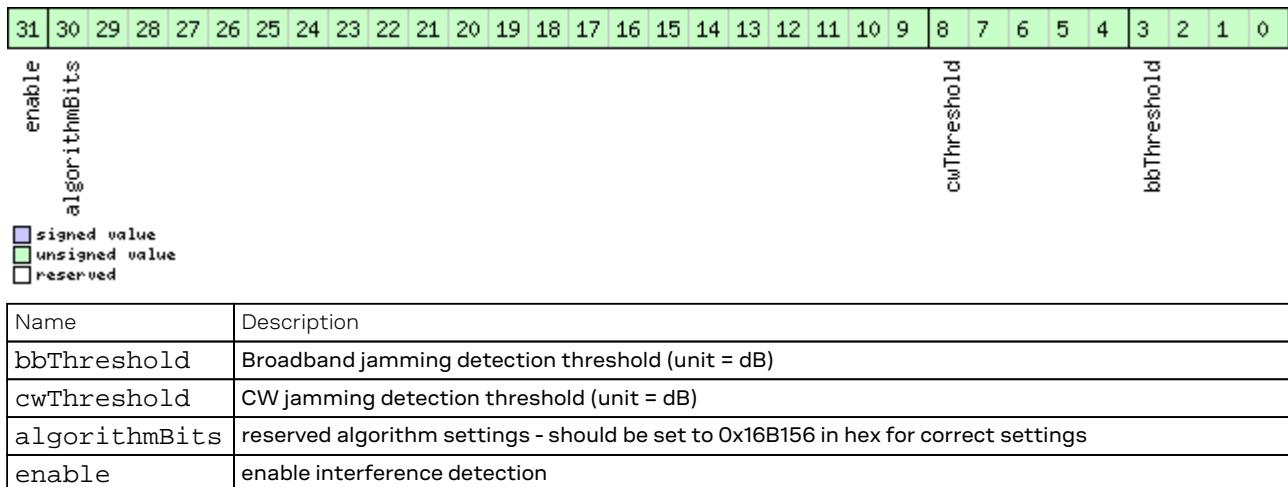

Bitfield config2

This graphic explains the bits of config2

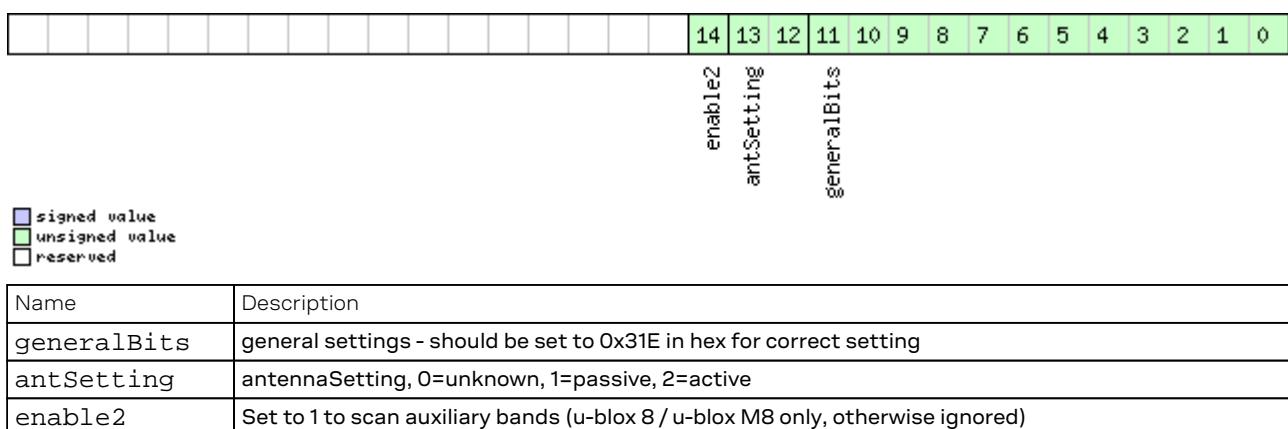

5.9.8 UBX-CFG-LOGFILTER (0x06 0x47)

5.9.8.1 Data Logger Configuration

Message	UBX-CFG-LOGFILTER
Description	Data Logger Configuration
Firmware	Supported on: <ul style="list-style-type: none">• u-blox 9 with protocol version 29
Type	Get/Set
Comment	<p>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</p> <p>See the Legacy UBX Message Fields Reference for the corresponding configuration item.</p> <p>This message can be used to configure the data logger, i.e. to enable/disable the log recording and to get/set the position entry filter settings.</p> <p>Position entries can be filtered based on time difference, position difference or current speed thresholds. Position and speed filtering also have a minimum time interval. A position is logged if any of the thresholds are exceeded. If a threshold</p>

is set to zero it is ignored. The maximum rate of position logging is 1Hz. The filter settings will be configured to the provided values only if the 'applyAllFilterSettings' flag is set. This allows the recording to be enabled/disabled independently of configuring the filter settings. It is supported to configure the data logger in the absence of a logging file. By doing so, once the logging file is created, the data logger configuration will take effect immediately and logging recording and filtering will activate according to the configuration.


	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x47	12	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	The version of this message. Set to 1
1	X1	-	flags	-	Flags (see graphic below)
2	U2	-	minInterval	s	Minimum time interval between logged positions (0 = not set). This is only applied in combination with the speed and/or position thresholds. If both minInterval and timeThreshold are set, minInterval must be less than or equal to timeThreshold.
4	U2	-	timeThreshold	s	If the time difference is greater than the threshold then the position is logged (0 = not set).
6	U2	-	speedThreshold	m/s	If the current speed is greater than the threshold then the position is logged (0 = not set). minInterval also applies
8	U4	-	positionThreshold	m	If the 3D position difference is greater than the threshold then the position is logged (0 = not set). minInterval also applies

Bitfield flags

This graphic explains the bits of flags

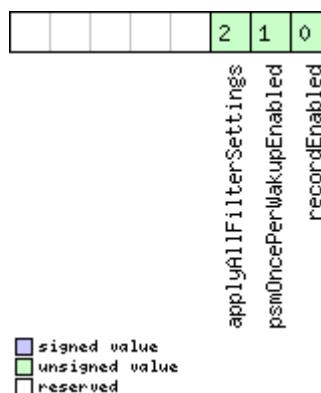

Name	Description
recordEnabled	1 = enable recording, 0 = disable recording
psmOncePerWakeUpEnabled	1 = enable recording only one single position per PSM on/off mode wake-up period, 0 = disable once per wake-up
applyAllFilterSettings	1 = apply all filter settings, 0 = only apply recordEnabled

5.9.9 UBX-CFG-MSG (0x06 0x01)

5.9.9.1 Poll a message configuration

Message	UBX-CFG-MSG					
Description	Poll a message configuration					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Poll Request					
Comment	<p>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</p> <p>See the Legacy UBX Message Fields Reference for the corresponding configuration item.</p>					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x01	2	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	msgClass	-	Message Class	
1	U1	-	msgID	-	Message Identifier	

5.9.9.2 Set Message Rate(s)

Message	UBX-CFG-MSG					
Description	Set Message Rate(s)					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	<p>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</p> <p>See the Legacy UBX Message Fields Reference for the corresponding configuration item.</p> <p>Set/Get message rate configuration (s) to/from the receiver.</p> <ul style="list-style-type: none"> Send rate is relative to the event a message is registered on. For example, if the rate of a navigation message is set to 2, the message is sent every second navigation solution. For configuring NMEA messages, the section NMEA Messages Overview describes Class and Identifier numbers used. 					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x01	8	see below CK_A CK_B
Payload Contents:						

UBX-CFG-MSG continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	msgClass	-	Message Class
1	U1	-	msgID	-	Message Identifier
2	U1[6]	-	rate	-	Send rate on I/O Port (6 Ports)

5.9.9.3 Set Message Rate

Message	UBX-CFG-MSG					
Description	Set Message Rate					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item. Set message rate configuration for the current port.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x06	0x01	3	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	msgClass	-	Message Class	
1	U1	-	msgID	-	Message Identifier	
2	U1	-	rate	-	Send rate on current Port	

5.9.10 UBX-CFG-NAV5 (0x06 0x24)

5.9.10.1 Navigation Engine Settings

Message	UBX-CFG-NAV5					
Description	Navigation Engine Settings					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x06	0x24	36	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	

UBX-CFG-NAV5 continued


Byte Offset	Number Format	Scaling	Name	Unit	Description
0	X2	-	mask	-	Parameters Bitmask. Only the masked parameters will be applied. (see graphic below)
2	U1	-	dynModel	-	Dynamic platform model: 0: portable 2: stationary 3: pedestrian 4: automotive 5: sea 6: airborne with <1g acceleration 7: airborne with <2g acceleration 8: airborne with <4g acceleration 9: wrist worn watch 10: bike
3	U1	-	fixMode	-	Position Fixing Mode: 1: 2D only 2: 3D only 3: auto 2D/3D
4	I4	0.01	fixedAlt	m	Fixed altitude (mean sea level) for 2D fix mode.
8	U4	0.0001	fixedAltVar	m^2	Fixed altitude variance for 2D mode.
12	I1	-	minElev	deg	Minimum Elevation for a GNSS satellite to be used in NAV
13	U1	-	drLimit	s	Reserved
14	U2	0.1	pDop	-	Position DOP Mask to use
16	U2	0.1	tDop	-	Time DOP Mask to use
18	U2	-	pAcc	m	Position Accuracy Mask
20	U2	-	tAcc	m	Time Accuracy Mask
22	U1	-	staticHoldThr	cm/s	Static hold threshold
23	U1	-	dgnssTimeout	s	DGNSS timeout
24	U1	-	cnoThreshNumS	-	Number of satellites required to have C/N0 above cnoThresh for a fix to be attempted
25	U1	-	cnoThresh	dBHz	C/N0 threshold for deciding whether to attempt a fix
26	U1[2]	-	reserved1	-	Reserved
28	U2	-	staticHoldMaxDist	m	Static hold distance threshold (before quitting static hold)

UBX-CFG-NAV5 continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
30	U1	-	utcStandard	-	UTC standard to be used: 0: Automatic; receiver selects based on GNSS configuration (see GNSS time bases). 3: UTC as operated by the U.S. Naval Observatory (USNO); derived from GPS time 6: UTC as operated by the former Soviet Union; derived from GLONASS time 7: UTC as operated by the National Time Service Center, China; derived from BeiDou time
31	U1[5]	-	reserved2	-	Reserved

Bitfield mask

This graphic explains the bits of mask

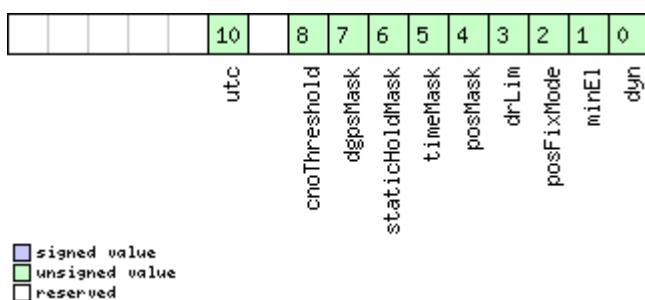

Name	Description
dyn	Apply dynamic model settings
minEl	Apply minimum elevation settings
posFixMode	Apply fix mode settings
drLim	Reserved
posMask	Apply position mask settings
timeMask	Apply time mask settings
staticHoldMas k	Apply static hold settings
dgpsMask	Apply DGPS settings.
cnoThreshold	Apply CNO threshold settings (cnoThresh, cnoThreshNumSVs).
utc	Apply UTC settings.

5.9.11 UBX-CFG-NAVX5 (0x06 0x23)

5.9.11.1 Navigation Engine Expert Settings


Message	UBX-CFG-NAVX5					
Description	Navigation Engine Expert Settings					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	0x23	40	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2	-	version	-	Message version (2 for this version)	
2	X2	-	mask1	-	First parameters bitmask. Only the flagged parameters will be applied, unused bits must be set to 0. (see graphic below)	
4	X4	-	mask2	-	Second parameters bitmask. Only the flagged parameters will be applied, unused bits must be set to 0. (see graphic below)	
8	U1[2]	-	reserved1	-	Reserved	
10	U1	-	minSVs	#SVs	Minimum number of satellites for navigation	
11	U1	-	maxSVs	#SVs	Maximum number of satellites for navigation	
12	U1	-	minCNO	dBHz	Minimum satellite signal level for navigation	
13	U1	-	reserved2	-	Reserved	
14	U1	-	iniFix3D	-	1 = initial fix must be 3D	
15	U1[2]	-	reserved3	-	Reserved	
17	U1	-	ackAiding	-	1 = issue acknowledgements for assistance message input	
18	U2	-	wknRollover	-	GPS week rollover number; GPS week numbers will be set correctly from this week up to 1024 weeks after this week. Setting this to 0 reverts to firmware default.	
20	U1	-	sigAttenCompMode	dBHz	Only supported on certain products	
21	U1	-	reserved4	-	Reserved	
22	U1[2]	-	reserved5	-	Reserved	

UBX-CFG-NAVX5 continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
24	U1[2]	-	reserved6	-	Reserved
26	U1	-	usePPP	-	1 = use Precise Point Positioning (only available with the PPP product variant)
27	U1	-	aopCfg	-	AssistNow Autonomous configuration (see graphic below)
28	U1[2]	-	reserved7	-	Reserved
30	U2	-	aopOrbMaxErr	m	Maximum acceptable (modeled) AssistNow Autonomous orbit error (valid range = 5..1000, or 0 = reset to firmware default)
32	U1[4]	-	reserved8	-	Reserved
36	U1[3]	-	reserved9	-	Reserved
39	U1	-	useAddr	-	Only supported on certain products

Bitfield mask1


This graphic explains the bits of mask1

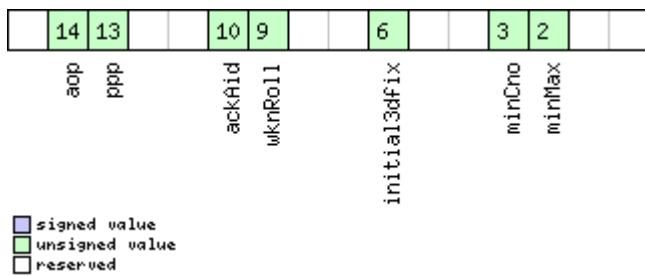

Name	Description
minMax	1 = apply min/max SVs settings
minCno	1 = apply minimum C/NO setting
initial3dfix	1 = apply initial 3D fix settings
wknRoll	1 = apply GPS weeknumber rollover settings
ackAid	1 = apply assistance acknowledgement settings
ppp	1 = apply usePPP flag
aop	1 = apply aopCfg (useAOP flag) and aopOrbMaxErr settings (AssistNow Autonomous)

Bitfield mask2


This graphic explains the bits of mask2

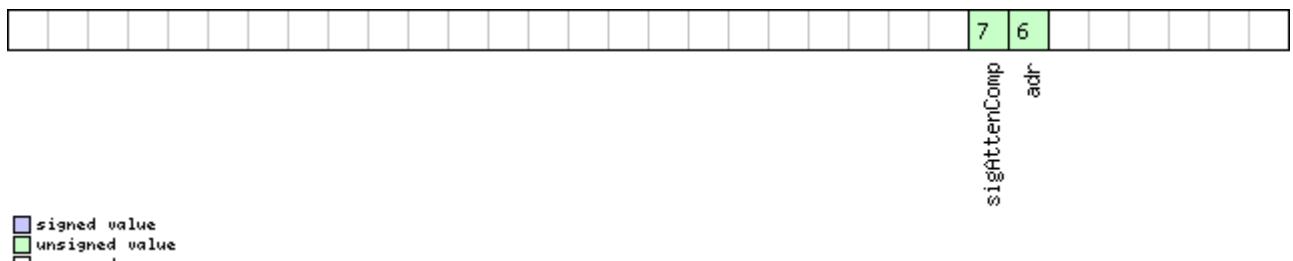

Name	Description
adr	Apply ADR/UDR sensor fusion on/off setting (useAdr flag)
sigAttenComp	Only supported on certain products

Bitfield aopCfg

This graphic explains the bits of aopCfg

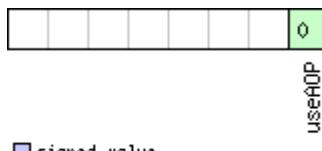

Name	Description
useAOP	1 = enable AssistNow Autonomous

5.9.12 UBX-CFG-NMEA (0x06 0x17)

5.9.12.1 Extended NMEA protocol configuration V1


Message	UBX-CFG-NMEA					
Description	Extended NMEA protocol configuration V1					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. Set/Get the NMEA protocol configuration. See section NMEA Protocol Configuration for a detailed description of the configuration effects on NMEA output. See the Legacy UBX Message Fields Reference for the corresponding configuration item.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x17	20	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X1	-	filter	-	filter flags (see graphic below)	
1	U1	-	nmeaVersion	-	0x41: NMEA version 4.10 0x40: NMEA version 4.0 0x23: NMEA version 2.3 0x21: NMEA version 2.1	
2	U1	-	numSV	-	Maximum Number of SVs to report per TalkerId. 0: unlimited 8: 8 SVs 12: 12 SVs 16: 16 SVs	
3	X1	-	flags	-	flags (see graphic below)	

UBX-CFG-NMEA continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	X4	-	gnssToFilter	-	Filters out satellites based on their GNSS. If a bitfield is enabled, the corresponding satellites will not be output. (see graphic below)
8	U1	-	svNumbering	-	Configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. 0: Strict - Satellites are not output 1: Extended - Use proprietary numbering (see Satellite Numbering)
9	U1	-	mainTalkerId	-	By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see UBX-CFG-GNSS). This field enables the main Talker ID to be overridden. 0: Main Talker ID is not overridden 1: Set main Talker ID to 'GP' 2: Set main Talker ID to 'GL' 3: Set main Talker ID to 'GN' 4: Set main Talker ID to 'GA' 5: Set main Talker ID to 'GB'
10	U1	-	gsvTalkerId	-	By default the Talker ID for GSV messages is GNSS specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden. 0: Use GNSS specific Talker ID (as defined by NMEA) 1: Use the main Talker ID
11	U1	-	version	-	Message version (set to 1 for this version)
12	CH[2]	-	bdsTalkerId	-	Sets the two characters that should be used for the BeiDou Talker ID If these are set to zero, the default BeiDou TalkerId will be used
14	U1[6]	-	reserved1	-	Reserved

Bitfield filter


This graphic explains the bits of filter

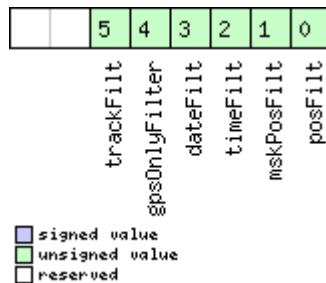

Name	Description
posFilt	Enable position output for failed or invalid fixes
mskPosFilt	Enable position output for invalid fixes
timeFilt	Enable time output for invalid times
dateFilt	Enable date output for invalid dates
gpsOnlyFilter	Restrict output to GPS satellites only
trackFilt	Enable COG output even if COG is frozen

Bitfield flags


This graphic explains the bits of flags

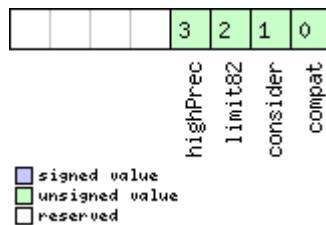

Name	Description
compat	enable compatibility mode. This might be needed for certain applications when customer's NMEA parser expects a fixed number of digits in position coordinates
consider	enable considering mode.
limit82	enable strict limit to 82 characters maximum.
highPrec	enable high precision mode. This flag cannot be set in conjunction with either Compatibility Mode or Limit82 Mode.

Bitfield gnssToFilter

This graphic explains the bits of gnssToFilter

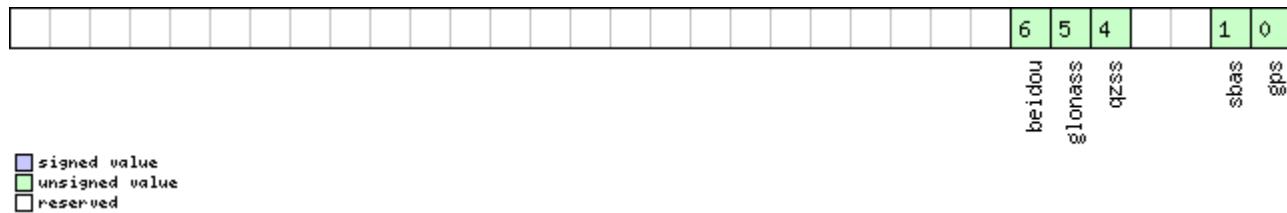

Name	Description
gps	Disable reporting of GPS satellites
sbas	Disable reporting of SBAS satellites
qzss	Disable reporting of QZSS satellites
glonass	Disable reporting of GLONASS satellites
beidou	Disable reporting of BeiDou satellites


5.9.13 UBX-CFG-ODO (0x06 0x1E)

5.9.13.1 Odometer, Low-speed COG Engine Settings

Message	UBX-CFG-ODO					
Description	Odometer, Low-speed COG Engine Settings					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This feature is not supported for the FTS product variant. This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x1E	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0 for this version)	
1	U1[3]	-	reserved1	-	Reserved	
4	U1	-	flags	-	Odometer/Low-speed COG filter flags (see graphic below)	
5	X1	-	odoCfg	-	Odometer filter settings (see graphic below)	
6	U1[6]	-	reserved2	-	Reserved	
12	U1	1e-1	cogMaxSpeed	m/s	Speed below which course-over-ground (COG) is computed with the low-speed COG filter	
13	U1	-	cogMaxPosAcc	m	Maximum acceptable position accuracy for computing COG with the low-speed COG filter	
14	U1[2]	-	reserved3	-	Reserved	
16	U1	-	velLpGain	-	Velocity low-pass filter level, range 0..255	
17	U1	-	cogLpGain	-	COG low-pass filter level (at speed < 8 m/s), range 0..255	
18	U1[2]	-	reserved4	-	Reserved	

Bitfield flags


This graphic explains the bits of flags

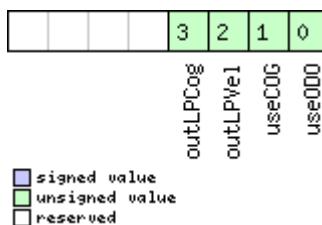

Name	Description
useODO	Odometer enabled flag
useCOG	Low-speed COG filter enabled flag
outLPVel	Output low-pass filtered velocity flag
outLPCog	Output low-pass filtered heading (COG) flag

Bitfield odoCfg

This graphic explains the bits of odoCfg

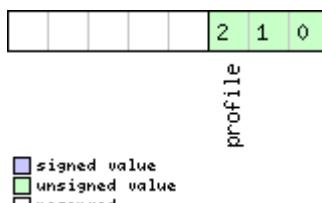

Name	Description
profile	Profile type (0=running, 1=cycling, 2=swimming, 3=car, 4=custom)

5.9.14 UBX-CFG-PM2 (0x06 0x3B)

5.9.14.1 Extended Power Management configuration


Message	UBX-CFG-PM2					
Description	Extended Power Management configuration					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This feature is not supported for either the ADR or FTS products. This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x3B	44	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x01 for this version)	
1	U1	-	reserved1	-	Reserved	
2	U1	-	maxStartupStateDur	s	Maximum time to spend in Acquisition state. If 0: bound disabled (see maxStartupStateDur).	
3	U1	-	reserved2	-	Reserved	

UBX-CFG-PM2 continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	X4	-	flags	-	PSM configuration flags (see graphic below)
8	U4	-	updatePeriod	ms	Position update period. If set to 0, the receiver will never retry a fix and it will wait for external events
12	U4	-	searchPeriod	ms	Acquisition retry period if previously failed. If set to 0, the receiver will never retry a startup
16	U4	-	gridOffset	ms	Grid offset relative to GPS start of week
20	U2	-	onTime	s	Time to stay in Tracking state
22	U2	-	minAcqTime	s	minimal search time
24	U1[20]	-	reserved3	-	Reserved

Bitfield flags

This graphic explains the bits of flags

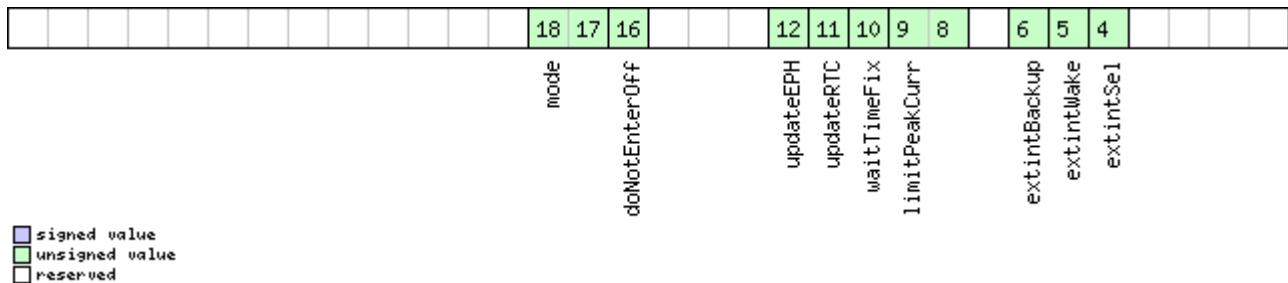

Name	Description
extintSel	EXTINT Pin Select 0 EXTINT0 1 EXTINT1
extintWake	EXTINT Pin Control 0 disabled 1 enabled, keep receiver awake as long as selected EXTINT pin is 'high'
extintBackup	EXTINT Pin Control 0 disabled 1 enabled, force receiver into BACKUP mode when selected EXTINT pin is 'low'
limitPeakCurr	Limit Peak Current 00 disabled 01 enabled, peak current is limited 10 reserved 11 reserved
waitTimeFix	Wait for Timefix (see waitTimeFix) 0 wait for normal fix ok before starting on time 1 wait for time fix ok before starting on time
updateRTC	Update Real Time Clock (see updateRTC) 0 Do not wake up to update RTC. RTC is updated during normal on-time. 1 Update RTC. The receiver adds extra wake-up cycles to update the RTC.

Bitfield flags Description continued

Name	Description
updateEPH	Update Ephemeris (see updateEPH) 0 Do not wake up to update Ephemeris data 1 Update Ephemeris. The receiver adds extra wake-up cycles to update the Ephemeris data
doNotEnterOff	Behavior of receiver in case of no fix (see doNotEnterOff) 0 receiver enters (Inactive) Awaiting Next Search state 1 receiver does not enter (Inactive) Awaiting Next Search state but keeps trying to acquire a fix instead
mode	Mode of operation (see mode) 00 ON/OFF operation (PSMOO) 01 Cyclic tracking operation (PSMCT) 10 reserved 11 reserved

5.9.15 UBX-CFG-PRT (0x06 0x00)

5.9.15.1 Polls the configuration for one I/O Port

Message	UBX-CFG-PRT					
Description	Polls the configuration for one I/O Port					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Poll Request					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item. Sending this message with a port ID as payload results in having the receiver return the configuration for the specified port.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x00	1	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	PortID	-	Port Identifier Number (see the other versions of CFG-PRT for valid values)	

5.9.15.2 Port configuration for UART ports


Message	UBX-CFG-PRT					
Description	Port configuration for UART ports					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	<p>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</p> <p>See the Legacy UBX Message Fields Reference for the corresponding configuration item.</p> <p>Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.</p> <p>Note that this message can affect baud rate and other transmission parameters. Because there may be messages queued for transmission there may be uncertainty about which protocol applies to such messages. In addition a message currently in transmission may be corrupted by a protocol change. Host data reception parameters may have to be changed to be able to receive future messages, including the acknowledge message resulting from the CFG-PRT message.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	0x00 20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	portID	-	Port Identifier Number (see Integration Manual for valid UART port IDs)	
1	U1	-	reserved1	-	Reserved	
2	X2	-	txReady	-	TX ready PIN configuration (not supported in protocol version 29) (see graphic below)	
4	X4	-	mode	-	A bit mask describing the UART mode (see graphic below)	
8	U4	-	baudRate	Bits/s	Baud rate in bits/second	
12	X2	-	inProtoMask	-	<p>A mask describing which input protocols are active.</p> <p>Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see graphic below)</p>	
14	X2	-	outProtoMask	-	<p>A mask describing which output protocols are active.</p> <p>Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see graphic below)</p>	

UBX-CFG-PRT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
16	X2	-	flags	-	Flags bit mask (see graphic below)
18	U1[2]	-	reserved2	-	Reserved

Bitfield txReady


This graphic explains the bits of txReady

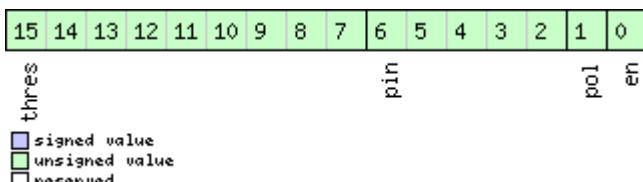

Name	Description
en	Enable TX ready feature for this port
pol	Polarity 0 High-active 1 Low-active
pin	PIO to be used (must not be in use already by another function)
thres	Threshold The given threshold is multiplied by 8 bytes. The TX ready PIN goes active after \geq thres*8 bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream). 0x000 no threshold 0x001 8byte 0x002 16byte ... 0x1FE 4080byte 0xFF 4088byte

Bitfield mode

This graphic explains the bits of mode

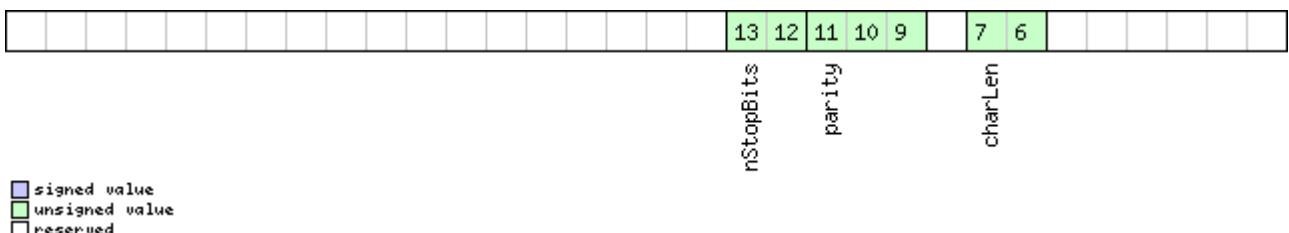


- signed value
- unsigned value
- reserved

Name	Description
charLen	Character Length 00 5bit (not supported) 01 6bit (not supported) 10 7bit (supported only with parity) 11 8bit
parity	000 Even Parity 001 Odd Parity 10X No Parity X1X Reserved
nStopBits	Number of Stop Bits 00 1 Stop Bit 01 1.5 Stop Bit 10 2 Stop Bit 11 0.5 Stop Bit

Bitfield inProtoMask


This graphic explains the bits of inProtoMask

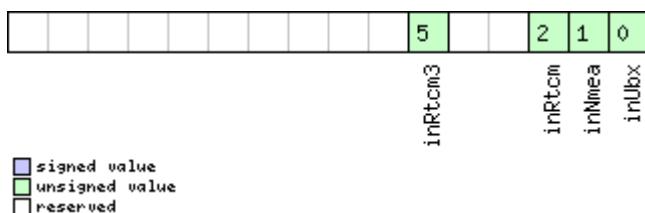

Name	Description
inUbx	UBX protocol
inNmea	NMEA protocol
inRtcm	RTCM2 protocol
inRtcm3	RTCM3 protocol

Bitfield outProtoMask


This graphic explains the bits of outProtoMask

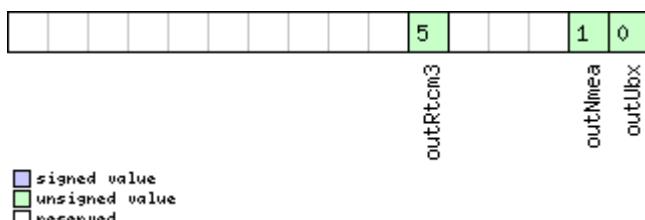

Name	Description
outUbx	UBX protocol
outNmea	NMEA protocol
outRtcm3	RTCM3 protocol

Bitfield flags

This graphic explains the bits of flags

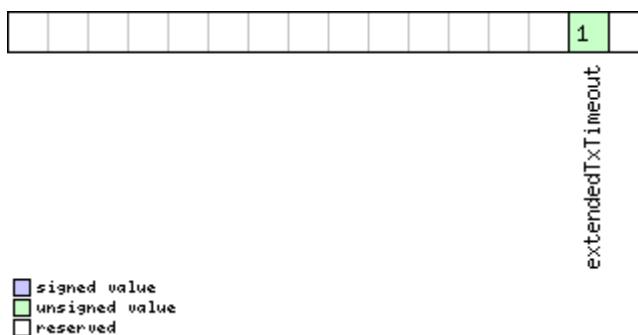

Name	Description
extendedTxtTim eout	Extended TX timeout: if set, the port will timeout if allocated TX memory >=4 kB and no activity for 1.5s. If not set the port will timeout if no activity for 1.5s regardless on the amount of allocated TX memory.

5.9.15.3 Port configuration for USB port


Message	UBX-CFG-PRT					
Description	Port configuration for USB port					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item. Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x00 20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	portID	-	Port Identifier Number (= 3 for USB port)	
1	U1	-	reserved1	-	Reserved	
2	X2	-	txReady	-	TX ready PIN configuration (not supported in protocol version 29) (see graphic below)	
4	U1[8]	-	reserved2	-	Reserved	

UBX-CFG-PRT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
12	X2	-	inProtoMask	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see graphic below)
14	X2	-	outProtoMask	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see graphic below)
16	U1[2]	-	reserved3	-	Reserved
18	U1[2]	-	reserved4	-	Reserved

Bitfield txReady


This graphic explains the bits of txReady

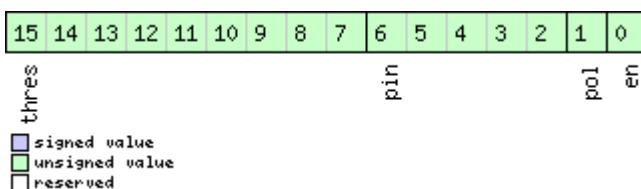

Name	Description
en	Enable TX ready feature for this port
pol	Polarity 0 High-active 1 Low-active
pin	PIO to be used (must not be in use already by another function)
thres	Threshold The given threshold is multiplied by 8 bytes. The TX ready PIN goes active after \geq thres*8 bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream). 0x000 no threshold 0x001 8byte 0x002 16byte ... 0x1FE 4080byte 0x1FF 4088byte

Bitfield inProtoMask


This graphic explains the bits of inProtoMask

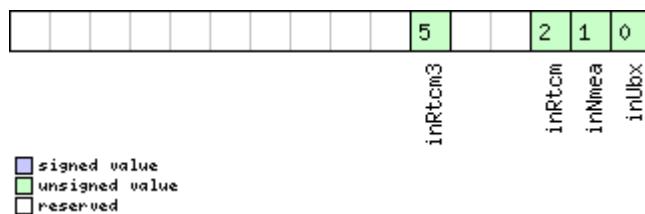

Name	Description
inUbx	UBX protocol
inNmea	NMEA protocol
inRtcm	RTCM2 protocol
inRtcm3	RTCM3 protocol

Bitfield outProtoMask

This graphic explains the bits of outProtoMask

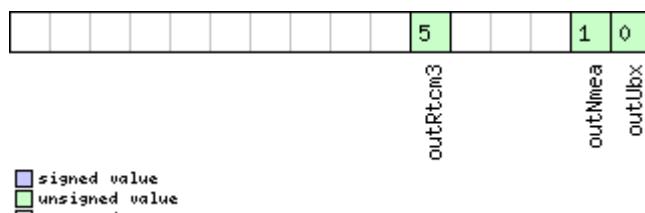

Name	Description
outUbx	UBX protocol
outNmea	NMEA protocol
outRtcm3	RTCM3 protocol

5.9.15.4 Port configuration for SPI port


Message	UBX-CFG-PRT					
Description	Port configuration for SPI port					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item. Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x00	20	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	

UBX-CFG-PRT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	portID	-	Port Identifier Number (= 4 for SPI port)
1	U1	-	reserved1	-	Reserved
2	X2	-	txReady	-	TX ready PIN configuration (not supported in protocol version 29) (see graphic below)
4	X4	-	mode	-	SPI Mode Flags (see graphic below)
8	U1[4]	-	reserved2	-	Reserved
12	X2	-	inProtoMask	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see graphic below)
14	X2	-	outProtoMask	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see graphic below)
16	X2	-	flags	-	Flags bit mask (see graphic below)
18	U1[2]	-	reserved3	-	Reserved

Bitfield txReady


This graphic explains the bits of txReady

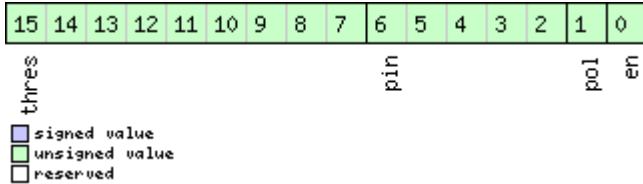

Name	Description
en	Enable TX ready feature for this port
pol	Polarity 0 High-active 1 Low-active
pin	PIO to be used (must not be in use already by another function)
thres	Threshold The given threshold is multiplied by 8 bytes. The TX ready PIN goes active after \geq thres*8 bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream). 0x000 no threshold 0x001 8byte 0x002 16byte ... 0x1FE 4080byte 0x1FF 4088byte


Bitfield mode

This graphic explains the bits of mode

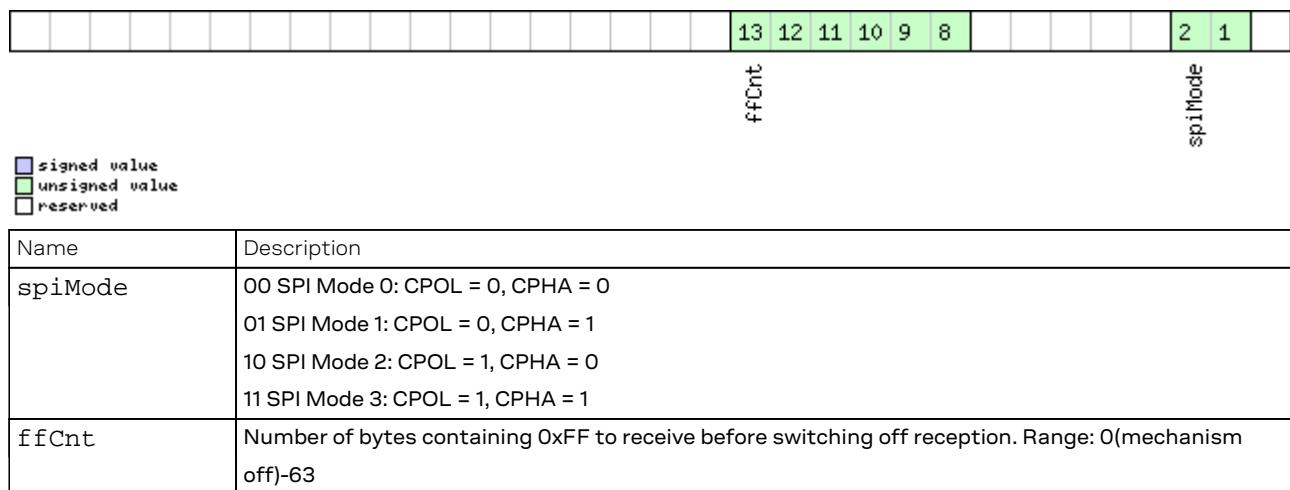


Bitfield inProtoMask

This graphic explains the bits of inProtoMask

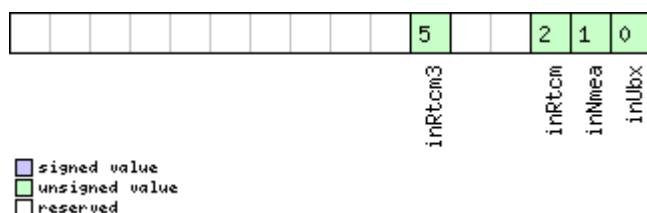


Bitfield outProtoMask

This graphic explains the bits of outProtoMask

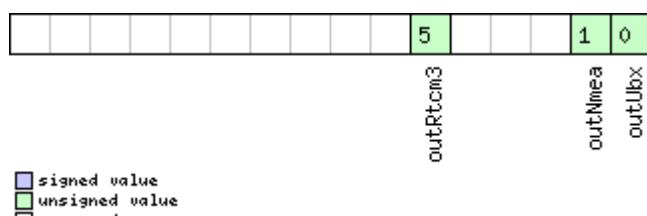

Bitfield flags

This graphic explains the bits of flags

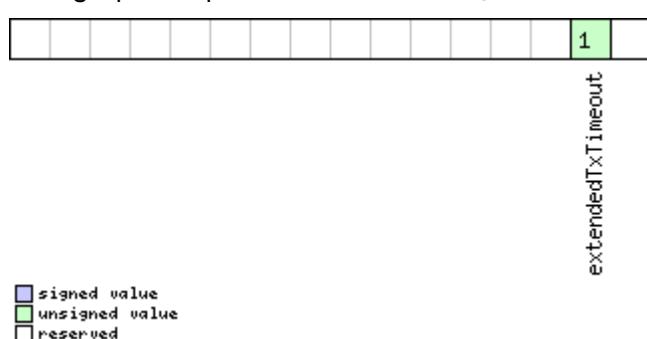


Name	Description
extendedTxTim eout	Extended TX timeout: if set, the port will timeout if allocated TX memory >=4 kB and no activity for 1.5s.

5.9.15.5 Port configuration for DDC port

Message	UBX-CFG-PRT					
Description	Port configuration for DDC port					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	<p>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</p> <p>See the Legacy UBX Message Fields Reference for the corresponding configuration item.</p> <p>Several configurations can be concatenated to one input message. In this case the payload length can be a multiple of the normal length (see the other versions of CFG-PRT). Output messages from the module contain only one configuration unit.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	0x00 20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	portID	-	Port Identifier Number (= 0 for DDC port)	
1	U1	-	reserved1	-	Reserved	
2	X2	-	txReady	-	TX ready PIN configuration (not supported in protocol version 29) (see graphic below)	
4	X4	-	mode	-	DDC Mode Flags (see graphic below)	
8	U1[4]	-	reserved2	-	Reserved	
12	X2	-	inProtoMask	-	A mask describing which input protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see graphic below)	
14	X2	-	outProtoMask	-	A mask describing which output protocols are active. Each bit of this mask is used for a protocol. Through that, multiple protocols can be defined on a single port. (see graphic below)	
16	X2	-	flags	-	Flags bit mask (see graphic below)	
18	U1[2]	-	reserved3	-	Reserved	

Bitfield txReady


This graphic explains the bits of txReady



Name	Description
en	Enable TX ready feature for this port
pol	Polarity 0 High-active 1 Low-active
pin	PIO to be used (must not be in use already by another function)
thres	Threshold The given threshold is multiplied by 8 bytes. The TX ready PIN goes active after \geq thres*8 bytes are pending for the port and going inactive after the last pending bytes have been written to hardware (0-4 bytes before end of stream). 0x000 no threshold 0x001 8byte 0x002 16byte ... 0x1FE 4080byte 0x1FF 4088byte

Bitfield mode

This graphic explains the bits of mode

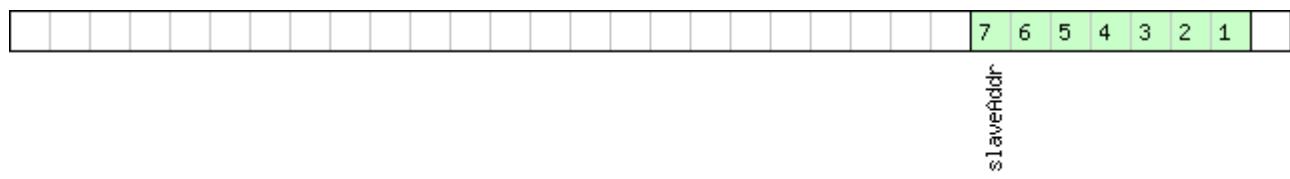


█ signed value
█ unsigned value
█ reserved

Name	Description
slaveAddr	Slave address Range: 0x07 < slaveAddr < 0x78. Bit 0 must be 0

Bitfield inProtoMask


This graphic explains the bits of inProtoMask



█ signed value
█ unsigned value
█ reserved


Bitfield outProtoMask

This graphic explains the bits of `outProtoMask`

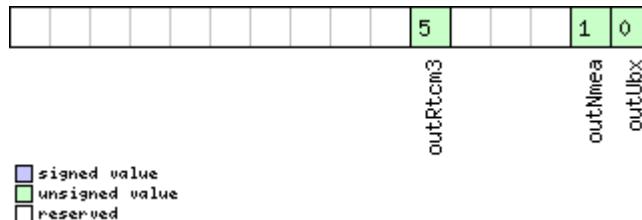

Bitfield flags

This graphic explains the bits of flags

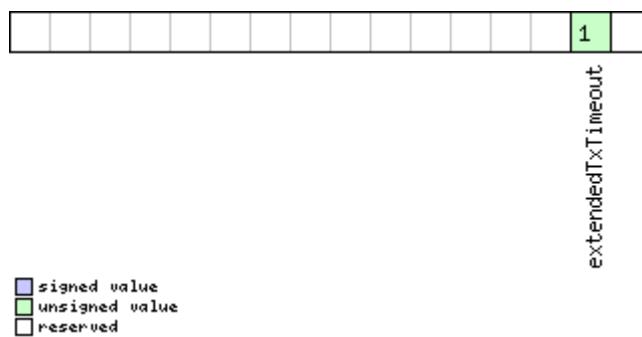

Name	Description
extendedTxTim eout	Extended TX timeout: if set, the port will timeout if allocated TX memory >=4 kB and no activity for 1.5s.

5.9.16 UBX-CFG-PWR (0x06 0x57)

5.9.16.1 Put receiver in a defined power state.

Message	UBX-CFG-PWR					
Description	Put receiver in a defined power state.					
Firmware	Supported on: <ul style="list-style-type: none">• u-blox 9 with protocol version 29					
Type	Set					
Comment	This message is deprecated in protocol versions greater than 17. Use UBX-CFG-RST for GNSS start/stop and UBX-RXM-PMREQ for software backup. See the Legacy UBX Message Fields Reference for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	0x57	8	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (1 for this version)	
1	U1[3]	-	reserved1	-	Reserved	

UBX-CFG-PWR continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	U4	-	state	-	Enter system state 0x52554E20: GNSS running 0x53544F50: GNSS stopped 0x42434B50: Software Backup. USB interface will be disabled, other wakeup source is needed.

5.9.17 UBX-CFG-RATE (0x06 0x08)

5.9.17.1 Navigation/Measurement Rate Settings

Message	UBX-CFG-RATE					
Description	Navigation/Measurement Rate Settings					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	<p>This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.</p> <p>See the Legacy UBX Message Fields Reference for the corresponding configuration item.</p> <p>This message allows the user to alter the rate at which navigation solutions (and the measurements that they depend on) are generated by the receiver. The calculation of the navigation solution will always be aligned to the top of a second zero (first second of the week) of the configured reference time system. (Navigation period is an integer multiple of the measurement period in protocol versions greater than 17)</p> <ul style="list-style-type: none"> Each measurement triggers the measurements generation and raw data output. The navRate value defines that every nth measurement triggers a navigation epoch. The update rate has a direct influence on the power consumption. The more fixes that are required, the more CPU power and communication resources are required. For most applications a 1 Hz update rate would be sufficient. When using Power Save Mode, measurement and navigation rate can differ from the values configured here. 					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x08	6	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	

UBX-CFG-RATE continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U2	-	measRate	ms	The elapsed time between GNSS measurements, which defines the rate, e.g. 100ms => 10Hz, 1000ms => 1Hz, 10000ms => 0.1Hz. Measurement rate should be greater than or equal to 25 ms.
2	U2	-	navRate	cycles	The ratio between the number of measurements and the number of navigation solutions, e.g. 5 means five measurements for every navigation solution. Maximum value is 127.
4	U2	-	timeRef	-	The time system to which measurements are aligned: 0: UTC time 1: GPS time 2: GLONASS time 3: BeiDou time 4: Galileo time


5.9.18 UBX-CFG-RINV (0x06 0x34)

5.9.18.1 Contents of Remote Inventory

Message	UBX-CFG-RINV					
Description	Contents of Remote Inventory					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. If N is greater than 30, the excess bytes are discarded. See the Legacy UBX Message Fields Reference for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x34	1 + 1*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X1	-	flags	-	Flags (see graphic below)	
Start of repeated block (N times)						
1 + 1*N	U1	-	data	-	Data to store/stored in Remote Inventory.	
End of repeated block						

Bitfield flags

This graphic explains the bits of flags

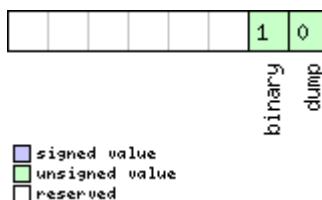

Name	Description
dump	Dump data at startup. Does not work if flag binary is set.
binary	Data is binary.


5.9.19 UBX-CFG-RST (0x06 0x04)

5.9.19.1 Reset Receiver / Clear Backup Data Structures

Message	UBX-CFG-RST					
Description	Reset Receiver / Clear Backup Data Structures					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Command					
Comment	Don't expect this message to be acknowledged by the receiver. • Newer FW version won't acknowledge this message at all. • Older FW version will acknowledge this message but the acknowledge may not be sent completely before the receiver is reset.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x04	4	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X2	-	navBbrMask	-	BBR Sections to clear. The following Special Sets apply: 0x0000 Hot start 0x0001 Warm start 0xFFFF Cold start (see graphic below)	
2	U1	-	resetMode	-	Reset Type 0x00 - Hardware reset (Watchdog) immediately 0x01 - Controlled Software reset 0x02 - Controlled Software reset (GNSS only) 0x04 - Hardware reset (Watchdog) after shutdown 0x08 - Controlled GNSS stop 0x09 - Controlled GNSS start	
3	U1	-	reserved1	-	Reserved	

Bitfield navBbrMask

This graphic explains the bits of navBbrMask

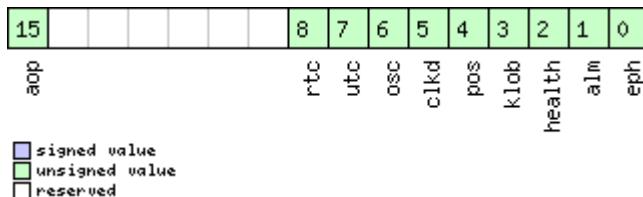

Name	Description
eph	Ephemeris
alm	Almanac
health	Health
klob	Klobuchar parameters
pos	Position
clkd	Clock Drift
osc	Oscillator Parameter
utc	UTC Correction + GPS Leap Seconds Parameters
rtc	RTC
aop	Autonomous Orbit Parameters

5.9.20 UBX-CFG-TMODE2 (0x06 0x3D)

5.9.20.1 Time Mode Settings 2


Message	UBX-CFG-TMODE2					
Description	Time Mode Settings 2					
Firmware	Supported on: • u-blox 9 with protocol version 29 (only with Time Sync products)					
Type	Get/Set					
Comment	This message is available only for timing receivers See the section Timing functionality in Integration Manual for details. This message replaces the deprecated UBX-CFG-TMODE message.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x3D	28	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	timeMode	-	Time Transfer Mode: 0 Disabled 1 Survey In 2 Fixed Mode (true position information required) 3-255 Reserved	
1	U1	-	reserved1	-	Reserved	
2	X2	-	flags	-	Time mode flags (see graphic below)	
4	I4	-	ecefXOrLat	cm_ or_ deg*1e- 7	WGS84 ECEF X coordinate or latitude, depending on flags above	

UBX-CFG-TMODE2 continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
8	I4	-	ecefYOrLon	cm_ or_ deg*1e- 7	WGS84 ECEF Y coordinate or longitude, depending on flags above
12	I4	-	ecefZOrAlt	cm	WGS84 ECEF Z coordinate or altitude, depending on flags above
16	U4	-	fixedPosAcc	mm	Fixed position 3D accuracy
20	U4	-	svinMinDur	s	Survey-in minimum duration
24	U4	-	svinAccLimit	mm	Survey-in position accuracy limit

Bitfield flags

This graphic explains the bits of flags



 signed value
 unsigned value
 reserved

Name	Description
lla	Position is given in LAT/LON/ALT (default is ECEF)
altInv	Altitude is not valid, in case lla was set

5.9.21 UBX-CFG-TP5 (0x06 0x31)

5.9.21.1 Time Pulse Parameters

Message	UBX-CFG-TP5					
Description	Time Pulse Parameters					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 27. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x06	0x31	32	see below	CK_A CK_B

Payload Contents:


Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	tpIdx	-	Time pulse selection (0 = TIMEPULSE, 1 = TIMEPULSE2)
1	U1	-	version	-	Message version (0x01 for this version)
2	U1[2]	-	reserved1	-	Reserved
4	I2	-	antCableDelay	ns	Antenna cable delay

UBX-CFG-TP5 continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
6	I2	-	rfGroupDelay	ns	RF group delay
8	U4	-	freqPeriod	Hz_or_us	Frequency or period time, depending on setting of bit 'isFreq'
12	U4	-	freqPeriodLocked	Hz_or_us	Frequency or period time when locked to GNSS time, only used if 'lockedOtherSet' is set
16	U4	-	pulseLenRatio	us_or_2^-32	Pulse length or duty cycle, depending on 'isLength'
20	U4	-	pulseLenRatioLock	us_or_2^-32	Pulse length or duty cycle when locked to GNSS time, only used if 'lockedOtherSet' is set
24	I4	-	userConfigDelay	ns	User configurable time pulse delay
28	X4	-	flags	-	Configuration flags (see graphic below)

Bitfield flags

This graphic explains the bits of flags

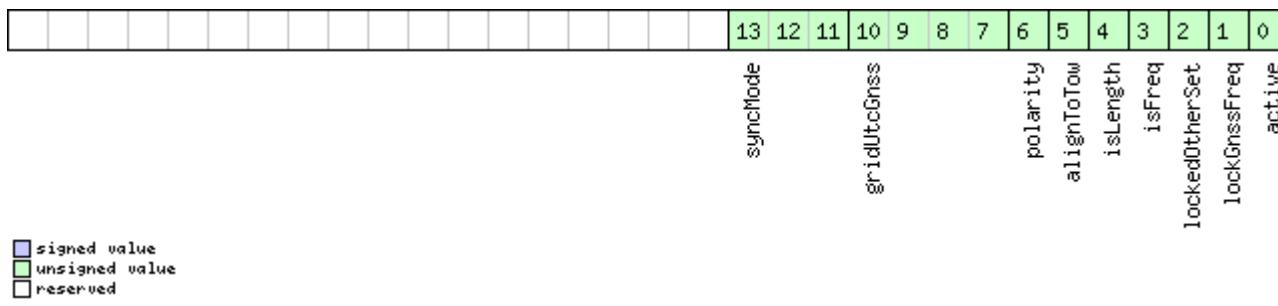

Name	Description
active	If set enable time pulse; if pin assigned to another function, other function takes precedence. Must be set for FTS variant.
lockGnssFreq	If set synchronize time pulse to GNSS as soon as GNSS time is valid. If not set, or before GNSS time is valid use local clock. This flag is ignored by the FTS product variant; in this case the receiver always locks to the best available time/frequency reference (which is not necessarily GNSS).
lockedOtherSet	If set the receiver switches between the timepulse settings given by 'freqPeriodLocked' & 'pulseLenLocked' and those given by 'freqPeriod' & 'pulseLen'. The 'Locked' settings are used where the receiver has an accurate sense of time. For non-FTS products, this occurs when GNSS solution with a reliable time is available, but for FTS products the setting syncMode field governs behavior. In all cases, the receiver only uses 'freqPeriod' & 'pulseLen' when the flag is unset.
isFreq	If set 'freqPeriodLock' and 'freqPeriod' are interpreted as frequency, otherwise interpreted as period.
isLength	If set 'pulseLenRatioLock' and 'pulseLenRatio' interpreted as pulse length, otherwise interpreted as duty cycle.
alignToTow	Align pulse to top of second (period time must be integer fraction of 1s). Also set 'lockGnssFreq' to use this feature. This flag is ignored by the FTS product variant; it is assumed to be always set (as is lockGnssFreq). Set maxSlewRate and maxPhaseCorrRate fields of UBX-CFG-SMGR to 0 to disable alignment.

Bitfield flags Description continued

Name	Description
polarity	Pulse polarity: 0: falling edge at top of second 1: rising edge at top of second
gridUtcGnss	Timegrid to use: 0: UTC 1: GPS 2: GLONASS 3: BeiDou 4: Galileo This flag is only relevant if 'lockGnssFreq' and 'alignToTow' are set. Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix it will attempt to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in UBX-CFG-GNSS .
syncMode	Sync Manager lock mode to use: 0: switch to 'freqPeriodLock' and 'pulseLenRatioLock' as soon as Sync Manager has an accurate time, never switch back to 'freqPeriod' and 'pulseLenRatio' 1: switch to 'freqPeriodLock' and 'pulseLenRatioLock' as soon as Sync Manager has an accurate time, and switch back to 'freqPeriod' and 'pulseLenRatio' as soon as time gets inaccurate This field is only relevant for the FTS product variant. This field is only relevant if the flag 'lockedOtherSet' is set.

5.9.22 UBX-CFG-USB (0x06 0x1B)

5.9.22.1 USB Configuration


Message	UBX-CFG-USB					
Description	USB Configuration					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Get/Set					
Comment	This message is deprecated in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead. See the Legacy UBX Message Fields Reference for the corresponding configuration item.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x1B	108	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2	-	vendorID	-	Vendor ID. This field shall only be set to registered Vendor IDs. Changing this field requires special Host drivers.	
2	U2	-	productID	-	Product ID. Changing this field requires special Host drivers.	
4	U1[2]	-	reserved1	-	Reserved	

UBX-CFG-USB continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
6	U1[2]	-	reserved2	-	Reserved
8	U2	-	powerConsumption	mA	Power consumed by the device
10	X2	-	flags	-	various configuration flags (see graphic below)
12	CH[32]	-	vendorString	-	String containing the vendor name. 32 ASCII bytes including 0-termination.
44	CH[32]	-	productString	-	String containing the product name. 32 ASCII bytes including 0-termination.
76	CH[32]	-	serialNumber	-	String containing the serial number. 32 ASCII bytes including 0-termination. Changing the String fields requires special Host drivers.

Bitfield flags

This graphic explains the bits of flags

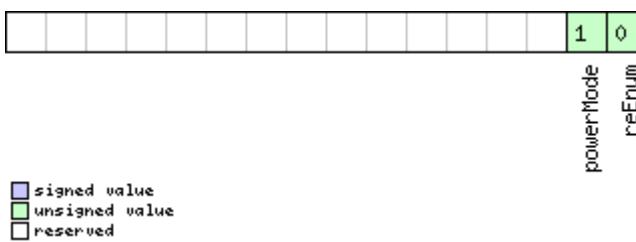

Name	Description
reEnum	force re-enumeration
powerMode	self-powered (1), bus-powered (0)

5.9.23 UBX-CFG-VALDEL (0x06 0x8C)

5.9.23.1 Deletes values corresponding to provided keys


Message	UBX-CFG-VALDEL
Description	Deletes values corresponding to provided keys
Firmware	Supported on: <ul style="list-style-type: none">u-blox 9 with protocol version 29
Type	Set
Comment	<p>Overview:</p> <ul style="list-style-type: none"> This message can be used to delete saved configuration to effectively revert them to defaults. This message can delete saved configuration from the Flash configuration layer and the BBR configuration layer. The changes won't be effective until these layers are loaded into the RAM layer. This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64. This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result

	being applied at the end, see version 1 of UBX-CFG-VALDEL that supports transactions.
	<ul style="list-style-type: none"> • This message does not check if the resulting configuration is valid. • See Receiver Configuration for details.
	This message returns a UBX-ACK-NAK and no configuration is applied:
	<ul style="list-style-type: none"> • if any key is unknown to the receiver FW • if the layers bitfield does not specify a layer to delete a value from
	Notes:
	<ul style="list-style-type: none"> • If a key is sent multiple times within the same message, then the value is effectively deleted only once. • Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request

Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	0x8C	4 + 4*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version, set to 0	
1	X1	-	layers	-	The layers where the configuration should be deleted from (see graphic below)	
2	U1[2]	-	reserved1	-	Reserved	
Start of repeated block (N times)						
4 + 4*N	U4	-	keys	-	Configuration Item IDs of the Configuration Items to be deleted	
End of repeated block						

Bitfield layers

This graphic explains the bits of layers

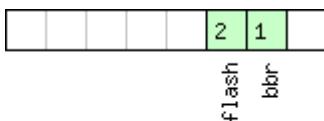

- signed value
- unsigned value
- reserved

Name	Description
bbr	Delete configuration from the BBR layer
flash	Delete configuration from the Flash layer

5.9.23.2 Deletes values corresponding to provided keys within a transaction


Message	UBX-CFG-VALDEL					
Description	Deletes values corresponding to provided keys within a transaction					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Set					
Comment	<p>Overview:</p> <ul style="list-style-type: none"> This message can be used to delete saved configuration to effectively revert them to defaults. This message can delete saved configuration from the Flash configuration layer and the BBR configuration layer. The changes won't be effective until these layers are loaded into the RAM layer. This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64. This message can be used multiple times with the result being managed within a transaction. This message does not check if the resulting configuration is valid. See Receiver Configuration for details. See version 0 of UBX-CFG-VALDEL for simplified version of this message. <p>This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied:</p> <ul style="list-style-type: none"> if any key within a transaction is unknown to the receiver FW if an invalid transaction state transition is requested if the layers bitfield changes within a transaction if the layers bitfield does not specify a layer to delete a value from <p>Notes:</p> <ul style="list-style-type: none"> Any request for another UBX-CFG- message type (including UBX-CFG-VALSET and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied. This message can be sent with no keys to delete for the purposes of managing the transaction state transition. If a key is sent multiple times within the same message or within the same transaction, then the value is effectively deleted only once. Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request 					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	0x8C	4 + 4*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version, set to 1	
1	X1	-	layers	-	The layers where the configuration should be deleted from (see graphic below)	
2	X1	-	transaction	-	Transaction action to be applied: (see graphic below)	
3	U1	-	reserved1	-	Reserved	

UBX-CFG-VALDEL continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
Start of repeated block (N times)					
4 + 4*N	U4	-	keys	-	Configuration Item IDs of the Configuration Items to be deleted
End of repeated block					

Bitfield layers

This graphic explains the bits of layers




 signed value
 unsigned value
 reserved

Name	Description
bbr	Delete configuration from the BBR layer
flash	Delete configuration from the Flash layer

Bitfield transaction

This graphic explains the bits of transaction

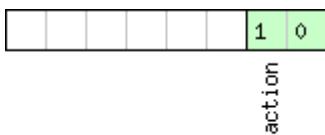

 signed value
 unsigned value
 reserved

Name	Description
action	<p>Transaction action to be applied:</p> <p>0: Transactionless UBX-CFG-VALDEL: In the next UBX-CFG-VALDEL, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied. If a transaction has already been started, cancels any started transaction and the incoming configuration is applied.</p> <p>1: (Re)Start deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or 3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALDEL messages.</p> <p>2: Deletion transaction ongoing: In the next UBX-CFG-VALDEL, it can be either 0, 1, 2 or 3.</p> <p>3: Apply and end a deletion transaction: In the next UBX-CFG-VALDEL, it can be either 0 or 1.</p>

5.9.24 UBX-CFG-VALGET (0x06 0x8B)

5.9.24.1 Get Configuration Items

Message	UBX-CFG-VALGET					
Description	Get Configuration Items					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Poll Request					
Comment	<p>This message is used to read configuration items from the receiver. It returns the configuration data for the specified items and layer.</p> <p>A UBX-CFG-NAK message is returned in case one or more items are unknown to the receiver or when the number of requested items is greater than 64.</p> <p>Otherwise a UBX-CFG-ACK message is returned.</p> <p>The configuration items are identified by their configuration key IDs. Keys can be complete key values (group and item specifiers) or wild-card specifications. A complete key value will constitute a request for one key-value pair. A key value which has a valid group specifier and 0xffff in the item part of the key value (bits 0-15) constitutes a request for all items in the specified group. A key with a value of 0xffff in the group part of the key value (bits 16-27) is a request for all items known to the receiver in all groups. The response message is limited to containing a maximum of 64 key-value pairs. If there are wild-card specifications then there may be more than 64 possible responses. In order to handle this, the 'position' field can specify that the response message should skip this number of key-value pairs before it starts constructing the message. This allows a large set of values to be retrieved 64 at a time. If the response contains less than 64 key-value pairs then all values have been reported, otherwise there may be more to read.</p> <p>See Receiver Configuration for details.</p>					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x8B	4 + 4*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	message version, set to 0	
1	U1	-	layer	-	The layers from which the configuration items should be retrieved: 0 - RAM layer 1 - BBR layer 2 - Flash layer 7 - Default layer	
2	U2	-	position	-	skip this many key values before constructing output message	
Start of repeated block (N times)						
4 + 4*N	U4	-	keys	-	configuration key ID selected for retrieval	
End of repeated block						

5.9.24.2 Configuration Items

Message	UBX-CFG-VALGET					
Description	Configuration Items					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Polled					
Comment	This message is output by the receiver to return requested configuration data (key and value pairs). See Receiver Configuration for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x06	0x8B	4 + 1*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	message version, set to 1	
1	U1	-	layer	-	The layers from which the configuration items originate: 0 - RAM layer 1 - BBR 2 - Flash 7 - Default	
2	U2	-	position	-	number of configuration items skipped in the result set before constructing this message (mirrors the equivalent field in the request message)	
Start of repeated block (N times)						
4 + 1*N	U1	-	cfgData	-	configuration data (key and value pairs)	
End of repeated block						

5.9.25 UBX-CFG-VALSET (0x06 0x8A)

5.9.25.1 Sets values corresponding to provided key-value pairs

Message	UBX-CFG-VALSET					
Description	Sets values corresponding to provided key-value pairs					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Set					
Comment	Overview: <ul style="list-style-type: none">• This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration parameters to change, and their new values.• This message is limited to containing a maximum of 64 key-value pairs.• This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of UBX-CFG-VALSET that supports transactions.					

- See [Receiver Configuration](#) for details.
- This message returns a UBX-ACK-NAK and no configuration is applied:
- if any key is unknown to the receiver FW
 - if the layers bitfield does not specify a layer to save a value to
 - if the requested configuration is not valid. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer.

Notes:

- If a key is sent multiple times within the same message, then the value eventually being applied is the last sent.


	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x06	0x8A	4 + 1*N	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version, set to 0
1	X1	-	layers	-	The layers where the configuration should be applied (see graphic below)
2	U1[2]	-	reserved1	-	Reserved
Start of repeated block (N times)					
4 + 1*N	U1	-	cfgData	-	configuration data (key and value pairs)
End of repeated block					

Bitfield layers

This graphic explains the bits of layers

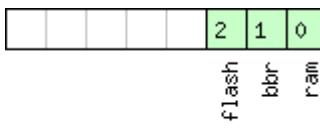

- signed value
- unsigned value
- reserved

Name	Description
ram	Update configuration in the RAM layer
bbr	Update configuration in the BBR layer
flash	Update configuration in the Flash layer

5.9.25.2 Sets values corresponding to provided key-value pairs within a transaction


Message	UBX-CFG-VALSET					
Description	Sets values corresponding to provided key-value pairs within a transaction					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Set					
Comment	<p>Overview:</p> <ul style="list-style-type: none"> This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration parameters to change, and their new values. This message is limited to containing a maximum of 64 key-value pairs. This message can be used multiple times with the result being managed within a transaction. Within a transaction there is no limit on the number key-value pairs; a transaction is effectively limited to the number of known keys. See Receiver Configuration for details. See version 0 of UBX-CFG-VALSET for simplified version of this message. <p>This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied:</p> <ul style="list-style-type: none"> if any key within a transaction is unknown to the receiver FW if an invalid transaction state transition is requested if the layers bitfield changes within a transaction if the layers bitfield does not specify a layer to save a value to <p>This message returns a UBX-ACK-NAK, and no configuration is applied:</p> <ul style="list-style-type: none"> if the requested configuration is not valid. While in a transaction context, only the last message that requests to apply the transaction returns a NAK. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer. This also applies to a transaction-less request. <p>Notes:</p> <ul style="list-style-type: none"> Any request for another UBX-CFG-message type (including UBX-CFG-VALDEL and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied. This message can be sent with no key/values to set for the purposes of managing the transaction state transition. If a key is sent multiple times within the same message or within the same transaction, then the value eventually being applied is the last sent. 					
		Header	Class	ID	Length (Bytes)	Payload Checksum
Message Structure		0xB5	0x62	0x06	0x8A 4 + 1*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version, set to 1	
1	X1	-	layers	-	The layers where the configuration should be applied (see graphic below)	
2	U1	-	transaction	-	Transaction action to be applied (see graphic below)	

UBX-CFG-VALSET continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
3	U1	-	reserved1	-	Reserved
Start of repeated block (N times)					
4 + 1*N	U1	-	cfgData	-	configuration data (key and value pairs)
End of repeated block					

Bitfield layers

This graphic explains the bits of layers




flash bbr ram

- signed value
- unsigned value
- reserved

Name	Description
ram	Update configuration in the RAM layer
bbr	Update configuration in the BBR layer
flash	Update configuration in the Flash layer

Bitfield transaction

This graphic explains the bits of transaction



action

- signed value
- unsigned value
- reserved

Name	Description
action	<p>Transaction action to be applied:</p> <p>0: Transactionless UBX-CFG-VALSET: In the next UBX-CFG-VALSET, it can be either 0 or 1. If a transaction has not yet been started, the incoming configuration is applied (if valid). If a transaction has already been started, cancels any started transaction and the incoming configuration is applied (if valid).</p> <p>1: (Re)Start set transaction: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3. If a transaction has not yet been started, a transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALSET messages.</p> <p>2: Set transaction ongoing: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3.</p> <p>3: Apply and end a set transaction: In the next UBX-CFG-VALSET, it can be either 0 or 1.</p>

5.10 UBX-INF (0x04)

Information Messages: i.e. Printf-Style Messages, with IDs such as Error, Warning, Notice.

Messages in the INF class are used to output strings in a printf style from the firmware or application code. All INF messages have an associated type to indicate the kind of message.

5.10.1 UBX-INF-DEBUG (0x04 0x04)

5.10.1.1 ASCII output with debug contents

Message	UBX-INF-DEBUG					
Description	ASCII output with debug contents					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x04	0x04	0 + 1*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

5.10.2 UBX-INF-ERROR (0x04 0x00)

5.10.2.1 ASCII output with error contents

Message	UBX-INF-ERROR					
Description	ASCII output with error contents					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x04	0x00	0 + 1*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

5.10.3 UBX-INF-NOTICE (0x04 0x02)

5.10.3.1 ASCII output with informational contents

Message	UBX-INF-NOTICE					
Description	ASCII output with informational contents					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x04	0x02	0 + 1*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

5.10.4 UBX-INF-TEST (0x04 0x03)

5.10.4.1 ASCII output with test contents

Message	UBX-INF-TEST					
Description	ASCII output with test contents					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x04	0x03	0 + 1*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

5.10.5 UBX-INF-WARNING (0x04 0x01)

5.10.5.1 ASCII output with warning contents

Message	UBX-INF-WARNING					
Description	ASCII output with warning contents					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message has a variable length payload, representing an ASCII string.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x04	0x01	0 + 1*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	CH	-	str	-	ASCII Character	
End of repeated block						

5.11 UBX-LOG (0x21)

Logging Messages: i.e. Log creation, deletion, info and retrieval.

Messages in the LOG class are used to configure and report status information of the logging and batching features.

5.11.1 UBX-LOG-CREATE (0x21 0x07)

5.11.1.1 Create Log File

Message	UBX-LOG-CREATE					
Description	Create Log File					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Command					
Comment	<p>This message is used to create an initial logging file and activate the logging subsystem.</p> <p>UBX-ACK-ACK or UBX-ACK-NAK are returned to indicate success or failure.</p> <p>This message does not handle activation of recording or filtering of log entries (see UBX-CFG-LOGFILTER).</p>					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x21	0x07	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	The version of this message. Set to 0	
1	X1	-	logCfg	-	Config flags (see graphic below)	
2	U1	-	reserved1	-	Reserved	
3	U1	-	logSize	-	<p>Indicates the size of the log:</p> <p>0 (maximum safe size): Ensures that logging will not be interrupted and enough space will be left available for all other uses of the filestore</p> <p>1 (minimum size):</p> <p>2 (user defined): See 'userDefinedSize' below</p>	
4	U4	-	userDefinedSize	bytes	<p>Sets the maximum amount of space in the filestore that can be used by the logging task.</p> <p>This field is only applicable if logSize is set to user defined.</p>	

Bitfield logCfg

This graphic explains the bits of logCfg



circular
bit 0

- signed value
- unsigned value
- reserved

Name	Description
circular	Log is circular (new entries overwrite old ones in a full log) if this bit set

5.11.2 UBX-LOG-ERASE (0x21 0x03)

5.11.2.1 Erase Logged Data

Message	UBX-LOG-ERASE					
Description	Erase Logged Data					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Command					
Comment	This message deactivates the logging system and erases all logged data. UBX-ACK-ACK or UBX-ACK-NAK are returned to indicate success or failure.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x21	0x03	0	see below CK_A CK_B
No payload						

5.11.3 UBX-LOG-FINDTIME (0x21 0x0E)

5.11.3.1 Find index of a log entry based on a given time

Message	UBX-LOG-FINDTIME					
Description	Find index of a log entry based on a given time					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message can be used for a time-based search of a log. It can find the index of the first log entry with time equal to the given time, otherwise the index of the most recent entry with time less than the given time. This index can then be used with the UBX-LOG-RETRIEVE message to provide time-based retrieval of log entries. Searching a log is effective for a given time later than the base date (January 1st, 2004). Searching a log for a given time earlier than the base date will result in an 'entry not found' response. Searching a log for a given time greater than the last recorded entry's time will return the index of the last recorded entry.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x21	0x0E	12	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	

UBX-LOG-FINDTIME continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version (=0 for this version)
1	U1	-	type	-	Message type, 0 for request
2	U1[2]	-	reserved1	-	Reserved
4	U2	-	year	-	Year (1-65635) of UTC time
6	U1	-	month	-	Month (1-12) of UTC time
7	U1	-	day	-	Day (1-31) of UTC time
8	U1	-	hour	-	Hour (0-23) of UTC time
9	U1	-	minute	-	Minute (0-59) of UTC time
10	U1	-	second	-	Second (0-60) of UTC time
11	U1	-	reserved2	-	Reserved

5.11.3.2 Response to FINDTIME request

Message	UBX-LOG-FINDTIME					
Description	Response to FINDTIME request					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	-					

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version (=1 for this version)
1	U1	-	type	-	Message type, 1 for response
2	U1[2]	-	reserved1	-	Reserved
4	U4	-	entryNumber	-	Index of the first log entry with time = given time, otherwise index of the most recent entry with time < given time. If 0xFFFFFFFF, no log entry found with time <= given time. The indexing of log entries is zero based.

5.11.4 UBX-LOG-INFO (0x21 0x08)

5.11.4.1 Poll for log information

Message	UBX-LOG-INFO					
Description	Poll for log information					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Poll Request					
Comment	Upon sending of this message, the receiver returns UBX-LOG-INFO as defined below.					
Message Structure	Header 0xB5 0x62	Class 0x21	ID 0x08	Length (Bytes) 0	Payload see below	Checksum CK_A CK_B
No payload						

5.11.4.2 Log information


Message	UBX-LOG-INFO					
Description	Log information					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message is used to report information about the logging subsystem. Note: • The reported maximum log size will be smaller than that originally specified in LOG-CREATE due to logging and filestore implementation overheads. • Log entries are compressed in a variable length fashion, so it may be difficult to predict log space usage with any precision. • There may be times when the receiver does not have an accurate time (e.g. if the week number is not yet known), in which case some entries will not have a timestamp. This may result in the oldest/newest entry time values not taking account of these entries.					
Message Structure	Header 0xB5 0x62	Class 0x21	ID 0x08	Length (Bytes) 48	Payload see below	Checksum CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	The version of this message. Set to 1	
1	U1[3]	-	reserved1	-	Reserved	
4	U4	-	filestoreCapacity	bytes	The capacity of the filestore	
8	U1[8]	-	reserved2	-	Reserved	
16	U4	-	currentMaxLogSize	bytes	The maximum size the current log is allowed to grow to	
20	U4	-	currentLogSize	bytes	Approximate amount of space in log currently occupied	

UBX-LOG-INFO continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
24	U4	-	entryCount	-	Number of entries in the log. Note: for circular logs this value will decrease when a group of entries is deleted to make space for new ones.
28	U2	-	oldestYear	-	Oldest entry UTC year (1-65635) or zero if there are no entries with known time
30	U1	-	oldestMonth	-	Oldest month (1-12)
31	U1	-	oldestDay	-	Oldest day (1-31)
32	U1	-	oldestHour	-	Oldest hour (0-23)
33	U1	-	oldestMinute	-	Oldest minute (0-59)
34	U1	-	oldestSecond	-	Oldest second (0-60)
35	U1	-	reserved3	-	Reserved
36	U2	-	newestYear	-	Newest year (1-65635) or zero if there are no entries with known time
38	U1	-	newestMonth	-	Newest month (1-12)
39	U1	-	newestDay	-	Newest day (1-31)
40	U1	-	newestHour	-	Newest hour (0-23)
41	U1	-	newestMinute	-	Newest minute (0-59)
42	U1	-	newestSecond	-	Newest second (0-60)
43	U1	-	reserved4	-	Reserved
44	X1	-	status	-	Log status flags (see graphic below)
45	U1[3]	-	reserved5	-	Reserved

Bitfield status

This graphic explains the bits of status

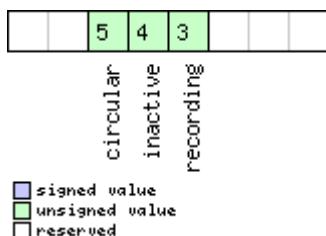

Name	Description
recording	Log entry recording is currently turned on
inactive	Logging system not active - no log present
circular	The current log is circular

5.11.5 UBX-LOG-RETRIEVEPOSEXTRA (0x21 0x0f)

5.11.5.1 Odometer log entry

Message	UBX-LOG-RETRIEVEPOSEXTRA					
Description	Odometer log entry					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message is used to report an odometer log entry					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x21	0x0f	32	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U4	-	entryIndex	-	The index of this log entry
4	U1	-	version	-	The version of this message. Set to 0
5	U1	-	reserved1	-	Reserved
6	U2	-	year	-	Year (1-65635) of UTC time. Will be zero if time not known
8	U1	-	month	-	Month (1-12) of UTC time
9	U1	-	day	-	Day (1-31) of UTC time
10	U1	-	hour	-	Hour (0-23) of UTC time
11	U1	-	minute	-	Minute (0-59) of UTC time
12	U1	-	second	-	Second (0-60) of UTC time
13	U1[3]	-	reserved2	-	Reserved
16	U4	-	distance	-	Odometer distance traveled since the last time the odometer was reset by a UBX-NAV-RESETODO
20	U1[12]	-	reserved3	-	Reserved

5.11.6 UBX-LOG-RETRIEVEPOS (0x21 0x0b)

5.11.6.1 Position fix log entry

Message	UBX-LOG-RETRIEVEPOS					
Description	Position fix log entry					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message is used to report a position fix log entry					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x21	0x0b	40	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	entryIndex	-	The index of this log entry	
4	I4	1e-7	lon	deg	Longitude	
8	I4	1e-7	lat	deg	Latitude	

UBX-LOG-RETRIEVEPOS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
12	I4	-	hMSL	mm	Height above mean sea level
16	U4	-	hAcc	mm	Horizontal accuracy estimate
20	U4	-	gSpeed	mm/s	Ground speed (2-D)
24	U4	1e-5	heading	deg	Heading
28	U1	-	version	-	The version of this message. Set to 0
29	U1	-	fixType	-	Fix type: 0x01: Dead Reckoning only 0x02: 2D-Fix 0x03: 3D-Fix 0x04: GNSS + Dead Reckoning combined
30	U2	-	year	-	Year (1-65635) of UTC time
32	U1	-	month	-	Month (1-12) of UTC time
33	U1	-	day	-	Day (1-31) of UTC time
34	U1	-	hour	-	Hour (0-23) of UTC time
35	U1	-	minute	-	Minute (0-59) of UTC time
36	U1	-	second	-	Second (0-60) of UTC time
37	U1	-	reserved1	-	Reserved
38	U1	-	numSV	-	Number of satellites used in the position fix
39	U1	-	reserved2	-	Reserved

5.11.7 UBX-LOG-RETRIEVESTRING (0x21 0x0d)

5.11.7.1 Byte string log entry

Message	UBX-LOG-RETRIEVESTRING					
Description	Byte string log entry					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message is used to report a byte string log entry					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x21	0x0d	16 + 1*byteCount	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	entryIndex	-	The index of this log entry	
4	U1	-	version	-	The version of this message. Set to 0	
5	U1	-	reserved1	-	Reserved	
6	U2	-	year	-	Year (1-65635) of UTC time. Will be zero if time not known	
8	U1	-	month	-	Month (1-12) of UTC time	
9	U1	-	day	-	Day (1-31) of UTC time	
10	U1	-	hour	-	Hour (0-23) of UTC time	
11	U1	-	minute	-	Minute (0-59) of UTC time	

UBX-LOG-RETRIEVESTRING continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
12	U1	-	second	-	Second (0-60) of UTC time
13	U1	-	reserved2	-	Reserved
14	U2	-	byteCount	-	Size of string in bytes
Start of repeated block (byteCount times)					
16 + 1*N	U1	-	bytes	-	The bytes of the string
End of repeated block					

5.11.8 UBX-LOG-RETRIEVE (0x21 0x09)

5.11.8.1 Request log data

Message	UBX-LOG-RETRIEVE					
Description	Request log data					
Firmware	Supported on:					
	<ul style="list-style-type: none"> • u-blox 9 with protocol version 29 					
Type	Command					
Comment	<p>This message is used to request logged data (log recording must first be disabled, see UBX-CFG-LOGFILTER).</p> <p>Log entries are returned in chronological order, using the messages UBX-LOG-RETRIEVEPOS and UBX-LOG-RETRIEVESTRING. If the odometer was enabled at the time a position was logged, then message UBX-LOG-RETRIEVEPOSEXTRA will also be used. The maximum number of entries that can be returned in response to a single UBX-LOG-RETRIEVE message is 256. If more entries than this are required the message will need to be sent multiple times with different startNumbers. The retrieve will be stopped if any UBX-LOG message is received. The speed of transfer can be maximized by using a high data rate and temporarily stopping the GPS processing (see UBX-CFG-RST).</p>					
Message Structure		Header	Class	ID	Length (Bytes)	Payload Checksum
		0xB5	0x62	0x21	0x09	12 see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	startNumber	-	Index of first log entry to be transferred. If it is larger than the index of the last available log entry, then the first log entry to be transferred is the last available log entry. The indexing of log entries is zero based.	
4	U4	-	entryCount	-	Number of log entries to transfer in total including the first entry to be transferred. If it is larger than the log entries available starting from the first entry to be transferred, then only the available log entries are transferred followed by a UBX-ACK-NAK . The maximum is 256.	

UBX-LOG-RETRIEVE continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
8	U1	-	version	-	The version of this message. Set to 0.
9	U1[3]	-	reserved1	-	Reserved

5.11.9 UBX-LOG-STRING (0x21 0x04)

5.11.9.1 Store arbitrary string in on-board flash

Message	UBX-LOG-STRING					
Description	Store arbitrary string in on-board flash					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Command					
Comment	This message can be used to store an arbitrary byte string in the on-board flash memory. The maximum length that can be stored is 256 bytes.					
Message Structure	Header 0xB5 0x62	Class 0x21	ID 0x04	Length (Bytes) 0 + 1*N	Payload	Checksum CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*1	U1	-	bytes	-	The string of bytes to be logged (maximum 256)	
End of repeated block						

5.12 UBX-MGA (0x13)

Multiple GNSS Assistance Messages: i.e. Assistance data for various GNSS.

Messages in the MGA class are used for GNSS aiding information from and to the receiver.

5.12.1 UBX-MGA-ACK (0x13 0x60)

5.12.1.1 UBX-MGA-ACK-DATA0

Message	UBX-MGA-ACK-DATA0					
Description	Multiple GNSS Acknowledge message					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message is sent by a u-blox receiver to acknowledge the receipt of an assistance message. Acknowledgments are enabled by setting the CFG-NAVSPG-ACKAIDING item. See the section Flow control in Integration Manual for details.					
Message Structure	Header 0xB5 0x62	Class 0x13	ID 0x60	Length (Bytes) 8	Payload	Checksum CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Type of acknowledgment: 0: The message was not used by the receiver (see infoCode field for an indication of why) 1: The message was accepted for use by the receiver (the infoCode field will be 0)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	infoCode	-	Provides greater information on what the receiver chose to do with the message contents: 0: The receiver accepted the data 1: The receiver doesn't know the time so can't use the data (To resolve this a UBX-MGA-INI-TIME_UTC message should be supplied first) 2: The message version is not supported by the receiver 3: The message size does not match the message version 4: The message data could not be stored to the database 5: The receiver is not ready to use the message data 6: The message type is unknown	
3	U1	-	msgId	-	UBX message ID of the ack'ed message	

UBX-MGA-ACK continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	U1[4]	-	msgPayloadStart	-	The first 4 bytes of the ack'ed message's payload

5.12.2 UBX-MGA-BDS (0x13 0x03)

5.12.2.1 UBX-MGA-BDS-EPH

Message	UBX-MGA-BDS-EPH					
Description	BDS Ephemeris Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of BeiDou ephemeris assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header 0xB5 0x62	Class 0x13	ID 0x03	Length (Bytes) 88	Payload	Checksum CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x01 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1	-	svId	-	BDS satellite identifier (see Satellite Numbering)
3	U1	-	reserved1	-	Reserved
4	U1	-	SatH1	-	Autonomous satellite Health flag
5	U1	-	IODC	-	Issue of Data, Clock
6	I2	2^{-66}	a2	s/s ²	Time polynomial coefficient 2
8	I4	2^{-50}	a1	s/s	Time polynomial coefficient 1
12	I4	2^{-33}	a0	s	Time polynomial coefficient 0
16	U4	2^3	toc	s	Clock data reference time
20	I2	0.1	TGD1	ns	Equipment Group Delay Differential
22	U1	-	URAI	-	User Range Accuracy Index
23	U1	-	IODE	-	Issue of Data, Ephemeris
24	U4	2^3	toe	s	Ephemeris reference time
28	U4	2^{-19}	sqrtA	m ^{0.5}	Square root of semi-major axis
32	U4	2^{-33}	e	-	Eccentricity
36	I4	2^{-31}	omega	semi-circles	Argument of perigee
40	I2	2^{-43}	Deltan	semi-circles /s	Mean motion difference from computed value
42	I2	2^{-43}	IDOT	semi-circles /s	Rate of inclination angle

UBX-MGA-BDS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
44	I4	2^{-31}	M0	semi-circles	Mean anomaly at reference time
48	I4	2^{-31}	Omega0	semi-circles	Longitude of ascending node of orbital of plane computed according to reference time
52	I4	2^{-43}	OmegaDot	semi-circles /s	Rate of right ascension
56	I4	2^{-31}	i0	semi-circles	Inclination angle at reference time
60	I4	2^{-31}	Cuc	semi-circles	Amplitude of cosine harmonic correction term to the argument of latitude
64	I4	2^{-31}	Cus	semi-circles	Amplitude of sine harmonic correction term to the argument of latitude
68	I4	2^{-6}	Crc	m	Amplitude of cosine harmonic correction term to the orbit radius
72	I4	2^{-6}	Crs	m	Amplitude of sine harmonic correction term to the orbit radius
76	I4	2^{-31}	Cic	semi-circles	Amplitude of cosine harmonic correction term to the angle of inclination
80	I4	2^{-31}	Cis	semi-circles	Amplitude of sine harmonic correction term to the angle of inclination
84	U1[4]	-	reserved2	-	Reserved

5.12.2.2 UBX-MGA-BDS-ALM

Message	UBX-MGA-BDS-ALM					
Description	BDS Almanac Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of BeiDou almanac assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x03 40	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x02 for this version)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	BeiDou satellite identifier (see Satellite Numbering)	
3	U1	-	reserved1	-	Reserved	
4	U1	-	Wna	week	Almanac Week Number	

UBX-MGA-BDS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
5	U1	2^12	toa	s	Almanac reference time
6	I2	2^-19	deltaI	semi-circles	Almanac correction of orbit reference inclination at reference time
8	U4	2^-11	sqrtA	m^0.5	Almanac square root of semi-major axis
12	U4	2^-21	e	-	Almanac eccentricity
16	I4	2^-23	omega	semi-circles	Almanac argument of perigee
20	I4	2^-23	M0	semi-circles	Almanac mean anomaly at reference time
24	I4	2^-23	Omega0	semi-circles	Almanac longitude of ascending node of orbit plane at computed according to reference time
28	I4	2^-38	omegaDot	semi-circles /s	Almanac rate of right ascension
32	I2	2^-20	a0	s	Almanac satellite clock bias
34	I2	2^-38	a1	s/s	Almanac satellite clock rate
36	U1[4]	-	reserved2	-	Reserved

5.12.2.3 UBX-MGA-BDS-HEALTH

Message	UBX-MGA-BDS-HEALTH					
Description	BDS Health Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of BeiDou health assistance to a receiver. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x03	68	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x04 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1[2]	-	reserved1	-	Reserved
4	U2[30]	-	healthCode	-	Each two-byte value represents a BDS SV (1-30). The 9 LSBs of each byte contain the 9 bit health code from subframe 5 pages 7,8 of the D1 message, and from subframe 5 pages 35,36 of the D1 message.
64	U1[4]	-	reserved2	-	Reserved

5.12.2.4 UBX-MGA-BDS-UTC

Message	UBX-MGA-BDS-UTC					
Description	BDS UTC Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of BeiDou UTC assistance to a receiver. See the section AssistNow online in Integration manual for details.					

Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x05 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	I4	2^{-30}	a0UTC	s	BDT clock bias relative to UTC	
8	I4	2^{-50}	a1UTC	s/s	BDT clock rate relative to UTC	
12	I1	-	dtLS	s	Delta time due to leap seconds before the new leap second effective	
13	U1[1]	-	reserved2	-	Reserved	
14	U1	-	wnRec	week	BeiDou week number of reception of this UTC parameter set (8 bit truncated)	
15	U1	-	wnLSF	week	Week number of the new leap second	
16	U1	-	dN	day	Day number of the new leap second	
17	I1	-	dtLSF	s	Delta time due to leap seconds after the new leap second effective	
18	U1[2]	-	reserved3	-	Reserved	

5.12.2.5 UBX-MGA-BDS-IONO

Message	UBX-MGA-BDS-IONO					
Description	BDS Ionospheric Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of BeiDou ionospheric assistance to a receiver. See the section AssistNow online in Integration manual for details.					

Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x06 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	

UBX-MGA-BDS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	I1	2^{-30}	alpha0	s	Ionospheric parameter alpha0
5	I1	2^{-27}	alpha1	s/pi	Ionospheric parameter alpha1
6	I1	2^{-24}	alpha2	s/pi ²	Ionospheric parameter alpha2
7	I1	2^{-24}	alpha3	s/pi ³	Ionospheric parameter alpha3
8	I1	2^{11}	beta0	s	Ionospheric parameter beta0
9	I1	2^{14}	beta1	s/pi	Ionospheric parameter beta1
10	I1	2^{16}	beta2	s/pi ²	Ionospheric parameter beta2
11	I1	2^{16}	beta3	s/pi ³	Ionospheric parameter beta3
12	U1[4]	-	reserved2	-	Reserved

5.12.3 UBX-MGA-DBD (0x13 0x80)

5.12.3.1 Poll the Navigation Database

Message	UBX-MGA-DBD					
Description	Poll the Navigation Database					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Poll Request					
Comment	Poll the whole navigation data base. The receiver will send all available data from its internal database. The receiver will indicate the finish of the transmission with a UBX-MGA-ACK . The msgPayloadStart field of the UBX-MGA-ACK message will contain a U4 representing the number of UBX-MGA-DBD-DATA* messages sent.					
Message Structure	Header 0xB5 0x62	Class 0x13	ID 0x80	Length (Bytes) 0	Payload see below	Checksum CK_A CK_B
No payload						

5.12.3.2 Navigation Database Dump Entry

Message	UBX-MGA-DBD					
Description	Navigation Database Dump Entry					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input/Output					
Comment	UBX-MGA-DBD messages are only intended to be sent back to the same receiver that generated them. Navigation database entry. The data fields are firmware specific. Transmission of this type of message will be acknowledged by UBX-MGA-ACK messages, if acknowledgment has been enabled. See the section AssistNow online in Integration manual for details. The maximum payload size for firmware 2.01 onwards is 164 bytes (which makes the maximum message size 172 bytes).					
Message Structure	Header 0xB5 0x62	Class 0x13	ID 0x80	Length (Bytes) 12 + 1*N	Payload see below	Checksum CK_A CK_B

Payload Contents:					
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1[12]	-	reserved1	-	Reserved
Start of repeated block (N times)					
12 + 1*N	U1	-	data	-	fw specific data
End of repeated block					

5.12.4 UBX-MGA-GAL (0x13 0x02)

5.12.4.1 UBX-MGA-GAL-EPH

Message	UBX-MGA-GAL-EPH					
Description	Galileo Ephemeris Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of Galileo ephemeris assistance to a receiver. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x02	76	see below CK_A CK_B

Payload Contents:					
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x01 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1	-	svId	-	Galileo Satellite identifier (see Satellite Numbering)
3	U1	-	reserved1	-	Reserved
4	U2	-	iodNav	-	Ephemeris and clock correction Issue of Data
6	I2	2^{-43}	deltaN	semi-circles /s	Mean motion difference from computed value
8	I4	2^{-31}	m0	semi-circles	Mean anomaly at reference time
12	U4	2^{-33}	e	-	Eccentricity
16	U4	2^{-19}	sqrtA	$m^{0.5}$	Square root of the semi-major axis
20	I4	2^{-31}	omega0	semi-circles	Longitude of ascending node of orbital plane at weekly epoch
24	I4	2^{-31}	i0	semi-circles	Inclination angle at reference time
28	I4	2^{-31}	omega	semi-circles	Argument of perigee
32	I4	2^{-43}	omegaDot	semi-circles /s	Rate of change of right ascension

UBX-MGA-GAL continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
36	I2	2^{-43}	iDot	semi-circles /s	Rate of change of inclination angle
38	I2	2^{-29}	cuc	radian s	Amplitude of the cosine harmonic correction term to the argument of latitude
40	I2	2^{-29}	cus	radian s	Amplitude of the sine harmonic correction term to the argument of latitude
42	I2	2^{-5}	crc	radian s	Amplitude of the cosine harmonic correction term to the orbit radius
44	I2	2^{-5}	crs	radian s	Amplitude of the sine harmonic correction term to the orbit radius
46	I2	2^{-29}	cic	radian s	Amplitude of the cosine harmonic correction term to the angle of inclination
48	I2	2^{-29}	cis	radian s	Amplitude of the sine harmonic correction term to the angle of inclination
50	U2	60	toe	s	Ephemeris reference time
52	I4	2^{-34}	af0	s	SV clock bias correction coefficient
56	I4	2^{-46}	af1	s/s	SV clock drift correction coefficient
60	I1	2^{-59}	af2	s/s square d	SV clock drift rate correction coefficient
61	U1	-	sisaindexE1E5b	-	Signal-In-Space Accuracy index for dual frequency E1-E5b
62	U2	60	toc	s	Clock correction data reference Time of Week
64	I2	-	bgdE1E5b	-	E1-E5b Broadcast Group Delay
66	U1[2]	-	reserved2	-	Reserved
68	U1	-	healthE1B	-	E1-B Signal Health Status
69	U1	-	dataValidityE1B	-	E1-B Data Validity Status
70	U1	-	healthE5b	-	E5b Signal Health Status
71	U1	-	dataValidityE5b	-	E5b Data Validity Status
72	U1[4]	-	reserved3	-	Reserved

5.12.4.2 UBX-MGA-GAL-ALM

Message	UBX-MGA-GAL-ALM					
Description	Galileo Almanac Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of Galileo almanac assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x02 32	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x02 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	Galileo Satellite identifier (see Satellite Numbering)	
3	U1	-	reserved1	-	Reserved	
4	U1	-	ioda	-	Almanac Issue of Data	
5	U1	-	almWNa	week	Almanac reference week number	
6	U2	600	toa	s	Almanac reference time	
8	I2	2^{-9}	deltaSqrtA	$m^{0.5}$	Difference with respect to the square root of the nominal semi-major axis (29 600 km)	
10	U2	2^{-16}	e	-	Eccentricity	
12	I2	2^{-14}	deltaI	semi-circles	Inclination at reference time relative to i0 = 56 degree	
14	I2	2^{-15}	omega0	semi-circles	Longitude of ascending node of orbital plane at weekly epoch	
16	I2	2^{-33}	omegaDot	semi-circles /s	Rate of change of right ascension	
18	I2	2^{-15}	omega	semi-circles	Argument of perigee	
20	I2	2^{-15}	m0	semi-circles	Satellite mean anomaly at reference time	
22	I2	2^{-19}	af0	s	Satellite clock correction bias 'truncated'	
24	I2	2^{-38}	af1	s/s	Satellite clock correction linear 'truncated'	
26	U1	-	healthE1B	-	Satellite E1-B signal health status	
27	U1	-	healthE5b	-	Satellite E5b signal health status	
28	U1[4]	-	reserved2	-	Reserved	

5.12.4.3 UBX-MGA-GAL-TIMEOFFSET

Message	UBX-MGA-GAL-TIMEOFFSET					
Description	Galileo GPS time offset assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of Galileo time to GPS time offset. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x02	12	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x03 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	I2	2^-35	a0G	s	Constant term of the polynomial describing the offset	
6	I2	2^-51	a1G	s/s	Rate of change of the offset	
8	U1	3600	t0G	s	DReference time for GGTO data	
9	U1	-	wn0G	weeks	Week Number of GGTO reference	
10	U1[2]	-	reserved2	-	Reserved	

5.12.4.4 UBX-MGA-GAL-UTC

Message	UBX-MGA-GAL-UTC					
Description	Galileo UTC Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of Galileo UTC assistance to a receiver. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x02	20	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x05 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	I4	2^-30	a0	s	First parameter of UTC polynomial	
8	I4	2^-50	a1	s/s	Second parameter of UTC polynomial	
12	I1	-	dtLS	s	Delta time due to current leap seconds	
13	U1	3600	tot	s	UTC parameters reference time of week (Galileo time)	

UBX-MGA-GAL continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
14	U1	-	wnt	weeks	UTC parameters reference week number (the 8 bit WNT field)
15	U1	-	wnLSF	weeks	Week number at the end of which the future leap second becomes effective (the 8 bit WNLSF field)
16	U1	-	dN	days	Day number at the end of which the future leap second becomes effective
17	I1	-	dTLSF	s	Delta time due to future leap seconds
18	U1[2]	-	reserved2	-	Reserved

5.12.5 UBX-MGA-GLO (0x13 0x06)

5.12.5.1 UBX-MGA-GLO-EPH

Message	UBX-MGA-GLO-EPH					
Description	GLONASS Ephemeris Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of GLONASS ephemeris assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x06	48	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x01 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1	-	svId	-	GLONASS Satellite identifier (see Satellite Numbering)
3	U1	-	reserved1	-	Reserved
4	U1	-	FT	-	User range accuracy
5	U1	-	B	-	Health flag from string 2
6	U1	-	M	-	Type of GLONASS satellite (1 indicates GLONASS-M)
7	I1	-	H	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6), -128 for unknown
8	I4	2^-11	x	km	X component of the SV position in PZ-90. 02 coordinate System
12	I4	2^-11	y	km	Y component of the SV position in PZ-90. 02 coordinate System
16	I4	2^-11	z	km	Z component of the SV position in PZ-90. 02 coordinate System

UBX-MGA-GLO continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
20	I4	2^-20	dx	km/s	X component of the SV velocity in PZ-90. 02 coordinate System
24	I4	2^-20	dy	km/s	Y component of the SV velocity in PZ-90. 02 coordinate System
28	I4	2^-20	dz	km/s	Z component of the SV velocity in PZ-90. 02 coordinate System
32	I1	2^-30	ddx	km/s^2	X component of the SV acceleration in PZ-90.02 coordinate System
33	I1	2^-30	ddy	km/s^2	Y component of the SV acceleration in PZ-90.02 coordinate System
34	I1	2^-30	ddz	km/s^2	Z component of the SV acceleration in PZ-90.02 coordinate System
35	U1	15	tb	minutes	Index of a time interval within current day according to UTC(SU)
36	I2	2^-40	gamma	-	Relative carrier frequency deviation
38	U1	-	E	days	Ephemeris data age indicator
39	I1	2^-30	deltaTau	s	Time difference between L2 and L1 band
40	I4	2^-30	tau	s	SV clock bias
44	U1[4]	-	reserved2	-	Reserved

5.12.5.2 UBX-MGA-GLO-ALM

Message	UBX-MGA-GLO-ALM					
Description	GLONASS Almanac Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of GLONASS almanac assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x06	36	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x02 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	GLONASS Satellite identifier (see Satellite Numbering)	
3	U1	-	reserved1	-	Reserved	
4	U2	-	N	days	Reference calendar day number of almanac within the four-year period (from string 5)	
6	U1	-	M	-	Type of GLONASS satellite (1 indicates GLONASS-M)	

UBX-MGA-GLO continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
7	U1	-	C	-	Unhealthy flag at instant of almanac upload (1 indicates operability of satellite)
8	I2	2^-18	tau	s	Coarse time correction to GLONASS time
10	U2	2^-20	epsilon	-	Eccentricity
12	I4	2^-20	lambda	semi-circles	Longitude of the first (within the N-day) ascending node of satellite orbit in PC-90.02 coordinate system
16	I4	2^-20	deltaI	semi-circles	Correction to the mean value of inclination
20	U4	2^-5	tLambda	s	Time of the first ascending node passage
24	I4	2^-9	deltaT	s/orbit al-period	Correction to the mean value of Draconian period
28	I1	2^-14	deltaDT	s/orbit al-period ^2	Rate of change of Draconian period
29	I1	-	H	-	Carrier frequency number of navigation RF signal, Range=(-7 .. 6)
30	I2	-	omega	-	Argument of perigee
32	U1[4]	-	reserved2	-	Reserved

5.12.5.3 UBX-MGA-GLO-TIMEOFFSET

Message	UBX-MGA-GLO-TIMEOFFSET					
Description	GLONASS Auxiliary Time Offset Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of auxiliary GLONASS assistance (including the GLONASS time offsets to other GNSS systems) to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x06	20	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x03 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U2	-	N	days	Reference calendar day number within the four-year period of almanac (from string 5)
4	I4	2^-27	tauC	s	Time scale correction to UTC(SU) time
8	I4	2^-31	tauGps	s	Correction to GPS time relative to GLONASS time

UBX-MGA-GLO continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
12	I2	2^-10	B1	s	Coefficient to determine delta UT1
14	I2	2^-16	B2	s/msd	Rate of change of delta UT1
16	U1[4]	-	reserved1	-	Reserved

5.12.6 UBX-MGA-GPS (0x13 0x00)

5.12.6.1 UBX-MGA-GPS-EPH

Message	UBX-MGA-GPS-EPH					
Description	GPS Ephemeris Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of GPS ephemeris assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header 0xB5 0x62	Class 0x13	ID 0x00	Length (Bytes) 68	Payload	Checksum CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x01 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	svId	-	GPS Satellite identifier (see Satellite Numbering)	
3	U1	-	reserved1	-	Reserved	
4	U1	-	fitInterval	-	Fit interval flag	
5	U1	-	uraIndex	-	URA index	
6	U1	-	svHealth	-	SV health	
7	I1	2^-31	tgd	s	Group delay differential	
8	U2	-	iodc	-	IODC	
10	U2	2^4	toc	s	Clock data reference time	
12	U1	-	reserved2	-	Reserved	
13	I1	2^-55	af2	s/s square d	Time polynomial coefficient 2	
14	I2	2^-43	af1	s/s	Time polynomial coefficient 1	
16	I4	2^-31	af0	s	Time polynomial coefficient 0	
20	I2	2^-5	crs	m	Crs	
22	I2	2^-43	deltaN	semi- circles /s	Mean motion difference from computed value	
24	I4	2^-31	m0	semi- circles	Mean anomaly at reference time	
28	I2	2^-29	cuc	radian s	Amplitude of cosine harmonic correction term to argument of latitude	

UBX-MGA-GPS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
30	I2	2^{-29}	cus	radian s	Amplitude of sine harmonic correction term to argument of latitude
32	U4	2^{-33}	e	-	Eccentricity
36	U4	2^{-19}	sqrtA	$m^{0.5}$	Square root of the semi-major axis
40	U2	2^4	toe	s	Reference time of ephemeris
42	I2	2^{-29}	cic	radian s	Amplitude of cos harmonic correction term to angle of inclination
44	I4	2^{-31}	omega0	semi-circles	Longitude of ascending node of orbit plane at weekly epoch
48	I2	2^{-29}	cis	radian s	Amplitude of sine harmonic correction term to angle of inclination
50	I2	2^{-5}	crc	m	Amplitude of cosine harmonic correction term to orbit radius
52	I4	2^{-31}	i0	semi-circles	Inclination angle at reference time
56	I4	2^{-31}	omega	semi-circles	Argument of perigee
60	I4	2^{-43}	omegaDot	semi-circles /s	Rate of right ascension
64	I2	2^{-43}	idot	semi-circles /s	Rate of inclination angle
66	U1[2]	-	reserved3	-	Reserved

5.12.6.2 UBX-MGA-GPS-ALM

Message	UBX-MGA-GPS-ALM					
Description	GPS Almanac Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of GPS almanac assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x00	36	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x02 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1	-	svId	-	GPS Satellite identifier (see Satellite Numbering)
3	U1	-	svHealth	-	SV health information

UBX-MGA-GPS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	U2	$2^{^-21}$	e	-	Eccentricity
6	U1	-	almWNa	week	Reference week number of almanac (the 8 bit WNa field)
7	U1	$2^{^12}$	toa	s	Reference time of almanac
8	I2	$2^{^-19}$	deltaI	semi-circles	Delta inclination angle at reference time
10	I2	$2^{^-38}$	omegaDot	semi-circles /s	Rate of right ascension
12	U4	$2^{^-11}$	sqrtA	$m^{^0.5}$	Square root of the semi-major axis
16	I4	$2^{^-23}$	omega0	semi-circles	Longitude of ascending node of orbit plane
20	I4	$2^{^-23}$	omega	semi-circles	Argument of perigee
24	I4	$2^{^-23}$	m0	semi-circles	Mean anomaly at reference time
28	I2	$2^{^-20}$	aF0	s	Time polynomial coefficient 0 (8 MSBs)
30	I2	$2^{^-38}$	aF1	s/s	Time polynomial coefficient 1
32	U1[4]	-	reserved1	-	Reserved

5.12.6.3 UBX-MGA-GPS-HEALTH

Message	UBX-MGA-GPS-HEALTH					
Description	GPS Health Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of GPS health assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x00	40	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x04 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	U1[32]	-	healthCode	-	Each byte represents a GPS SV (1-32). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5 page 25.	
36	U1[4]	-	reserved2	-	Reserved	

5.12.6.4 UBX-MGA-GPS-UTC

Message	UBX-MGA-GPS-UTC					
Description	GPS UTC Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of GPS UTC assistance to a receiver. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x00 20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x05 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	I4	2^-30	utcA0	s	First parameter of UTC polynomial	
8	I4	2^-50	utcA1	s/s	Second parameter of UTC polynomial	
12	I1	-	utcDtLS	s	Delta time due to current leap seconds	
13	U1	2^12	utcTot	s	UTC parameters reference time of week (GPS time)	
14	U1	-	utcWNt	weeks	UTC parameters reference week number (the 8 bit WNt field)	
15	U1	-	utcWNlsf	weeks	Week number at the end of which the future leap second becomes effective (the 8 bit WNLSF field)	
16	U1	-	utcDn	days	Day number at the end of which the future leap second becomes effective	
17	I1	-	utcDtLSF	s	Delta time due to future leap seconds	
18	U1[2]	-	reserved2	-	Reserved	

5.12.6.5 UBX-MGA-GPS-IONO

Message	UBX-MGA-GPS-IONO					
Description	GPS Ionosphere Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of GPS ionospheric assistance to a receiver. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x00 16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x06 for this type)	

UBX-MGA-GPS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
1	U1	-	version	-	Message version (0x00 for this version)
2	U1[2]	-	reserved1	-	Reserved
4	I1	2^-30	ionoAlpha0	s	Ionospheric parameter alpha0 [s]
5	I1	2^-27	ionoAlpha1	s/semi-circle	Ionospheric parameter alpha1 [s/semi-circle]
6	I1	2^-24	ionoAlpha2	s/(semi-circle^2)	Ionospheric parameter alpha2 [s/semi-circle^2]
7	I1	2^-24	ionoAlpha3	s/(semi-circle^3)	Ionospheric parameter alpha3 [s/semi-circle^3]
8	I1	2^11	ionoBeta0	s	Ionospheric parameter beta0 [s]
9	I1	2^14	ionoBeta1	s/semi-circle	Ionospheric parameter beta1 [s/semi-circle]
10	I1	2^16	ionoBeta2	s/(semi-circle^2)	Ionospheric parameter beta2 [s/semi-circle^2]
11	I1	2^16	ionoBeta3	s/(semi-circle^3)	Ionospheric parameter beta3 [s/semi-circle^3]
12	U1[4]	-	reserved2	-	Reserved

5.12.7 UBX-MGA-INI (0x13 0x40)

5.12.7.1 UBX-MGA-INI-POS_XYZ

Message	UBX-MGA-INI-POS_XYZ					
Description	Initial Position Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	<p>Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance.</p> <p>This message allows the delivery of initial position assistance to a receiver in cartesian ECEF coordinates. This message is equivalent to the UBX-MGA-INI-POS_LLH message, except for the coordinate system.</p> <p>See the section AssistNow online in Integration manual for details.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x40	20	see below CK_A CK_B
Payload Contents:						

UBX-MGA-INI continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x00 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1[2]	-	reserved1	-	Reserved
4	I4	-	ecefX	cm	WGS84 ECEF X coordinate
8	I4	-	ecefY	cm	WGS84 ECEF Y coordinate
12	I4	-	ecefZ	cm	WGS84 ECEF Z coordinate
16	U4	-	posAcc	cm	Position accuracy (stddev)

5.12.7.2 UBX-MGA-INI-POS_LLH

Message	UBX-MGA-INI-POS_LLH					
Description	Initial Position Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	Supplying position assistance that is inaccurate by more than the specified position accuracy, may lead to substantially degraded receiver performance. This message allows the delivery of initial position assistance to a receiver in WGS84 lat/long/alt coordinates. This message is equivalent to the UBX-MGA-INI-POS_XYZ message, except for the coordinate system. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x40	20	see below CK_A CK_B

Payload Contents:


Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x01 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1[2]	-	reserved1	-	Reserved
4	I4	1e-7	lat	deg	WGS84 Latitude
8	I4	1e-7	lon	deg	WGS84 Longitude
12	I4	-	alt	cm	WGS84 Altitude
16	U4	-	posAcc	cm	Position accuracy (stddev)

5.12.7.3 UBX-MGA-INI-TIME_UTC

Message	UBX-MGA-INI-TIME_UTC					
Description	Initial Time Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance. This message allows the delivery of UTC time assistance to a receiver. This message is equivalent to the UBX-MGA-INI-TIME_GNSS message, except for the time base. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x40	24	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x10 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	X1	-	ref	-	Reference to be used to set time (see graphic below)	
3	I1	-	leapSecs	s	Number of leap seconds since 1980 (or 0x80 = -128 if unknown)	
4	U2	-	year	-	Year	
6	U1	-	month	-	Month, starting at 1	
7	U1	-	day	-	Day, starting at 1	
8	U1	-	hour	-	Hour, from 0 to 23	
9	U1	-	minute	-	Minute, from 0 to 59	
10	U1	-	second	s	Seconds, from 0 to 59	
11	U1	-	reserved1	-	Reserved	
12	U4	-	ns	ns	Nanoseconds, from 0 to 999,999,999	
16	U2	-	tAccS	s	Seconds part of time accuracy	
18	U1[2]	-	reserved2	-	Reserved	
20	U4	-	tAccNs	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999	

Bitfield ref

This graphic explains the bits of ref

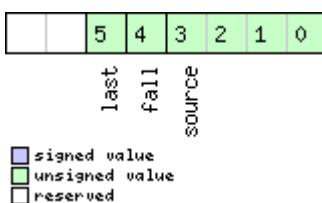

Name	Description
source	0: none, i.e. on receipt of message (will be inaccurate!) 1: relative to pulse sent to EXTINT0 2: relative to pulse sent to EXTINT1 3-15: reserved
fall	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT
last	use last EXTINT pulse (default next pulse) - only if source is EXTINT

5.12.7.4 UBX-MGA-INI-TIME_GNSS

Message	UBX-MGA-INI-TIME_GNSS					
Description	Initial Time Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance. This message allows the delivery of time assistance to a receiver in a chosen GNSS timebase. This message is equivalent to the UBX-MGA-INI-TIME_UTC message, except for the time base. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x40	24	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x11 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	X1	-	ref	-	Reference to be used to set time (see graphic below)
3	U1	-	gnssId	-	Source of time information. Currently supported: 0: GPS time 2: Galileo time 3: BeiDou time 6: GLONASS time: week = 834 + ((N4-1)*1461 + Nt)/7, tow = (((N4-1)*1461 + Nt) % 7) * 86400 + tod
4	U1[2]	-	reserved1	-	Reserved
6	U2	-	week	-	GNSS week number
8	U4	-	tow	s	GNSS time of week
12	U4	-	ns	ns	GNSS time of week, nanosecond part from 0 to 999,999,999
16	U2	-	tAccS	s	Seconds part of time accuracy
18	U1[2]	-	reserved2	-	Reserved
20	U4	-	tAccNs	ns	Nanoseconds part of time accuracy, from 0 to 999,999,999

Bitfield ref

This graphic explains the bits of `ref`

	5	4	3	2	1	0
--	---	---	---	---	---	---

last fall source

- signed value
- unsigned value
- reserved

Name	Description
source	0: none, i.e. on receipt of message (will be inaccurate!) 1: relative to pulse sent to EXTINT0 2: relative to pulse sent to EXTINT1 3-15: reserved
fall	use falling edge of EXTINT pulse (default rising) - only if source is EXTINT
last	use last EXTINT pulse (default next pulse) - only if source is EXTINT

5.12.7.5 UBX-MGA-INI-CLKD


Message	UBX-MGA-INI-CLKD					
Description	Initial Clock Drift Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	Supplying clock drift assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance. This message allows the delivery of clock drift assistance to a receiver. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x40	12	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x20 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	I4	-	clkD	ns/s	Clock drift	
8	U4	-	clkDAcc	ns/s	Clock drift accuracy	

5.12.7.6 UBX-MGA-INI-FREQ

Message	UBX-MGA-INI-FREQ					
Description	Initial Frequency Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	Supplying external frequency assistance that is inaccurate by more than the specified accuracy, may lead to substantially degraded receiver performance. This message allows the delivery of external frequency assistance to a receiver. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x40	12	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x21 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1	-	reserved1	-	Reserved	
3	X1	-	flags	-	Frequency reference (see graphic below)	
4	I4	1e-2	freq	Hz	Frequency	
8	U4	-	freqAcc	ppb	Frequency accuracy	

Bitfield flags

This graphic explains the bits of flags

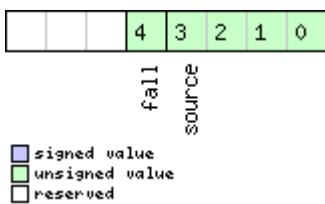

Name	Description
source	0: frequency available on EXTINT0 1: frequency available on EXTINT1 2-15: reserved
fall	use falling edge of EXTINT pulse (default rising)

5.12.7.7 UBX-MGA-INI-EOP

Message	UBX-MGA-INI-EOP					
Description	Earth Orientation Parameters Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of new Earth Orientation Parameters (EOP) to a receiver to improve AssistNow Autonomous operation.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x40	72	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x30 for this type)	
1	U1	-	version	-	Message version (0x00 for this version)	
2	U1[2]	-	reserved1	-	Reserved	
4	U2	-	d2kRef	d	reference time (days since 1.1.2000 12.00h UTC)	
6	U2	-	d2kMax	d	expiration time (days since 1.1.2000 12.00h UTC)	
8	I4	2^{-30}	xpP0	arcsec	$x_p t^0$ polynomial term (offset)	
12	I4	2^{-30}	xpP1	arcsec /d	$x_p t^1$ polynomial term (drift)	
16	I4	2^{-30}	ypP0	arcsec	$y_p t^0$ polynomial term (offset)	
20	I4	2^{-30}	ypP1	arcsec /d	$y_p t^1$ polynomial term (drift)	
24	I4	2^{-25}	dUT1	s	$dUT1 t^0$ polynomial term (offset)	
28	I4	2^{-30}	ddUT1	s/d	$dUT1 t^1$ polynomial term (drift)	
32	U1[40]	-	reserved2	-	Reserved	

5.12.8 UBX-MGA-QZSS (0x13 0x05)

5.12.8.1 UBX-MGA-QZSS-EPH

Message	UBX-MGA-QZSS-EPH					
Description	QZSS Ephemeris Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of QZSS ephemeris assistance to a receiver. See the section AssistNow online in Integration manual for details.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x13	0x05	68	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	type	-	Message type (0x01 for this type)	

UBX-MGA-QZSS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
1	U1	-	version	-	Message version (0x00 for this version)
2	U1	-	svId	-	QZSS Satellite identifier (see Satellite Numbering), Range 1-5
3	U1	-	reserved1	-	Reserved
4	U1	-	fitInterval	-	Fit interval flag
5	U1	-	uraIndex	-	URA index
6	U1	-	svHealth	-	SV health
7	I1	$2^{^31}$	tgd	s	Group delay differential
8	U2	-	iodec	-	IODC
10	U2	$2^{^4}$	toc	s	Clock data reference time
12	U1	-	reserved2	-	Reserved
13	I1	$2^{^55}$	af2	s/s square d	Time polynomial coefficient 2
14	I2	$2^{^43}$	af1	s/s	Time polynomial coefficient 1
16	I4	$2^{^31}$	af0	s	Time polynomial coefficient 0
20	I2	$2^{^5}$	crs	m	Crs
22	I2	$2^{^43}$	deltaN	semi- circles /s	Mean motion difference from computed value
24	I4	$2^{^31}$	m0	semi- circles	Mean anomaly at reference time
28	I2	$2^{^29}$	cuc	radian s	Amp of cosine harmonic corr term to arg of lat
30	I2	$2^{^29}$	cus	radian s	Amp of sine harmonic corr term to arg of lat
32	U4	$2^{^33}$	e	-	eccentricity
36	U4	$2^{^19}$	sqrtA	$m^{^0.5}$	Square root of the semi-major axis A
40	U2	$2^{^4}$	toe	s	Reference time of ephemeris
42	I2	$2^{^29}$	cic	radian s	Amp of cos harmonic corr term to angle of inclination
44	I4	$2^{^31}$	omega0	semi- circles	Long of asc node of orbit plane at weekly epoch
48	I2	$2^{^29}$	cis	radian s	Amp of sine harmonic corr term to angle of inclination
50	I2	$2^{^5}$	crc	m	Amp of cosine harmonic corr term to orbit radius
52	I4	$2^{^31}$	i0	semi- circles	Inclination angle at reference time
56	I4	$2^{^31}$	omega	semi- circles	Argument of perigee
60	I4	$2^{^43}$	omegaDot	semi- circles /s	Rate of right ascension

UBX-MGA-QZSS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
64	I2	2^-43	idot	semi-circles /s	Rate of inclination angle
66	U1[2]	-	reserved3	-	Reserved

5.12.8.2 UBX-MGA-QZSS-ALM

Message	UBX-MGA-QZSS-ALM					
Description	QZSS Almanac Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of QZSS almanac assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header 0xB5	Class 0x62	ID 0x13	Length (Bytes) 0x05	Payload 36	Checksum see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x02 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1	-	svId	-	QZSS Satellite identifier (see Satellite Numbering), Range 1-5
3	U1	-	svHealth	-	Almanac SV health information
4	U2	2^-21	e	-	Almanac eccentricity
6	U1	-	almWNa	week	Reference week number of almanac (the 8 bit WNa field)
7	U1	2^12	toa	s	Reference time of almanac
8	I2	2^-19	deltaI	semi-circles	Delta inclination angle at reference time
10	I2	2^-38	omegaDot	semi-circles /s	Almanac rate of right ascension
12	U4	2^-11	sqrtA	m^0.5	Almanac square root of the semi-major axis A
16	I4	2^-23	omega0	semi-circles	Almanac long of asc node of orbit plane at weekly
20	I4	2^-23	omega	semi-circles	Almanac argument of perigee
24	I4	2^-23	m0	semi-circles	Almanac mean anomaly at reference time
28	I2	2^-20	af0	s	Almanac time polynomial coefficient 0 (8 MSBs)
30	I2	2^-38	af1	s/s	Almanac time polynomial coefficient 1

UBX-MGA-QZSS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
32	U1[4]	-	reserved1	-	Reserved

5.12.8.3 UBX-MGA-QZSS-HEALTH

Message	UBX-MGA-QZSS-HEALTH					
Description	QZSS Health Assistance					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Input					
Comment	This message allows the delivery of QZSS health assistance to a receiver. See the section AssistNow online in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x13	0x05	12	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	type	-	Message type (0x04 for this type)
1	U1	-	version	-	Message version (0x00 for this version)
2	U1[2]	-	reserved1	-	Reserved
4	U1[5]	-	healthCode	-	Each byte represents a QZSS SV (1-5). The 6 LSBs of each byte contains the 6 bit health code from subframes 4/5, data ID = 3, SV ID = 51
9	U1[3]	-	reserved2	-	Reserved

5.13 UBX-MON (0x0A)

Monitoring Messages: i.e. Communication Status, CPU Load, Stack Usage, Task Status.

Messages in the MON class are used to report the receiver status, such as CPU load, stack usage, I/O subsystem statistics etc.

5.13.1 UBX-MON-COMMS (0x0A 0x36)

5.13.1.1 Comm port information

Message	UBX-MON-COMMS					
Description	Comm port information					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	Consolidated communications information for all ports. The size of the message is determined by the number of ports that are in use on the receiver. A port is only included if communication, either send or receive, has been initiated on that port.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x0A	0x36	8 + 40*nPorts	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version (0x00 for this version)
1	U1	-	nPorts	-	Number of ports included
2	X1	-	txErrors	-	tx error bitmask (see graphic below)
3	U1[1]	-	reserved1	-	Reserved
4	U1[4]	-	protIds		The identifiers of the protocols reported in the msgs array. 0: UBX, 1: NMEA, 2: RTCM2, 5: RTCM3, 256: No protocol reported.

Start of repeated block (nPorts times)


8 + 40*N	U2	-	portId	-	Unique identifier for the port. See section Communications ports in Integration manual for details.
10 + 40*N	U2	-	txPending	bytes	Number of bytes pending in transmitter buffer
12 + 40*N	U4	-	txBytes	bytes	Number of bytes ever sent
16 + 40*N	U1	-	txUsage	%	Maximum usage transmitter buffer during the last sysmon period
17 + 40*N	U1	-	txPeakUsage	%	Maximum usage transmitter buffer
18 + 40*N	U2	-	rxPending	bytes	Number of bytes in receiver buffer
20 + 40*N	U4	-	rxBytes	bytes	Number of bytes ever received
24 + 40*N	U1	-	rxUsage	%	Maximum usage receiver buffer during the last sysmon period
25 + 40*N	U1	-	rxPeakUsage	%	Maximum usage receiver buffer
26 + 40*N	U2	-	overrunErrs	-	Number of 100ms timeslots with overrun errors

UBX-MON-COMMS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
28 + 40*N	U2[4]	-	msgs	msg	Number of successfully parsed messages for each protocol. The reported protocols are identified through the protIds field.
36 + 40*N	U1[8]	-	reserved2	-	Reserved
44 + 40*N	U4	-	skipped	bytes	Number of skipped bytes
End of repeated block					

Bitfield txErrors

This graphic explains the bits of txErrors

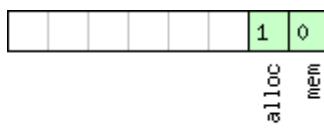

- signed value
- unsigned value
- reserved

Name	Description
mem	Memory Allocation error
alloc	Allocation error (TX buffer full)

5.13.2 UBX-MON-GNSS (0x0A 0x28)

5.13.2.1 Information message major GNSS selection


Message	UBX-MON-GNSS					
Description	Information message major GNSS selection					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Polled					
Comment	This message reports major GNSS selection. It does this by means of bit masks in U1 fields. Each bit in a bit mask corresponds to one major GNSS. Augmentation systems are not reported.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x0A	0x28	8	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x01 for this version)	
1	X1	-	supported	-	A bit mask showing the major GNSS that can be supported by this receiver (see graphic below)	

UBX-MON-GNSS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
2	X1	-	defaultGnss	-	A bit mask showing the default major GNSS selection. If the default major GNSS selection is currently configured in the efuse for this receiver, it takes precedence over the default major GNSS selection configured in the executing firmware of this receiver. (see graphic below)
3	X1	-	enabled	-	A bit mask showing the current major GNSS selection enabled for this receiver (see graphic below)
4	U1	-	simultaneous	-	Maximum number of concurrent major GNSS that can be supported by this receiver
5	U1[3]	-	reserved1	-	Reserved

Bitfield supported


This graphic explains the bits of supported

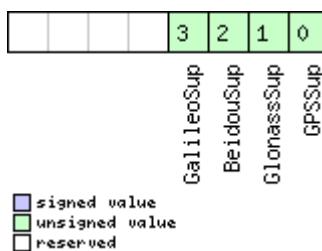

Name	Description
GPSSup	GPS is supported
GlonassSup	GLONASS is supported
BeidouSup	BeiDou is supported
GalileoSup	Galileo is supported

Bitfield defaultGnss


This graphic explains the bits of defaultGnss

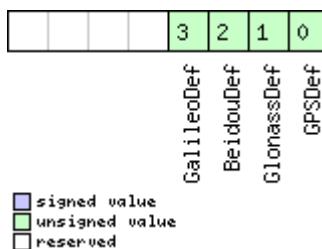

Name	Description
GPSDef	GPS is default-enabled
GlonassDef	GLONASS is default-enabled
BeidouDef	BeiDou is default-enabled
GalileoDef	Galileo is default-enabled

Bitfield enabled

This graphic explains the bits of enabled

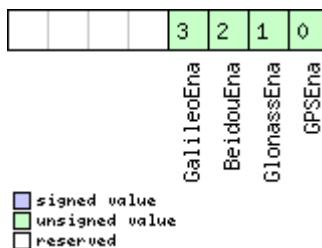

Name	Description
GPSEna	GPS is enabled
GlonassEna	GLONASS is enabled
BeidouEna	BeiDou is enabled
GalileoEna	Galileo is enabled

5.13.3 UBX-MON-HW2 (0x0A 0x0B)

5.13.3.1 Extended Hardware Status

Message	UBX-MON-HW2					
Description	Extended Hardware Status					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message is deprecated in this protocol version. Use UBX-MON-HW3 and UBX-MON-RF instead. Status of different aspects of the hardware such as Imbalance, Low-Level Configuration and POST Results. The first four parameters of this message represent the complex signal from the RF front end. The following rules of thumb apply: <ul style="list-style-type: none"> The smaller the absolute value of the variable <code>ofsI</code> and <code>ofsQ</code>, the better. Ideally, the magnitude of the I-part (<code>magI</code>) and the Q-part (<code>magQ</code>) of the complex signal should be the same. 					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x0A	0x0B	28	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	I1	-	ofsI	-	Imbalance of I-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)	

UBX-MON-HW2 continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
1	U1	-	magI	-	Magnitude of I-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)
2	I1	-	ofsQ	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
3	U1	-	magQ	-	Magnitude of Q-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)
4	U1	-	cfgSource	-	Source of low-level configuration (114 = ROM, 111 = OTP, 112 = config pins, 102 = flash image)
5	U1[3]	-	reserved1	-	Reserved
8	U4	-	lowLevCfg	-	Low-level configuration (obsolete in protocol versions greater than 15)
12	U1[8]	-	reserved2	-	Reserved
20	U4	-	postStatus	-	POST status word
24	U1[4]	-	reserved3	-	Reserved

5.13.4 UBX-MON-HW3 (0x0A 0x37)

5.13.4.1 HW I/O pin information


Message	UBX-MON-HW3					
Description	HW I/O pin information					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	<p>This message contains information specific to each HW I/O pin, for example whether the pin is set as Input or Output.</p> <p>For the antenna supervisor status and other RF status information, see the UBX-MON-RF message.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x0A	0x37	22 + 6*nPins	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1	-	nPins	-	The number of I/O pins included	
2	X1	-	flags	-	Flags (see graphic below)	
3	CH[10]	-	hwVersion	-	Zero-terminated Hardware Version String (same as that returned in the UBX-MON-VER message)	
13	U1[9]	-	reserved1	-	Reserved	
Start of repeated block (nPins times)						

UBX-MON-HW3 continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
22 + 6*N	U2	-	pinId	-	Identifier for the pin, including both external and internal pins.
24 + 6*N	X2	-	pinMask	-	Pin mask (see graphic below)
26 + 6*N	U1	-	VP	-	Virtual pin mapping
27 + 6*N	U1	-	reserved2	-	Reserved
End of repeated block					

Bitfield flags


This graphic explains the bits of flags

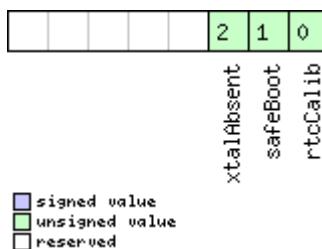

Name	Description
rtcCalib	RTC is calibrated
safeBoot	safeBoot mode (0 = inactive, 1 = active)
xtalAbsent	RTC xtal has been determined to be absent

Bitfield pinMask

This graphic explains the bits of pinMask

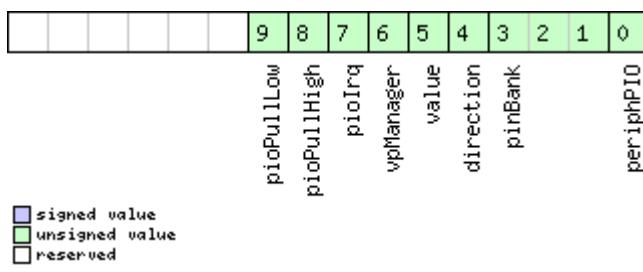

Name	Description
periphPIO	Pin is set to peripheral or PIO? 0=Peripheral 1=PIO
pinBank	Bank the pin belongs to, where 0=A 1=B 2=C 3=D 4=E 5=F 6=G 7=H
direction	Pin direction? 0=Input 1=Output
value	Pin value? 0=Low 1=High
vpManager	Used by Virtual Pin Manager? 0=No 1=Yes
pioIrq	Interrupt enabled? 0=No 1=Yes
pioPullHigh	Using Pull High Resistor? 0=No 1=Yes
pioPullLow	Using Pull Low Resistor 0=No 1=Yes


5.13.5 UBX-MON-HW (0x0A 0x09)

5.13.5.1 Hardware Status

Message	UBX-MON-HW					
Description	Hardware Status					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message is deprecated in this protocol version. Use UBX-MON-HW3 and UBX-MON-RF instead. Status of different aspect of the hardware, such as Antenna, PIO/Peripheral Pins, Noise Level, Automatic Gain Control (AGC)					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x0A	0x09	60	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X4	-	pinSel	-	Mask of Pins Set as Peripheral/PIO	
4	X4	-	pinBank	-	Mask of Pins Set as Bank A/B	
8	X4	-	pinDir	-	Mask of Pins Set as Input/Output	
12	X4	-	pinVal	-	Mask of Pins Value Low/High	
16	U2	-	noisePerMS	-	Noise Level as measured by the GPS Core	
18	U2	-	agcCnt	-	AGC Monitor (counts SIGHI xor SIGLO, range 0 to 8191)	
20	U1	-	aStatus	-	Status of the Antenna Supervisor State Machine (0=INIT, 1=DONTKNOW, 2=OK, 3=SHORT, 4=OPEN)	
21	U1	-	aPower	-	Current PowerStatus of Antenna (0=OFF, 1=ON, 2=DONTKNOW)	
22	X1	-	flags	-	Flags (see graphic below)	
23	U1	-	reserved1	-	Reserved	
24	X4	-	usedMask	-	Mask of Pins that are used by the Virtual Pin Manager	
28	U1[17]	-	VP	-	Array of Pin Mappings for each of the 17 Physical Pins	
45	U1	-	jamInd	-	CW Jamming indicator, scaled (0 = no CW jamming, 255 = strong CW jamming)	
46	U1[2]	-	reserved2	-	Reserved	
48	X4	-	pinIrq	-	Mask of Pins Value using the PIO Irq	
52	X4	-	pullH	-	Mask of Pins Value using the PIO Pull High Resistor	
56	X4	-	pullL	-	Mask of Pins Value using the PIO Pull Low Resistor	

Bitfield flags

This graphic explains the bits of flags

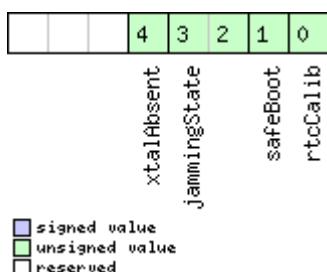

Name	Description
rtcCalib	RTC is calibrated
safeBoot	safeBoot mode (0 = inactive, 1 = active)
jammingState	output from Jamming/Interference Monitor (0 = unknown or feature disabled, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix)
xtalAbsent	RTC xtal has been determined to be absent.

5.13.6 UBX-MON-IO (0x0A 0x02)

5.13.6.1 I/O Subsystem Status

Message	UBX-MON-IO					
Description	I/O Subsystem Status					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message is deprecated in this protocol version. Use UBX-MON-COMMS instead. The size of the message is determined by the number of ports 'N' the receiver supports, i.e. on u-blox 5 the number of ports is 6.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x0A	0x02	0 + 20*N	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
Start of repeated block (N times)						
N*20	U4	-	rxBytes	bytes	Number of bytes ever received	
4 + 20*N	U4	-	txBytes	bytes	Number of bytes ever sent	
8 + 20*N	U2	-	parityErrs	-	Number of 100ms timeslots with parity errors	
10 + 20*N	U2	-	framingErrs	-	Number of 100ms timeslots with framing errors	
12 + 20*N	U2	-	overrunErrs	-	Number of 100ms timeslots with overrun errors	
14 + 20*N	U2	-	breakCond	-	Number of 100ms timeslots with break conditions	
16 + 20*N	U1[4]	-	reserved1	-	Reserved	
End of repeated block						

5.13.7 UBX-MON-MSGPP (0x0A 0x06)

5.13.7.1 Message Parse and Process Status

Message	UBX-MON-MSGPP					
Description	Message Parse and Process Status					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x0A	0x06	120	see below	CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2[8]	-	msg1	msgs	Number of successfully parsed messages for each protocol on port0	
16	U2[8]	-	msg2	msgs	Number of successfully parsed messages for each protocol on port1	
32	U2[8]	-	msg3	msgs	Number of successfully parsed messages for each protocol on port2	
48	U2[8]	-	msg4	msgs	Number of successfully parsed messages for each protocol on port3	
64	U2[8]	-	msg5	msgs	Number of successfully parsed messages for each protocol on port4	
80	U2[8]	-	msg6	msgs	Number of successfully parsed messages for each protocol on port5	
96	U4[6]	-	skipped	bytes	Number skipped bytes for each port	

5.13.8 UBX-MON-PATCH (0x0A 0x27)

5.13.8.1 Output information about installed patches.


Message	UBX-MON-PATCH					
Description	Output information about installed patches.					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Polled					
Comment	-					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x0A	0x27	4 + 16*nEntries	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2	-	version	-	Type of the message. 0x1 for this one.	
2	U2	-	nEntries	-	The number of patches that is output.	
Start of repeated block (nEntries times)						

UBX-MON-PATCH continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4 + 16*N	X4	-	patchInfo	-	Additional information about the patch not stated in the patch header. (see graphic below)
8 + 16*N	U4	-	comparatorNumber	-	The number of the comparator.
12 + 16*N	U4	-	patchAddress	-	The address that the targeted by the patch.
16 + 16*N	U4	-	patchData	-	The data that will be inserted at the patchAddress.
End of repeated block					

Bitfield patchInfo

This graphic explains the bits of patchInfo

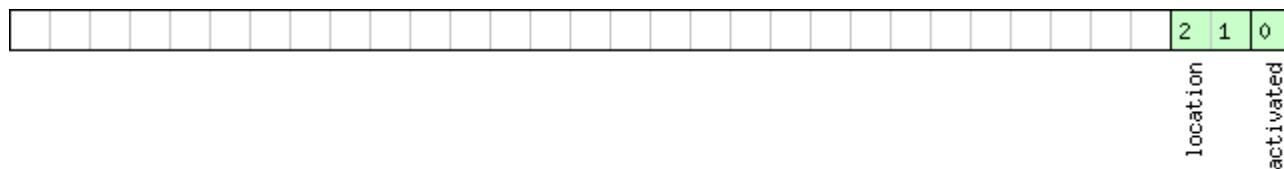

 signed value
 unsigned value
 reserved

Name	Description
activated	1: the patch is active. 0: otherwise.
location	Indicates where the patch is stored. 0: eFuse, 1: ROM, 2: BBR, 3: file system.

5.13.9 UBX-MON-RF (0x0A 0x38)

5.13.9.1 RF information

Message	UBX-MON-RF				
Description	RF information				
Firmware	Supported on: • u-blox 9 with protocol version 29				
Type	Periodic/Polled				
Comment	Information for each RF block.				
	Header	Class	ID	Length (Bytes)	Payload
Message Structure	0xB5 0x62	0x0A	0x38	4 + 24*nBlocks	see below CK_A CK_B

Payload Contents:


Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version (0x00 for this version)
1	U1	-	nBlocks	-	The number of RF blocks included
2	U1[2]	-	reserved1	-	Reserved
Start of repeated block (nBlocks times)					
4 + 24*N	U1	-	blockId	-	RF block id
5 + 24*N	X1	-	flags	-	Flags (see graphic below)

UBX-MON-RF continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
6 + 24*N	U1	-	antStatus	-	Status of the antenna supervisor state machine (0x00=INIT,0x01=DONTKNOW, 0x02=OK,0x03=SHORT,0x04=OPEN)
7 + 24*N	U1	-	antPower	-	Current power status of antenna (0x00=OFF,0x01=ON,0x02=DONTKNOW)
8 + 24*N	U4	-	postStatus	-	POST status word
12 + 24*N	U1[4]	-	reserved2	-	Reserved
16 + 24*N	U2	-	noisePerMS	-	Noise level as measured by the GPS core
18 + 24*N	U2	-	agcCnt	-	AGC Monitor (counts SIGHI xor SIGLO, range 0 to 8191)
20 + 24*N	U1	-	jamInd	-	CW jamming indicator, scaled (0=no CW jamming, 255 = strong CW jamming)
21 + 24*N	I1	-	ofsI	-	Imbalance of I-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
22 + 24*N	U1	-	magI	-	Magnitude of I-part of complex signal, scaled (0= no signal, 255 = max. magnitude)
23 + 24*N	I1	-	ofsQ	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
24 + 24*N	U1	-	magQ	-	Magnitude of Q-part of complex signal, scaled (0= no signal, 255 = max. magnitude)
25 + 24*N	U1[3]	-	reserved3	-	Reserved
End of repeated block					

Bitfield flags

This graphic explains the bits of flags

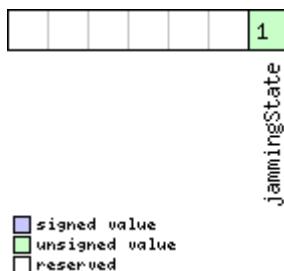

Name	Description					
jammingState	output from Jamming/Interference Monitor (0 = unknown or feature disabled, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix)					

5.13.10 UBX-MON-RXBUF (0x0A 0x07)

5.13.10.1 Receiver Buffer Status

Message	UBX-MON-RXBUF					
Description	Receiver Buffer Status					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x0A	0x07	24	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U2[6]	-	pending	bytes	Number of bytes pending in receiver buffer for each target	
12	U1[6]	-	usage	%	Maximum usage receiver buffer during the last sysmon period for each target	
18	U1[6]	-	peakUsage	%	Maximum usage receiver buffer for each target	


5.13.11 UBX-MON-RXR (0x0A 0x21)

5.13.11.1 Receiver Status Information

Message	UBX-MON-RXR					
Description	Receiver Status Information					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	The receiver ready message is sent when the receiver changes from or to backup mode.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x0A	0x21	1	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	X1	-	flags	-	Receiver status flags (see graphic below)	

Bitfield flags

This graphic explains the bits of flags

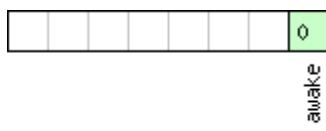

Name	Description
awake	not in Backup mode

5.13.12 UBX-MON-TXBUF (0x0A 0x08)

5.13.12.1 Transmitter Buffer Status


Message	UBX-MON-TXBUF					
Description	Transmitter Buffer Status					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x0A	0x08	28	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U2[6]	-	pending	bytes	Number of bytes pending in transmitter buffer for each target
12	U1[6]	-	usage	%	Maximum usage transmitter buffer during the last sysmon period for each target
18	U1[6]	-	peakUsage	%	Maximum usage transmitter buffer for each target
24	U1	-	tUsage	%	Maximum usage of transmitter buffer during the last sysmon period for all targets
25	U1	-	tPeakUsage	%	Maximum usage of transmitter buffer for all targets
26	X1	-	errors	-	Error bitmask (see graphic below)
27	U1	-	reserved1	-	Reserved

Bitfield errors

This graphic explains the bits of errors

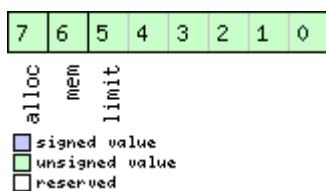

Name	Description
limit	Buffer limit of corresponding target reached
mem	Memory Allocation error
alloc	Allocation error (TX buffer full)

5.13.13 UBX-MON-VER (0x0A 0x04)

5.13.13.1 Receiver/Software Version

Message	UBX-MON-VER					
Description	Receiver/Software Version					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Polled					
Comment	-					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x0A	0x04	40 + 30*N	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	CH[30]	-	swVersion	-	Zero-terminated Software Version String.	
30	CH[10]	-	hwVersion	-	Zero-terminated Hardware Version String	
Start of repeated block (N times)						
40 + 30*N	CH[30]	-	extension	-	Extended software information strings. A series of zero-terminated strings. Each extension field is 30 characters long and contains varying software information. Not all extension fields may appear. Example reported information can be: the software version string of the underlying ROM (when the receiver's firmware is running from flash), the firmware version, the supported protocol version , the module identifier, the Flash Information Structure (FIS) file information, the supported major GNSS, the supported augmentation systems.	
End of repeated block						

5.14 UBX-NAV (0x01)

Navigation Results Messages: i.e. Position, Speed, Time, Acceleration, Heading, DOP, SVs used.

Messages in the NAV class are used to output navigation data such as position, altitude and velocity in a number of formats. Additionally, status flags and accuracy figures are output. The messages are generated with the configured navigation/measurement rate.

5.14.1 UBX-NAV-CLOCK (0x01 0x22)

5.14.1.1 Clock Solution

Message	UBX-NAV-CLOCK					
Description	Clock Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	-					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x01	0x22	20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section Navigation epochs in Integration manual for details. See the section iTOW timestamps in Integration manual for details.	
4	I4	-	clkB	ns	Clock bias	
8	I4	-	clkD	ns/s	Clock drift	
12	U4	-	tAcc	ns	Time accuracy estimate	
16	U4	-	fAcc	ps/s	Frequency accuracy estimate	

5.14.2 UBX-NAV-DGPS (0x01 0x31)

5.14.2.1 DGPS Data Used for NAV


Message	UBX-NAV-DGPS					
Description	DGPS Data Used for NAV					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message outputs the DGPS correction data that has been applied to the current NAV Solution. See also the notes on the RTCM protocol .					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x01	0x31	16 + 12*numCh	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	

UBX-NAV-DGPS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.
4	I4	-	age	ms	Age of newest correction data
8	I2	-	baseId	-	DGPS base station identifier
10	I2	-	baseHealth	-	DGPS base station health status
12	U1	-	numCh	-	Number of channels for which correction data is following
13	U1	-	status	-	DGPS correction type status: 0x00: none 0x01: PR+PRR correction
14	U1[2]	-	reserved1	-	Reserved
Start of repeated block (numCh times)					
16 + 12*N	U1	-	svid	-	Satellite ID
17 + 12*N	X1	-	flags	-	Channel number and usage (see graphic below)
18 + 12*N	U2	-	ageC	ms	Age of latest correction data
20 + 12*N	R4	-	prc	m	Pseudorange correction
24 + 12*N	R4	-	prrc	m/s	Pseudorange rate correction
End of repeated block					

Bitfield flags

This graphic explains the bits of flags

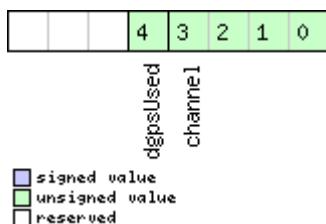

Name	Description
channel1	GPS channel number this SV is on. Channel numbers in the firmware greater than 15 are displayed as having channel number 15
dgpsUsed	1 = DGPS used for this SV

5.14.3 UBX-NAV-DOP (0x01 0x04)

5.14.3.1 Dilution of precision

Message	UBX-NAV-DOP					
Description	Dilution of precision					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	<ul style="list-style-type: none"> DOP values are dimensionless. All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, the DOP value is 1.56. 					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x01	0x04	18	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	U2	0.01	gDOP	-	Geometric DOP	
6	U2	0.01	pDOP	-	Position DOP	
8	U2	0.01	tDOP	-	Time DOP	
10	U2	0.01	vDOP	-	Vertical DOP	
12	U2	0.01	hDOP	-	Horizontal DOP	
14	U2	0.01	nDOP	-	Northing DOP	
16	U2	0.01	eDOP	-	Easting DOP	

5.14.4 UBX-NAV-EOE (0x01 0x61)

5.14.4.1 End Of Epoch

Message	UBX-NAV-EOE					
Description	End Of Epoch					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic					
Comment	This message is intended to be used as a marker to collect all navigation messages of an epoch. It is output after all enabled NAV class messages (except UBX-NAV-HNR) and after all enabled NMEA messages.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x01	0x61	4	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	

5.14.5 UBX-NAV-GEOFENCE (0x01 0x39)

5.14.5.1 Geofencing status

Message	UBX-NAV-GEOFENCE					
Description	Geofencing status					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message outputs the evaluated states of all configured geofences for the current epoch's position. See the section Geofencing in Integration manual for feature details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x01	0x39	8 + 2*numFences	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	U1	-	version	-	Message version (0x00 for this version)	
5	U1	-	status	-	Geofencing status 0 - Geofencing not available or not reliable 1 - Geofencing active	
6	U1	-	numFences	-	Number of geofences	
7	U1	-	combState	-	Combined (logical OR) state of all geofences 0 - Unknown 1 - Inside 2 - Outside	
Start of repeated block (numFences times)						
8 + 2*N	U1	-	state	-	Geofence state 0 - Unknown 1 - Inside 2 - Outside	
9 + 2*N	U1	-	id	-	Geofence ID (0 = not available)	
End of repeated block						

5.14.6 UBX-NAV-HPOSECEF (0x01 0x13)

5.14.6.1 High Precision Position Solution in ECEF

Message	UBX-NAV-HPOSECEF					
Description	High Precision Position Solution in ECEF					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in Integration manual .					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x01	0x13	28	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0 for this version)	
1	U1[3]	-	reserved1	-	Reserved	
4	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
8	I4	-	ecefX	cm	ECEF X coordinate	
12	I4	-	ecefY	cm	ECEF Y coordinate	
16	I4	-	ecefZ	cm	ECEF Z coordinate	
20	I1	0.1	ecefXHp	mm	High precision component of ECEF X coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefX + (ecefXHp * 1e-2).	
21	I1	0.1	ecefYHp	mm	High precision component of ECEF Y coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefY + (ecefYHp * 1e-2).	
22	I1	0.1	ecefZHp	mm	High precision component of ECEF Z coordinate. Must be in the range of -99..+99. Precise coordinate in cm = ecefZ + (ecefZHp * 1e-2).	
23	U1	-	reserved2	-	Reserved	
24	U4	0.1	pAcc	mm	Position Accuracy Estimate	

5.14.7 UBX-NAV-HPPOSLLH (0x01 0x14)

5.14.7.1 High Precision Geodetic Position Solution

Message	UBX-NAV-HPPOSLLH					
Description	High Precision Geodetic Position Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in Integration manual . This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message CFG-NAVSPG-USE_USRDATA .					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x01	0x14	36	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0 for this version)	
1	U1[3]	-	reserved1	-	Reserved	
4	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
8	I4	1e-7	lon	deg	Longitude	
12	I4	1e-7	lat	deg	Latitude	
16	I4	-	height	mm	Height above ellipsoid.	
20	I4	-	hMSL	mm	Height above mean sea level	
24	I1	1e-9	lonHp	deg	High precision component of longitude. Must be in the range -99..+99. Precise longitude in deg * 1e-7 = lon + (lonHp * 1e-2).	
25	I1	1e-9	latHp	deg	High precision component of latitude. Must be in the range -99..+99. Precise latitude in deg * 1e-7 = lat + (latHp * 1e-2).	
26	I1	0.1	heightHp	mm	High precision component of height above ellipsoid. Must be in the range -9..+9. Precise height in mm = height + (heightHp * 0.1).	
27	I1	0.1	hMSLHp	mm	High precision component of height above mean sea level. Must be in range -9..+9. Precise height in mm = hMSL + (hMSLHp * 0.1)	
28	U4	0.1	hAcc	mm	Horizontal accuracy estimate	
32	U4	0.1	vAcc	mm	Vertical accuracy estimate	

5.14.8 UBX-NAV-ODO (0x01 0x09)

5.14.8.1 Odometer Solution

Message	UBX-NAV-ODO					
Description	Odometer Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message outputs the traveled distance since last reset (see UBX-NAV-RESETODO) together with an associated estimated accuracy and the total cumulated ground distance (can only be reset by a cold start of the receiver).					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x01	0x09 20	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0 for this version)	
1	U1[3]	-	reserved1	-	Reserved	
4	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
8	U4	-	distance	m	Ground distance since last reset	
12	U4	-	totalDistance	m	Total cumulative ground distance	
16	U4	-	distanceStd	m	Ground distance accuracy (1-sigma)	

5.14.9 UBX-NAV-ORB (0x01 0x34)

5.14.9.1 GNSS Orbit Database Info


Message	UBX-NAV-ORB					
Description	GNSS Orbit Database Info					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	Status of the GNSS orbit database knowledge.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x01	0x34 8 + 6*numSv	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	U1	-	version	-	Message version (1, for this version)	
5	U1	-	numSv	-	Number of SVs in the database	
6	U1[2]	-	reserved1	-	Reserved	
Start of repeated block (numSv times)						
8 + 6*N	U1	-	gnssId	-	GNSS ID	

UBX-NAV-ORB continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
9 + 6*N	U1	-	svId	-	Satellite ID
10 + 6*N	X1	-	svFlag	-	Information Flags (see graphic below)
11 + 6*N	X1	-	eph	-	Ephemeris data (see graphic below)
12 + 6*N	X1	-	alm	-	Almanac data (see graphic below)
13 + 6*N	X1	-	otherOrb	-	Other orbit data available (see graphic below)
End of repeated block					

Bitfield svFlag


This graphic explains the bits of svFlag

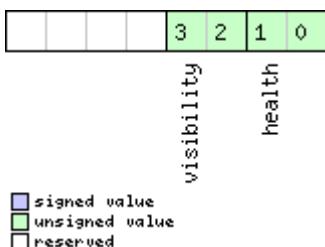

Name	Description
health	SV health: 0: unknown 1: healthy 2: not healthy
visibility	SV health: 0: unknown 1: below horizon 2: above horizon 3: above elevation mask

Bitfield eph


This graphic explains the bits of eph

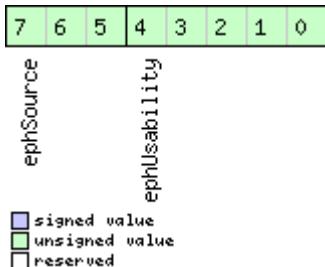

Name	Description
ephUsability	How long the receiver will be able to use the stored ephemeris data from now on: 31: The usability period is unknown 30: The usability period is more than 450 minutes $30 > n > 0$: The usability period is between $(n-1)*15$ and $n*15$ minutes 0: Ephemeris can no longer be used
ephSource	0: not available 1: GNSS transmission 2: external aiding 3-7: other

Bitfield alm


This graphic explains the bits of alm

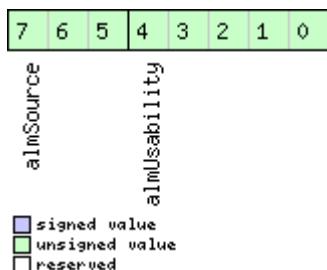

Name	Description
almUsability	How long the receiver will be able to use the stored almanac data from now on: 31: The usability period is unknown 30: The usability period is more than 30 days $30 > n > 0$: The usability period is between $n-1$ and n days 0: Almanac can no longer be used
almSource	0: not available 1: GNSS transmission 2: external aiding 3-7: other

Bitfield otherOrb

This graphic explains the bits of otherOrb

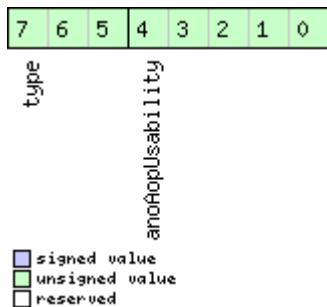

Name	Description
anoAopUsability	How long the receiver will be able to use the orbit data from now on: 31: The usability period is unknown 30: The usability period is more than 30 days 30 > n > 0: The usability period is between n-1 and n days 0: Data can no longer be used
type	Type of orbit data: 0: No orbit data available 1: Assist now offline data 2: Assist now autonomous data 3-7: Other orbit data

5.14.10 UBX-NAV-POSECEF (0x01 0x01)

5.14.10.1 Position Solution in ECEF

Message	UBX-NAV-POSECEF					
Description	Position Solution in ECEF					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in Integration manual .					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x01	0x01	20	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	I4	-	ecefX	cm	ECEF X coordinate	
8	I4	-	ecefY	cm	ECEF Y coordinate	
12	I4	-	ecefZ	cm	ECEF Z coordinate	
16	U4	-	pAcc	cm	Position Accuracy Estimate	

5.14.11 UBX-NAV-POSLH (0x01 0x02)

5.14.11.1 Geodetic Position Solution

Message	UBX-NAV-POSLH					
Description	Geodetic Position Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	<p>See important comments concerning validity of position given in section Navigation output filters in Integration manual.</p> <p>This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message CFG-NAVSPG-USE_USRDATA.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x02	28	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	I4	1e-7	lon	deg	Longitude	
8	I4	1e-7	lat	deg	Latitude	
12	I4	-	height	mm	Height above ellipsoid	
16	I4	-	hMSL	mm	Height above mean sea level	
20	U4	-	hAcc	mm	Horizontal accuracy estimate	
24	U4	-	vAcc	mm	Vertical accuracy estimate	

5.14.12 UBX-NAV-PVT (0x01 0x07)

5.14.12.1 Navigation Position Velocity Time Solution


Message	UBX-NAV-PVT					
Description	Navigation Position Velocity Time Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	<p>Note that during a leap second there may be more or less than 60 seconds in a minute.</p> <p>See the section Leap seconds in Integration manual for details.</p> <p>This message combines position, velocity and time solution, including accuracy figures</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x07	92	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	

UBX-NAV-PVT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.
4	U2	-	year	y	Year (UTC)
6	U1	-	month	month	Month, range 1..12 (UTC)
7	U1	-	day	d	Day of month, range 1..31 (UTC)
8	U1	-	hour	h	Hour of day, range 0..23 (UTC)
9	U1	-	min	min	Minute of hour, range 0..59 (UTC)
10	U1	-	sec	s	Seconds of minute, range 0..60 (UTC)
11	X1	-	valid	-	Validity flags (see graphic below)
12	U4	-	tAcc	ns	Time accuracy estimate (UTC)
16	I4	-	nano	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
20	U1	-	fixType	-	GNSSfix Type: 0: no fix 1: dead reckoning only 2: 2D-fix 3: 3D-fix 4: GNSS + dead reckoning combined 5: time only fix
21	X1	-	flags	-	Fix status flags (see graphic below)
22	X1	-	flags2	-	Additional flags (see graphic below)
23	U1	-	numSV	-	Number of satellites used in Nav Solution
24	I4	1e-7	lon	deg	Longitude
28	I4	1e-7	lat	deg	Latitude
32	I4	-	height	mm	Height above ellipsoid
36	I4	-	hMSL	mm	Height above mean sea level
40	U4	-	hAcc	mm	Horizontal accuracy estimate
44	U4	-	vAcc	mm	Vertical accuracy estimate
48	I4	-	velN	mm/s	NED north velocity
52	I4	-	velE	mm/s	NED east velocity
56	I4	-	velD	mm/s	NED down velocity
60	I4	-	gSpeed	mm/s	Ground Speed (2-D)
64	I4	1e-5	headMot	deg	Heading of motion (2-D)
68	U4	-	sAcc	mm/s	Speed accuracy estimate
72	U4	1e-5	headAcc	deg	Heading accuracy estimate (both motion and vehicle)
76	U2	0.01	pDOP	-	Position DOP
78	U1[6]	-	reserved1	-	Reserved
84	I4	1e-5	headVeh	deg	Heading of vehicle (2-D)
88	I2	1e-2	magDec	deg	Magnetic declination
90	U2	1e-2	magAcc	deg	Magnetic declination accuracy

Bitfield valid


This graphic explains the bits of valid

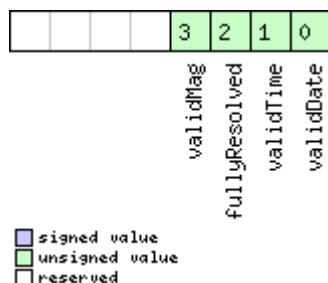

Name	Description
validDate	1 = valid UTC Date (see section Time validity in Integration manual for details)
validTime	1 = valid UTC Time of Day (see section Time validity in Integration manual for details)
fullyResolved	1 = UTC Time of Day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
validMag	1 = valid Magnetic declination

Bitfield flags

This graphic explains the bits of flags

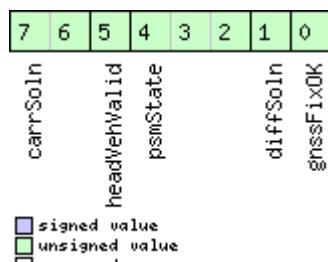

Name	Description
gnssFixOK	1 = valid fix (i.e. within DOP & accuracy masks)
diffSoln	1 = differential corrections were applied
psmState	Power Save Mode state (see Power Management section in Integration manual for details. 0: PSM is not active 1: Enabled (an intermediate state before Acquisition state) 2: Acquisition 3: Tracking 4: Power Optimized Tracking 5: Inactive)
headVehValid	1 = heading of vehicle is valid
carrSoln	Carrier phase range solution status: 0: no carrier phase range solution 1: carrier phase range solution with floating ambiguities 2: carrier phase range solution with fixed ambiguities

Bitfield flags2

This graphic explains the bits of flags2

7	6	5				
---	---	---	--	--	--	--

confirmedTime
confirmedDate
confirmedAvai

signed value
 unsigned value
 reserved

Name	Description
confirmedAvai	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in Integration manual for details) This flag is only supported in Protocol Versions 19.00, 19.10, 20.10, 20.20, 20.30, 22.00, 23.00, 23.01, 27 and 28 .
confirmedDate	1 = UTC Date validity could be confirmed (see section Time validity in Integration manual for details)
confirmedTime	1 = UTC Time of Day could be confirmed (see section Time validity in Integration manual for details)

5.14.13 UBX-NAV-RESETODO (0x01 0x10)

5.14.13.1 Reset odometer

Message	UBX-NAV-RESETODO					
Description	Reset odometer					
Firmware	Supported on: <ul style="list-style-type: none">• u-blox 9 with protocol version 29					
Type	Command					
Comment	This message resets the traveled distance computed by the odometer (see UBX-NAV-ODO). UBX-ACK-ACK or UBX-ACK-NAK are returned to indicate success or failure.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x01	0x10	0	see below CK_A CK_B
No payload						

5.14.14 UBX-NAV-SAT (0x01 0x35)

5.14.14.1 Satellite Information


Message	UBX-NAV-SAT					
Description	Satellite Information					
Firmware	Supported on: <ul style="list-style-type: none">• u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message displays information about SVs which are either known to be visible or currently tracked by the receiver. All signal related information corresponds to the subset of signals specified in Signal Identifiers .					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x01	0x35	8 + 12*numSvs	see below CK_A CK_B
Payload Contents:						

UBX-NAV-SAT continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.
4	U1	-	version	-	Message version (1 for this version)
5	U1	-	numSvs	-	Number of satellites
6	U1[2]	-	reserved1	-	Reserved
Start of repeated block (numSvs times)					
8 + 12*N	U1	-	gnssId	-	GNSS identifier (see Satellite Numbering) for assignment
9 + 12*N	U1	-	svId	-	Satellite identifier (see Satellite Numbering) for assignment
10 + 12*N	U1	-	cno	dBHz	Carrier to noise ratio (signal strength)
11 + 12*N	I1	-	elev	deg	Elevation (range: +/-90), unknown if out of range
12 + 12*N	I2	-	azim	deg	Azimuth (range 0-360), unknown if elevation is out of range
14 + 12*N	I2	0.1	prRes	m	Pseudorange residual
16 + 12*N	X4	-	flags	-	Bitmask (see graphic below)
End of repeated block					

Bitfield flags

This graphic explains the bits of flags

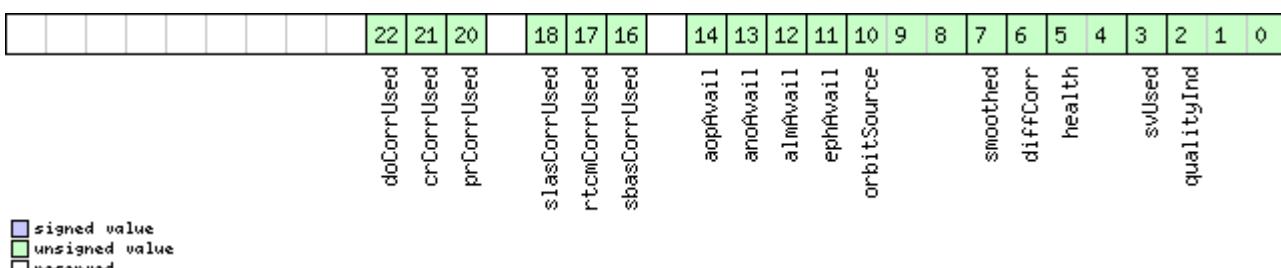

Name	Description
qualityInd	<p>Signal quality indicator:</p> <p>0: no signal 1: searching signal 2: signal acquired 3: signal detected but unusable 4: code locked and time synchronized 5, 6, 7: code and carrier locked and time synchronized</p> <p>Note: Since IMES signals are not time synchronized, a channel tracking an IMES signal can never reach a quality indicator value of higher than 3.</p>
svUsed	1 = Signal in the subset specified in Signal Identifiers is currently being used for navigation

Bitfield flags Description continued

Name	Description
health	Signal health flag: 0: unknown 1: healthy 2: unhealthy
diffCorr	1 = differential correction data is available for this SV
smoothed	1 = carrier smoothed pseudorange used
orbitSource	Orbit source: 0: no orbit information is available for this SV 1: ephemeris is used 2: almanac is used 3: AssistNow Offline orbit is used 4: AssistNow Autonomous orbit is used 5, 6, 7: other orbit information is used
ephAvail	1 = ephemeris is available for this SV
almAvail	1 = almanac is available for this SV
anoAvail	1 = AssistNow Offline data is available for this SV
aopAvail	1 = AssistNow Autonomous data is available for this SV
sbasCorrUsed	1 = SBAS corrections have been used for a signal in the subset specified in Signal Identifiers
rtcmCorrUsed	1 = RTCM corrections have been used for a signal in the subset specified in Signal Identifiers
slasCorrUsed	1 = QZSS SLAS corrections have been used for a signal in the subset specified in Signal Identifiers
prCorrUsed	1 = Pseudorange corrections have been used for a signal in the subset specified in Signal Identifiers
crCorrUsed	1 = Carrier range corrections have been used for a signal in the subset specified in Signal Identifiers
doCorrUsed	1 = Range rate (Doppler) corrections have been used for a signal in the subset specified in Signal Identifiers

5.14.15 UBX-NAV-SIG (0x01 0x43)

5.14.15.1 Signal Information


Message	UBX-NAV-SIG					
Description	Signal Information					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message displays information about signals currently tracked by the receiver.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5 0x62	0x01	0x43	8 + 16*numSigs	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	U1	-	version	-	Message version (0x00 for this version)	
5	U1	-	numSigs	-	Number of signals	

UBX-NAV-SIG continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
6	U1[2]	-	reserved1	-	Reserved
Start of repeated block (numSigs times)					
8 + 16*N	U1	-	gnssId	-	GNSS identifier (see Satellite Numbering for assignment)
9 + 16*N	U1	-	svId	-	Satellite identifier (see Satellite Numbering) for assignment
10 + 16*N	U1	-	sigId	-	New style signal identifier (see Signal Identifiers)
11 + 16*N	U1	-	freqId	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
12 + 16*N	I2	0.1	prRes	m	Pseudorange residual
14 + 16*N	U1	-	cno	dBHz	Carrier-to-noise density ratio (signal strength)
15 + 16*N	U1	-	qualityInd	-	Signal quality indicator: 0: no signal 1: searching signal 2: signal acquired 3: signal detected but unusable 4: code locked and time synchronized 5, 6, 7: code and carrier locked and time synchronized Note: Since IMES signals are not time synchronized, a channel tracking an IMES signal can never reach a quality indicator value of higher than 3.
16 + 16*N	U1	-	corrSource	-	Correction source: 0: no corrections 1: SBAS corrections 2: BeiDou corrections 3: RTCM2 corrections 4: RTCM3 OSR corrections 5: RTCM3 SSR corrections 6: QZSS SLAS corrections
17 + 16*N	U1	-	ionoModel	-	Ionospheric model used: 0: no model 1: Klobuchar model transmitted by GPS 2: SBAS model 3: Klobuchar model transmitted by BeiDou 8: Iono delay derived from dual frequency observations
18 + 16*N	X2	-	sigFlags	-	Signal related flags (see graphic below)
20 + 16*N	U1[4]	-	reserved2	-	Reserved
End of repeated block					

Bitfield sigFlags

This graphic explains the bits of sigFlags

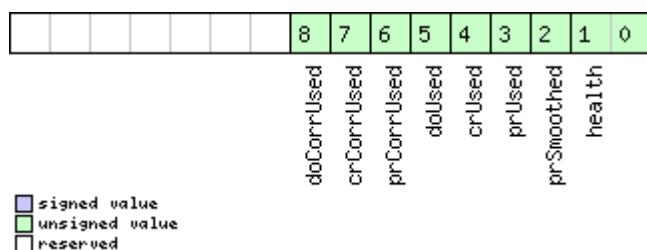

Name	Description
health	Signal health flag: 0: unknown 1: healthy 2: unhealthy
prSmoothed	1 = Pseudorange has been smoothed
prUsed	1 = Pseudorange has been used for this signal
crUsed	1 = Carrier range has been used for this signal
doUsed	1 = Range rate (Doppler) has been used for this signal
prCorrUsed	1 = Pseudorange corrections have been used for this signal
crCorrUsed	1 = Carrier range corrections have been used for this signal
doCorrUsed	1 = Range rate (Doppler) corrections have been used for this signal

5.14.16 UBX-NAV-STATUS (0x01 0x03)

5.14.16.1 Receiver Navigation Status


Message	UBX-NAV-STATUS					
Description	Receiver Navigation Status					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in Integration manual .					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x01	0x03	16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	

UBX-NAV-STATUS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	U1	-	gpsFix	-	GPSfix Type, this value does not qualify a fix as valid and within the limits. See note on flag gpsFixOk below. 0x00 = no fix 0x01 = dead reckoning only 0x02 = 2D-fix 0x03 = 3D-fix 0x04 = GPS + dead reckoning combined 0x05 = Time only fix 0x06..0xff = reserved
5	X1	-	flags	-	Navigation Status Flags (see graphic below)
6	X1	-	fixStat	-	Fix Status Information (see graphic below)
7	X1	-	flags2	-	further information about navigation output (see graphic below)
8	U4	-	ttff	ms	Time to first fix (millisecond time tag)
12	U4	-	msss	ms	Milliseconds since Startup / Reset

Bitfield flags


This graphic explains the bits of flags

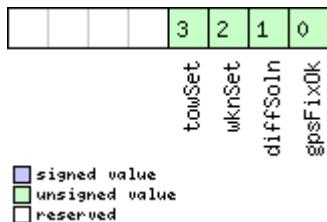

Name	Description
gpsFixOk	1 = position and velocity valid and within DOP and ACC Masks.
diffSoln	1 = differential corrections were applied
wkSet	1 = Week Number valid (see section Time validity in Integration manual for details)
towSet	1 = Time of Week valid (see section Time validity in Integration manual for details)

Bitfield fixStat


This graphic explains the bits of fixStat

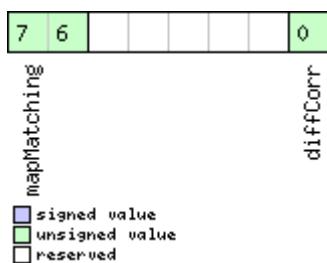

Name	Description
diffCorr	1 = differential corrections available
mapMatching	map matching status: 00: none 01: valid but not used, i.e. map matching data was received, but was too old 10: valid and used, map matching data was applied 11: valid and used, map matching data was applied. In case of sensor unavailability map matching data enables dead reckoning. This requires map matched latitude/longitude or heading data.

Bitfield flags2

This graphic explains the bits of flags2

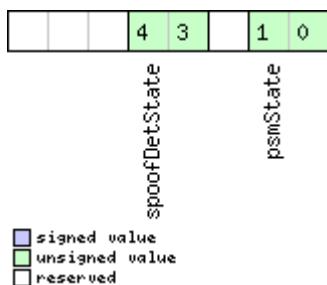

Name	Description
psmState	power save mode state 0: ACQUISITION [or when psm disabled] 1: TRACKING 2: POWER OPTIMIZED TRACKING 3: INACTIVE
spoofDetState	Spoofing detection state 0: Unknown or deactivated 1: No spoofing indicated 2: Spoofing indicated 3: Multiple spoofing indications Note that the spoofing state value only reflects the detector state for the current navigation epoch. As spoofing can be detected most easily at the transition from real signal to spoofing signal, this is also where the detector is triggered the most. I.e. a value of 1 - No spoofing indicated does not mean that the receiver is not spoofed, it simply states that the detector was not triggered in this epoch.


5.14.17 UBX-NAV-TIMEBDS (0x01 0x24)

5.14.17.1 BDS Time Solution

Message	UBX-NAV-TIMEBDS					
Description	BDS Time Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message reports the precise BDS time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message Structure	Header 0xB5 0x62	Class 0x01	ID 0x24	Length (Bytes) 20	Payload	Checksum CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	U4	-	SOW	s	BDS time of week (rounded to seconds)	
8	I4	-	fSOW	ns	Fractional part of SOW (range: +/- 500000000). The precise BDS time of week in seconds is: $SOW + fSOW * 1e-9$	
12	I2	-	week	-	BDS week number of the navigation epoch	
14	I1	-	leapS	s	BDS leap seconds (BDS-UTC)	
15	X1	-	valid	-	Validity Flags (see graphic below)	
16	U4	-	tAcc	ns	Time Accuracy Estimate	

Bitfield valid

This graphic explains the bits of valid

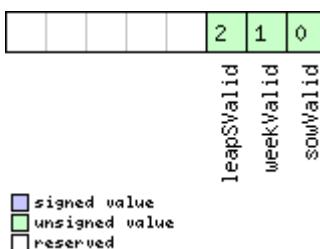

Name	Description
sowValid	1 = Valid SOW and fSOW (see section Time validity in Integration manual for details)
weekValid	1 = Valid week (see section Time validity in Integration manual for details)
leapSValid	1 = Valid leapS


5.14.18 UBX-NAV-TIMEGAL (0x01 0x25)

5.14.18.1 Galileo Time Solution

Message	UBX-NAV-TIMEGAL					
Description	Galileo Time Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message reports the precise Galileo time of the most recent navigation solution including validity flags and an accuracy estimate.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x01	0x25	20	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	U4	-	galTow	s	Galileo time of week (rounded to seconds)	
8	I4	-	fGalTow	ns	Fractional part of the Galileo time of week (range: +/-500000000). The precise Galileo time of week in seconds is: $galTow + fGalTow * 1e-9$	
12	I2	-	galWno	-	Galileo week number	
14	I1	-	leapS	s	Galileo leap seconds (Galileo-UTC)	
15	X1	-	valid	-	Validity Flags (see graphic below)	
16	U4	-	tAcc	ns	Time Accuracy Estimate	

Bitfield valid

This graphic explains the bits of valid

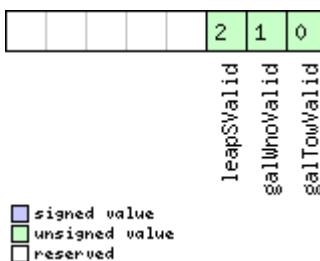

Name	Description
galTowValid	1 = Valid galTow and fGalTow (see Time Validity section for details)
galWnoValid	1 = Valid galWno (see Time Validity section for details)
leapSValid	1 = Valid leapS


5.14.19 UBX-NAV-TIMEGLO (0x01 0x23)

5.14.19.1 GLO Time Solution

Message	UBX-NAV-TIMEGLO					
Description	GLO Time Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message reports the precise GLO time of the most recent navigation solution including validity flags and an accuracy estimate.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x01	0x23	20	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	U4	-	TOD	s	GLONASS time of day (rounded to integer seconds)	
8	I4	-	fTOD	ns	Fractional part of TOD (range: +/- 500000000). The precise GLONASS time of day in seconds is: TOD + fTOD * 1e-9	
12	U2	-	Nt	days	Current date (range: 1-1461), starting at 1 from the 1st Jan of the year indicated by N4 and ending at 1461 at the 31st Dec of the third year after that indicated by N4	
14	U1	-	N4	-	Four-year interval number starting from 1996 (1=1996, 2=2000, 3=2004...)	
15	X1	-	valid	-	Validity flags (see graphic below)	
16	U4	-	tAcc	ns	Time Accuracy Estimate	

Bitfield valid

This graphic explains the bits of valid

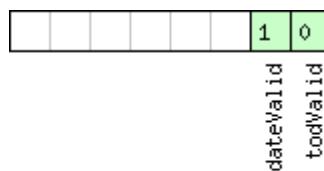

Name	Description
todValid	1 = Valid TOD and fTOD (see section Time validity in Integration manual for details)
dateValid	1 = Valid N4 and Nt (see section Time validity in Integration manual for details)


5.14.20 UBX-NAV-TIMEGPS (0x01 0x20)

5.14.20.1 GPS Time Solution

Message	UBX-NAV-TIMEGPS					
Description	GPS Time Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message reports the precise GPS time of the most recent navigation solution including validity flags and an accuracy estimate.					
Message Structure	Header 0xB5 0x62	Class 0x01	ID 0x20	Length (Bytes) 16	Payload	Checksum CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	I4	-	fTOW	ns	Fractional part of iTOW (range: +/- 500000). The precise GPS time of week in seconds is: $(iTOW * 1e-3) + (fTOW * 1e-9)$	
8	I2	-	week	-	GPS week number of the navigation epoch	
10	I1	-	leapS	s	GPS leap seconds (GPS-UTC)	
11	X1	-	valid	-	Validity Flags (see graphic below)	
12	U4	-	tAcc	ns	Time Accuracy Estimate	

Bitfield valid

This graphic explains the bits of valid

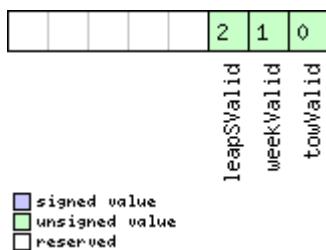

Name	Description
towValid	1 = Valid GPS time of week (iTOW & fTOW, (see section Time validity in Integration manual for details))
weekValid	1 = Valid GPS week number (see section Time validity in Integration manual for details)
leapSValid	1 = Valid GPS leap seconds

5.14.21 UBX-NAV-TIMELS (0x01 0x26)

5.14.21.1 Leap second event information


Message		UBX-NAV-TIMELS					
Description		Leap second event information					
Firmware		Supported on:					
Type		Periodic/Polled					
Comment		Information about the upcoming leap second event if one is scheduled.					
Message Structure		Header	Class	ID	Length (Bytes)	Payload	Checksum
		0xB5	0x62	0x01	0x26	24	see below CK_A CK_B
Payload Contents:							
Byte Offset	Number Format	Scaling	Name		Unit	Description	
0	U4	-	iTOW		ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	U1	-	version		-	Message version (0x00 for this version).	
5	U1[3]	-	reserved1		-	Reserved	
8	U1	-	srcOfCurrLs		-	Information source for the current number of leap seconds. 0: Default (hardcoded in the firmware, can be outdated) 1: Derived from time difference between GPS and GLONASS time 2: GPS 3: SBAS 4: BeiDou 5: Galileo 6: Aided data 7: Configured 255: Unknown	

UBX-NAV-TIMELS continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
9	I1	-	currLs	s	Current number of leap seconds since start of GPS time (Jan 6, 1980). It reflects how much GPS time is ahead of UTC time. Galileo number of leap seconds is the same as GPS. BeiDou number of leap seconds is 14 less than GPS. GLONASS follows UTC time, so no leap seconds.
10	U1	-	srcOfLsChange	-	Information source for the future leap second event. 0: No source 2: GPS 3: SBAS 4: BeiDou 5: Galileo 6: GLONASS
11	I1	-	lsChange	s	Future leap second change if one is scheduled. +1 = positive leap second, -1 = negative leap second, 0 = no future leap second event scheduled or no information available.
12	I4	-	timeToLsEvent	s	Number of seconds until the next leap second event, or from the last leap second event if no future event scheduled. If > 0 event is in the future, = 0 event is now, < 0 event is in the past. Valid only if validTimeToLsEvent = 1.
16	U2	-	dateOfLsGpsWn	-	GPS week number (WN) of the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1.
18	U2	-	dateOfLsGpsDn	-	GPS day of week number (DN) for the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1. (GPS and Galileo DN: from 1 = Sun to 7 = Sat. BeiDou DN: from 0 = Sun to 6 = Sat.)
20	U1[3]	-	reserved2	-	Reserved
23	X1	-	valid	-	Validity flags (see graphic below)

Bitfield valid

This graphic explains the bits of valid

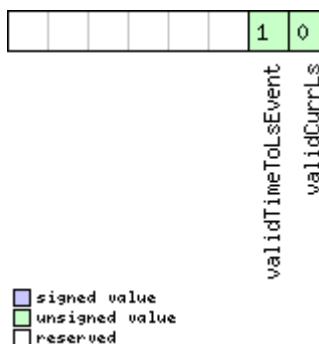

Name	Description
validCurrLs	1 = Valid current number of leap seconds value.
validTimeToLsEvent	1 = Valid time to next leap second event or from the last leap second event if no future event scheduled.

5.14.22 UBX-NAV-TIMEUTC (0x01 0x21)

5.14.22.1 UTC Time Solution


Message	UBX-NAV-TIMEUTC					
Description	UTC Time Solution					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	Note that during a leap second there may be more or less than 60 seconds in a minute. See the section Leap seconds in Integration manual for details.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x01	0x21	20	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.
4	U4	-	tAcc	ns	Time accuracy estimate (UTC)
8	I4	-	nano	ns	Fraction of second, range -1e9 .. 1e9 (UTC)
12	U2	-	year	y	Year, range 1999..2099 (UTC)
14	U1	-	month	month	Month, range 1..12 (UTC)
15	U1	-	day	d	Day of month, range 1..31 (UTC)
16	U1	-	hour	h	Hour of day, range 0..23 (UTC)
17	U1	-	min	min	Minute of hour, range 0..59 (UTC)
18	U1	-	sec	s	Seconds of minute, range 0..60 (UTC)
19	X1	-	valid	-	Validity Flags (see graphic below)

Bitfield valid

This graphic explains the bits of valid

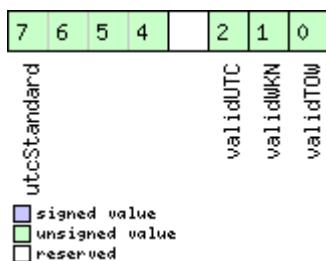

Name	Description
validTOW	1 = Valid Time of Week (see section Time validity in Integration manual for details)
validWKN	1 = Valid Week Number (see section Time validity in Integration manual for details)
validUTC	1 = Valid UTC Time
utcStandard	UTC standard identifier. 0: Information not available 1: Communications Research Laboratory (CRL) 2: National Institute of Standards and Technology (NIST) 3: U.S. Naval Observatory (USNO) 4: International Bureau of Weights and Measures (BIPM) 5: European Laboratory (tbd) 6: Former Soviet Union (SU) 7: National Time Service Center, China (NTSC) 15: Unknown

5.14.23 UBX-NAV-VELECEF (0x01 0x11)

5.14.23.1 Velocity Solution in ECEF

Message	UBX-NAV-VELECEF					
Description	Velocity Solution in ECEF					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in Integration manual .					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x01	0x11	20	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	I4	-	ecefVX	cm/s	ECEF X velocity	
8	I4	-	ecefVY	cm/s	ECEF Y velocity	
12	I4	-	ecefVZ	cm/s	ECEF Z velocity	
16	U4	-	sAcc	cm/s	Speed accuracy estimate	

5.14.24 UBX-NAV-VELNED (0x01 0x12)

5.14.24.1 Velocity Solution in NED

Message	UBX-NAV-VELNED					
Description	Velocity Solution in NED					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	See important comments concerning validity of position given in section Navigation output filters in Integration manual .					
Message Structure	Header 0xB5 0x62	Class 0x01	ID 0x12	Length (Bytes) 36	Payload see below	Checksum CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	iTOW	ms	GPS time of week of the navigation epoch. See the section iTOW timestamps in Integration manual for details.	
4	I4	-	velN	cm/s	North velocity component	
8	I4	-	velE	cm/s	East velocity component	
12	I4	-	velD	cm/s	Down velocity component	
16	U4	-	speed	cm/s	Speed (3-D)	
20	U4	-	gSpeed	cm/s	Ground speed (2-D)	
24	I4	1e-5	heading	deg	Heading of motion 2-D	
28	U4	-	sAcc	cm/s	Speed accuracy Estimate	
32	U4	1e-5	cAcc	deg	Course / Heading accuracy estimate	

5.15 UBX-RXM (0x02)

Receiver Manager Messages: i.e. Satellite Status, RTC Status.

Messages in the RXM class are used to output status and result data from the Receiver Manager.

5.15.1 UBX-RXM-MEASX (0x02 0x14)

5.15.1.1 Satellite Measurements for RRLP


Message	UBX-RXM-MEASX					
Description	Satellite Measurements for RRLP					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	<p>The message payload data is, where possible and appropriate, according to the Radio Resource LCS (Location Services) Protocol (RRLP) [1]. One exception is the satellite and GNSS ids, which here are given according to the Satellite Numbering scheme. The correct satellites have to be selected and their satellite ID translated accordingly [1, tab. A.10.14] for use in a RRLP Measure Position Response Component. Similarly, the measurement reference time of week has to be forwarded correctly (modulo 14400000 for the 24 LSB GPS measurements variant, modulo 3600000 for the 22 LSB Galileo and Additional Navigation Satellite Systems (GANSS) measurements variant) of the RRLP measure position response to the SMLC.</p> <p>Reference: [1] ETSI TS 144 031 V11.0.0 (2012-10), Digital cellular telecommunications system (Phase 2+), Location Services (LCS), Mobile Station (MS) - Serving Mobile Location Centre (SMLC), Radio Resource LCS Protocol (RRLP), (3GPP TS 44.031 version 11.0.0 Release 11).</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x02	0x14	44 + 24*numSV	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version, currently 0x01	
1	U1[3]	-	reserved1	-	Reserved	
4	U4	-	gpsTOW	ms	GPS measurement reference time	
8	U4	-	gloTOW	ms	GLONASS measurement reference time	
12	U4	-	bdsTOW	ms	BeiDou measurement reference time	
16	U1[4]	-	reserved2	-	Reserved	
20	U4	-	qzssTOW	ms	QZSS measurement reference time	
24	U2	2^-4	gpsTOWacc	ms	GPS measurement reference time accuracy (0xffff = > 4s)	
26	U2	2^-4	gloTOWacc	ms	GLONASS measurement reference time accuracy (0xffff = > 4s)	
28	U2	2^-4	bdsTOWacc	ms	BeiDou measurement reference time accuracy (0xffff = > 4s)	
30	U1[2]	-	reserved3	-	Reserved	
32	U2	2^-4	qzssTOWacc	ms	QZSS measurement reference time accuracy (0xffff = > 4s)	

UBX-RXM-MEASX continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
34	U1	-	numSV	-	Number of satellites in repeated block
35	U1	-	flags	-	Flags (see graphic below)
36	U1[8]	-	reserved4	-	Reserved
Start of repeated block (numSV times)					
44 + 24*N	U1	-	gnssId	-	GNSS ID (see Satellite Numbering)
45 + 24*N	U1	-	svId	-	Satellite ID (see Satellite Numbering)
46 + 24*N	U1	-	cNo	-	carrier noise ratio (0..63)
47 + 24*N	U1	-	mpathIndic	-	multipath index (according to [1]) (0 = not measured, 1 = low, 2 = medium, 3 = high)
48 + 24*N	I4	0.04	dopplerMS	m/s	Doppler measurement
52 + 24*N	I4	0.2	dopplerHz	Hz	Doppler measurement
56 + 24*N	U2	-	wholeChips	-	whole value of the code phase measurement (0..1022 for GPS)
58 + 24*N	U2	-	fracChips	-	fractional value of the code phase measurement (0..1023)
60 + 24*N	U4	2^-21	codePhase	ms	Code phase
64 + 24*N	U1	-	intCodePhase	ms	Integer (part of the) code phase
65 + 24*N	U1	-	pseuRangeRMSE_rr	-	pseudorange RMS error index (according to [1]) (0..63)
66 + 24*N	U1[2]	-	reserved5	-	Reserved
End of repeated block					

Bitfield flags

This graphic explains the bits of flags



towSet

- signed value
- unsigned value
- reserved

Name	Description
towSet	TOW set (0 = no, 1 or 2 = yes)


5.15.2 UBX-RXM-PMREQ (0x02 0x41)

5.15.2.1 Requests a Power Management task

Message	UBX-RXM-PMREQ					
Description	Requests a Power Management task					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Command					
Comment	Request of a Power Management related task of the receiver.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x02	0x41	8	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	duration	ms	Duration of the requested task, set to zero for infinite duration. The maximum supported time is 12 days.	
4	X4	-	flags	-	task flags (see graphic below)	

Bitfield flags

This graphic explains the bits of flags

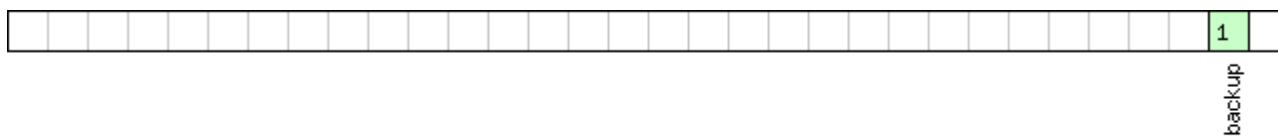

Name	Description					
backup	The receiver goes into backup mode for a time period defined by duration. Provided that it is not connected to USB					

5.15.2.2 Requests a Power Management task


Message	UBX-RXM-PMREQ					
Description	Requests a Power Management task					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Command					
Comment	Request of a Power Management related task of the receiver.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5 0x62	0x02	0x41	16	see below	CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1[3]	-	reserved1	-	Reserved	

UBX-RXM-PMREQ continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
4	U4	-	duration	ms	Duration of the requested task, set to zero for infinite duration. The maximum supported time is 12 days.
8	X4	-	flags	-	task flags (see graphic below)
12	X4	-	wakeupSources	-	Configure pins to wakeup the receiver. The receiver wakes up if there is either a falling or a rising edge on one of the configured pins (see graphic below)


Bitfield flags

This graphic explains the bits of flags

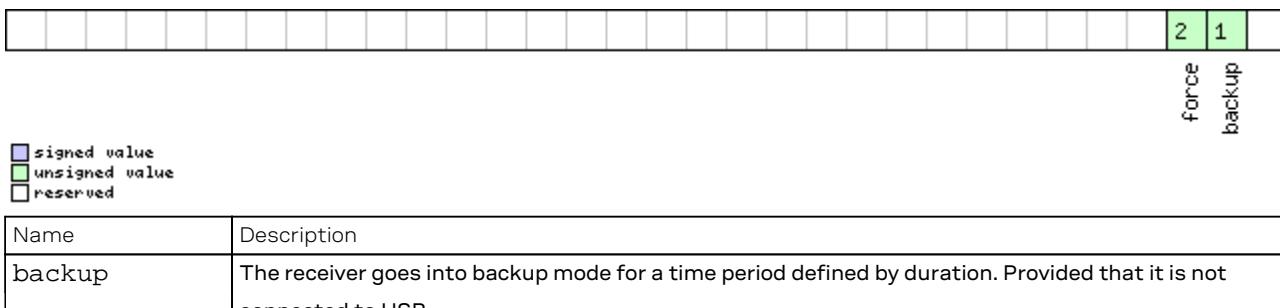

Bitfield wakeupSources

This graphic explains the bits of wakeupSources

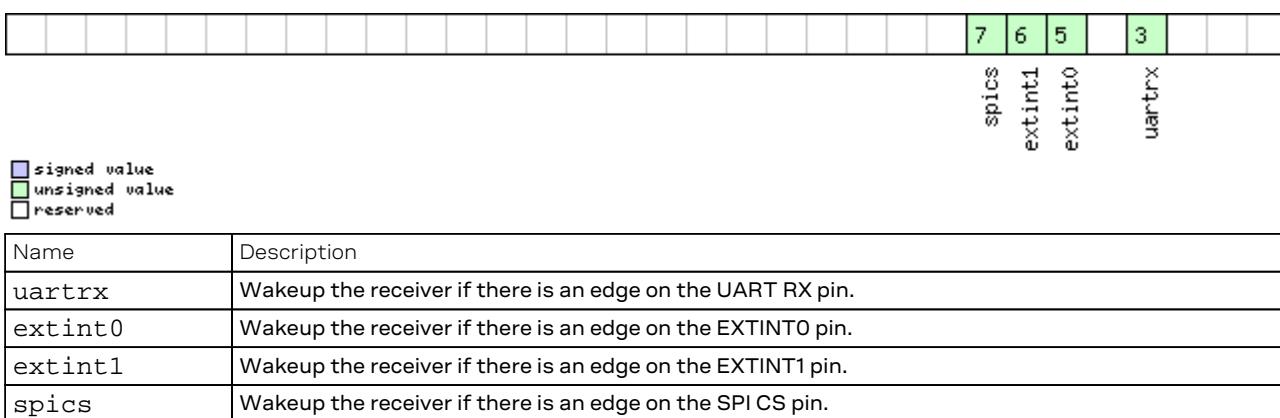

5.15.3 UBX-RXM-RAWX (0x02 0x15)

5.15.3.1 Multi-GNSS Raw Measurement Data

Message	UBX-RXM-RAWX					
Description	Multi-GNSS Raw Measurement Data					
Firmware	Supported on: • u-blox 9 with protocol version 29 (only with Time Sync products)					
Type	Periodic/Polled					
Comment	<p>This message contains the information needed to be able to generate a RINEX 3 multi-GNSS observation file.</p> <p>This message contains pseudorange, Doppler, carrier phase, phase lock and signal quality information for GNSS satellites once signals have been synchronized. This message supports all active GNSS.</p> <p>The only difference between this version of the message and the previous version (UBX-RXM-RAWX-DATA0) is the addition of the version field.</p>					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x02	0x15	16 + 32*numMeas	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	R8	-	rcvTow	s	Measurement time of week in receiver local time approximately aligned to the GPS time system. The receiver local time of week, week number and leap second information can be used to translate the time to other time systems. More information about the difference in time systems can be found in RINEX 3 documentation . For a receiver operating in GLONASS only mode, UTC time can be determined by subtracting the leapS field from GPS time regardless of whether the GPS leap seconds are valid.	
8	U2	-	week	weeks	GPS week number in receiver local time.	
10	I1	-	leapS	s	GPS leap seconds (GPS-UTC). This field represents the receiver's best knowledge of the leap seconds offset. A flag is given in the recStat bitfield to indicate if the leap seconds are known.	
11	U1	-	numMeas	-	Number of measurements to follow	
12	X1	-	recStat	-	Receiver tracking status bitfield (see graphic below)	
13	U1	-	version	-	Message version (0x01 for this version).	
14	U1[2]	-	reserved1	-	Reserved	
Start of repeated block (numMeas times)						

UBX-RXM-RAWX continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
16 + 32*N	R8	-	prMes	m	Pseudorange measurement [m]. GLONASS inter frequency channel delays are compensated with an internal calibration table.
24 + 32*N	R8	-	cpMes	cycles	Carrier phase measurement [cycles]. The carrier phase initial ambiguity is initialized using an approximate value to make the magnitude of the phase close to the pseudorange measurement. Clock resets are applied to both phase and code measurements in accordance with the RINEX specification.
32 + 32*N	R4	-	doMes	Hz	Doppler measurement (positive sign for approaching satellites) [Hz]
36 + 32*N	U1	-	gnssId	-	GNSS identifier (see Satellite Numbering for a list of identifiers)
37 + 32*N	U1	-	svId	-	Satellite identifier (see Satellite Numbering)
38 + 32*N	U1	-	sigId	-	New style signal identifier (see Signal Identifiers).
39 + 32*N	U1	-	freqId	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
40 + 32*N	U2	-	locktime	ms	Carrier phase locktime counter (maximum 64500ms)
42 + 32*N	U1	-	cno	dBHz	Carrier-to-noise density ratio (signal strength) [dB-Hz]
43 + 32*N	X1	0. 01*2^n	prStdev	m	Estimated pseudorange measurement standard deviation (see graphic below)
44 + 32*N	X1	0.004	cpStdev	cycles	Estimated carrier phase measurement standard deviation (note a raw value of 0x0F indicates the value is invalid) (see graphic below)
45 + 32*N	X1	0. 002*2^n	doStdev	Hz	Estimated Doppler measurement standard deviation. (see graphic below)
46 + 32*N	X1	-	trkStat	-	Tracking status bitfield (see graphic below)
47 + 32*N	U1	-	reserved2	-	Reserved
End of repeated block					

Bitfield recStat

This graphic explains the bits of recStat




clkReset
leapSec

signed value
 unsigned value
 reserved

Name	Description
leapSec	Leap seconds have been determined
clkReset	Clock reset applied. Typically the receiver clock is changed in increments of integer milliseconds.

Bitfield prStdev

This graphic explains the bits of prStdev




prStd

signed value
 unsigned value
 reserved

Name	Description
prStd	Estimated pseudorange standard deviation

Bitfield cpStdev

This graphic explains the bits of cpStdev




cpStd

signed value
 unsigned value
 reserved

Name	Description
cpStd	Estimated carrier phase standard deviation

Bitfield doStdev

This graphic explains the bits of doStdev




doStd

signed value
 unsigned value
 reserved

Name	Description
doStd	Estimated Doppler standard deviation

Bitfield trkStat

This graphic explains the bits of trkStat

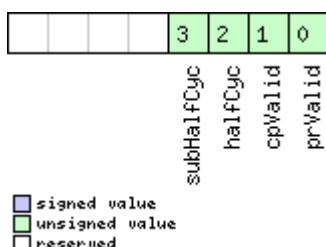

Name	Description
prValid	Pseudorange valid
cpValid	Carrier phase valid
halfCyc	Half cycle valid
subHalfCyc	Half cycle subtracted from phase

5.15.4 UBX-RXM-RLM (0x02 0x59)

5.15.4.1 Galileo SAR Short-RLM report

Message	UBX-RXM-RLM					
Description	Galileo SAR Short-RLM report					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message contains the contents of any Galileo Search and Rescue (SAR) Short Return Link Message detected by the receiver.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x02	0x59	16	see below CK_A CK_B

Payload Contents:

Byte Offset	Number Format	Scaling	Name	Unit	Description
0	U1	-	version	-	Message version (0x00 for this version)
1	U1	-	type	-	Message type (0x01 for Short-RLM)
2	U1	-	svId	-	Identifier of transmitting satellite (see Satellite Numbering)
3	U1	-	reserved1	-	Reserved
4	U1[8]	-	beacon	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.
12	U1	-	message	-	Message code (4 bits)
13	U1[2]	-	params	-	Parameters (16 bits), with bytes ordered by earliest transmitted (most significant) first.
15	U1	-	reserved2	-	Reserved

5.15.4.2 Galileo SAR Long-RLM report

Message	UBX-RXM-RLM					
Description	Galileo SAR Long-RLM report					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message contains the contents of any Galileo Search and Rescue (SAR) Long Return Link Message detected by the receiver.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x02	0x59	28	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x00 for this version)	
1	U1	-	type	-	Message type (0x02 for Long-RLM)	
2	U1	-	svId	-	Identifier of transmitting satellite (see Satellite Numbering)	
3	U1	-	reserved1	-	Reserved	
4	U1[8]	-	beacon	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.	
12	U1	-	message	-	Message code (4 bits)	
13	U1[12]	-	params	-	Parameters (96 bits), with bytes ordered by earliest transmitted (most significant) first.	
25	U1[3]	-	reserved2	-	Reserved	

5.15.5 UBX-RXM-SFRBX (0x02 0x13)

5.15.5.1 Broadcast Navigation Data Subframe

Message	UBX-RXM-SFRBX					
Description	Broadcast Navigation Data Subframe					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message reports a complete subframe of broadcast navigation data decoded from a single signal. The number of data words reported in each message depends on the nature of the signal.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x02	0x13	8 + 4*numWords	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	gnssId	-	GNSS identifier (see Satellite Numbering)	

UBX-RXM-SFRBX continued

Byte Offset	Number Format	Scaling	Name	Unit	Description
1	U1	-	svId	-	Satellite identifier (see Satellite Numbering)
2	U1	-	reserved1	-	Reserved
3	U1	-	freqId	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
4	U1	-	numWords	-	The number of data words contained in this message (up to 10, for currently supported signals)
5	U1	-	chn	-	The tracking channel number the message was received on
6	U1	-	version	-	Message version, (0x02 for this version)
7	U1	-	reserved2	-	Reserved
Start of repeated block (numWords times)					
8 + 4*N	U4	-	dwrd	-	The data words
End of repeated block					

5.16 UBX-SEC (0x27)

Security Feature Messages

Messages in the SEC class are used for security features of the receiver.

5.16.1 UBX-SEC-UNIQID (0x27 0x03)

5.16.1.1 Unique Chip ID

Message	UBX-SEC-UNIQID					
Description	Unique Chip ID					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	This message is used to retrieve a unique chip identifier (40 bits, 5 bytes).					
Message Structure	Header 0xB5	Class 0x62	ID 0x27	Length (Bytes) 0x03	Payload 9	Checksum see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	version	-	Message version (0x01 for this version)	
1	U1[3]	-	reserved1	-	Reserved	
4	U1[5]	-	uniqueId	-	Unique chip ID	

5.17 UBX-TIM (0x0D)

Timing Messages: i.e. Time Pulse Output, Time Mark Results.

Messages in the TIM class are used to output timing information from the receiver, like Time Pulse and Time Mark measurements.

5.17.1 UBX-TIM-SVIN (0x0D 0x04)

5.17.1.1 Survey-in data

Message	UBX-TIM-SVIN					
Description	Survey-in data					
Firmware	Supported on: • u-blox 9 with protocol version 29 (only with Time Sync products)					
Type	Periodic/Polled					
Comment	This message contains information about survey-in parameters. For details about the Time Mode see section Time Mode Configuration .					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x0D	0x04	28	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	dur	s	Passed survey-in observation time	
4	I4	-	meanX	cm	Current survey-in mean position ECEF X coordinate	
8	I4	-	meanY	cm	Current survey-in mean position ECEF Y coordinate	
12	I4	-	meanZ	cm	Current survey-in mean position ECEF Z coordinate	
16	U4	-	meanV	mm^2	Current survey-in mean position 3D variance	
20	U4	-	obs	-	Number of position observations used during survey-in	
24	U1	-	valid	-	Survey-in position validity flag, 1 = valid, otherwise 0	
25	U1	-	active	-	Survey-in in progress flag, 1 = in-progress, otherwise 0	
26	U1[2]	-	reserved1	-	Reserved	


5.17.2 UBX-TIM-TM2 (0x0D 0x03)

5.17.2.1 Time mark data

Message	UBX-TIM-TM2					
Description	Time mark data					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message contains information for high precision time stamping / pulse counting. The delay figures and timebase given in UBX-CFG-TP5 are also applied to the time results output in this message.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x0D	0x03	28	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	ch	-	Channel (i.e. EXTINT) upon which the pulse was measured	
1	X1	-	flags	-	Bitmask (see graphic below)	
2	U2	-	count	-	rising edge counter.	
4	U2	-	wnR	-	week number of last rising edge	
6	U2	-	wnF	-	week number of last falling edge	
8	U4	-	towMsR	ms	tow of rising edge	
12	U4	-	towSubMsR	ns	millisecond fraction of tow of rising edge in nanoseconds	
16	U4	-	towMsF	ms	tow of falling edge	
20	U4	-	towSubMsF	ns	millisecond fraction of tow of falling edge in nanoseconds	
24	U4	-	accEst	ns	Accuracy estimate	

Bitfield flags

This graphic explains the bits of flags

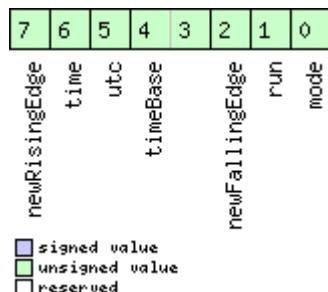

Name	Description
mode	0=single 1=running
run	0=armed 1=stopped
newFallingEdge	new falling edge detected
timeBase	0=Time base is Receiver Time 1=Time base is GNSS Time (the system according to the configuration in UBX-CFG-TP5 for tpldx=0) 2=Time base is UTC (the variant according to the configuration in UBX-CFG-NAV5)
utc	0=UTC not available 1=UTC available
time	0=Time is not valid 1=Time is valid (Valid GNSS fix)
newRisingEdge	new rising edge detected


5.17.3 UBX-TIM-TP (0x0D 0x01)

5.17.3.1 Time Pulse Timedata

Message	UBX-TIM-TP					
Description	Time Pulse Timedata					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message contains information on the timing of the next pulse at the TIMEPULSE0 output. The recommended configuration when using this message is to set both the measurement rate (UBX-CFG-RATE) and the timepulse frequency (UBX-CFG-TP5) to 1Hz.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x0D	0x01	16	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U4	-	towMS	ms	Time pulse time of week according to time base	
4	U4	2^-32	towSubMS	ms	Submillisecond part of TOWMS	
8	I4	-	qErr	ps	Quantization error of time pulse (not supported for the FTS product variant).	
12	U2	-	week	weeks	Time pulse week number according to time base	
14	X1	-	flags	-	bitmask (see graphic below)	
15	X1	-	refInfo	-	Time reference information (see graphic below)	

Bitfield flags


This graphic explains the bits of flags

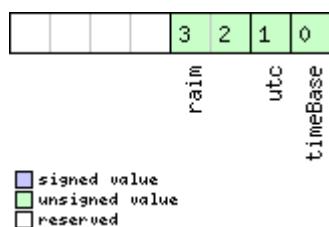

Name	Description
timeBase	0=Time base is GNSS 1=Time base is UTC
utc	0=UTC not available 1=UTC available
raim	(T)RAIM information 0=information not available 1=not active 2=active

Bitfield refInfo

This graphic explains the bits of refInfo

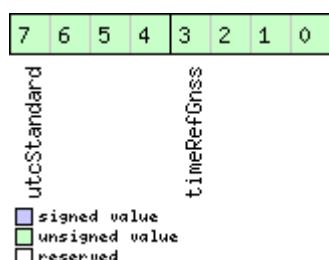

Name	Description
timeRefGnss	GNSS reference information (only active if time base is GNSS -> timeBase=0) 0: GPS 1: GLONASS 2: BeiDou 15: Unknown
utcStandard	UTC standard identifier (only active if time base is UTC -> timeBase=1) 0: Information not available 1: Communications Research Laboratory (CRL) 2: National Institute of Standards and Technology (NIST) 3: U.S. Naval Observatory (USNO) 4: International Bureau of Weights and Measures (BIPM) 5: European Laboratory (tbd) 6: Former Soviet Union (SU) 15: Unknown


5.17.4 UBX-TIM-VRFY (0x0D 0x06)

5.17.4.1 Sourced Time Verification

Message	UBX-TIM-VRFY					
Description	Sourced Time Verification					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Periodic/Polled					
Comment	This message contains verification information about previous time received via AID-INI or from RTC					
Message Structure	Header 0xB5 0x62	Class 0x0D	ID 0x06	Length (Bytes) 20	Payload	Checksum CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	I4	-	itow	ms	integer millisecond tow received by source	
4	I4	-	frac	ns	sub-millisecond part of tow	
8	I4	-	deltaMs	ms	integer milliseconds of delta time (current time minus sourced time)	
12	I4	-	deltaNs	ns	sub-millisecond part of delta time	
16	U2	-	wno	week	week number	
18	X1	-	flags	-	information flags (see graphic below)	
19	U1	-	reserved1	-	Reserved	

Bitfield flags

This graphic explains the bits of flags

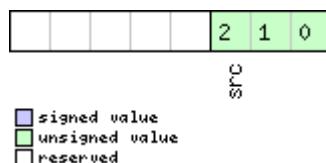

Name	Description
src	aiding time source 0: no time aiding done 2: source was RTC 3: source was AID-INI

5.18 UBX-UPD (0x09)

Firmware Update Messages: i.e. Memory/Flash erase/write, Reboot, Flash identification, etc..

Messages in the UPD class are used to update the firmware and identify any attached flash device.

5.18.1 UBX-UPD-SOS (0x09 0x14)

5.18.1.1 Poll Backup File Restore Status

Message	UBX-UPD-SOS					
Description	Poll Backup File Restore Status					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Poll Request					
Comment	Sending this (empty / no-payload) message to the receiver results in the receiver returning a System Restored from Backup message as defined below.					
Message Structure	Header 0xB5 0x62	Class 0x09	ID 0x14	Length (Bytes) 0	Payload see below	Checksum CK_A CK_B
No payload						

5.18.1.2 Create Backup File in Flash

Message	UBX-UPD-SOS					
Description	Create Backup File in Flash					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Command					
Comment	The host can send this message in order to save part of the BBR memory in a file in flash file system. The feature is designed in order to emulate the presence of the backup battery even if it is not present; the host can issue the save on shutdown command before switching off the device supply. It is recommended to issue a GNSS stop command before, in order to keep the BBR memory content consistent.					
Message Structure	Header 0xB5 0x62	Class 0x09	ID 0x14	Length (Bytes) 4	Payload see below	Checksum CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	cmd	-	Command (must be 0)	
1	U1[3]	-	reserved1	-	Reserved	

5.18.1.3 Clear Backup in Flash

Message	UBX-UPD-SOS					
Description	Clear Backup in Flash					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Command					
Comment	The host can send this message in order to erase the backup file present in flash. It is recommended that the clear operation is issued after the host has received the notification that the memory has been restored after a reset. Alternatively the host can parse the startup string 'Restored data saved on shutdown' or poll the UBX-UPD-SOS message for getting the status.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x09	0x14	4	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	cmd	-	Command (must be 1)	
1	U1[3]	-	reserved1	-	Reserved	

5.18.1.4 Backup File Creation Acknowledge

Message	UBX-UPD-SOS					
Description	Backup File Creation Acknowledge					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	The message is sent from the device as confirmation of creation of a backup file in flash. The host can safely shut down the device after received this message.					
	Header	Class	ID	Length (Bytes)	Payload	Checksum
Message Structure	0xB5	0x62	0x09	0x14	8	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	cmd	-	Command (must be 2)	
1	U1[3]	-	reserved1	-	Reserved	
4	U1	-	response	-	0: Not acknowledged 1: Acknowledged	
5	U1[3]	-	reserved2	-	Reserved	

5.18.1.5 System Restored from Backup

Message	UBX-UPD-SOS					
Description	System Restored from Backup					
Firmware	Supported on: • u-blox 9 with protocol version 29					
Type	Output					
Comment	The message is sent from the device to notify the host the BBR has been restored from a backup file in flash. The host should clear the backup file after receiving this message. If the UBX-UPD-SOS message is polled, this message will be resent.					
Message Structure	Header	Class	ID	Length (Bytes)	Payload	Checksum
	0xB5	0x62	0x09	0x14	8	see below CK_A CK_B
Payload Contents:						
Byte Offset	Number Format	Scaling	Name	Unit	Description	
0	U1	-	cmd	-	Command (must be 3)	
1	U1[3]	-	reserved1	-	Reserved	
4	U1	-	response	-	0: Unknown 1: Failed restoring from backup file 2: Restored from backup file 3: Not restored (no backup)	
5	U1[3]	-	reserved2	-	Reserved	

6 Configuration Interface


This chapter describes the [Receiver Configuration Database](#) accessible through the [Configuration Interface](#).

6.1 Configuration Database

The configuration database in the receiver's RAM holds the current configuration, which is used by the receiver at run-time. It is constructed on startup of the receiver from several sources of configuration. These sources are called Configuration Layers. The current configuration is called the RAM Layer. Any configuration in any layer is organized as Configuration Items, where each Configuration Item is referenced by a unique Configuration Key ID and hold a single Configuration Value.

6.2 Configuration Items

The following figure shows the structure of a Configuration Item, which consists of a (Configuration) Key ID and its (Configuration) Value:

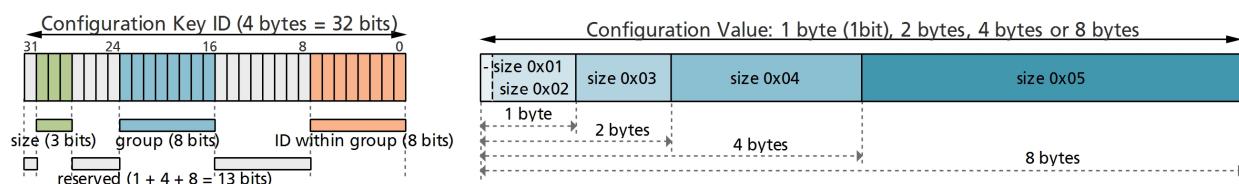

A Configuration Key ID is a 32 bit integer value, which is split into three parts (Note that bits 31, 27..24 and 15..8 are reserved for future use and are currently unused.):

- bits 30..28: 3 bits that indicate the storage size of a Configuration Value (range 0x01-0x05, see below)
- bits 23..16: 8 bits that define a unique group ID (range 0x01-0xfe)
- bits 7..0: 8 bits that define a unique item ID within a group (range 0x01-0xfe)

The entire 32 bit value is the unique Key ID, which uniquely identifies a particular item. The numeric representation of the Key ID uses the lower-case hexadecimal format, such as 0x20c400a1. An easier, more readable text representation uses the form CFG-GROUP-ITEM. This is also referred to as the (Configuration) Key Name.

Supported storage size identifiers (bits 30..28 of the Key ID) are:

- 0x01: one bit (the actual storage used is one byte, but only the least significant bit is used)
- 0x02: one byte
- 0x03: two bytes
- 0x04: four bytes
- 0x05: eight bytes

Each Configuration Item is of a certain type, which defines the interpretation of the raw binary data (see also [number formats](#)):

- U1, U2, U4, U8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths
- I1, I2, I4, I8: signed little-endian, two's complement integers of 8-, 16-, 32- and 64-bit widths
- R4, R8: IEEE754 single (32-bit) and double (64-bit) precision floats
- E1, E2, E4: unsigned little-endian enumeration of 8-, 16-, and 32-bit widths (like U1, U2 and U4)

- X1, X2, X4, X8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths for bitfields and other binary data, such as strings
 - L: single-bit boolean (true = 1, false = 0), stored as U1


6.3 Configuration Layers

Several Configuration Layers exist. They are separate sources of Configuration Items. Some of the layers are read-only and others are modifiable. Layers are organised in terms of priority. Values in a high priority layer will replace values stored in low priority layer. On startup of the receiver all configuration layers are read and the items within each layer are stacked up in order to create the Current Configuration, which is used by the receiver at run-time.

The following configuration layers are available (in order of priority, highest priority first):

- **RAM:** This layer contains items stored in volatile RAM. This is the Current Configuration. The value of any item can be set by the user at run-time (see [UBX Protocol Interface](#) below) and it will become effective immediately.
 - **BBR:** This layer contains items stored in the battery-backed RAM. The contents in this layer are preserved as long as a battery backup supply is provided during off periods. The value of any item can be set by the user at run-time (see [UBX Protocol Interface](#) below) and it will become effective upon a restart of the receiver.
 - **Flash:** This layer contains items stored permanently in the external flash memory. This layer is only available if there is a usable external flash memory. The value of any item can be set by the user at run-time (see [UBX Protocol Interface](#) below) it will become effective upon a restart of the receiver.
 - **Default:** This layer contains all items known to the running receiver software and their hard-coded default values. Data in this layer is not writable.

The stacking of the Configuration Items from the different layers (sources) in order to construct the Current Configuration in the RAM Layer is depicted in the following figure. For each defined item, i.e. for each item in the Default Layer, the receiver software goes through the layers above and stacks all the found items on top. Some items may not be present in every layer. The result is the RAM Layer filled with all Configuration Items given Configuration Values coming from the highest priority layer the corresponding item was present. In the example figure below bold text indicates the source of the value in the Current Configuration (the RAM Layer). Empty boxes indicate that the layer can hold the item but that it is not currently stored there. Boxes with text indicate that an item is currently stored in the layer.

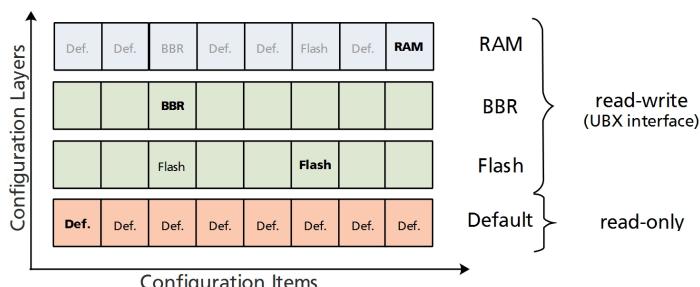

In the example figure above several items (e.g. the first item) are only set in the Default Layer and hence the default value ends up in Current Configuration in the RAM Layer. The third item is present in the Default, Flash and BBR Layers. The value from the BBR Layer has the highest priority and therefore it ends up in the RAM Layer. On the other hand, the default value of the

sixth item is changed by the value in the Flash Layer. The value of the last item is changed in the RAM Layer only, i.e. upon startup the value in the RAM Layer was the value from the Default Layer, but the user has changed the value in the RAM Layer at run-time.

6.4 Configuration Interface Access

The following sections describe the existing interfaces to access the Configuration Database.

6.4.1 UBX Protocol Interface


The following UBX protocol messages are available to access the Configuration Database:

- [UBX-CFG-VALGET](#) to read Configuration Items from the database
- [UBX-CFG-VALSET](#) to set Configuration Items in the database
- [UBX-CFG-VALDEL](#) to delete Configuration Items from the database

6.5 Configuration Data

Configuration data is the binary representation of a list of Key ID and Value pairs. It is formed by concatenating keys (U4 values) and values (variable type) without any padding. This format is used in the [UBX-CFG-VALSET](#) and [UBX-CFG-VALGET](#) messages.

The figure below shows an example. The four items (Key ID - Value pairs) on the left use the four fundamental storage sizes: one byte (L, U1, I1, E1 and X1 types), 2 bytes (U2, I2, E2 and X2 types), four bytes (U4, I4, E4, X4 and R4 types) and eight bytes (U8, I8, X8 and R8 types). When concatenated (right) the Key IDs and Values are not aligned and there is no padding.

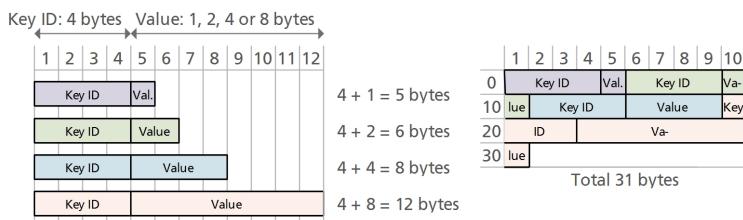


Note that this is an arbitrary example and any number of items of any value storage size can be concatenated the same way.

6.6 Configuration Transactions

The configuration concept supports two mechanisms of configuration, a transactionless mechanism where sent configuration changes are applied immediately to the configuration layer(s) requested. The second mechanism is a configuration transaction.

A transaction offers a way of queuing multiple configuration changes. It is particularly useful where different configuration keys depend on each other in such a way that sending one before the other can cause the configuration to be rejected. The queued configuration change requests are stored then checked collectively before being applied to the receiver.

A transaction can have the following states described in the figure below.

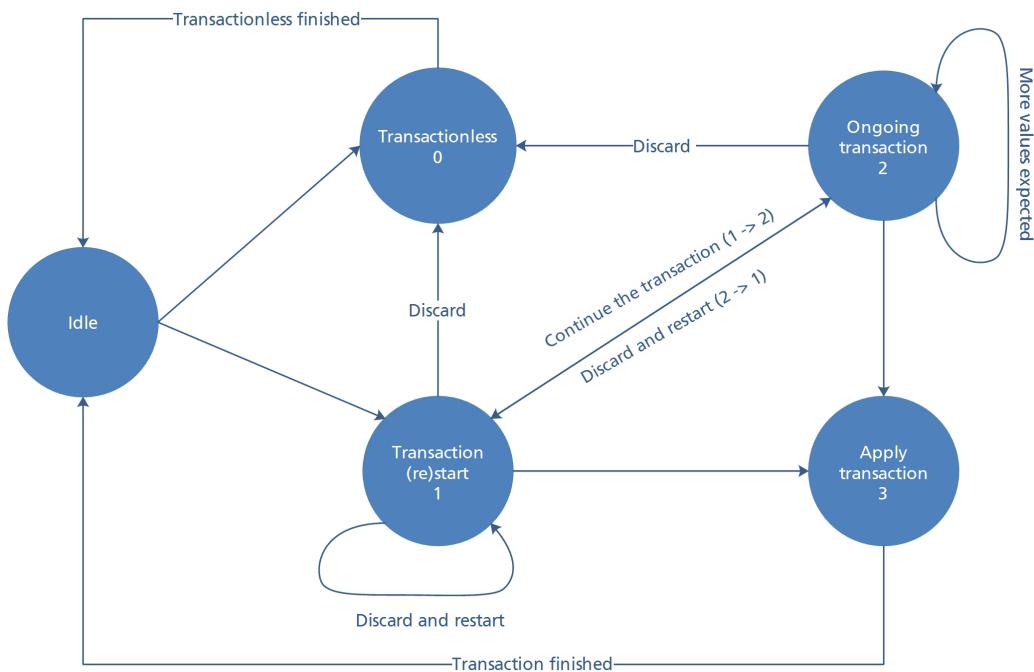

When starting a transaction, the user must specify the layer(s) the changes will be applied to. This list of configuration layer(s) must be observed throughout the transaction states, modifying the configuration layer(s) mid-transaction will cause the transaction to be aborted and no queued changes will be applied.

In the start transaction state, the receiver will lock the configuration database so that changes from another entity or message cannot be applied. It is possible to send a configuration key-value pairs with the start transaction state, and that will be queued waiting to be applied.

In the ongoing state, a configuration key and value must be sent, the receiver will abort the transaction and not apply any changes if this condition is violated, key-value pairs sent in the ongoing state will be queued waiting to be applied.

In the apply state, the queued changes will be collectively checked and applied to the requested configuration layer(s). Note that any additional key-value pairs sent within the apply state will be ignored.

Note that a transaction can only come from a single source, a [UBX-CFG-VALSET](#) message or a [UBX-CFG-VALDEL](#) message. This means that in any given transaction it is not possible to mix a delete and a save request, starting a transaction from a different source will abort the current transaction and no queued changes would be applied.

Please refer to [UBX-CFG-VALSET](#) and [UBX-CFG-VALDEL](#) messages for a detailed description of how to setup a configuration transaction, its limitations and conditions that would cause the transaction to be rejected.

6.7 Reset Behaviour

The RAM layer is always rebuilt from the layers below when the chip's processor comes out from reset. When using [UBX-CFG-RST](#) the processor goes through a reset cycle with these reset types (resetMode field):

- 0x00 hardware reset (watchdog) immediately
- 0x01 controlled software reset

- 0x04 hardware reset (watchdog) after shutdown

6.8 Configuration Reference

See [Configuration Defaults](#) for the default values.

6.8.1 CFG-GEOFENCE: Geofencing Configuration

See the chapter Geofencing in [Integration manual](#) for feature details.

If the receiver is sent a valid new configuration, it will respond with a [UBX-ACK-ACK](#) message and immediately change to the new configuration. Otherwise the receiver will reject the request, by issuing a [UBX-ACK-NAK](#) and continuing operation with the previous configuration.

Note that the acknowledge message does not indicate whether the PIO configuration has been successfully applied (pin assigned), it only indicates the successful configuration of the feature. The configured PIO must be previously unoccupied for successful assignment.

CFG-GEOFENCE-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-GEOFENCE-CONFLVL	0x20240011	E1	-	-	Required confidence level for state evaluation
This value times the position's standard deviation (sigma) defines the confidence band.					
See Constants for CFG-GEOFENCE-CONFLVL below for a list of possible constants for this item.					
CFG-GEOFENCE-USE_PIO	0x10240012	L	-	-	Use PIO combined fence state output
CFG-GEOFENCE-PINPOL	0x20240013	E1	-	-	PIO pin polarity
See Constants for CFG-GEOFENCE-PINPOL below for a list of possible constants for this item.					
CFG-GEOFENCE-PIN	0x20240014	U1	-	-	PIO pin number
CFG-GEOFENCE-USE_FENCE1	0x10240020	L	-	-	Use first geofence
CFG-GEOFENCE-FENCE1_LAT	0x40240021	I4	1e-7	deg	Latitude of the first geofence circle center
CFG-GEOFENCE-FENCE1_LON	0x40240022	I4	1e-7	deg	Longitude of the first geofence circle center
CFG-GEOFENCE-FENCE1_RAD	0x40240023	U4	0.01	m	Radius of the first geofence circle
CFG-GEOFENCE-USE_FENCE2	0x10240030	L	-	-	Use second geofence
CFG-GEOFENCE-FENCE2_LAT	0x40240031	I4	1e-7	deg	Latitude of the second geofence circle center
CFG-GEOFENCE-FENCE2_LON	0x40240032	I4	1e-7	deg	Longitude of the second geofence circle center
CFG-GEOFENCE-FENCE2_RAD	0x40240033	U4	0.01	m	Radius of the second geofence circle
CFG-GEOFENCE-USE_FENCE3	0x10240040	L	-	-	Use third geofence
CFG-GEOFENCE-FENCE3_LAT	0x40240041	I4	1e-7	deg	Latitude of the third geofence circle center
CFG-GEOFENCE-FENCE3_LON	0x40240042	I4	1e-7	deg	Longitude of the third geofence circle center

CFG-GEOFENCE-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-GEOFENCE-FENCE3_RAD	0x40240043	U4	0.01	m	Radius of the third geofence circle
CFG-GEOFENCE-USE_FENCE4	0x10240050	L	-	-	Use fourth geofence
CFG-GEOFENCE-FENCE4_LAT	0x40240051	I4	1e-7	deg	Latitude of the fourth geofence circle center
CFG-GEOFENCE-FENCE4_LON	0x40240052	I4	1e-7	deg	Longitude of the fourth geofence circle center
CFG-GEOFENCE-FENCE4_RAD	0x40240053	U4	0.01	m	Radius of the fourth geofence circle

Constants for CFG-GEOFENCE-CONFLVL

Constant	Value	Description
L000	0	No confidence
L680	1	68%
L950	2	95%
L997	3	99.7%
L9999	4	99.99%
L999999	5	99.9999%

Constants for CFG-GEOFENCE-PINPOL

Constant	Value	Description
LOW_IN	0	PIO low means inside geofence
LOW_OUT	1	PIO low means outside geofence

6.8.2 CFG-HW: Hardware Configuration

Hardware configuration settings.

CFG-HW-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	Active antenna voltage control flag
Enable active antenna voltage control flag.					
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	Short antenna detection flag
Enable short antenna detection flag.					
CFG-HW-ANT_CFG_SHORTDET_POL	0x10a30030	L	-	-	Short antenna detection polarity
Set to true if polarity of the antenna short detection is active low.					
CFG-HW-ANT_CFG_OPENDET	0x10a30031	L	-	-	Open antenna detection flag
Enable open antenna detection flag.					
CFG-HW-ANT_CFG_OPENDET_POL	0x10a30032	L	-	-	Open antenna detection polarity
Set to true if polarity of the antenna open detection is active low.					

CFG-HW-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	Power down antenna flag Enable power down antenna logic in the event of antenna short circuit. CFG-HW-ANT_CFG_SHORTDET must be enabled to use this feature.
CFG-HW-ANT_CFG_PWRDOWN_POL	0x10a30034	L	-	-	Power down antenna logic polarity Set to true if polarity of the antenna power down logic is active high.
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	Automatic recovery from short state flag Enable automatic recovery from short state.
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	ANT1 PIO number Antenna Switch (ANT1) PIO number.
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	ANT0 PIO number Antenna Short (ANT0) PIO number.
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	ANT2 PIO number Antenna Switch (ANT2) PIO number.

6.8.3 CFG-I2C: Configuration of the I2C Interface

Settings needed to configure the I2C communication interface.

CFG-I2C-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-I2C-ADDRESS	0x20510001	U1	-	-	I2C slave address of the receiver
CFG-I2C-EXTENDEDTIMEOUT	0x10510002	L	-	-	Flag to disable timeouting the interface after 1.5 s
CFG-I2C-ENABLED	0x10510003	L	-	-	Flag to indicate if the I2C interface should be enabled

6.8.4 CFG-I2CINPROT: Input Protocol Configuration of the I2C Interface

Input protocol enable flags of the I2C interface.

CFG-I2CINPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-I2CINPROT-UBX	0x10710001	L	-	-	Flag to indicate if UBX should be an input protocol on I2C
CFG-I2CINPROT-NMEA	0x10710002	L	-	-	Flag to indicate if NMEA should be an input protocol on I2C
CFG-I2CINPROT-RTCM3X	0x10710004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on I2C

6.8.5 CFG-I2COUTPROT: Output Protocol Configuration of the I2C Interface

Output protocol enable flags of the I2C interface.

CFG-I2COUTPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-I2COUTPROT-UBX	0x10720001	L	-	-	Flag to indicate if UBX should be an output protocol on I2C
CFG-I2COUTPROT-NMEA	0x10720002	L	-	-	Flag to indicate if NMEA should be an output protocol on I2C
CFG-I2COUTPROT-RTCM3X	0x10720004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on I2C

6.8.6 CFG-INFMSG: Inf Message Configuration

Information message configuration for the NMEA and UBX protocols.

CFG-INFMSG-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-INFMSG-UBX_I2C	0x20920001	X1	-	-	Information message enable flags for the UBX protocol on the I2C interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					
CFG-INFMSG-UBX_UART1	0x20920002	X1	-	-	Information message enable flags for the UBX protocol on the UART1 interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					
CFG-INFMSG-UBX_UART2	0x20920003	X1	-	-	Information message enable flags for the UBX protocol on the UART2 interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					
CFG-INFMSG-UBX_USB	0x20920004	X1	-	-	Information message enable flags for the UBX protocol on the USB interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					
CFG-INFMSG-UBX_SPI	0x20920005	X1	-	-	Information message enable flags for the UBX protocol on the SPI interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_I2C	0x20920006	X1	-	-	Information message enable flags for the NMEA protocol on the I2C interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_UART1	0x20920007	X1	-	-	Information message enable flags for the NMEA protocol on the UART1 interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					

CFG-INFMSG-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-INFMSG-NMEA_UART2	0x20920008	X1	-	-	Information message enable flags for the NMEA protocol on the UART2 interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_USB	0x20920009	X1	-	-	Information message enable flags for the NMEA protocol on the USB interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					
CFG-INFMSG-NMEA_SPI	0x2092000a	X1	-	-	Information message enable flags for the NMEA protocol on the SPI interface
See Constants for CFG-INFMSG-UBX_I2C below for a list of possible constants for this item.					

Constants for CFG-INFMSG-UBX_I2C

Constant	Value	Description			
ERROR	0x01	Enable ERROR information messages			
WARNING	0x02	Enable WARNING information messages			
NOTICE	0x04	Enable NOTICE information messages			
TEST	0x08	Enable TEST information messages			
DEBUG	0x10	Enable DEBUG information messages			

6.8.7 CFG-ITFM: Jamming/Interference Monitor configuration

Configuration of Jamming/Interference monitor.

CFG-ITFM-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-ITFM-BBTHRESHOLD	0x20410001	U1	-	-	Broadband jamming detection threshold
CFG-ITFM-CWTHRESHOLD	0x20410002	U1	-	-	CW jamming detection threshold
CFG-ITFM-ENABLE	0x1041000d	L	-	-	Enable interference detection
CFG-ITFM-ANTSETTING	0x20410010	E1	-	-	Antenna setting
See Constants for CFG-ITFM-ANTSETTING below for a list of possible constants for this item.					
CFG-ITFM-ENABLE_AUX	0x10410013	L	-	-	Set to true to scan auxiliary bands
Supported on u-blox 8 / u-blox M8 only, otherwise ignored.					

Constants for CFG-ITFM-ANTSETTING

Constant	Value	Description			
UNKNOWN	0	Unknown			
PASSIVE	1	Passive			
ACTIVE	2	Active			

6.8.8 CFG-LOGFILTER: Data Logger Configuration

This group can be used to configure the data logger, i.e. to enable/disable the log recording and to get/set the position entry filter settings.

Position entries can be filtered based on time difference, position difference or current speed thresholds. Position and speed filtering also have a minimum time interval. A position is logged if any of the thresholds are exceeded. If a threshold is set to zero it is ignored. The maximum rate of position logging is 1Hz.

The filter settings will be configured to the provided values only if the 'applyAllFilterSettings' flag is set. This allows the recording to be enabled/disabled independently of configuring the filter settings.

It is possible to configure the data logger in the absence of a logging file. By doing so, once the logging file is created, the data logger configuration will take effect immediately and logging recording and filtering will activate according to the configuration.

CFG-LOGFILTER-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-LOGFILTER-RECORD_ENA	0x10de0002	L	-	-	Recording enabled Set to true when recording enabled.
CFG-LOGFILTER-ONCE_PER_WAKE_UP_ENA	0x10de0003	L	-	-	Once per wakeup Set to true recording only one single position per PSM on/off mode wake-up period is enabled. Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.
CFG-LOGFILTER-APPLY_ALL_FILTERS	0x10de0004	L	-	-	Apply all filter settings Set to true when all filter settings are to be applied, not just recording enabling/disabling.
CFG-LOGFILTER-MIN_INTERVAL	0x30de0005	U2	-	s	Minimum time interval between logged positions Minimum time interval between logged positions (0 = not set). This is only applied in combination with the speed and/or position thresholds. If both MIN_INTERVAL and TIME_THRS are set, MIN_INTERVAL must be less than or equal to TIME_THRS. Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.
CFG-LOGFILTER-TIME_THRS	0x30de0006	U2	-	s	Time threshold If the time difference is greater than the threshold then the position is logged (0 = not set). Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.
CFG-LOGFILTER-SPEED_THRS	0x30de0007	U2	-	m/s	Speed threshold If the current speed is greater than the threshold then the position is logged (0 = not set). MIN_INTERVAL also applies. Note: value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.
CFG-LOGFILTER-POSITION_THRS	0x40de0008	U4	-	m	Position threshold

CFG-LOGFILTER-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
If the 3D position difference is greater than the threshold then the position is logged (0 = not set). MIN_INTERVAL also applies. Note: the value set here does not take effect unless CFG-LOGFILTER-APPLY_ALL_FILTERS is enabled.					

6.8.9 CFG-MOT: Motion Detector Configuration

The items in this group specify the parameters used for the internal receiver motion detector. The platform motion is assessed by combining the detected motion of different detectors looking at specific data types (i.e. GNSS, gyroscopes, accelerometers, wheel-ticks). The decision thresholds of the internal detectors can be specified using the configuration items in this group.

CFG-MOT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MOT-GNSSSPEED_THRS	0x20250038	U1	0.01	m/s	GNSS speed threshold below which platform is considered as stationary (a.k.a. static hold threshold)
Set this parameter to 0 for a firmware default value or behaviour.					
CFG-MOT-GNSSDIST_THRS	0x3025003b	U2	-	-	Distance above which GNSS-based stationary motion is exit (a.k.a. static hold distance threshold)
Set this parameter to 0 for a firmware default value or behaviour.					

6.8.10 CFG-MSGOUT: Message Output Configuration

For each message and port a separate output rate (per second, per epoch) can be configured.

CFG-MSGOUT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_DTM_I2C	0x209100a6	U1	-	-	Output rate of the NMEA-GX-DTM message on port I2C
CFG-MSGOUT-NMEA_ID_DTM_SPI	0x209100aa	U1	-	-	Output rate of the NMEA-GX-DTM message on port SPI
CFG-MSGOUT-NMEA_ID_DTM_UART1	0x209100a7	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART1
CFG-MSGOUT-NMEA_ID_DTM_UART2	0x209100a8	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART2
CFG-MSGOUT-NMEA_ID_DTM_USB	0x209100a9	U1	-	-	Output rate of the NMEA-GX-DTM message on port USB
CFG-MSGOUT-NMEA_ID_GBS_I2C	0x209100dd	U1	-	-	Output rate of the NMEA-GX-GBS message on port I2C
CFG-MSGOUT-NMEA_ID_GBS_SPI	0x209100e1	U1	-	-	Output rate of the NMEA-GX-GBS message on port SPI

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_GBS_UART1	0x209100de	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART1
CFG-MSGOUT-NMEA_ID_GBS_UART2	0x209100df	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART2
CFG-MSGOUT-NMEA_ID_GBS_USB	0x209100e0	U1	-	-	Output rate of the NMEA-GX-GBS message on port USB
CFG-MSGOUT-NMEA_ID_GGA_I2C	0x209100ba	U1	-	-	Output rate of the NMEA-GX-GGA message on port I2C
CFG-MSGOUT-NMEA_ID_GGA_SPI	0x209100be	U1	-	-	Output rate of the NMEA-GX-GGA message on port SPI
CFG-MSGOUT-NMEA_ID_GGA_UART1	0x209100bb	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART1
CFG-MSGOUT-NMEA_ID_GGA_UART2	0x209100bc	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART2
CFG-MSGOUT-NMEA_ID_GGA_USB	0x209100bd	U1	-	-	Output rate of the NMEA-GX-GGA message on port USB
CFG-MSGOUT-NMEA_ID_GLL_I2C	0x209100c9	U1	-	-	Output rate of the NMEA-GX-GLL message on port I2C
CFG-MSGOUT-NMEA_ID_GLL_SPI	0x209100cd	U1	-	-	Output rate of the NMEA-GX-GLL message on port SPI
CFG-MSGOUT-NMEA_ID_GLL_UART1	0x209100ca	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART1
CFG-MSGOUT-NMEA_ID_GLL_UART2	0x209100cb	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART2
CFG-MSGOUT-NMEA_ID_GLL_USB	0x209100cc	U1	-	-	Output rate of the NMEA-GX-GLL message on port USB
CFG-MSGOUT-NMEA_ID_GNS_I2C	0x209100b5	U1	-	-	Output rate of the NMEA-GX-GNS message on port I2C
CFG-MSGOUT-NMEA_ID_GNS_SPI	0x209100b9	U1	-	-	Output rate of the NMEA-GX-GNS message on port SPI
CFG-MSGOUT-NMEA_ID_GNS_UART1	0x209100b6	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART1
CFG-MSGOUT-NMEA_ID_GNS_UART2	0x209100b7	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART2
CFG-MSGOUT-NMEA_ID_GNS_USB	0x209100b8	U1	-	-	Output rate of the NMEA-GX-GNS message on port USB
CFG-MSGOUT-NMEA_ID_GRS_I2C	0x209100ce	U1	-	-	Output rate of the NMEA-GX-GRS message on port I2C
CFG-MSGOUT-NMEA_ID_GRS_SPI	0x209100d2	U1	-	-	Output rate of the NMEA-GX-GRS message on port SPI
CFG-MSGOUT-NMEA_ID_GRS_UART1	0x209100cf	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART1
CFG-MSGOUT-NMEA_ID_GRS_UART2	0x209100d0	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART2

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_GRS_USB	0x209100d1	U1	-	-	Output rate of the NMEA-GX-GRS message on port USB
CFG-MSGOUT-NMEA_ID_GSA_I2C	0x209100bf	U1	-	-	Output rate of the NMEA-GX-GSA message on port I2C
CFG-MSGOUT-NMEA_ID_GSA_SPI	0x209100c3	U1	-	-	Output rate of the NMEA-GX-GSA message on port SPI
CFG-MSGOUT-NMEA_ID_GSA_UART1	0x209100c0	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART1
CFG-MSGOUT-NMEA_ID_GSA_UART2	0x209100c1	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART2
CFG-MSGOUT-NMEA_ID_GSA_USB	0x209100c2	U1	-	-	Output rate of the NMEA-GX-GSA message on port USB
CFG-MSGOUT-NMEA_ID_GST_I2C	0x209100d3	U1	-	-	Output rate of the NMEA-GX-GST message on port I2C
CFG-MSGOUT-NMEA_ID_GST_SPI	0x209100d7	U1	-	-	Output rate of the NMEA-GX-GST message on port SPI
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	Output rate of the NMEA-GX-GST message on port UART1
CFG-MSGOUT-NMEA_ID_GST_UART2	0x209100d5	U1	-	-	Output rate of the NMEA-GX-GST message on port UART2
CFG-MSGOUT-NMEA_ID_GST_USB	0x209100d6	U1	-	-	Output rate of the NMEA-GX-GST message on port USB
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	Output rate of the NMEA-GX-GSV message on port I2C
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	Output rate of the NMEA-GX-GSV message on port SPI
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART1
CFG-MSGOUT-NMEA_ID_GSV_UART2	0x209100c6	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART2
CFG-MSGOUT-NMEA_ID_GSV_USB	0x209100c7	U1	-	-	Output rate of the NMEA-GX-GSV message on port USB
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	Output rate of the NMEA-GX-RMC message on port I2C
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	Output rate of the NMEA-GX-RMC message on port SPI
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART1
CFG-MSGOUT-NMEA_ID_RMC_UART2	0x209100ad	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART2
CFG-MSGOUT-NMEA_ID_RMC_USB	0x209100ae	U1	-	-	Output rate of the NMEA-GX-RMC message on port USB
CFG-MSGOUT-NMEA_ID_VLW_I2C	0x209100e7	U1	-	-	Output rate of the NMEA-GX-VLW message on port I2C

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_VLW_SPI	0x209100eb	U1	-	-	Output rate of the NMEA-GX-VLW message on port SPI
CFG-MSGOUT-NMEA_ID_VLW_UART1	0x209100e8	U1	-	-	Output rate of the NMEA-GX-VLW message on port UART1
CFG-MSGOUT-NMEA_ID_VLW_UART2	0x209100e9	U1	-	-	Output rate of the NMEA-GX-VLW message on port UART2
CFG-MSGOUT-NMEA_ID_VLW_USB	0x209100ea	U1	-	-	Output rate of the NMEA-GX-VLW message on port USB
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	Output rate of the NMEA-GX-VTG message on port I2C
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	Output rate of the NMEA-GX-VTG message on port SPI
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART1
CFG-MSGOUT-NMEA_ID_VTG_UART2	0x209100b2	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART2
CFG-MSGOUT-NMEA_ID_VTG_USB	0x209100b3	U1	-	-	Output rate of the NMEA-GX-VTG message on port USB
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	Output rate of the NMEA-GX-ZDA message on port I2C
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	Output rate of the NMEA-GX-ZDA message on port SPI
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART1
CFG-MSGOUT-NMEA_ID_ZDA_UART2	0x209100da	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART2
CFG-MSGOUT-NMEA_ID_ZDA_USB	0x209100db	U1	-	-	Output rate of the NMEA-GX-ZDA message on port USB
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYP_UART1	0x209100ed	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYP_UART2	0x209100ee	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART2
CFG-MSGOUT-PUBX_ID_POLYP_USB	0x209100ef	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port USB
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYS_UART1	0x209100f2	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART1

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-PUBX_ID_POLYS_UART2	0x209100f3	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART2
CFG-MSGOUT-PUBX_ID_POLYS_USB	0x209100f4	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port USB
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYT_UART1	0x209100f7	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYT_UART2	0x209100f8	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART2
CFG-MSGOUT-PUBX_ID_POLYT_USB	0x209100f9	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port USB
CFG-MSGOUT-RTCM_3X_TYPE1005_I2C	0x209102bd	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port I2C
CFG-MSGOUT-RTCM_3X_TYPE1005_SPI	0x209102c1	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port SPI
CFG-MSGOUT-RTCM_3X_TYPE1005_UART1	0x209102be	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port UART1
CFG-MSGOUT-RTCM_3X_TYPE1005_UART2	0x209102bf	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port UART2
CFG-MSGOUT-RTCM_3X_TYPE1005_USB	0x209102c0	U1	-	-	Output rate of the RTCM-3X-TYPE1005 message on port USB
CFG-MSGOUT-RTCM_3X_TYPE1077_I2C	0x209102cc	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port I2C
CFG-MSGOUT-RTCM_3X_TYPE1077_SPI	0x209102d0	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port SPI
CFG-MSGOUT-RTCM_3X_TYPE1077_UART1	0x209102cd	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port UART1
CFG-MSGOUT-RTCM_3X_TYPE1077_UART2	0x209102ce	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port UART2
CFG-MSGOUT-RTCM_3X_TYPE1077_USB	0x209102cf	U1	-	-	Output rate of the RTCM-3X-TYPE1077 message on port USB
CFG-MSGOUT-RTCM_3X_TYPE1087_I2C	0x209102d1	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port I2C
CFG-MSGOUT-RTCM_3X_TYPE1087_SPI	0x209102d5	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port SPI

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-RTCM_3X_TYPE1087_UART1	0x209102d2	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port UART1
CFG-MSGOUT-RTCM_3X_TYPE1087_UART2	0x209102d3	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port UART2
CFG-MSGOUT-RTCM_3X_TYPE1087_USB	0x209102d4	U1	-	-	Output rate of the RTCM-3X-TYPE1087 message on port USB
CFG-MSGOUT-RTCM_3X_TYPE1097_I2C	0x20910318	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port I2C
CFG-MSGOUT-RTCM_3X_TYPE1097_SPI	0x2091031c	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port SPI
CFG-MSGOUT-RTCM_3X_TYPE1097_UART1	0x20910319	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port UART1
CFG-MSGOUT-RTCM_3X_TYPE1097_UART2	0x2091031a	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port UART2
CFG-MSGOUT-RTCM_3X_TYPE1097_USB	0x2091031b	U1	-	-	Output rate of the RTCM-3X-TYPE1097 message on port USB
CFG-MSGOUT-RTCM_3X_TYPE1127_I2C	0x209102d6	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port I2C
CFG-MSGOUT-RTCM_3X_TYPE1127_SPI	0x209102da	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port SPI
CFG-MSGOUT-RTCM_3X_TYPE1127_UART1	0x209102d7	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port UART1
CFG-MSGOUT-RTCM_3X_TYPE1127_UART2	0x209102d8	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port UART2
CFG-MSGOUT-RTCM_3X_TYPE1127_USB	0x209102d9	U1	-	-	Output rate of the RTCM-3X-TYPE1127 message on port USB
CFG-MSGOUT-RTCM_3X_TYPE1230_I2C	0x20910303	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port I2C
CFG-MSGOUT-RTCM_3X_TYPE1230_SPI	0x20910307	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port SPI
CFG-MSGOUT-RTCM_3X_TYPE1230_UART1	0x20910304	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port UART1
CFG-MSGOUT-RTCM_3X_TYPE1230_UART2	0x20910305	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port UART2
CFG-MSGOUT-RTCM_3X_TYPE1230_USB	0x20910306	U1	-	-	Output rate of the RTCM-3X-TYPE1230 message on port USB

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-RTCM_3X_TYPE4072_1_I2C	0x20910381	U1	-	-	Output rate of the RTCM-3X-TYPE4072, sub-type 1 message on port I2C
CFG-MSGOUT-RTCM_3X_TYPE4072_1_SPI	0x20910385	U1	-	-	Output rate of the RTCM-3X-TYPE4072, sub-type 1 message on port SPI
CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART1	0x20910382	U1	-	-	Output rate of the RTCM-3X-TYPE4072, sub-type 1 message on port UART1
CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART2	0x20910383	U1	-	-	Output rate of the RTCM-3X-TYPE4072, sub-type 1 message on port UART2
CFG-MSGOUT-RTCM_3X_TYPE4072_1_USB	0x20910384	U1	-	-	Output rate of the RTCM-3X-TYPE4072, sub-type 1 message on port USB
CFG-MSGOUT-UBX_LOG_INFO_I2C	0x20910259	U1	-	-	Output rate of the UBX-LOG-INFO message on port I2C
CFG-MSGOUT-UBX_LOG_INFO_SPI	0x2091025d	U1	-	-	Output rate of the UBX-LOG-INFO message on port SPI
CFG-MSGOUT-UBX_LOG_INFO_UART1	0x2091025a	U1	-	-	Output rate of the UBX-LOG-INFO message on port UART1
CFG-MSGOUT-UBX_LOG_INFO_UART2	0x2091025b	U1	-	-	Output rate of the UBX-LOG-INFO message on port UART2
CFG-MSGOUT-UBX_LOG_INFO_USB	0x2091025c	U1	-	-	Output rate of the UBX-LOG-INFO message on port USB
CFG-MSGOUT-UBX_MON_COMMs_I2C	0x2091034f	U1	-	-	Output rate of the UBX-MON-COMMS message on port I2C
CFG-MSGOUT-UBX_MON_COMMs_SPI	0x20910353	U1	-	-	Output rate of the UBX-MON-COMMS message on port SPI
CFG-MSGOUT-UBX_MON_COMMs_UART1	0x20910350	U1	-	-	Output rate of the UBX-MON-COMMS message on port UART1
CFG-MSGOUT-UBX_MON_COMMs_UART2	0x20910351	U1	-	-	Output rate of the UBX-MON-COMMS message on port UART2
CFG-MSGOUT-UBX_MON_COMMs_USB	0x20910352	U1	-	-	Output rate of the UBX-MON-COMMS message on port USB
CFG-MSGOUT-UBX_MON_HW2_I2C	0x209101b9	U1	-	-	Output rate of the UBX-MON-HW2 message on port I2C
CFG-MSGOUT-UBX_MON_HW2_SPI	0x209101bd	U1	-	-	Output rate of the UBX-MON-HW2 message on port SPI
CFG-MSGOUT-UBX_MON_HW2_UART1	0x209101ba	U1	-	-	Output rate of the UBX-MON-HW2 message on port UART1
CFG-MSGOUT-UBX_MON_HW2_UART2	0x209101bb	U1	-	-	Output rate of the UBX-MON-HW2 message on port UART2

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_MON_HW2_USB	0x209101bc	U1	-	-	Output rate of the UBX-MON-HW2 message on port USB
CFG-MSGOUT-UBX_MON_HW3_I2C	0x20910354	U1	-	-	Output rate of the UBX-MON-HW3 message on port I2C
CFG-MSGOUT-UBX_MON_HW3_SPI	0x20910358	U1	-	-	Output rate of the UBX-MON-HW3 message on port SPI
CFG-MSGOUT-UBX_MON_HW3_UART1	0x20910355	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART1
CFG-MSGOUT-UBX_MON_HW3_UART2	0x20910356	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART2
CFG-MSGOUT-UBX_MON_HW3_USB	0x20910357	U1	-	-	Output rate of the UBX-MON-HW3 message on port USB
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	Output rate of the UBX-MON-HW message on port I2C
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	Output rate of the UBX-MON-HW message on port SPI
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	Output rate of the UBX-MON-HW message on port UART1
CFG-MSGOUT-UBX_MON_HW_UART2	0x209101b6	U1	-	-	Output rate of the UBX-MON-HW message on port UART2
CFG-MSGOUT-UBX_MON_HW_USB	0x209101b7	U1	-	-	Output rate of the UBX-MON-HW message on port USB
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	Output rate of the UBX-MON-IO message on port I2C
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	Output rate of the UBX-MON-IO message on port SPI
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	Output rate of the UBX-MON-IO message on port UART1
CFG-MSGOUT-UBX_MON_IO_UART2	0x209101a7	U1	-	-	Output rate of the UBX-MON-IO message on port UART2
CFG-MSGOUT-UBX_MON_IO_USB	0x209101a8	U1	-	-	Output rate of the UBX-MON-IO message on port USB
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	Output rate of the UBX-MON-MSGPP message on port I2C
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	Output rate of the UBX-MON-MSGPP message on port SPI
CFG-MSGOUT-UBX_MON_MSGPP_UART1	0x20910197	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART1
CFG-MSGOUT-UBX_MON_MSGPP_UART2	0x20910198	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART2
CFG-MSGOUT-UBX_MON_MSGPP_USB	0x20910199	U1	-	-	Output rate of the UBX-MON-MSGPP message on port USB
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	Output rate of the UBX-MON-RF message on port I2C

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	Output rate of the UBX-MON-RF message on port SPI
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	Output rate of the UBX-MON-RF message on port UART1
CFG-MSGOUT-UBX_MON_RF_UART2	0x2091035b	U1	-	-	Output rate of the UBX-MON-RF message on port UART2
CFG-MSGOUT-UBX_MON_RF_USB	0x2091035c	U1	-	-	Output rate of the UBX-MON-RF message on port USB
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	Output rate of the UBX-MON-RXBUF message on port I2C
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	Output rate of the UBX-MON-RXBUF message on port SPI
CFG-MSGOUT-UBX_MON_RXBUF_UART1	0x209101a1	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART1
CFG-MSGOUT-UBX_MON_RXBUF_UART2	0x209101a2	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART2
CFG-MSGOUT-UBX_MON_RXBUF_USB	0x209101a3	U1	-	-	Output rate of the UBX-MON-RXBUF message on port USB
CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	Output rate of the UBX-MON-RXR message on port I2C
CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	Output rate of the UBX-MON-RXR message on port SPI
CFG-MSGOUT-UBX_MON_RXR_UART1	0x20910188	U1	-	-	Output rate of the UBX-MON-RXR message on port UART1
CFG-MSGOUT-UBX_MON_RXR_UART2	0x20910189	U1	-	-	Output rate of the UBX-MON-RXR message on port UART2
CFG-MSGOUT-UBX_MON_RXR_USB	0x2091018a	U1	-	-	Output rate of the UBX-MON-RXR message on port USB
CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	Output rate of the UBX-MON-TXBUF message on port I2C
CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	Output rate of the UBX-MON-TXBUF message on port SPI
CFG-MSGOUT-UBX_MON_TXBUF_UART1	0x2091019c	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART1
CFG-MSGOUT-UBX_MON_TXBUF_UART2	0x2091019d	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART2
CFG-MSGOUT-UBX_MON_TXBUF_USB	0x2091019e	U1	-	-	Output rate of the UBX-MON-TXBUF message on port USB
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port I2C
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port SPI
CFG-MSGOUT-UBX_NAV_CLOCK_UART1	0x20910066	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART1

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_CLOCK_UART2	0x20910067	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART2
CFG-MSGOUT-UBX_NAV_CLOCK_USB	0x20910068	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port USB
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	Output rate of the UBX-NAV-DOP message on port I2C
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	Output rate of the UBX-NAV-DOP message on port SPI
CFG-MSGOUT-UBX_NAV_DOP_UART1	0x20910039	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART1
CFG-MSGOUT-UBX_NAV_DOP_UART2	0x2091003a	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART2
CFG-MSGOUT-UBX_NAV_DOP_USB	0x2091003b	U1	-	-	Output rate of the UBX-NAV-DOP message on port USB
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	Output rate of the UBX-NAV-EOE message on port I2C
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	Output rate of the UBX-NAV-EOE message on port SPI
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART1
CFG-MSGOUT-UBX_NAV_EOE_UART2	0x20910161	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART2
CFG-MSGOUT-UBX_NAV_EOE_USB	0x20910162	U1	-	-	Output rate of the UBX-NAV-EOE message on port USB
CFG-MSGOUT-UBX_NAV_GEOFENCE_I2C	0x209100a1	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port I2C
CFG-MSGOUT-UBX_NAV_GEOFENCE_SPI	0x209100a5	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port SPI
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART1	0x209100a2	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port UART1
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART2	0x209100a3	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port UART2
CFG-MSGOUT-UBX_NAV_GEOFENCE_USB	0x209100a4	U1	-	-	Output rate of the UBX-NAV-GEOFENCE message on port USB
CFG-MSGOUT-UBX_NAV_ODO_I2C	0x2091007e	U1	-	-	Output rate of the UBX-NAV-ODO message on port I2C
CFG-MSGOUT-UBX_NAV_ODO_SPI	0x20910082	U1	-	-	Output rate of the UBX-NAV-ODO message on port SPI
CFG-MSGOUT-UBX_NAV_ODO_UART1	0x2091007f	U1	-	-	Output rate of the UBX-NAV-ODO message on port UART1
CFG-MSGOUT-UBX_NAV_ODO_UART2	0x20910080	U1	-	-	Output rate of the UBX-NAV-ODO message on port UART2

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_ODO_USB	0x20910081	U1	-	-	Output rate of the UBX-NAV-ODO message on port USB
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	Output rate of the UBX-NAV-ORB message on port I2C
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	Output rate of the UBX-NAV-ORB message on port SPI
CFG-MSGOUT-UBX_NAV_ORB_UART1	0x20910011	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART1
CFG-MSGOUT-UBX_NAV_ORB_UART2	0x20910012	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART2
CFG-MSGOUT-UBX_NAV_ORB_USB	0x20910013	U1	-	-	Output rate of the UBX-NAV-ORB message on port USB
CFG-MSGOUT-UBX_NAV_POSECEF_I2C	0x20910024	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port I2C
CFG-MSGOUT-UBX_NAV_POSECEF_SPI	0x20910028	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port SPI
CFG-MSGOUT-UBX_NAV_POSECEF_UART1	0x20910025	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART1
CFG-MSGOUT-UBX_NAV_POSECEF_UART2	0x20910026	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART2
CFG-MSGOUT-UBX_NAV_POSECEF_USB	0x20910027	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port USB
CFG-MSGOUT-UBX_NAV_POSLLH_I2C	0x20910029	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port I2C
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port SPI
CFG-MSGOUT-UBX_NAV_POSLLH_UART1	0x2091002a	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART1
CFG-MSGOUT-UBX_NAV_POSLLH_UART2	0x2091002b	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART2
CFG-MSGOUT-UBX_NAV_POSLLH_USB	0x2091002c	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port USB
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	Output rate of the UBX-NAV-PVT message on port I2C
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	Output rate of the UBX-NAV-PVT message on port SPI
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART1
CFG-MSGOUT-UBX_NAV_PVT_UART2	0x20910008	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART2
CFG-MSGOUT-UBX_NAV_PVT_USB	0x20910009	U1	-	-	Output rate of the UBX-NAV-PVT message on port USB

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	Output rate of the UBX-NAV-SAT message on port I2C
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	Output rate of the UBX-NAV-SAT message on port SPI
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART1
CFG-MSGOUT-UBX_NAV_SAT_UART2	0x20910017	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART2
CFG-MSGOUT-UBX_NAV_SAT_USB	0x20910018	U1	-	-	Output rate of the UBX-NAV-SAT message on port USB
CFG-MSGOUT-UBX_NAV_SBAS_I2C	0x2091006a	U1	-	-	Output rate of the UBX-NAV-SBAS message on port I2C
CFG-MSGOUT-UBX_NAV_SBAS_SPI	0x2091006e	U1	-	-	Output rate of the UBX-NAV-SBAS message on port SPI
CFG-MSGOUT-UBX_NAV_SBAS_UART1	0x2091006b	U1	-	-	Output rate of the UBX-NAV-SBAS message on port UART1
CFG-MSGOUT-UBX_NAV_SBAS_UART2	0x2091006c	U1	-	-	Output rate of the UBX-NAV-SBAS message on port UART2
CFG-MSGOUT-UBX_NAV_SBAS_USB	0x2091006d	U1	-	-	Output rate of the UBX-NAV-SBAS message on port USB
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	Output rate of the UBX-NAV-SIG message on port I2C
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	Output rate of the UBX-NAV-SIG message on port SPI
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART1
CFG-MSGOUT-UBX_NAV_SIG_UART2	0x20910347	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART2
CFG-MSGOUT-UBX_NAV_SIG_USB	0x20910348	U1	-	-	Output rate of the UBX-NAV-SIG message on port USB
CFG-MSGOUT-UBX_NAV_STATUS_I2C	0x2091001a	U1	-	-	Output rate of the UBX-NAV-STATUS message on port I2C
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	Output rate of the UBX-NAV-STATUS message on port SPI
CFG-MSGOUT-UBX_NAV_STATUS_UART1	0x2091001b	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART1
CFG-MSGOUT-UBX_NAV_STATUS_UART2	0x2091001c	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART2
CFG-MSGOUT-UBX_NAV_STATUS_USB	0x2091001d	U1	-	-	Output rate of the UBX-NAV-STATUS message on port USB
CFG-MSGOUT-UBX_NAV_SVIN_I2C	0x20910088	U1	-	-	Output rate of the UBX-NAV-SVIN message on port I2C
CFG-MSGOUT-UBX_NAV_SVIN_SPI	0x2091008c	U1	-	-	Output rate of the UBX-NAV-SVIN message on port SPI

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_SVIN_UART1	0x20910089	U1	-	-	Output rate of the UBX-NAV-SVIN message on port UART1
CFG-MSGOUT-UBX_NAV_SVIN_UART2	0x2091008a	U1	-	-	Output rate of the UBX-NAV-SVIN message on port UART2
CFG-MSGOUT-UBX_NAV_SVIN_USB	0x2091008b	U1	-	-	Output rate of the UBX-NAV-SVIN message on port USB
CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C	0x20910051	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI	0x20910055	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1	0x20910052	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART2	0x20910053	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEBDS_USB	0x20910054	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port USB
CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C	0x20910056	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI	0x2091005a	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1	0x20910057	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART2	0x20910058	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEGAL_USB	0x20910059	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port USB
CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C	0x2091004c	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI	0x20910050	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1	0x2091004d	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART2	0x2091004e	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEGLO_USB	0x2091004f	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port USB
CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C	0x20910047	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port I2C

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI	0x2091004b	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1	0x20910048	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART2	0x20910049	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEGPS_USB	0x2091004a	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port USB
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMELS_UART1	0x20910061	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMELS_UART2	0x20910062	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMELS_USB	0x20910063	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port USB
CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C	0x2091005b	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI	0x2091005f	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1	0x2091005c	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART2	0x2091005d	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEUTC_USB	0x2091005e	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port USB
CFG-MSGOUT-UBX_NAV_VELECEF_I2C	0x2091003d	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port I2C
CFG-MSGOUT-UBX_NAV_VELECEF_SPI	0x20910041	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port SPI
CFG-MSGOUT-UBX_NAV_VELECEF_UART1	0x2091003e	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART1
CFG-MSGOUT-UBX_NAV_VELECEF_UART2	0x2091003f	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART2
CFG-MSGOUT-UBX_NAV_VELECEF_USB	0x20910040	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port USB

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_VELNED_I2C	0x20910042	U1	-	-	Output rate of the UBX-NAV-VELNED message on port I2C
CFG-MSGOUT-UBX_NAV_VELNED_SPI	0x20910046	U1	-	-	Output rate of the UBX-NAV-VELNED message on port SPI
CFG-MSGOUT-UBX_NAV_VELNED_UART1	0x20910043	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART1
CFG-MSGOUT-UBX_NAV_VELNED_UART2	0x20910044	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART2
CFG-MSGOUT-UBX_NAV_VELNED_USB	0x20910045	U1	-	-	Output rate of the UBX-NAV-VELNED message on port USB
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	Output rate of the UBX-RXM-MEASX message on port I2C
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	Output rate of the UBX-RXM-MEASX message on port SPI
CFG-MSGOUT-UBX_RXM_MEASX_UART1	0x20910205	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART1
CFG-MSGOUT-UBX_RXM_MEASX_UART2	0x20910206	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART2
CFG-MSGOUT-UBX_RXM_MEASX_USB	0x20910207	U1	-	-	Output rate of the UBX-RXM-MEASX message on port USB
CFG-MSGOUT-UBX_RXM_RAWX_I2C	0x209102a4	U1	-	-	Output rate of the UBX-RXM-RAWX message on port I2C
CFG-MSGOUT-UBX_RXM_RAWX_SPI	0x209102a8	U1	-	-	Output rate of the UBX-RXM-RAWX message on port SPI
CFG-MSGOUT-UBX_RXM_RAWX_UART1	0x209102a5	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART1
CFG-MSGOUT-UBX_RXM_RAWX_UART2	0x209102a6	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART2
CFG-MSGOUT-UBX_RXM_RAWX_USB	0x209102a7	U1	-	-	Output rate of the UBX-RXM-RAWX message on port USB
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	Output rate of the UBX-RXM-RLM message on port I2C
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	Output rate of the UBX-RXM-RLM message on port SPI
CFG-MSGOUT-UBX_RXM_RLM_UART1	0x2091025f	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART1
CFG-MSGOUT-UBX_RXM_RLM_UART2	0x20910260	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART2
CFG-MSGOUT-UBX_RXM_RLM_USB	0x20910261	U1	-	-	Output rate of the UBX-RXM-RLM message on port USB
CFG-MSGOUT-UBX_RXM_RTCM_I2C	0x20910268	U1	-	-	Output rate of the UBX-RXM-RTCM message on port I2C
CFG-MSGOUT-UBX_RXM_RTCM_SPI	0x2091026c	U1	-	-	Output rate of the UBX-RXM-RTCM message on port SPI

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_RXM_RTCM_UART1	0x20910269	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART1
CFG-MSGOUT-UBX_RXM_RTCM_UART2	0x2091026a	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART2
CFG-MSGOUT-UBX_RXM_RTCM_USB	0x2091026b	U1	-	-	Output rate of the UBX-RXM-RTCM message on port USB
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port I2C
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port SPI
CFG-MSGOUT-UBX_RXM_SFRBX_UART1	0x20910232	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART1
CFG-MSGOUT-UBX_RXM_SFRBX_UART2	0x20910233	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART2
CFG-MSGOUT-UBX_RXM_SFRBX_USB	0x20910234	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port USB
CFG-MSGOUT-UBX_TIM_SVIN_I2C	0x20910097	U1	-	-	Output rate of the UBX-TIM-SVIN message on port I2C
CFG-MSGOUT-UBX_TIM_SVIN_SPI	0x2091009b	U1	-	-	Output rate of the UBX-TIM-SVIN message on port SPI
CFG-MSGOUT-UBX_TIM_SVIN_UART1	0x20910098	U1	-	-	Output rate of the UBX-TIM-SVIN message on port UART1
CFG-MSGOUT-UBX_TIM_SVIN_UART2	0x20910099	U1	-	-	Output rate of the UBX-TIM-SVIN message on port UART2
CFG-MSGOUT-UBX_TIM_SVIN_USB	0x2091009a	U1	-	-	Output rate of the UBX-TIM-SVIN message on port USB
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	Output rate of the UBX-TIM-TM2 message on port I2C
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c	U1	-	-	Output rate of the UBX-TIM-TM2 message on port SPI
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART1
CFG-MSGOUT-UBX_TIM_TM2_UART2	0x2091017a	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART2
CFG-MSGOUT-UBX_TIM_TM2_USB	0x2091017b	U1	-	-	Output rate of the UBX-TIM-TM2 message on port USB
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	Output rate of the UBX-TIM-TP message on port I2C
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	Output rate of the UBX-TIM-TP message on port SPI
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	Output rate of the UBX-TIM-TP message on port UART1
CFG-MSGOUT-UBX_TIM_TP_UART2	0x2091017f	U1	-	-	Output rate of the UBX-TIM-TP message on port UART2

CFG-MSGOUT-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_TIM_TP_USB	0x20910180	U1	-	-	Output rate of the UBX-TIM-TP message on port USB
CFG-MSGOUT-UBX_TIM_VRFY_I2C	0x20910092	U1	-	-	Output rate of the UBX-TIM-VRFY message on port I2C
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	Output rate of the UBX-TIM-VRFY message on port SPI
CFG-MSGOUT-UBX_TIM_VRFY_UART1	0x20910093	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART1
CFG-MSGOUT-UBX_TIM_VRFY_UART2	0x20910094	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART2
CFG-MSGOUT-UBX_TIM_VRFY_USB	0x20910095	U1	-	-	Output rate of the UBX-TIM-VRFY message on port USB

6.8.11 CFG-NAVSPG: Standard Precision Navigation Configuration

This group contains configuration items related to the operation of the receiver at standard precision, including configuring position fix mode, ionospheric model selection and other related items.

CFG-NAVSPG-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	Position fix mode
See Constants for CFG-NAVSPG-FIXMODE below for a list of possible constants for this item.					
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	Initial fix must be a 3d fix
CFG-NAVSPG-WKNROLLOVER	0x30110017	U2	-	-	GPS week rollover number
GPS week numbers will be set correctly from this week up to 1024 weeks after this week. Range is from 1 to 4096.					
CFG-NAVSPG-USE_PPP	0x10110019	L	-	-	Use Precise Point Positioning
Only available with the PPP product variant.					
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	UTC standard to be used
See also GNSS time bases .					
See Constants for CFG-NAVSPG-UTCSTANDARD below for a list of possible constants for this item.					
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	Dynamic platform model
See Constants for CFG-NAVSPG-DYNMODEL below for a list of possible constants for this item.					
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	Acknowledge assistance input messages
CFG-NAVSPG-USE_USRDAT	0x10110061	L	-	-	Use user geodetic datum parameters
This must be set together with all CFG-NAVSPG-USRDAT_* parameters.					
CFG-NAVSPG-USRDAT_MAJA	0x50110062	R8	-	m	Geodetic datum semi-major axis

CFG-NAVSPG-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
Accepted range is from 6,300,000.0 to 6,500,000.0 meters This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_FLAT	0x50110063	R8	-	-	Geodetic datum 1.0 / flattening
Accepted range is 0.0 to 500.0. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_DX	0x40110064	R4	-	m	Geodetic datum X axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_DY	0x40110065	R4	-	m	Geodetic datum Y axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_DZ	0x40110066	R4	-	m	Geodetic datum Z axis shift at the origin
Accepted range is +/- 5000.0 meters. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_ROTX	0x40110067	R4	-	arcsec	Geodetic datum rotation about the X axis
Accepted range is +/- 20.0 milli arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_ROTY	0x40110068	R4	-	arcsec	Geodetic datum rotation about the Y axis ()
Accepted range is +/- 20.0 milli-arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_ROTZ	0x40110069	R4	-	arcsec	Geodetic datum rotation about the Z axis
Accepted range is +/- 20.0 milli-arc seconds. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4	-	ppm	Geodetic datum scale factor
Accepted range is 0.0 to 50.0 parts per million. This will only be used if CFG-NAVSPG-USE_USERDAT is set. It must be set together with all other CFG-NAVSPG-USERDAT_* parameters.					
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	Minimum number of satellites for navigation

CFG-NAVSPG-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	Maximum number of satellites for navigation
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	Minimum satellite signal level for navigation
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	Minimum elevation for a GNSS satellite to be used in navigation
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	Number of satellites required to have C/N0 above CFG-NAVSPG-INFIL_CNOTHRS for a fix to be attempted
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	C/N0 threshold for deciding whether to attempt a fix
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	Output filter position DOP mask (threshold)
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	Output filter time DOP mask (threshold)
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	Output filter position accuracy mask (threshold)
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	Output filter time accuracy mask (threshold)
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	Output filter frequency accuracy mask (threshold)
CFG-NAVSPG-CONSTR_ALT	0x401100c1	I4	0.01	m	Fixed altitude (mean sea level) for 2D fix mode
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m^2	Fixed altitude variance for 2D mode
CFG-NAVSPG-CONSTR_DGNSSSTO	0x201100c4	U1	-	s	DGNSS timeout

Constants for CFG-NAVSPG-FIXMODE

Constant	Value	Description
2DONLY	1	2d only
3DONLY	2	3d only
AUTO	3	Auto 2d/3d

Constants for CFG-NAVSPG-UTCSTANDARD

Constant	Value	Description
AUTO	0	Automatic; receiver selects based on GNSS configuration
USNO	3	UTC as operated by the U.S. Naval Observatory (USNO); derived from GPS time
SU	6	UTC as operated by the former Soviet Union; derived from GLONASS time
NTSC	7	UTC as operated by the National Time Service Center, China; derived from BeiDou time

Constants for CFG-NAVSPG-DYNMODEL

Constant	Value	Description
PORT	0	Portable
STAT	2	Stationary
PED	3	Pedestrian
AUTOMOT	4	Automotive
SEA	5	Sea
AIR1	6	Airborne with <1g acceleration
AIR2	7	Airborne with <2g acceleration
AIR4	8	Airborne with <4g acceleration
WRIST	9	Wrist worn watch (not available in all products)

6.8.12 CFG-NMEA: NMEA Protocol Configuration

Configures the [NMEA protocol](#). See section [NMEA Protocol Configuration](#) for a detailed description of the configuration effects on NMEA output.

CFG-NMEA-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NMEA-PROTVER	0x20930001	E1	-	-	NMEA protocol version
See Constants for CFG-NMEA-PROTVER below for a list of possible constants for this item.					
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	Maximum number of SVs to report per Talker ID
See Constants for CFG-NMEA-MAXSVS below for a list of possible constants for this item.					
CFG-NMEA-COMPAT	0x10930003	L	-	-	Enable compatibility mode
This might be needed for certain applications, e.g. for an NMEA parser that expects a fixed number of digits in position coordinates.					
CFG-NMEA-CONSIDER	0x10930004	L	-	-	Enable considering mode
This will affect NMEA output used satellite count. If set, also considered satellites (e.g. RAIMED) are counted as used satellites as well.					
CFG-NMEA-LIMIT82	0x10930005	L	-	-	Enable strict limit to 82 characters maximum NMEA message length
CFG-NMEA-HIGHPREC	0x10930006	L	-	-	Enable high precision mode
This flag cannot be set in conjunction with either CFG-NMEA-COMPAT or CFG-NMEA-LIMIT82 Mode.					
CFG-NMEA-SVNUMBERING	0x20930007	E1	-	-	Display configuration for SVs that do not have value defined in NMEA
Configures the display of satellites that do not have an NMEA-defined value.					
Note: this does not apply to satellites with an unknown ID.					
See also Satellite Numbering .					
See Constants for CFG-NMEA-SVNUMBERING below for a list of possible constants for this item.					
CFG-NMEA-FILT_GPS	0x10930011	L	-	-	Disable reporting of GPS satellites
CFG-NMEA-FILT_SBAS	0x10930012	L	-	-	Disable reporting of SBAS satellites

CFG-NMEA-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-NMEA-FILT_QZSS	0x10930015	L	-	-	Disable reporting of QZSS satellites
CFG-NMEA-FILT_GLO	0x10930016	L	-	-	Disable reporting of GLONASS satellites
CFG-NMEA-FILT_BDS	0x10930017	L	-	-	Disable reporting of BeiDou satellites
CFG-NMEA-OUT_INVFIX	0x10930021	L	-	-	Enable position output for failed or invalid fixes
CFG-NMEA-OUT_MSKFIX	0x10930022	L	-	-	Enable position output for invalid fixes
CFG-NMEA-OUT_INVTIME	0x10930023	L	-	-	Enable time output for invalid times
CFG-NMEA-OUT_INVDATE	0x10930024	L	-	-	Enable date output for invalid dates
CFG-NMEA-OUT_ONLYGPS	0x10930025	L	-	-	Restrict output to GPS satellites only
CFG-NMEA-OUT_FROZENCOG	0x10930026	L	-	-	Enable course over ground output even if it is frozen
CFG-NMEA-MAINTALKERID	0x20930031	E1	-	-	Main Talker ID
By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see CFG-SIGNAL). This field enables the main Talker ID to be overridden.					
See Constants for CFG-NMEA-MAINTALKERID below for a list of possible constants for this item.					
CFG-NMEA-GSVTALKERID	0x20930032	E1	-	-	Talker ID for GSV NMEA messages
By default the Talker ID for GSV messages is GNSS specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden.					
See Constants for CFG-NMEA-GSVTALKERID below for a list of possible constants for this item.					
CFG-NMEA-BDSTALKERID	0x30930033	U2	-	-	BeiDou Talker ID
Sets the two ASCII characters that should be used for the BeiDou Talker ID. If these are set to zero, the default BeiDou TalkerId will be used.					

Constants for CFG-NMEA-PROTVER

Constant	Value	Description
V21	21	NMEA protocol version 2.1
V23	23	NMEA protocol version 2.3
V40	40	NMEA protocol version 4.0 (not available in all products)
V41	41	NMEA protocol version 4.10 (not available in all products)

Constants for CFG-NMEA-MAXSVS

Constant	Value	Description
UNLIM	0	Unlimited
8SVS	8	8 SVs
12SVS	12	12 SVs
16SVS	16	16 SVs

Constants for CFG-NMEA-SVNUMBERING

Constant	Value	Description
STRICT	0	Strict - satellites are not output
EXTENDED	1	Extended - use proprietary numbering

Constants for CFG-NMEA-MAINTALKERID

Constant	Value	Description
AUTO	0	Main Talker ID is not overridden
GP	1	Set main Talker ID to 'GP'
GL	2	Set main Talker ID to 'GL'
GN	3	Set main Talker ID to 'GN'
GA	4	Set main Talker ID to 'GA' (not available in all products)
GB	5	Set main Talker ID to 'GB' (not available in all products)

Constants for CFG-NMEA-GSVTALKERID

Constant	Value	Description
GNSS	0	Use GNSS specific Talker ID (as defined by NMEA)
MAIN	1	Use the main Talker ID

6.8.13 CFG-ODO: Odometer and Low-Speed Course Over Ground Filter Configuration

The items in this group allow the user to configure the Odometer feature and Low-Speed Course Over Ground Filter.

CFG-ODO-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-ODO-USE_ODO	0x10220001	L	-	-	Use odometer
CFG-ODO-USE_COG	0x10220002	L	-	-	Use low-speed course over ground filter
CFG-ODO-OUTLPCVEL	0x10220003	L	-	-	Output low-pass filtered velocity
CFG-ODO-OUTLPCOG	0x10220004	L	-	-	Output low-pass filtered course over ground (heading)
CFG-ODO-PROFILE	0x20220005	E1	-	-	Odometer profile configuration

See [Constants for CFG-ODO-PROFILE](#) below for a list of possible constants for this item.

CFG-ODO-COGMAXSPEED	0x20220021	U1	-	m/s	Upper speed limit for low-speed course over ground filter
CFG-ODO-COGMAXPOSACC	0x20220022	U1	-	-	Maximum acceptable position accuracy for computing low-speed filtered course over ground
CFG-ODO-VELLPGAIN	0x20220031	U1	-	-	Velocity low-pass filter level
Range is from 0 to 255.					
CFG-ODO-COGLPGAIN	0x20220032	U1	-	-	Course over ground low-pass filter level (at speed < 8 m/s)
Range is from 0 to 255.					

Constants for CFG-ODO-PROFILE

Constant	Value	Description
RUN	0	Running

Constants for CFG-ODO PROFILE continued

Constant	Value	Description
CYCL	1	Cycling
SWIM	2	Swimming
CAR	3	Car
CUSTOM	4	Custom

6.8.14 CFG-RATE: Navigation and Measurement Rate Configuration

The configuration items in this group allow the user to alter the rate at which navigation solutions (and the measurements that they depend on) are generated by the receiver. The calculation of the navigation solution will always be aligned to the top of a second zero (first second of the week) of the configured reference time system. The navigation period is an integer multiple of the measurement period.

CFG-RATE-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-RATE-MEAS	0x30210001	U2	0.001	s	Nominal time between GNSS measurements
E.g. 100ms results in 10Hz measurement rate, 1000ms = 1Hz measurement rate.					
CFG-RATE-NAV	0x30210002	U2	-	-	Ratio of number of measurements to number of navigation solutions
E.g. 5 means five measurements for every navigation solution. The maximum value is 127.					
CFG-RATE-TIMEREF	0x20210003	E1	-	-	Time system to which measurements are aligned
See Constants for CFG-RATE-TIMEREF below for a list of possible constants for this item.					

Constants for CFG-RATE-TIMEREF

Constant	Value	Description
UTC	0	Align measurements to UTC time
GPS	1	Align measurements to GPS time
GLO	2	Align measurements to GLONASS time
BDS	3	Align measurements to BeiDou time
GAL	4	Align measurements to Galileo time

6.8.15 CFG-RINV: Remote Inventory

The Remote Inventory enables storing user-defined data in the non-volatile memory of the receiver. The data can be either binary or a string of ASCII characters. In the latter case, it can optionally be output at startup after the boot screen.

CFG-RINV-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-RINV-DUMP	0x10c70001	L	-	-	Dump data at startup
When true, data will be dumped to the interface on startup, unless CFG-RINV-BINARY is set.					
CFG-RINV-BINARY	0x10c70002	L	-	-	Data is binary
When true, the data is treated as binary data.					

CFG-RINV-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	Size of data
Size of data to store/be stored in the Remote Inventory (maximum 30 bytes).					
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	Data bytes 1-8 (LSB)
Data to store/be stored in Remote Inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	Data bytes 9-16
Data to store/be stored in Remote Inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	Data bytes 17-24
Data to store/be stored in Remote Inventory - max 8 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	Data bytes 25-30 (MSB)
Data to store/be stored in Remote Inventory - max 6 bytes, left-most in LSB, e.g. string ABCD will appear as 0x44434241.					

6.8.16 CFG-SBAS: SBAS Configuration

This message configures the SBAS receiver subsystem (i.e. WAAS, EGNOS, MSAS). See the [SBAS Configuration Settings Description](#) for a detailed description of how these settings affect receiver operation.

CFG-SBAS-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SBAS-USE_TESTMODE	0x10360002	L	-	-	Use SBAS data when it is in test mode (SBAS msg 0)
CFG-SBAS-USE_RANGING	0x10360003	L	-	-	Use SBAS GEOs as a ranging source (for navigation)
CFG-SBAS-USE_DIFFCORR	0x10360004	L	-	-	Use SBAS differential corrections
CFG-SBAS-USE_INTEGRITY	0x10360005	L	-	-	Use SBAS integrity information
CFG-SBAS-PRNSCANMASK	0x50360006	X8	-	-	SBAS PRN search configuration
This configuration item determines which SBAS PRNs should be searched. Setting it to 0 indicates auto-scanning all SBAS PRNs. For non-zero values the bits correspond to the allocated SBAS PRNs ranging from PRN120 (bit 0) to PRN158 (bit 38), where a bit set enables searching for the corresponding PRN.					
See Constants for CFG-SBAS-PRNSCANMASK below for a list of possible constants for this item.					

Constants for CFG-SBAS-PRNSCANMASK

Constant	Value	Description
ALL	0x0000000000000000	Enable search for all SBAS PRNs
PRN120	0x0000000000000001	Enable search for SBAS PRN120
PRN121	0x0000000000000002	Enable search for SBAS PRN121
PRN122	0x0000000000000004	Enable search for SBAS PRN122
PRN123	0x0000000000000008	Enable search for SBAS PRN123
PRN124	0x0000000000000010	Enable search for SBAS PRN124
PRN125	0x0000000000000020	Enable search for SBAS PRN125

Constants for CFG-SBAS-PRNSCANMASK continued

Constant	Value	Description
PRN126	0x00000000000000040	Enable search for SBAS PRN126
PRN127	0x00000000000000080	Enable search for SBAS PRN127
PRN128	0x00000000000000100	Enable search for SBAS PRN128
PRN129	0x00000000000000200	Enable search for SBAS PRN129
PRN130	0x00000000000000400	Enable search for SBAS PRN130
PRN131	0x00000000000000800	Enable search for SBAS PRN131
PRN132	0x00000000000001000	Enable search for SBAS PRN132
PRN133	0x00000000000002000	Enable search for SBAS PRN133
PRN134	0x00000000000004000	Enable search for SBAS PRN134
PRN135	0x00000000000008000	Enable search for SBAS PRN135
PRN136	0x00000000000010000	Enable search for SBAS PRN136
PRN137	0x00000000000020000	Enable search for SBAS PRN137
PRN138	0x00000000000040000	Enable search for SBAS PRN138
PRN139	0x00000000000080000	Enable search for SBAS PRN139
PRN140	0x00000000000100000	Enable search for SBAS PRN140
PRN141	0x00000000000200000	Enable search for SBAS PRN141
PRN142	0x00000000000400000	Enable search for SBAS PRN142
PRN143	0x00000000000800000	Enable search for SBAS PRN143
PRN144	0x00000000001000000	Enable search for SBAS PRN144
PRN145	0x00000000002000000	Enable search for SBAS PRN145
PRN146	0x00000000004000000	Enable search for SBAS PRN146
PRN147	0x00000000008000000	Enable search for SBAS PRN147
PRN148	0x00000000010000000	Enable search for SBAS PRN148
PRN149	0x00000000020000000	Enable search for SBAS PRN149
PRN150	0x00000000040000000	Enable search for SBAS PRN150
PRN151	0x00000000080000000	Enable search for SBAS PRN151
PRN152	0x00000000100000000	Enable search for SBAS PRN152
PRN153	0x00000000200000000	Enable search for SBAS PRN153
PRN154	0x00000000400000000	Enable search for SBAS PRN154
PRN155	0x00000000800000000	Enable search for SBAS PRN155
PRN156	0x00000001000000000	Enable search for SBAS PRN156
PRN157	0x00000002000000000	Enable search for SBAS PRN157
PRN158	0x00000004000000000	Enable search for SBAS PRN158

6.8.17 CFG-SIGNAL: Satellite Systems (GNSS) Signal Configuration

It is necessary for at least one signal and constellation from a [major GNSS](#) to be enabled, after applying the new configuration to the current one.

The individual signals enable keys are governed by their corresponding constellation enable key. See GNSS Signal Configuration for more details.

Configuration specific to a GNSS system can be done via other groups (e.g. **CFG-SBAS-***).

Note that changes to any items within this group will trigger a reset to the GNSS subsystem.

CFG-SIGNAL-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description

CFG-SIGNAL-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	GPS enable
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	GPS L1C/A
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	GPS L2C (only on u-blox F9 platform products)
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	SBAS enable
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	SBAS L1C/A
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	Galileo enable
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	Galileo E1
CFG-SIGNAL-GAL_E5B_ENA	0x1031000a	L	-	-	Galileo E5b (only on u-blox F9 platform products)
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	BeiDou Enable
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	BeiDou B1I
CFG-SIGNAL-BDS_B2_ENA	0x1031000e	L	-	-	BeiDou B2I (only on u-blox F9 platform products)
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	QZSS enable
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	QZSS L1C/A
CFG-SIGNAL-QZSS_L1S_ENA	0x10310014	L	-	-	QZSS L1S
CFG-SIGNAL-QZSS_L2C_ENA	0x10310015	L	-	-	QZSS L2C (only on u-blox F9 platform products)
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	GLONASS enable
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	GLONASS L1
CFG-SIGNAL-GLO_L2_ENA	0x1031001a	L	-	-	GLONASS L2 (only on u-blox F9 platform products)

6.8.18 CFG-SPI: Configuration of the SPI Interface

Settings needed to configure the SPI communication interface.

CFG-SPI-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SPI-MAXFF	0x20640001	U1	-	-	Number of bytes containing 0xFF to receive before switching off reception. Range: 0(mechanism off)-63
CFG-SPI-CPOLARITY	0x10640002	L	-	-	Clock polarity select: 0: Active High Clock, SCLK idles low, 1: Active Low Clock, SCLK idles high
CFG-SPI-CPHASE	0x10640003	L	-	-	Clock phase select: 0: Data captured on first edge of SCLK, 1: Data captured on second edge of SCLK
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	Flag to disable timeouting the interface after 1.5s

CFG-SPI-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SPI-ENABLED	0x10640006	L	-	-	Flag to indicate if the SPI interface should be enabled

6.8.19 CFG-SPIINPROT: Input Protocol Configuration of the SPI Interface

Input protocol enable flags of the SPI interface.

CFG-SPIINPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SPIINPROT-UBX	0x10790001	L	-	-	Flag to indicate if UBX should be an input protocol on SPI
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	Flag to indicate if NMEA should be an input protocol on SPI
CFG-SPIINPROT-RTCM3X	0x10790004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on SPI

6.8.20 CFG-SPIOUTPROT: Output Protocol Configuration of the SPI Interface

Output protocol enable flags of the SPI interface.

CFG-SPIOUTPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	Flag to indicate if UBX should be an output protocol on SPI
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	Flag to indicate if NMEA should be an output protocol on SPI
CFG-SPIOUTPROT-RTCM3X	0x107a0004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on SPI

6.8.21 CFG-TMODE: Time Mode Configuration

Configuration for operation of the receiver in [Time Mode](#). The position referred to in the configuration items is that of the Antenna Reference Point (ARP).

CFG-TMODE-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TMODE-MODE	0x20030001	E1	-	-	Receiver mode
See Constants for CFG-TMODE-MODE below for a list of possible constants for this item.					
CFG-TMODE-POS_TYPE	0x20030002	E1	-	-	Determines whether the ARP position is given in ECEF or LAT/LON/HEIGHT?
See Constants for CFG-TMODE-POS_TYPE below for a list of possible constants for this item.					

CFG-TMODE-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TMODE-ECEF_X	0x40030003	I4	-	cm	ECEF X coordinate of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_Y	0x40030004	I4	-	cm	ECEF Y coordinate of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_Z	0x40030005	I4	-	cm	ECEF Z coordinate of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_X_HP	0x20030006	I1	0.1	mm	High-precision ECEF X coordinate of the ARP position.
Accepted range is -99 to +99.					
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_Y_HP	0x20030007	I1	0.1	mm	High-precision ECEF Y coordinate of the ARP position.
Accepted range is -99 to +99.					
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-ECEF_Z_HP	0x20030008	I1	0.1	mm	High-precision ECEF Z coordinate of the ARP position.
Accepted range is -99 to +99.					
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=ECEF.					
CFG-TMODE-LAT	0x40030009	I4	1e-7	deg	Latitude of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-LON	0x4003000a	I4	1e-7	deg	Longitude of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-HEIGHT	0x4003000b	I4	-	cm	Height of the ARP position.
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-LAT_HP	0x2003000c	I1	1e-9	deg	High-precision latitude of the ARP position
Accepted range is -99 to +99.					
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-LON_HP	0x2003000d	I1	1e-9	deg	High-precision longitude of the ARP position.
Accepted range is -99 to +99.					
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-HEIGHT_HP	0x2003000e	I1	0.1	mm	High-precision height of the ARP position.
Accepted range is -99 to +99.					
This will only be used if CFG-TMODE-MODE=FIXED and CFG-TMODE-POS_TYPE=LLH.					
CFG-TMODE-FIXED_POS_ACC	0x4003000f	U4	0.1	mm	Fixed position 3D accuracy
CFG-TMODE-SVIN_MIN_DUR	0x40030010	U4	-	s	Survey-in minimum duration
This will only be used if CFG-TMODE-MODE=SURVEY_IN.					
CFG-TMODE-SVIN_ACC_LIMIT	0x40030011	U4	0.1	mm	Survey-in position accuracy limit
This will only be used if CFG-TMODE-MODE=SURVEY_IN.					

Constants for CFG-TMODE-MODE

Constant	Value	Description
DISABLED	0	Disabled
SURVEY_IN	1	Survey In
FIXED	2	Fixed Mode (true ARP position information required)

Constants for CFG-TMODE-POS_TYPE

Constant	Value	Description
ECEF	0	Position is ECEF
LLH	1	Position is Lat/Lon/Height

6.8.22 CFG-TP: Timepulse Configuration

Use this group to configure the generation of timepulses.

CFG-TP-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TP-PULSE_DEF	0x20050023	E1	-	-	Determines whether the time pulse is interpreted as frequency or period?
See Constants for CFG-TP-PULSE_DEF below for a list of possible constants for this item.					
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	Determines whether the time pulse length is interpreted as length[us] or pulse ratio[%]?
See Constants for CFG-TP-PULSE_LENGTH_DEF below for a list of possible constants for this item.					
CFG-TP-ANT_CABLEDELAY	0x30050001	I2	0. 0000 0000 1	s	Antenna cable delay
CFG-TP-PERIOD_TP1	0x40050002	U4	0. 0000 01	s	Time pulse period (TP1)
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	0. 0000 01	s	Time pulse period when locked to GNSS time (TP1)
Only used if CFG-TP-USE_LOCKED_TP1 is set.					
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	Time pulse frequency (TP1)
This will only be used if CFG-TP-PULSE_DEF=FREQ.					
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	Time pulse frequency when locked to GNSS time (TP1)
Only used if CFG-TP-USE_LOCKED_TP1 is set.					
CFG-TP-LEN_TP1	0x40050004	U4	0. 0000 01	s	Time pulse length (TP1)

CFG-TP-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	0. 0000 01	s	Time pulse length when locked to GNSS time (TP1)
Only used if CFG-TP-USE_LOCKED_TP1 is set.					
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	Time pulse duty cycle (TP1)
Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO is set.					
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	Time pulse duty cycle when locked to GNSS time (TP1)
Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO and CFG-TP-USE_LOCKED_TP1 are set.					
CFG-TP-USER_DELAY_TP1	0x40050006	I4	0. 0000 0000 1	s	User configurable time pulse delay (TP1)
CFG-TP-TP1_ENA	0x10050007	L	-	-	Enable the first timepulse if pin associated with time pulse is assigned for another function, the other function takes precedence.
Must be set for frequency-time products.					
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	Sync time pulse to GNSS time or local clock (TP1)
If set, sync to GNSS if GNSS time is valid otherwise, if not set or not available, use local clock. Ignored by time-frequency product variants, which will attempt to use the best available time/frequency reference (not necessarily GNSS).					
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	Use locked parameters when possible (TP1)
If set, use CFG-TP-PERIOD_LOCK_TP1 and CFG-TP-LEN_LOCK_TP1 as soon as GNSS time is valid, otherwise if not valid or not set, use CFG-TP-PERIOD_TP1 and CFG-TP-LEN_TP1.					
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	Align time pulse to top of second (TP1)
To use this feature, CFG-TP-USE_LOCKED_TP1 must be set. Time pulse period must be an integer fraction of 1 second. Ignored in time-frequency product variants, where it is assumed always enabled.					
CFG-TP-POL_TP1	0x1005000b	L	-	-	Set time pulse polarity (TP1)
false (0) : falling edge at top of second. true (1) : rising edge at top of second.					
CFG-TP-TIMEGRID_TP1	0x2005000c	E1	-	-	Time grid to use (TP1)
Only relevant if CFG-TP-USE_LOCKED_TP1 and ALIGN_TO_TOW_TP1 are set. Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix it will attempt to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in CFG-SIGNAL-*.					
See Constants for CFG-TP-TIMEGRID_TP1 below for a list of possible constants for this item.					
CFG-TP-PERIOD_TP2	0x4005000d	U4	0. 0000 01	s	Time pulse period (TP2)

CFG-TP-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TP-PERIOD_LOCK_TP2	0x4005000e	U4	0. 0000 01	s	Time pulse period when locked to GNSS time (TP2)
Only used if CFG-TP-USE_LOCKED_TP2 is set.					
CFG-TP-FREQ_TP2	0x40050026	U4	-	Hz	Time pulse frequency (TP2)
Only used if CFG-TP-PULSE_DEF=FREQ.					
CFG-TP-FREQ_LOCK_TP2	0x40050027	U4	-	Hz	Time pulse frequency when locked to GNSS time (TP2)
Only used if CFG-TP-USE_LOCKED_TP2 is set.					
CFG-TP-LEN_TP2	0x4005000f	U4	0. 0000 01	s	Time pulse length (TP2)
CFG-TP-LEN_LOCK_TP2	0x40050010	U4	0. 0000 01	s	Time pulse length when locked to GNSS time (TP2)
Only used if CFG-TP-USE_LOCKED_TP2 is set.					
CFG-TP-DUTY_TP2	0x5005002c	R8	-	%	Time pulse duty cycle (TP2)
Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO is set.					
CFG-TP-DUTY_LOCK_TP2	0x5005002d	R8	-	%	Time pulse duty cycle when locked to GNSS time (TP2)
Only used if CFG-TP-PULSE_LENGTH_DEF=RATIO and CFG-TP-USE_LOCKED_TP2 are set.					
CFG-TP-USER_DELAY_TP2	0x40050011	I4	0. 0000 0000 1	s	User configurable time pulse delay (TP2)
CFG-TP-TP2_ENA	0x10050012	L	-	-	Enable the second timepulse
CFG-TP-SYNC_GNSS_TP2	0x10050013	L	-	-	Sync time pulse to GNSS time or local clock (TP2)
If set, sync to GNSS if GNSS time is valid otherwise, if not set or not available, use local clock. Ignored by time-frequency product variants, which will attempt to use the best available time/frequency reference (not necessarily GNSS).					
CFG-TP-USE_LOCKED_TP2	0x10050014	L	-	-	Use locked parameters when possible (TP2)
If set, use CFG-TP-PERIOD_LOCK_TP2 and CFG-TP-LEN_LOCK_TP2 as soon as GNSS time is valid, otherwise if not valid or not set, use CFG-TP-PERIOD_TP2 and CFG-TP-LEN_TP2.					
CFG-TP-ALIGN_TO_TOW_TP2	0x10050015	L	-	-	Align time pulse to top of second (TP2)
To use this feature, CFG-TP-USE_LOCKED_TP2 must be set.					
Time pulse period must be an integer fraction of 1 second.					
Ignored in time-frequency product variants, where it is assumed always enabled. Set maxSlewRate and maxPhaseCorrRate fields of UBX-CFG-SMGR to 0 to disable alignment.					
CFG-TP-POL_TP2	0x10050016	L	-	-	Set time pulse polarity (TP2)
false (0) : falling edge at top of second.					
true (1) : rising edge at top of second.					

CFG-TP-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-TP-TIMEGRID_TP2	0x20050017	E1	-	-	Time grid to use (TP2)

Only relevant if CFG-TP-USE_LOCKED_TP1 and ALIGN_TO_TOW_TP1 are set.
 Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix it will attempt to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in UBX-CFG-GNSS.
 See [Constants for CFG-TP-TIMEGRID_TP2](#) below for a list of possible constants for this item.

Constants for CFG-TP-PULSE_DEF

Constant	Value	Description
PERIOD	0	Time pulse period [us]
FREQ	1	Time pulse frequency [Hz]

Constants for CFG-TP-PULSE_LENGTH_DEF

Constant	Value	Description
RATIO	0	Time pulse ratio
LENGTH	1	Time pulse length

Constants for CFG-TP-TIMEGRID_TP1

Constant	Value	Description
UTC	0	UTC time reference
GPS	1	GPS time reference
GLO	2	GLONASS time reference
BDS	3	BeiDou time reference
GAL	4	Galileo time reference

Constants for CFG-TP-TIMEGRID_TP2

Constant	Value	Description
UTC	0	UTC time reference
GPS	1	GPS time reference
GLO	2	GLONASS time reference
BDS	3	BeiDou time reference
GAL	4	Galileo time reference

6.8.23 CFG-UART1: Configuration of the UART1 Interface

Settings needed to configure the UART1 communication interface.

CFG-UART1-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART1-BAUDRATE	0x40520001	U4	-	-	The baud rate that should be configured on the UART1
CFG-UART1-STOPBITS	0x20520002	E1	-	-	Number of stopbits that should be used on UART1

See [Constants for CFG-UART1-STOPBITS](#) below for a list of possible constants for this item.

CFG-UART1-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART1-DATABITS	0x20520003	E1	-	-	Number of databits that should be used on UART1
See Constants for CFG-UART1-DATABITS below for a list of possible constants for this item.					
CFG-UART1-PARITY	0x20520004	E1	-	-	Parity mode that should be used on UART1
See Constants for CFG-UART1-PARITY below for a list of possible constants for this item.					
CFG-UART1-ENABLED	0x10520005	L	-	-	Flag to indicate if the UART1 should be enabled

Constants for CFG-UART1-STOPBITS

Constant	Value	Description
HALF	0	0.5 stopbits
ONE	1	1.0 stopbits
ONEHALF	2	1.5 stopbits
TWO	3	2.0 stopbits

Constants for CFG-UART1-DATABITS

Constant	Value	Description
EIGHT	0	8 databits
SEVEN	1	7 databits

Constants for CFG-UART1-PARITY

Constant	Value	Description
NONE	0	No parity bit
ODD	1	Add an odd parity bit
EVEN	2	Add an even parity bit

6.8.24 CFG-UART1INPROT: Input Protocol Configuration of the UART1 Interface

Input protocol enable flags of the UART1 interface.

CFG-UART1INPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART1INPROT-UBX	0x10730001	L	-	-	Flag to indicate if UBX should be an input protocol on UART1
CFG-UART1INPROT-NMEA	0x10730002	L	-	-	Flag to indicate if NMEA should be an input protocol on UART1
CFG-UART1INPROT-RTCM3X	0x10730004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART1

6.8.25 CFG-UART1OUTPROT: Output Protocol Configuration of the UART1 Interface

Output protocol enable flags of the UART1 interface.

CFG-UART1OUTPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	Flag to indicate if UBX should be an output protocol on UART1
CFG-UART1OUTPROT-NMEA	0x10740002	L	-	-	Flag to indicate if NMEA should be an output protocol on UART1
CFG-UART1OUTPROT-RTCM3X	0x10740004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on UART1

6.8.26 CFG-UART2: Configuration of the UART2 Interface

Settings needed to configure the UART2 communication interface.

CFG-UART2-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART2-BAUDRATE	0x40530001	U4	-	-	The baud rate that should be configured on the UART2
CFG-UART2-STOPBITS	0x20530002	E1	-	-	Number of stopbits that should be used on UART2
See Constants for CFG-UART2-STOPBITS below for a list of possible constants for this item.					
CFG-UART2-DATABITS	0x20530003	E1	-	-	Number of databits that should be used on UART2
See Constants for CFG-UART2-DATABITS below for a list of possible constants for this item.					
CFG-UART2-PARITY	0x20530004	E1	-	-	Parity mode that should be used on UART2
See Constants for CFG-UART2-PARITY below for a list of possible constants for this item.					
CFG-UART2-ENABLED	0x10530005	L	-	-	Flag to indicate if the UART2 should be enabled
CFG-UART2-REMAP	0x10530006	L	-	-	UART2 Remapping

Constants for CFG-UART2-STOPBITS

Constant	Value	Description
HALF	0	0.5 stopbits
ONE	1	1.0 stopbits
ONEHALF	2	1.5 stopbits
TWO	3	2.0 stopbits

Constants for CFG-UART2-DATABITS

Constant	Value	Description
EIGHT	0	8 databits
SEVEN	1	7 databits

Constants for CFG-UART2-PARITY

Constant	Value	Description
NONE	0	No parity bit
ODD	1	Add an odd parity bit

Constants for CFG-UART2-PARITY continued

Constant	Value	Description
EVEN	2	Add an even parity bit

6.8.27 CFG-UART2INPROT: Input Protocol Configuration of the UART2 Interface

Input protocol enable flags of the UART2 interface.

CFG-UART2INPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART2INPROT-UBX	0x10750001	L	-	-	Flag to indicate if UBX should be an input protocol on UART2
CFG-UART2INPROT-NMEA	0x10750002	L	-	-	Flag to indicate if NMEA should be an input protocol on UART2
CFG-UART2INPROT-RTCM3X	0x10750004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART2

6.8.28 CFG-UART2OUTPROT: Output Protocol Configuration of the UART2 Interface

Output protocol enable flags of the UART2 interface.

CFG-UART2OUTPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-UART2OUTPROT-UBX	0x10760001	L	-	-	Flag to indicate if UBX should be an output protocol on UART2
CFG-UART2OUTPROT-NMEA	0x10760002	L	-	-	Flag to indicate if NMEA should be an output protocol on UART2
CFG-UART2OUTPROT-RTCM3X	0x10760004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on UART2

6.8.29 CFG-USB: Configuration of the USB Interface

Settings needed to configure the USB communication interface.

CFG-USB-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-USB-ENABLED	0x10650001	L	-	-	Flag to indicate if the USB interface should be enabled
CFG-USB-SELFPOW	0x10650002	L	-	-	Self-Powered device
CFG-USB-VENDOR_ID	0x3065000a	U2	-	-	Vendor ID
CFG-USB-PRODUCT_ID	0x3065000b	U2	-	-	Vendor ID
CFG-USB-POWER	0x3065000c	U2	-	mA	Power consumption
CFG-USB-VENDOR_STR0	0x5065000d	X8	-	-	Vendor string characters 0-7
CFG-USB-VENDOR_STR1	0x5065000e	X8	-	-	Vendor string characters 8-15
CFG-USB-VENDOR_STR2	0x5065000f	X8	-	-	Vendor string characters 16-23
CFG-USB-VENDOR_STR3	0x50650010	X8	-	-	Vendor string characters 24-31

CFG-USB-* Configuration Items continued

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-USB-PRODUCT_STR0	0x50650011	X8	-	-	Product string characters 0-7
CFG-USB-PRODUCT_STR1	0x50650012	X8	-	-	Product string characters 8-15
CFG-USB-PRODUCT_STR2	0x50650013	X8	-	-	Product string characters 16-23
CFG-USB-PRODUCT_STR3	0x50650014	X8	-	-	Product string characters 24-31
CFG-USB-SERIAL_NO_STR0	0x50650015	X8	-	-	Serial number string characters 0-7
CFG-USB-SERIAL_NO_STR1	0x50650016	X8	-	-	Serial number string characters 8-15
CFG-USB-SERIAL_NO_STR2	0x50650017	X8	-	-	Serial number string characters 16-23
CFG-USB-SERIAL_NO_STR3	0x50650018	X8	-	-	Serial number string characters 24-31

6.8.30 CFG-USBINPROT: Input Protocol Configuration of the USB Interface

Input protocol enable flags of the USB interface.

CFG-USBINPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-USBINPROT-UBX	0x10770001	L	-	-	Flag to indicate if UBX should be an input protocol on USB
CFG-USBINPROT-NMEA	0x10770002	L	-	-	Flag to indicate if NMEA should be an input protocol on USB
CFG-USBINPROT-RTCM3X	0x10770004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on USB

6.8.31 CFG-USBOUTPROT: Output Protocol Configuration of the USB Interface

Output protocol enable flags of the USB interface.

CFG-USBOUTPROT-* Configuration Items

Configuration Item	Key ID	Type	Scale	Unit	Description
CFG-USBOUTPROT-UBX	0x10780001	L	-	-	Flag to indicate if UBX should be an output protocol on USB
CFG-USBOUTPROT-NMEA	0x10780002	L	-	-	Flag to indicate if NMEA should be an output protocol on USB
CFG-USBOUTPROT-RTCM3X	0x10780004	L	-	-	Flag to indicate if RTCM3X should be an output protocol on USB

6.9 Legacy UBX Message Fields Reference

The following table lists the legacy UBX message fields and the corresponding Configuration Item. Note that the mapping from [UBX-CFG](#) message fields to Configuration Items is not necessarily 1:1.

UBX Messages Fields and the Corresponding Configuration Items

UBX Message and Field Name	Configuration Item
UBX-CFG-ANT.ocd	CFG-HW-ANT_CFG_OPENDET
UBX-CFG-ANT.pdwnOnSCD	CFG-HW-ANT_CFG_PWRDOWN
UBX-CFG-ANT.pinOCD	CFG-HW-ANT_SUP_OPEN_PIN
UBX-CFG-ANT.pinSCD	CFG-HW-ANT_SUP_SHORT_PIN
UBX-CFG-ANT.pinSwitch	CFG-HW-ANT_SUP_SWITCH_PIN
UBX-CFG-ANT.recovery	CFG-HW-ANT_CFG_RECOVER
UBX-CFG-ANT.scd	CFG-HW-ANT_CFG_SHORTDET
UBX-CFG-ANT.svcs	CFG-HW-ANT_CFG_VOLTCTRL
UBX-CFG-DAT.dx	CFG-NAVSPG-USRDATA_DX
UBX-CFG-DAT.dy	CFG-NAVSPG-USRDATA_DY
UBX-CFG-DAT.dz	CFG-NAVSPG-USRDATA_DZ
UBX-CFG-DAT.flat	CFG-NAVSPG-USRDATA_FLAT
UBX-CFG-DAT.majA	CFG-NAVSPG-USE_USRDATA
UBX-CFG-DAT.majA	CFG-NAVSPG-USRDATA_MAJA
UBX-CFG-DAT.rotX	CFG-NAVSPG-USRDATA_ROT_X
UBX-CFG-DAT.rotY	CFG-NAVSPG-USRDATA_ROT_Y
UBX-CFG-DAT.rotZ	CFG-NAVSPG-USRDATA_ROT_Z
UBX-CFG-DAT.scale	CFG-NAVSPG-USRDATA_SCALE
UBX-CFG-GEOFENCE.confLvl	CFG-GEOFENCE-CONFLVL
UBX-CFG-GEOFENCE.lat	CFG-GEOFENCE-FENCE1_LAT
UBX-CFG-GEOFENCE.lat	CFG-GEOFENCE-FENCE2_LAT
UBX-CFG-GEOFENCE.lat	CFG-GEOFENCE-FENCE3_LAT
UBX-CFG-GEOFENCE.lat	CFG-GEOFENCE-FENCE4_LAT
UBX-CFG-GEOFENCE.lon	CFG-GEOFENCE-FENCE1_LON
UBX-CFG-GEOFENCE.lon	CFG-GEOFENCE-FENCE2_LON
UBX-CFG-GEOFENCE.lon	CFG-GEOFENCE-FENCE3_LON
UBX-CFG-GEOFENCE.lon	CFG-GEOFENCE-FENCE4_LON
UBX-CFG-GEOFENCE.numFences	CFG-GEOFENCE-USE_FENCE1
UBX-CFG-GEOFENCE.numFences	CFG-GEOFENCE-USE_FENCE2
UBX-CFG-GEOFENCE.numFences	CFG-GEOFENCE-USE_FENCE3
UBX-CFG-GEOFENCE.numFences	CFG-GEOFENCE-USE_FENCE4
UBX-CFG-GEOFENCE.pin	CFG-GEOFENCE-PIN
UBX-CFG-GEOFENCE.pinPolarity	CFG-GEOFENCE-PINPOL
UBX-CFG-GEOFENCE.pioEnabled	CFG-GEOFENCE-USE_PIO
UBX-CFG-GEOFENCE.radius	CFG-GEOFENCE-FENCE1_RAD
UBX-CFG-GEOFENCE.radius	CFG-GEOFENCE-FENCE2_RAD
UBX-CFG-GEOFENCE.radius	CFG-GEOFENCE-FENCE3_RAD
UBX-CFG-GEOFENCE.radius	CFG-GEOFENCE-FENCE4_RAD
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-BDS_ENA
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-GLO_ENA
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-GPS_ENA

UBX Messages Fields and the Corresponding Configuration Items continued

UBX Message and Field Name	Configuration Item
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-QZSS_ENA
UBX-CFG-GNSS.gnssId	CFG-SIGNAL-SBAS_ENA
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_I2C
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_SPI
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_UART1
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_UART2
UBX-CFG-INF.infMsgMask	CFG-INFMSG-NMEA_USB
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_I2C
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_SPI
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_UART1
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_UART2
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_USB
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_I2C
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_SPI
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_UART1
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_UART2
UBX-CFG-INF.protocolID	CFG-INFMSG-NMEA_USB
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_SPI
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_UART1
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_UART2
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_USB
UBX-CFG-ITFM.antSetting	CFG-ITFM-ANTSETTING
UBX-CFG-ITFM.bbThreshold	CFG-ITFM-BBTHRESHOLD
UBX-CFG-ITFM.cwThreshold	CFG-ITFM-CWTHRESHOLD
UBX-CFG-ITFM.enable	CFG-ITFM-ENABLE
UBX-CFG-ITFM.enable2	CFG-ITFM-ENABLE_AUX
UBX-CFG-LOGFILTER.applyAllFilterSetting s	CFG-LOGFILTER-APPLY_ALL_FILTERS
UBX-CFG-LOGFILTER.minInterval	CFG-LOGFILTER-MIN_INTERVAL
UBX-CFG-LOGFILTER.positionThreshold	CFG-LOGFILTER-POSITION_THRS
UBX-CFG-LOGFILTER.psmOncePerWakeupEnable d	CFG-LOGFILTER-ONCE_PER_WAKE_UP_ENA
UBX-CFG-LOGFILTER.recordEnabled	CFG-LOGFILTER-RECORD_ENA
UBX-CFG-LOGFILTER.speedThreshold	CFG-LOGFILTER-SPEED_THRS
UBX-CFG-LOGFILTER.timeThreshold	CFG-LOGFILTER-TIME_THRS
UBX-CFG-NAV5.cnoThresh	CFG-NAVSPG-INFIL_CNOTHRS
UBX-CFG-NAV5.cnoThreshNumSVs	CFG-NAVSPG-INFIL_NCNOTHRS
UBX-CFG-NAV5.dgnssTimeout	CFG-NAVSPG-CONSTR_DGNSSTO
UBX-CFG-NAV5.dynModel	CFG-NAVSPG-DYNMODEL
UBX-CFG-NAV5.fixMode	CFG-NAVSPG-FIXMODE
UBX-CFG-NAV5.fixedAlt	CFG-NAVSPG-CONSTR_ALT
UBX-CFG-NAV5.fixedAltVar	CFG-NAVSPG-CONSTR_ALTVAR
UBX-CFG-NAV5.minElev	CFG-NAVSPG-INFIL_MINELEV
UBX-CFG-NAV5.pAcc	CFG-NAVSPG-OUTFIL_PACC
UBX-CFG-NAV5.pDop	CFG-NAVSPG-OUTFIL_PDOP

UBX Messages Fields and the Corresponding Configuration Items continued

UBX Message and Field Name	Configuration Item
UBX-CFG-NAV5.staticHoldMaxDist	CFG-MOT-GNSSDIST_THRS
UBX-CFG-NAV5.staticHoldThresh	CFG-MOT-GNSSSPEED_THRS
UBX-CFG-NAV5.tAcc	CFG-NAVSPG-OUTFIL_FACC
UBX-CFG-NAV5.tAcc	CFG-NAVSPG-OUTFIL_TACC
UBX-CFG-NAV5.tDop	CFG-NAVSPG-OUTFIL_TDOP
UBX-CFG-NAV5.utcStandard	CFG-NAVSPG-UTCSTANDARD
UBX-CFG-NAVX5.ackAiding	CFG-NAVSPG-ACKAIDING
UBX-CFG-NAVX5.iniFix3D	CFG-NAVSPG-INIFIX3D
UBX-CFG-NAVX5.maxSVs	CFG-NAVSPG-INFIL_MAXSVS
UBX-CFG-NAVX5.minCNO	CFG-NAVSPG-INFIL_MINCNO
UBX-CFG-NAVX5.minSVs	CFG-NAVSPG-INFIL_MINSVS
UBX-CFG-NAVX5.usePPP	CFG-NAVSPG-USE PPP
UBX-CFG-NAVX5.wknRollover	CFG-NAVSPG-WKNROLLOVER
UBX-CFG-NMEA.bdsTalkerId	CFG-NMEA-BDSTALKERID
UBX-CFG-NMEA.beidou	CFG-NMEA-FILT_BDS
UBX-CFG-NMEA.compat	CFG-NMEA-COMPAT
UBX-CFG-NMEA.consider	CFG-NMEA-CONSIDER
UBX-CFG-NMEA.dateFilt	CFG-NMEA-OUT_INVDATE
UBX-CFG-NMEA.glonass	CFG-NMEA-FILT_GLO
UBX-CFG-NMEA.gps	CFG-NMEA-FILT_GPS
UBX-CFG-NMEA.gpsOnlyFilter	CFG-NMEA-OUT_ONLYGPS
UBX-CFG-NMEA.gsvTalkerId	CFG-NMEA-GSVTALKERID
UBX-CFG-NMEA.highPrec	CFG-NMEA-HIGHPREC
UBX-CFG-NMEA.limit82	CFG-NMEA-LIMIT82
UBX-CFG-NMEA.mainTalkerId	CFG-NMEA-MAINTALKERID
UBX-CFG-NMEA.mskPosFilt	CFG-NMEA-OUT_MSKFIX
UBX-CFG-NMEA.nmeaVersion	CFG-NMEA-PROTVER
UBX-CFG-NMEA.numSV	CFG-NMEA-MAXSVS
UBX-CFG-NMEA.posFilt	CFG-NMEA-OUT_INVFIX
UBX-CFG-NMEA.qzss	CFG-NMEA-FILT_QZSS
UBX-CFG-NMEA.sbas	CFG-NMEA-FILT_SBAS
UBX-CFG-NMEA.svNumbering	CFG-NMEA-SVNUMBERING
UBX-CFG-NMEA.timeFilt	CFG-NMEA-OUT_INVTIME
UBX-CFG-NMEA.trackFilt	CFG-NMEA-OUT_FROZENCOG
UBX-CFG-ODO.cogLpGain	CFG-ODO-COGLPGAIN
UBX-CFG-ODO.cogMaxPosAcc	CFG-ODO-COGMAXPOSACC
UBX-CFG-ODO.cogMaxSpeed	CFG-ODO-COGMAXSPEED
UBX-CFG-ODO.outLpCog	CFG-ODO-OUTLPCOG
UBX-CFG-ODO.outLpVel	CFG-ODO-OUTLPVEL
UBX-CFG-ODO.profile	CFG-ODO-PROFILE
UBX-CFG-ODO.useCog	CFG-ODO-USE_COG
UBX-CFG-ODO.useODO	CFG-ODO-USE_ODO
UBX-CFG-ODO.velLpGain	CFG-ODO-VELLPGAIN
UBX-CFG-PRT.extendedTxTimeout	CFG-I2C-EXTENDEDTIMEOUT
UBX-CFG-PRT.inNmea	CFG-I2CINPROT-NMEA

UBX Messages Fields and the Corresponding Configuration Items continued

UBX Message and Field Name	Configuration Item
UBX-CFG-PRT.inProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-I2CINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-I2CINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-I2COUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-I2COUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-I2COUTPROT-UBX
UBX-CFG-PRT.slaveAddr	CFG-I2C-ADDRESS
UBX-CFG-PRT.extendedTxTimeout	CFG-SPI-EXTENDEDTIMEOUT
UBX-CFG-PRT.ffCnt	CFG-SPI-MAXFF
UBX-CFG-PRT.inNmea	CFG-SPIINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-SPIINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-SPIINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-SPIOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-SPIOUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-SPIOUTPROT-UBX
UBX-CFG-PRT.spiMode	CFG-SPI-CPHASE
UBX-CFG-PRT.spiMode	CFG-SPI-CPOLARITY
UBX-CFG-PRT.baudRate	CFG-UART1-BAUDRATE
UBX-CFG-PRT.baudRate	CFG-UART2-BAUDRATE
UBX-CFG-PRT.charLen	CFG-UART1-DATABITS
UBX-CFG-PRT.charLen	CFG-UART2-DATABITS
UBX-CFG-PRT.inNmea	CFG-UART1INPROT-NMEA
UBX-CFG-PRT.inNmea	CFG-UART2INPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-UART1-ENABLED
UBX-CFG-PRT.inProtoMask	CFG-UART2-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-UART1INPROT-RTCM3X
UBX-CFG-PRT.inRtcm3	CFG-UART2INPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-UART1INPROT-UBX
UBX-CFG-PRT.inUbx	CFG-UART2INPROT-UBX
UBX-CFG-PRT.nStopBits	CFG-UART1-STOPBITS
UBX-CFG-PRT.nStopBits	CFG-UART2-STOPBITS
UBX-CFG-PRT.outNmea	CFG-UART1OUTPROT-NMEA
UBX-CFG-PRT.outNmea	CFG-UART2OUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-UART1-ENABLED
UBX-CFG-PRT.outProtoMask	CFG-UART2-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-UART1OUTPROT-RTCM3X
UBX-CFG-PRT.outRtcm3	CFG-UART2OUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-UART1OUTPROT-UBX
UBX-CFG-PRT.outUbx	CFG-UART2OUTPROT-UBX
UBX-CFG-PRT.parity	CFG-UART1-PARITY
UBX-CFG-PRT.parity	CFG-UART2-PARITY
UBX-CFG-PRT.inNmea	CFG-USBINPROT-NMEA

UBX Messages Fields and the Corresponding Configuration Items continued

UBX Message and Field Name	Configuration Item
UBX-CFG-PRT.inProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-USBINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-USBINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-USBOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.outRtcm3	CFG-USBOUTPROT-RTCM3X
UBX-CFG-PRT.outUbx	CFG-USBOUTPROT-UBX
UBX-CFG-RATE.measRate	CFG-RATE-MEAS
UBX-CFG-RATE.navRate	CFG-RATE-NAV
UBX-CFG-RATE.timeRef	CFG-RATE-TIMEREF
UBX-CFG-RINV.data	CFG-RINV-CHUNK0
UBX-CFG-RINV.data	CFG-RINV-CHUNK1
UBX-CFG-RINV.data	CFG-RINV-CHUNK2
UBX-CFG-RINV.data	CFG-RINV-CHUNK3
UBX-CFG-RINV.data	CFG-RINV-DATA_SIZE
UBX-CFG-RINV.flags	CFG-RINV-BINARY
UBX-CFG-RINV.flags	CFG-RINV-DUMP
UBX-CFG-TP5.active	CFG-TP-TP1_ENA
UBX-CFG-TP5.active	CFG-TP-TP2_ENA
UBX-CFG-TP5.alignToTow	CFG-TP-ALIGN_TO_TOW_TP1
UBX-CFG-TP5.alignToTow	CFG-TP-ALIGN_TO_TOW_TP2
UBX-CFG-TP5.antCableDelay	CFG-TP-ANT_CABLEDELAY
UBX-CFG-TP5.freqPeriod	CFG-TP-FREQ_TP1
UBX-CFG-TP5.freqPeriod	CFG-TP-FREQ_TP2
UBX-CFG-TP5.freqPeriod	CFG-TP-PERIOD_TP1
UBX-CFG-TP5.freqPeriod	CFG-TP-PERIOD_TP2
UBX-CFG-TP5.freqPeriodLock	CFG-TP-FREQ_LOCK_TP1
UBX-CFG-TP5.freqPeriodLock	CFG-TP-FREQ_LOCK_TP2
UBX-CFG-TP5.freqPeriodLock	CFG-TP-PERIOD_LOCK_TP1
UBX-CFG-TP5.freqPeriodLock	CFG-TP-PERIOD_LOCK_TP2
UBX-CFG-TP5.gridUtcGnss	CFG-TP-TIMEGRID_TP1
UBX-CFG-TP5.gridUtcGnss	CFG-TP-TIMEGRID_TP2
UBX-CFG-TP5.isFreq	CFG-TP-PULSE_DEF
UBX-CFG-TP5.isLength	CFG-TP-PULSE_LENGTH_DEF
UBX-CFG-TP5.lockGnssFreq	CFG-TP-SYNC_GNSS_TP1
UBX-CFG-TP5.lockGnssFreq	CFG-TP-SYNC_GNSS_TP2
UBX-CFG-TP5.lockedOtherSet	CFG-TP-USE_LOCKED_TP1
UBX-CFG-TP5.lockedOtherSet	CFG-TP-USE_LOCKED_TP2
UBX-CFG-TP5.polarity	CFG-TP-POL_TP1
UBX-CFG-TP5.polarity	CFG-TP-POL_TP2
UBX-CFG-TP5.pulseLenRatio	CFG-TP-DUTY_TP1
UBX-CFG-TP5.pulseLenRatio	CFG-TP-DUTY_TP2
UBX-CFG-TP5.pulseLenRatio	CFG-TP-LEN_TP1
UBX-CFG-TP5.pulseLenRatio	CFG-TP-LEN_TP2
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-DUTY_LOCK_TP1

UBX Messages Fields and the Corresponding Configuration Items continued

UBX Message and Field Name	Configuration Item
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-DUTY_LOCK_TP2
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-LEN_LOCK_TP1
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-LEN_LOCK_TP2
UBX-CFG-TP5.userConfigDelay	CFG-TP-USER_DELAY_TP1
UBX-CFG-TP5.userConfigDelay	CFG-TP-USER_DELAY_TP2
UBX-CFG-USB.powerConsumption	CFG-USB-POWER
UBX-CFG-USB.powerMode	CFG-USB-SELFPOW
UBX-CFG-USB.productID	CFG-USB-PRODUCT_ID
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR0
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR1
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR2
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR3
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR0
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR1
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR2
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR3
UBX-CFG-USB.vendorID	CFG-USB-VENDOR_ID
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR0
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR1
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR2
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR3

7 RTCM Protocol

7.1 RTCM version 3

7.1.1 Supported Messages

The following RTCM 3.3 input messages are supported:

Supported RTCM 3.3 Input Messages

Message Type	Description
1005	Stationary RTK reference station ARP
1077	GPS MSM7
1087	GLONASS MSM7
1097	Galileo MSM7
1127	BeiDou MSM7
1230	GLONASS code-phase biases
4072, sub-type 1	Additional reference station information (u-blox proprietary RTCM Message)

The following RTCM 3.3 output messages are supported:

RTCM output messages are configured using the configuration items [CFG-MSGOUT-RTCM*](#).

Supported RTCM 3.3 Output Messages

Message Type	Cls/ID	Description
1005	0xF5 0x05	Stationary RTK reference station ARP
1077	0xF5 0x4D	GPS MSM7
1087	0xF5 0x57	GLONASS MSM7
1097	0xF5 0x61	Galileo MSM7
1127	0xF5 0x7F	BeiDou MSM7
1230	0xF5 0xE6	GLONASS code-phase biases
4072, sub-type 1	0xF5 0xFD	Additional reference station information (u-blox proprietary RTCM Message)

7.1.2 u-blox Proprietary RTCM Messages

The RTCM message type 4072 is the u-blox proprietary RTCM message. It is supported by the RTCM standard version 3.2 and above.

7.1.2.1 Sub-Types

There are different available sub-types of the RTCM message type 4072. The table below shows the available RTCM 4072 sub-types.

RTCM 4072 Sub-Types

Sub-Type	Message Type Number	Sub-Type Number	Description	Message Data (Payload) Length (bits)
1	0xFE8	0x001	Additional reference station information	112+48*(2*N) (N = the number of enabled GNSS constellations)

7.1.3 Configuration

The configuration of the differential timing is explained in the [Integration Manual](#).

The RTCM3 protocol can be disabled/enabled on communication interfaces by means of the configuration items, for example [CFG-UART1OUTPROT-RTCM3X](#).

7.1.4 Reference

The RTCM3 support is implemented according to RTCM STANDARD 10403.3 DIFFERENTIAL GNSS (GLOBAL NAVIGATION SATELLITE SYSTEMS) SERVICES - VERSION 3.

Appendix

A Satellite Numbering

A summary of all the SV numbering schemes is provided in the following table.

Satellite numbering

GNSS Type	SV range	UBX gnssId: svld	UBX svld	NMEA 2.X- 4.0 (strict)	NMEA 2.X-4.0 (extended)	NMEA 4.10+ (strict)	NMEA 4.10+ (extended)
GPS	G1-G32	0:1-32	1-32	1-32	1-32	1-32	1-32
SBAS	S120- S158	1:120-158	120-158	33-64	33-64,152- 158	33-64	33-64,152- 158
Galileo	E1-E36	2:1-36	211-246	-	301-336	1-36	1-36
BeiDou	B1-B37	3:1-37	159-163,33- 64	-	401-437	1-37	1-37
QZSS	Q1-Q10	5:1-10	193-202	-	193-202	-	193-202
GLONASS	R1-R32, S R?	6:1-32, 6: 255	65-96, 255	65-96, null	65-96, null	65-96, null	65-96, null

B UBX and NMEA Signal Identifiers

UBX and NMEA protocols use signal identifiers (commonly abbreviated to "sigId") to distinguish between different signals from GNSS.

Signal identifiers are only valid when combined with a GNSS identifier (see [above](#)). The table below shows the range of identifiers currently supported in the firmware.

The following table shows the mapping of GNSS signals to UBX / NMEA signal identifier.

Signal Identifiers

Signal name	UBX gnssId	UBX sigId	NMEA 4.10+ gnssId	NMEA 4.10+ sigId
GPS L1C/A*	0	0	1	1
GPS L2 CL	0	3	1	6
GPS L2 CM	0	4	1	5
Galileo E1 C*	2	0	3	7
Galileo E1 B*	2	1	3	7
Galileo E5 bl	2	5	3	2
Galileo E5 bQ	2	6	3	2
BeiDou B1I D1*	3	0	4**	1**
BeiDou B1I D2*	3	1	4**	1**
BeiDou B2I D1	3	2	4**	3**
BeiDou B2I D2	3	3	4**	3**
QZSS L1C/A*	5	0		
QZSS L2 CM	5	4		
QZSS L2 CL	5	5		
GLONASS L1 OF*	6	0	2	1
GLONASS L2 OF	6	2	2	3

UBX messages, that don't have an explicit sigId field, contain information about the subset of signals marked with (*).

BeiDou gnssId and sigId are not defined in the NMEA protocol version 4.10, values shown in the table are valid for u-blox products only (**).

C Configuration Defaults

The configuration defaults given in this section apply to the receiver firmwares given below.

C.1 u-blox 9 ZED-F9T (version 1.00 TIM 2.01)

This section lists the configuration defaults for the u-blox 9 ZED-F9T (version 1.00 TIM 2.01), protocol version 29.00.

RCB-F9T has different default values for UART1, antenna control and time pulse. See [RCB-F9T integration manual](#) for details.

Geofencing Configuration (CFG-GEOFENCE-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-GEOFENCE-CONFLVL	0x20240011	E1	-	-	0 (L000)
CFG-GEOFENCE-USE_PIO	0x10240012	L	-	-	0 (false)
CFG-GEOFENCE-PINPOL	0x20240013	E1	-	-	0 (LOW_IN)
CFG-GEOFENCE-PIN	0x20240014	U1	-	-	3
CFG-GEOFENCE-USE_FENCE1	0x10240020	L	-	-	0 (false)
CFG-GEOFENCE-FENCE1_LAT	0x40240021	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE1_LON	0x40240022	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE1_RAD	0x40240023	U4	0.01	m	0
CFG-GEOFENCE-USE_FENCE2	0x10240030	L	-	-	0 (false)
CFG-GEOFENCE-FENCE2_LAT	0x40240031	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE2_LON	0x40240032	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE2_RAD	0x40240033	U4	0.01	m	0
CFG-GEOFENCE-USE_FENCE3	0x10240040	L	-	-	0 (false)
CFG-GEOFENCE-FENCE3_LAT	0x40240041	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE3_LON	0x40240042	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE3_RAD	0x40240043	U4	0.01	m	0
CFG-GEOFENCE-USE_FENCE4	0x10240050	L	-	-	0 (false)
CFG-GEOFENCE-FENCE4_LAT	0x40240051	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE4_LON	0x40240052	I4	1e-7	deg	0
CFG-GEOFENCE-FENCE4_RAD	0x40240053	U4	0.01	m	0

Hardware Configuration (CFG-HW-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	0 (false)
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	0 (false)
CFG-HW-ANT_CFG_SHORTDET_POL	0x10a30030	L	-	-	1 (true)
CFG-HW-ANT_CFG_OPENDET	0x10a30031	L	-	-	0 (false)
CFG-HW-ANT_CFG_OPENDET_POL	0x10a30032	L	-	-	1 (true)
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	0 (false)
CFG-HW-ANT_CFG_PWRDOWN_POL	0x10a30034	L	-	-	1 (true)
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	0 (false)

Hardware Configuration (CFG-HW-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	16
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	15
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	8

Configuration of the I2C Interface (CFG-I2C-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-I2C-ADDRESS	0x20510001	U1	-	-	132
CFG-I2C-EXTENDEDTIMEOUT	0x10510002	L	-	-	0 (false)
CFG-I2C-ENABLED	0x10510003	L	-	-	1 (true)

Input Protocol Configuration of the I2C Interface (CFG-I2CINPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-I2CINPROT-UBX	0x10710001	L	-	-	1 (true)
CFG-I2CINPROT-NMEA	0x10710002	L	-	-	1 (true)
CFG-I2CINPROT-RTCM3X	0x10710004	L	-	-	1 (true)

Output Protocol Configuration of the I2C Interface (CFG-I2COUTPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-I2COUTPROT-UBX	0x10720001	L	-	-	1 (true)
CFG-I2COUTPROT-NMEA	0x10720002	L	-	-	1 (true)
CFG-I2COUTPROT-RTCM3X	0x10720004	L	-	-	1 (true)

Inf Message Configuration (CFG-INFMSG-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-INFMSG-UBX_I2C	0x20920001	X1	-	-	0x00
CFG-INFMSG-UBX_UART1	0x20920002	X1	-	-	0x00
CFG-INFMSG-UBX_UART2	0x20920003	X1	-	-	0x00
CFG-INFMSG-UBX_USB	0x20920004	X1	-	-	0x00
CFG-INFMSG-UBX_SPI	0x20920005	X1	-	-	0x00
CFG-INFMSG-NMEA_I2C	0x20920006	X1	-	-	0x07 (ERROR WARNING NOTICE)
CFG-INFMSG-NMEA_UART1	0x20920007	X1	-	-	0x07 (ERROR WARNING NOTICE)
CFG-INFMSG-NMEA_UART2	0x20920008	X1	-	-	0x07 (ERROR WARNING NOTICE)
CFG-INFMSG-NMEA_USB	0x20920009	X1	-	-	0x07 (ERROR WARNING NOTICE)
CFG-INFMSG-NMEA_SPI	0x2092000a	X1	-	-	0x07 (ERROR WARNING NOTICE)

Jamming/Interference Monitor configuration (CFG-ITFM-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-ITFM-BBTHRESHOLD	0x20410001	U1	-	-	3
CFG-ITFM-CWTHRESHOLD	0x20410002	U1	-	-	15
CFG-ITFM-ENABLE	0x1041000d	L	-	-	0 (false)
CFG-ITFM-ANTSETTING	0x20410010	E1	-	-	0 (UNKNOWN)
CFG-ITFM-ENABLE_AUX	0x10410013	L	-	-	0 (false)

Data Logger Configuration (CFG-LOGFILTER-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-LOGFILTER-RECORD_ENA	0x10de0002	L	-	-	0 (false)
CFG-LOGFILTER-ONCE_PER_WAKE_UP_ENA	0x10de0003	L	-	-	0 (false)
CFG-LOGFILTER-APPLY_ALL_FILTERS	0x10de0004	L	-	-	0 (false)
CFG-LOGFILTER-MIN_INTERVAL	0x30de0005	U2	-	s	0
CFG-LOGFILTER-TIME_THRS	0x30de0006	U2	-	s	0
CFG-LOGFILTER-SPEED_THRS	0x30de0007	U2	-	m/s	0
CFG-LOGFILTER-POSITION_THRS	0x40de0008	U4	-	m	0

Motion Detector Configuration (CFG-MOT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MOT-GNSSSPEED_THRS	0x20250038	U1	0.01	m/s	0
CFG-MOT-GNSSDIST_THRS	0x3025003b	U2	-	-	0

Message Output Configuration (CFG-MSGOUT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-NMEA_ID_DTM_I2C	0x209100a6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_SPI	0x209100aa	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_UART1	0x209100a7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_UART2	0x209100a8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_USB	0x209100a9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_I2C	0x209100dd	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_SPI	0x209100e1	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_UART1	0x209100de	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_UART2	0x209100df	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_USB	0x209100e0	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GGA_I2C	0x209100ba	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_SPI	0x209100be	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_UART1	0x209100bb	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_UART2	0x209100bc	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_USB	0x209100bd	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_I2C	0x209100c9	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_SPI	0x209100cd	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_UART1	0x209100ca	U1	-	-	1

Message Output Configuration (CFG-MSGOUT-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-NMEA_ID_GLL_UART2	0x209100cb	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_USB	0x209100cc	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GNS_I2C	0x209100b5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_SPI	0x209100b9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_UART1	0x209100b6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_UART2	0x209100b7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_USB	0x209100b8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_I2C	0x209100ce	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_SPI	0x209100d2	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_UART1	0x209100cf	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_UART2	0x209100d0	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_USB	0x209100d1	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSA_I2C	0x209100bf	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_SPI	0x209100c3	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_UART1	0x209100c0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_UART2	0x209100c1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_USB	0x209100c2	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GST_I2C	0x209100d3	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_SPI	0x209100d7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART2	0x209100d5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_USB	0x209100d6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART2	0x209100c6	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_USB	0x209100c7	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART2	0x209100ad	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_USB	0x209100ae	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VLW_I2C	0x209100e7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_SPI	0x209100eb	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_UART1	0x209100e8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_UART2	0x209100e9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VLW_USB	0x209100ea	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART2	0x209100b2	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_USB	0x209100b3	U1	-	-	1
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART2	0x209100da	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_USB	0x209100db	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART1	0x209100ed	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART2	0x209100ee	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_USB	0x209100ef	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART1	0x209100f2	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART2	0x209100f3	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_USB	0x209100f4	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART1	0x209100f7	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART2	0x209100f8	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_USB	0x209100f9	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_I2C	0x209102bd	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_SPI	0x209102c1	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_UART1	0x209102be	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_UART2	0x209102bf	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1005_USB	0x209102c0	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_I2C	0x209102cc	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_SPI	0x209102d0	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_UART1	0x209102cd	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_UART2	0x209102ce	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1077_USB	0x209102cf	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_I2C	0x209102d1	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_SPI	0x209102d5	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_UART1	0x209102d2	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_UART2	0x209102d3	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1087_USB	0x209102d4	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_I2C	0x20910318	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_SPI	0x2091031c	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_UART1	0x20910319	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-RTCM_3X_TYPE1097_UART2	0x2091031a	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1097_USB	0x2091031b	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_I2C	0x209102d6	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_SPI	0x209102da	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_UART1	0x209102d7	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_UART2	0x209102d8	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1127_USB	0x209102d9	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_I2C	0x20910303	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_SPI	0x20910307	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_UART1	0x20910304	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_UART2	0x20910305	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE1230_USB	0x20910306	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_I2C	0x20910381	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_SPI	0x20910385	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART1	0x20910382	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART2	0x20910383	U1	-	-	0
CFG-MSGOUT-RTCM_3X_TYPE4072_1_USB	0x20910384	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_I2C	0x20910259	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_SPI	0x2091025d	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_UART1	0x2091025a	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_UART2	0x2091025b	U1	-	-	0
CFG-MSGOUT-UBX_LOG_INFO_USB	0x2091025c	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMs_I2C	0x2091034f	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMs_SPI	0x20910353	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMs_UART1	0x20910350	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMs_UART2	0x20910351	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMs_USB	0x20910352	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_I2C	0x209101b9	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_SPI	0x209101bd	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART1	0x209101ba	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART2	0x209101bb	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_USB	0x209101bc	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_I2C	0x20910354	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_SPI	0x20910358	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_MON_HW3_UART1	0x20910355	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART2	0x20910356	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_USB	0x20910357	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART2	0x209101b6	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_USB	0x209101b7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART2	0x209101a7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_USB	0x209101a8	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART1	0x20910197	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART2	0x20910198	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_USB	0x20910199	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART2	0x2091035b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_USB	0x2091035c	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART1	0x209101a1	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART2	0x209101a2	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_USB	0x209101a3	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART1	0x20910188	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART2	0x20910189	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_USB	0x2091018a	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_UART1	0x2091019c	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_UART2	0x2091019d	U1	-	-	0
CFG-MSGOUT-UBX_MON_TXBUF_USB	0x2091019e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART1	0x20910066	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART2	0x20910067	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_USB	0x20910068	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART1	0x20910039	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART2	0x2091003a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_USB	0x2091003b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART2	0x20910161	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_USB	0x20910162	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_I2C	0x209100a1	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_SPI	0x209100a5	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART1	0x209100a2	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_UART2	0x209100a3	U1	-	-	0
CFG-MSGOUT-UBX_NAV_GEOFENCE_USB	0x209100a4	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_I2C	0x2091007e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_SPI	0x20910082	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_UART1	0x2091007f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_UART2	0x20910080	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ODO_USB	0x20910081	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART1	0x20910011	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART2	0x20910012	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_USB	0x20910013	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_I2C	0x20910024	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_SPI	0x20910028	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART1	0x20910025	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART2	0x20910026	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_USB	0x20910027	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_I2C	0x20910029	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART1	0x2091002a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART2	0x2091002b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_USB	0x2091002c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_UART2	0x20910008	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_USB	0x20910009	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_NAV_SAT_UART2	0x20910017	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_USB	0x20910018	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_I2C	0x2091006a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_SPI	0x2091006e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_UART1	0x2091006b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_UART2	0x2091006c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_USB	0x2091006d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART2	0x20910347	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_USB	0x20910348	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_I2C	0x2091001a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART1	0x2091001b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART2	0x2091001c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_USB	0x2091001d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_I2C	0x20910088	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_SPI	0x2091008c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_UART1	0x20910089	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_UART2	0x2091008a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SVIN_USB	0x2091008b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C	0x20910051	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI	0x20910055	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1	0x20910052	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART2	0x20910053	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_USB	0x20910054	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C	0x20910056	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI	0x2091005a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1	0x20910057	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART2	0x20910058	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_USB	0x20910059	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C	0x2091004c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI	0x20910050	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1	0x2091004d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART2	0x2091004e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_USB	0x2091004f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C	0x20910047	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI	0x2091004b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1	0x20910048	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART2	0x20910049	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_USB	0x2091004a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_NAV_TIMELS_UART1	0x20910061	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_UART2	0x20910062	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_USB	0x20910063	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C	0x2091005b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI	0x2091005f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1	0x2091005c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART2	0x2091005d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_USB	0x2091005e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_I2C	0x2091003d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_SPI	0x20910041	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART1	0x2091003e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART2	0x2091003f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_USB	0x20910040	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_I2C	0x20910042	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_SPI	0x20910046	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART1	0x20910043	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART2	0x20910044	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_USB	0x20910045	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART1	0x20910205	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART2	0x20910206	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_USB	0x20910207	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_I2C	0x209102a4	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_SPI	0x209102a8	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART1	0x209102a5	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART2	0x209102a6	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_USB	0x209102a7	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART1	0x2091025f	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART2	0x20910260	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_USB	0x20910261	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_I2C	0x20910268	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_SPI	0x2091026c	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART1	0x20910269	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART2	0x2091026a	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_USB	0x2091026b	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART1	0x20910232	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART2	0x20910233	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_USB	0x20910234	U1	-	-	0
CFG-MSGOUT-UBX_TIM_SVIN_I2C	0x20910097	U1	-	-	0

Message Output Configuration (CFG-MSGOUT-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-MSGOUT-UBX_TIM_SVIN_SPI	0x2091009b	U1	-	-	0
CFG-MSGOUT-UBX_TIM_SVIN_UART1	0x20910098	U1	-	-	0
CFG-MSGOUT-UBX_TIM_SVIN_UART2	0x20910099	U1	-	-	0
CFG-MSGOUT-UBX_TIM_SVIN_USB	0x2091009a	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART2	0x2091017a	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_USB	0x2091017b	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART2	0x2091017f	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_USB	0x20910180	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_I2C	0x20910092	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART1	0x20910093	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART2	0x20910094	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_USB	0x20910095	U1	-	-	0

Standard Precision Navigation Configuration (CFG-NAVSPG-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	3 (AUTO)
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	0 (false)
CFG-NAVSPG-WKNROLLOVER	0x30110017	U2	-	-	2014
CFG-NAVSPG-USE_PPP	0x10110019	L	-	-	1 (true)
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	0 (AUTO)
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	2 (STAT)
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	0 (false)
CFG-NAVSPG-USE_USRDATA	0x10110061	L	-	-	0 (false)
CFG-NAVSPG-USRDATA_MAJA	0x50110062	R8	-	m	6378137
CFG-NAVSPG-USRDATA_FLAT	0x50110063	R8	-	-	298. 25722356300002502
CFG-NAVSPG-USRDATA_DX	0x40110064	R4	-	m	0
CFG-NAVSPG-USRDATA_DY	0x40110065	R4	-	m	0
CFG-NAVSPG-USRDATA_DZ	0x40110066	R4	-	m	0
CFG-NAVSPG-USRDATA_ROTX	0x40110067	R4	-	arcsec	0
CFG-NAVSPG-USRDATA_ROTY	0x40110068	R4	-	arcsec	0
CFG-NAVSPG-USRDATA_ROTZ	0x40110069	R4	-	arcsec	0
CFG-NAVSPG-USRDATA_SCALE	0x4011006a	R4	-	ppm	0

Standard Precision Navigation Configuration (CFG-NAVSPG-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	1
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	32
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	9
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	5
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	0
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	0
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	100
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	350
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	150
CFG-NAVSPG-CONSTR_ALT	0x401100c1	I4	0.01	m	0
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m^2	10000
CFG-NAVSPG-CONSTR_DGNSSSTO	0x201100c4	U1	-	s	60

NMEA Protocol Configuration (CFG-NMEA-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-NMEA-PROTVER	0x20930001	E1	-	-	41 (V41)
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	0 (UNLIM)
CFG-NMEA-COMPAT	0x10930003	L	-	-	0 (false)
CFG-NMEA-CONSIDER	0x10930004	L	-	-	1 (true)
CFG-NMEA-LIMIT82	0x10930005	L	-	-	0 (false)
CFG-NMEA-HIGHPREC	0x10930006	L	-	-	0 (false)
CFG-NMEA-SVNUMBERING	0x20930007	E1	-	-	0 (STRICT)
CFG-NMEA-FILT_GPS	0x10930011	L	-	-	0 (false)
CFG-NMEA-FILT_SBAS	0x10930012	L	-	-	0 (false)
CFG-NMEA-FILT_QZSS	0x10930015	L	-	-	0 (false)
CFG-NMEA-FILT_GLO	0x10930016	L	-	-	0 (false)
CFG-NMEA-FILT_BDS	0x10930017	L	-	-	0 (false)
CFG-NMEA-OUT_INVFIX	0x10930021	L	-	-	0 (false)
CFG-NMEA-OUT_MSKFIX	0x10930022	L	-	-	0 (false)
CFG-NMEA-OUT_INVTIME	0x10930023	L	-	-	0 (false)
CFG-NMEA-OUT_INVDATE	0x10930024	L	-	-	0 (false)
CFG-NMEA-OUT_ONLYGPS	0x10930025	L	-	-	0 (false)
CFG-NMEA-OUT_FROZENCOG	0x10930026	L	-	-	0 (false)
CFG-NMEA-MAINTALKERID	0x20930031	E1	-	-	0 (AUTO)
CFG-NMEA-GSVTALKERID	0x20930032	E1	-	-	0 (GNSS)
CFG-NMEA-BDSTALKERID	0x30930033	U2	-	-	0

Odometer and Low-Speed Course Over Ground Filter Configuration (CFG-ODO-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-ODO-USE_ODO	0x10220001	L	-	-	0 (false)

Odometer and Low-Speed Course Over Ground Filter Configuration (CFG-ODO-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-ODO-USE_COG	0x10220002	L	-	-	0 (false)
CFG-ODO-OUTLPVEL	0x10220003	L	-	-	0 (false)
CFG-ODO-OUTLPCOG	0x10220004	L	-	-	0 (false)
CFG-ODO-PROFILE	0x20220005	E1	-	-	0 (RUN)
CFG-ODO-COGMAXSPEED	0x20220021	U1	-	m/s	10
CFG-ODO-COGMAXPOSACC	0x20220022	U1	-	-	50
CFG-ODO-VELLPGAIN	0x20220031	U1	-	-	153
CFG-ODO-COGLPGAIN	0x20220032	U1	-	-	76

Navigation and Measurement Rate Configuration (CFG-RATE-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-RATE-MEAS	0x30210001	U2	0.001	s	1000
CFG-RATE-NAV	0x30210002	U2	-	-	1
CFG-RATE-TIMEREF	0x20210003	E1	-	-	1 (GPS)

Remote Inventory (CFG-RINV-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-RINV-DUMP	0x10c70001	L	-	-	0 (false)
CFG-RINV-BINARY	0x10c70002	L	-	-	0 (false)
CFG-RINV-DATA_SIZE	0x20c70003	U1	-	-	22
CFG-RINV-CHUNK0	0x50c70004	X8	-	-	0x203a656369746f4e ("Notice: ")
CFG-RINV-CHUNK1	0x50c70005	X8	-	-	0x2061746164206f6e ("no data ")
CFG-RINV-CHUNK2	0x50c70006	X8	-	-	0x0000216465766173 ("saved!\0\0")
CFG-RINV-CHUNK3	0x50c70007	X8	-	-	0x0000000000000000

SBAS Configuration (CFG-SBAS-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SBAS-USE_TESTMODE	0x10360002	L	-	-	0 (false)
CFG-SBAS-USE_RANGING	0x10360003	L	-	-	1 (true)
CFG-SBAS-USE_DIFFCORR	0x10360004	L	-	-	1 (true)
CFG-SBAS-USE_INTEGRITY	0x10360005	L	-	-	0 (false)
CFG-SBAS-PRNSCANMASK	0x50360006	X8	-	-	0x000000000007a389 (ALL PRN120 PRN123 PRN127 PRN128 PRN129 PRN133 PRN135 PRN136 PRN137 PRN138)

Satellite Systems (GNSS) Signal Configuration (CFG-SIGNAL-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	1 (true)
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	1 (true)
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	1 (true)
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	1 (true)
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	0 (false)
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	1 (true)
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	1 (true)
CFG-SIGNAL-GAL_E5B_ENA	0x1031000a	L	-	-	1 (true)
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	1 (true)
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	1 (true)
CFG-SIGNAL-BDS_B2_ENA	0x1031000e	L	-	-	1 (true)
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1S_ENA	0x10310014	L	-	-	0 (false)
CFG-SIGNAL-QZSS_L2C_ENA	0x10310015	L	-	-	1 (true)
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	1 (true)
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	1 (true)
CFG-SIGNAL-GLO_L2_ENA	0x1031001a	L	-	-	1 (true)

Configuration of the SPI Interface (CFG-SPI-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SPI-MAXFF	0x20640001	U1	-	-	50
CFG-SPI-CPOLARITY	0x10640002	L	-	-	0 (false)
CFG-SPI-CPHASE	0x10640003	L	-	-	0 (false)
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	0 (false)
CFG-SPI-ENABLED	0x10640006	L	-	-	0 (false)

Input Protocol Configuration of the SPI Interface (CFG-SPIINPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SPIINPROT-UBX	0x10790001	L	-	-	1 (true)
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	1 (true)
CFG-SPIINPROT-RTCM3X	0x10790004	L	-	-	1 (true)

Output Protocol Configuration of the SPI Interface (CFG-SPIOUTPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	1 (true)
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	1 (true)
CFG-SPIOUTPROT-RTCM3X	0x107a0004	L	-	-	1 (true)

Time Mode Configuration (CFG-TMODE-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value

Time Mode Configuration (CFG-TMODE-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-TMODE-MODE	0x20030001	E1	-	-	0 (DISABLED)
CFG-TMODE-POS_TYPE	0x20030002	E1	-	-	0 (ECEF)
CFG-TMODE-ECEF_X	0x40030003	I4	-	cm	0
CFG-TMODE-ECEF_Y	0x40030004	I4	-	cm	0
CFG-TMODE-ECEF_Z	0x40030005	I4	-	cm	0
CFG-TMODE-ECEF_X_HP	0x20030006	I1	0.1	mm	0
CFG-TMODE-ECEF_Y_HP	0x20030007	I1	0.1	mm	0
CFG-TMODE-ECEF_Z_HP	0x20030008	I1	0.1	mm	0
CFG-TMODE-LAT	0x40030009	I4	1e-7	deg	0
CFG-TMODE-LON	0x4003000a	I4	1e-7	deg	0
CFG-TMODE-HEIGHT	0x4003000b	I4	-	cm	0
CFG-TMODE-LAT_HP	0x2003000c	I1	1e-9	deg	0
CFG-TMODE-LON_HP	0x2003000d	I1	1e-9	deg	0
CFG-TMODE-HEIGHT_HP	0x2003000e	I1	0.1	mm	0
CFG-TMODE-FIXED_POS_ACC	0x4003000f	U4	0.1	mm	0
CFG-TMODE-SVIN_MIN_DUR	0x40030010	U4	-	s	0
CFG-TMODE-SVIN_ACC_LIMIT	0x40030011	U4	0.1	mm	0

Timepulse Configuration (CFG-TP-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-TP-PULSE_DEF	0x20050023	E1	-	-	0 (PERIOD)
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	1 (LENGTH)
CFG-TP-ANT_CABLEDELAY	0x30050001	I2	0. 0000 0000 1	s	50
CFG-TP-PERIOD_TP1	0x40050002	U4	0. 0000 01	s	1000000
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	0. 0000 01	s	1000000
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	1
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	1
CFG-TP-LEN_TP1	0x40050004	U4	0. 0000 01	s	0
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	0. 0000 01	s	100000
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	0
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	10

Timepulse Configuration (CFG-TP-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-TP-USER_DELAY_TP1	0x40050006	I4	0. 0000 0000 1	s	0
CFG-TP-TP1_ENA	0x10050007	L	-	-	1 (true)
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	1 (true)
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	1 (true)
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	1 (true)
CFG-TP-POL_TP1	0x1005000b	L	-	-	1 (true)
CFG-TP-TIMEGRID_TP1	0x2005000c	E1	-	-	1 (GPS)
CFG-TP-PERIOD_TP2	0x4005000d	U4	0. 0000 01	s	1000000
CFG-TP-PERIOD_LOCK_TP2	0x4005000e	U4	0. 0000 01	s	1000000
CFG-TP-FREQ_TP2	0x40050026	U4	-	Hz	1
CFG-TP-FREQ_LOCK_TP2	0x40050027	U4	-	Hz	1
CFG-TP-LEN_TP2	0x4005000f	U4	0. 0000 01	s	0
CFG-TP-LEN_LOCK_TP2	0x40050010	U4	0. 0000 01	s	100000
CFG-TP-DUTY_TP2	0x5005002c	R8	-	%	0
CFG-TP-DUTY_LOCK_TP2	0x5005002d	R8	-	%	10
CFG-TP-USER_DELAY_TP2	0x40050011	I4	0. 0000 0000 1	s	0
CFG-TP-TP2_ENA	0x10050012	L	-	-	0 (false)
CFG-TP-SYNC_GNSS_TP2	0x10050013	L	-	-	1 (true)
CFG-TP-USE_LOCKED_TP2	0x10050014	L	-	-	1 (true)
CFG-TP-ALIGN_TO_TOW_TP2	0x10050015	L	-	-	1 (true)
CFG-TP-POL_TP2	0x10050016	L	-	-	1 (true)
CFG-TP-TIMEGRID_TP2	0x20050017	E1	-	-	1 (GPS)

Configuration of the UART1 Interface (CFG-UART1-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART1-BAUDRATE	0x40520001	U4	-	-	38400
CFG-UART1-STOPBITS	0x20520002	E1	-	-	1 (ONE)
CFG-UART1-DATABITS	0x20520003	E1	-	-	0 (EIGHT)
CFG-UART1-PARITY	0x20520004	E1	-	-	0 (NONE)

Configuration of the UART1 Interface (CFG-UART1-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART1-ENABLED	0x10520005	L	-	-	1 (true)

Input Protocol Configuration of the UART1 Interface (CFG-UART1INPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART1INPROT-UBX	0x10730001	L	-	-	1 (true)
CFG-UART1INPROT-NMEA	0x10730002	L	-	-	1 (true)
CFG-UART1INPROT-RTCM3X	0x10730004	L	-	-	1 (true)

Output Protocol Configuration of the UART1 Interface (CFG-UART1OUTPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	1 (true)
CFG-UART1OUTPROT-NMEA	0x10740002	L	-	-	1 (true)
CFG-UART1OUTPROT-RTCM3X	0x10740004	L	-	-	1 (true)

Configuration of the UART2 Interface (CFG-UART2-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART2-BAUDRATE	0x40530001	U4	-	-	38400
CFG-UART2-STOPBITS	0x20530002	E1	-	-	1 (ONE)
CFG-UART2-DATABITS	0x20530003	E1	-	-	0 (EIGHT)
CFG-UART2-PARITY	0x20530004	E1	-	-	0 (NONE)
CFG-UART2-ENABLED	0x10530005	L	-	-	1 (true)
CFG-UART2-REMAP	0x10530006	L	-	-	0 (false)

Input Protocol Configuration of the UART2 Interface (CFG-UART2INPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART2INPROT-UBX	0x10750001	L	-	-	0 (false)
CFG-UART2INPROT-NMEA	0x10750002	L	-	-	0 (false)
CFG-UART2INPROT-RTCM3X	0x10750004	L	-	-	1 (true)

Output Protocol Configuration of the UART2 Interface (CFG-UART2OUTPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-UART2OUTPROT-UBX	0x10760001	L	-	-	0 (false)
CFG-UART2OUTPROT-NMEA	0x10760002	L	-	-	0 (false)
CFG-UART2OUTPROT-RTCM3X	0x10760004	L	-	-	1 (true)

Configuration of the USB Interface (CFG-USB-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-USB-ENABLED	0x10650001	L	-	-	1 (true)
CFG-USB-SELFPOW	0x10650002	L	-	-	1 (true)

Configuration of the USB Interface (CFG-USB-*) Configuration Defaults continued

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-USB-VENDOR_ID	0x3065000a	U2	-	-	5446
CFG-USB-PRODUCT_ID	0x3065000b	U2	-	-	425
CFG-USB-POWER	0x3065000c	U2	-	mA	0
CFG-USB-VENDOR_STR0	0x5065000d	X8	-	-	0x4120786f6c622d75 ("u-blox A")
CFG-USB-VENDOR_STR1	0x5065000e	X8	-	-	0x2e77777202d2047 ("G - www.")
CFG-USB-VENDOR_STR2	0x5065000f	X8	-	-	0x632e786f6c622d75 ("u-blox.c")
CFG-USB-VENDOR_STR3	0x50650010	X8	-	-	0x00000000000006d6f ("om\0\0\0\0\0\0")
CFG-USB-PRODUCT_STR0	0x50650011	X8	-	-	0x4720786f6c622d75 ("u-blox G")
CFG-USB-PRODUCT_STR1	0x50650012	X8	-	-	0x656365722053534e ("NSS rece")
CFG-USB-PRODUCT_STR2	0x50650013	X8	-	-	0x0000000072657669 ("iver\0\0\0\0")
CFG-USB-PRODUCT_STR3	0x50650014	X8	-	-	0x0000000000000000
CFG-USB-SERIAL_NO_STR0	0x50650015	X8	-	-	0x0000000000000000
CFG-USB-SERIAL_NO_STR1	0x50650016	X8	-	-	0x0000000000000000
CFG-USB-SERIAL_NO_STR2	0x50650017	X8	-	-	0x0000000000000000
CFG-USB-SERIAL_NO_STR3	0x50650018	X8	-	-	0x0000000000000000

Input Protocol Configuration of the USB Interface (CFG-USBINPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-USBINPROT-UBX	0x10770001	L	-	-	1 (true)
CFG-USBINPROT-NMEA	0x10770002	L	-	-	1 (true)
CFG-USBINPROT-RTCM3X	0x10770004	L	-	-	1 (true)

Output Protocol Configuration of the USB Interface (CFG-USBOUTPROT-*) Configuration Defaults

Configuration Item	Key ID	Type	Scale	Unit	Default Value
CFG-USBOUTPROT-UBX	0x10780001	L	-	-	1 (true)
CFG-USBOUTPROT-NMEA	0x10780002	L	-	-	1 (true)
CFG-USBOUTPROT-RTCM3X	0x10780004	L	-	-	1 (true)

Related Documents

Overview

As part of our commitment to customer support, u-blox maintains an extensive volume of technical documentation for our products. In addition to product-specific data sheets and integration manuals, general documents are also available. These include:

- GPS Compendium, Docu. No [GPS-X-02007](#)
- GPS Antennas - RF Design Considerations for u-blox GPS Receivers, Docu. No [GPS-X-08014](#)

Our website www.u-blox.com is a valuable resource for general and product specific documentation.

Related Documents for ZED-F9T and RCB-F9T

- u-blox RCB-F9T, Integration Manual, Docu. No UBX-19003747
- u-blox RCB-F9T, Data Sheet, Docu. No UBX-18053607
- u-blox ZED-F9T, Data Sheet, Docu. No UBX-18053713
- u-blox ZED-F9T, Integration Manual, Docu. No UBX-19005590

Revision History

Revision	Date	Name	Status / Comments
R01	13-Mar-2019	jhak	Advance Information
R02	13-Jun-2019	jhak	Early Production Information

Contact

For complete contact information visit us at www.u-blox.com

u-blox Offices

North, Central and South America

u-blox America, Inc.

Phone: +1 703 483 3180
E-mail: info_us@u-blox.com

Regional Office West Coast:

Phone: +1 408 573 3640
E-mail: info_us@u-blox.com

Technical Support:

Phone: +1 703 483 3185
E-mail: support_us@u-blox.com

Headquarters

Europe, Middle East, Africa

u-blox AG

Phone: +41 44 722 74 44
E-mail: info@u-blox.com
Support: support@u-blox.com

Asia, Australia, Pacific

u-blox Singapore Pte. Ltd.

Phone: +65 6734 3811
E-mail: info_ap@u-blox.com
Support: support_ap@u-blox.com

Regional Office Australia:

Phone: +61 2 8448 2016
E-mail: info_anz@u-blox.com
Support: support_ap@u-blox.com

Regional Office China (Beijing):

Phone: +86 10 68 133 545
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Chongqing):

Phone: +86 23 6815 1588
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shanghai):

Phone: +86 21 6090 4832
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office China (Shenzhen):

Phone: +86 755 8627 1083
E-mail: info_cn@u-blox.com
Support: support_cn@u-blox.com

Regional Office India:

Phone: +91 80 4050 9200
E-mail: info_in@u-blox.com
Support: support_in@u-blox.com

Regional Office Japan (Osaka):

Phone: +81 6 6941 3660
E-mail: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Japan (Tokyo):

Phone: +81 3 5775 3850
E-mail: info_jp@u-blox.com
Support: support_jp@u-blox.com

Regional Office Korea:

Phone: +82 2 542 0861
E-mail: info_kr@u-blox.com
Support: support_kr@u-blox.com

Regional Office Taiwan:

Phone: +886 2 2657 1090
E-mail: info_tw@u-blox.com
Support: support_tw@u-blox.com